

Animal Zipper Pouches



Collection No. PK10145
4 Designs/12 Files

MATERIALS



Isacord Thread Colors

- 0010 Silky White
- 0132 Dark Pewter
- 0150 Mystik Grey
- 0853 Pecan
- 0934 Fawn
- 1055 Bark
- 1061 Taupe
- 2550 Soft Pink
- 2830 Wild Iris
- 3750 Winter Frost
- 3853 Ash Blue

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD Lightweight TearAway
- OESD Fusible Woven
- OESD Fuse and Seal
3" x 1/2"
- OESD StabilStick CutAway
- **Optional: See Step 1**
- OESD BadgeMaster WashAway
- **Optional: See Step 2**

Fabrics/Textiles

- OESD Favorite Felt, Brown
- OESD Favorite Felt, Blue Grey
- OESD Favorite Felt, Cream
- OESD Favorite Felt, Light Purple
- Pink Quilter's Cotton
1/4 yard
- Gold Quilter's Cotton
1/4 yard
- Light Blue Quilter's Cotton
1/4 yard
- Brown Quilter's Cotton
1/4 yard

 **Note: Fabric amounts are estimates and may result in overage.**

Notions & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape
TearAway
- OESD Expert Embroidery Tape
WashAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle 80/12 Sharp
- Polyester or nylon zipper, 9" or longer
- 3/8" Ribbon: (1) 3"


Isacord Thread Colors

- Per thread chart



SUMMARY


Kitten

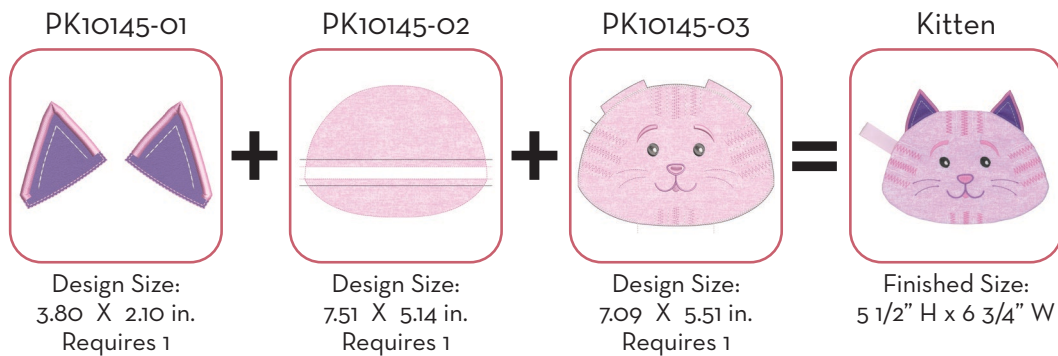

Felt: (2) 5" x 3.5" PK10145-01

	Left Panel PK10145-02	Right Panel PK10145-02	Front Panel PK10145-03
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

Bunny

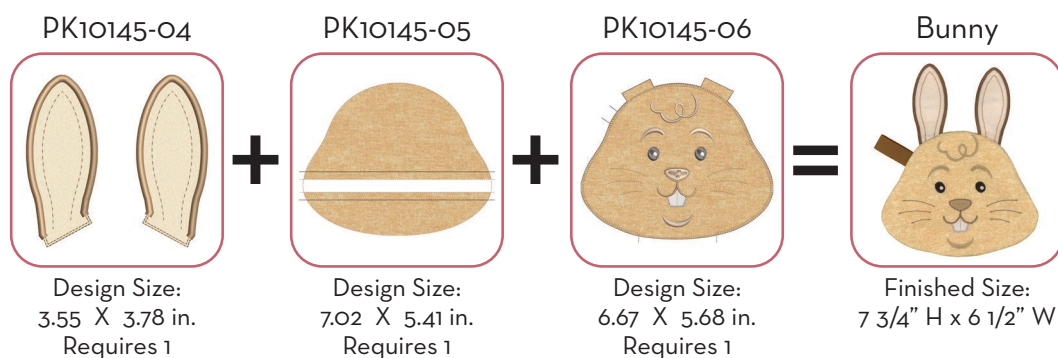


Felt: (2) 5" x 4.5" PK10145-04

	Left Panel PK10145-05	Right Panel PK10145-05	Front Panel PK10145-06
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

SUMMARY


Puppy

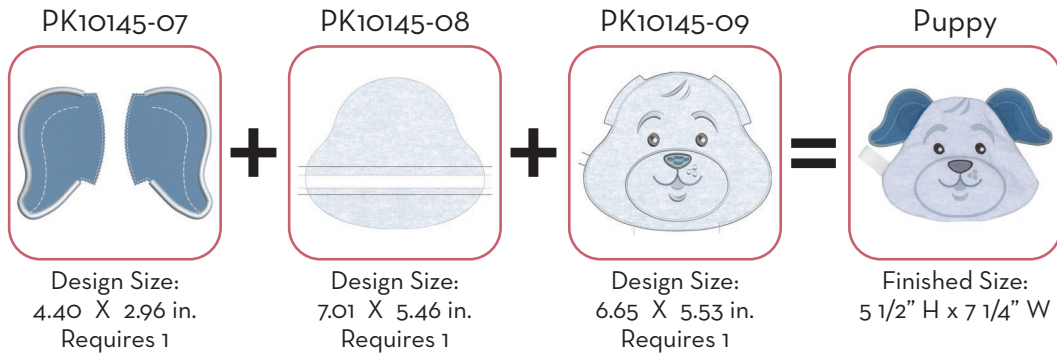

Felt: (2) 5.5" x 4" PK10145-07

	Left Panel PK10145-08	Right Panel PK10145-08	Front Panel PK10145-09
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

Teddy

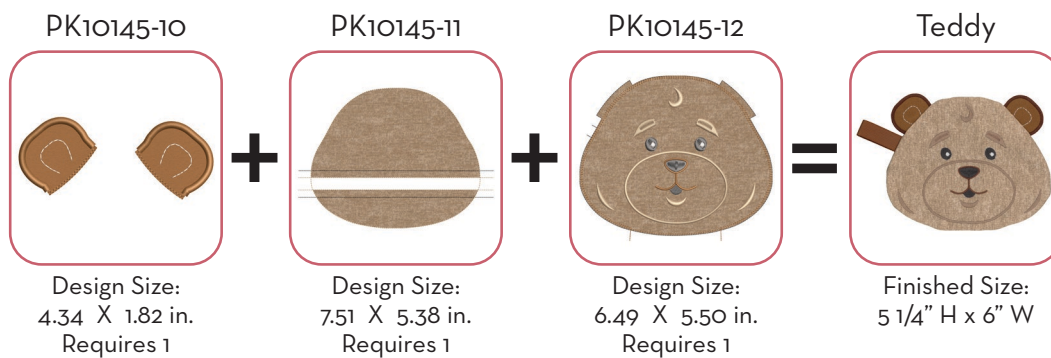

Felt: (2) 5.5" x 3" PK10145-10

	Left Panel PK10145-11	Right Panel PK10145-11	Front Panel PK10145-12
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

General Instructions

The zipper pouch instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Designs PK10145-07, PK10145-08 and PK10145-09 are shown here.

The Freestanding Applique (FSA) Ears and Pouch Back designs must be embroidered before the Pouch Front design.


Fabric and thread requirements will vary by design, but the general technique is the same. Applique technique shown is cut in place (ears). Pre-cut applique patterns for the ears are included at the end of the instructions.

Note: Some thread and fabric colors in the instructions have been changed or digitally enhanced for better visibility.

Step 1

- Cut the applique felts 1/4" - 1/2" larger than the applique patterns or as indicated in the design supply list on pages 4 & 5. The applique patterns are included at the end of the instructions.

Optional: OESD Favorite Felt does not require extra stabilization. However, if using other felt, adhere one layer of StabilStick CutAway to the wrong side of all applique felts to provide some body to the felt.

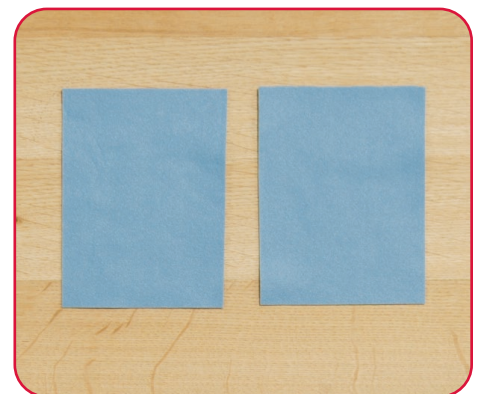

EMBROIDERY- EARS (FREESTANDING APPLIQUE)




Step 2

- Using the OESD Grippy Grid, hoop two layers of Aquamesh.


Note: This will give the ears a soft feel.

Optional: For firmer ears, hoop a layer of Aquamesh and a layer of BadgeMaster.

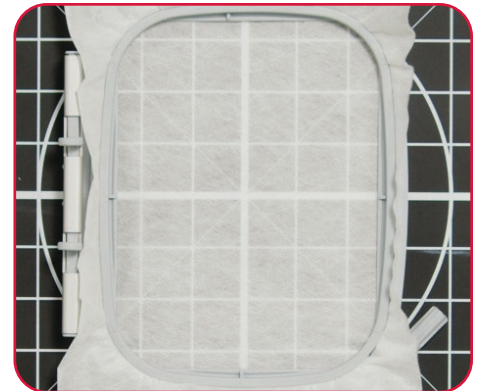

Step 3

- Load the selected design into the machine.
- Example design is PK10145-07.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Front Blue Felt Placement Stitch.

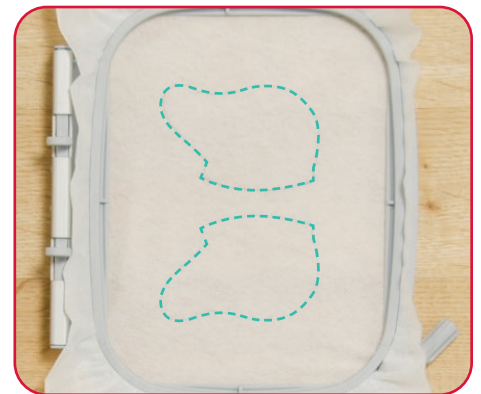

Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the blue applique felt.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.




EMBROIDERY- EARS (FREESTANDING APPLIQUE)




□ Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

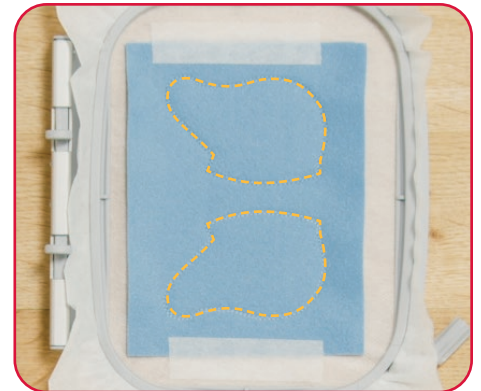

□ Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess felt as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

 **Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.**



EMBROIDERY- EARS (FREESTANDING APPLIQUE)



□ Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Ear Detail.



□ Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the blue applique felt, right side up, completely covering the placement stitch.
- Carefully tape to secure.

 **Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.**



EMBROIDERY- EARS (FREESTANDING APPLIQUE)



Step 9

- Return the hoop to the machine.
- Stitch Machine Step 4, Back Blue Felt Cut Line and Tackdown.



Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



Step 11

- Return the hoop to the machine.
- Stitch Machine Step 5, Cover Stitch **with matching bobbin thread.**



□ Step 12

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.



□ Step 13

- Rinse the ears in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.




✓ Note: Using the Perfect Embroidery Press Cloth when pressing your design helps prevent the stitches from becoming crushed and absorbs steam for a perfectly pressed finish.

EMBROIDERY- EARS (FREESTANDING APPLIQUE)





□ Step 14

- The Ears for the pouch are complete.

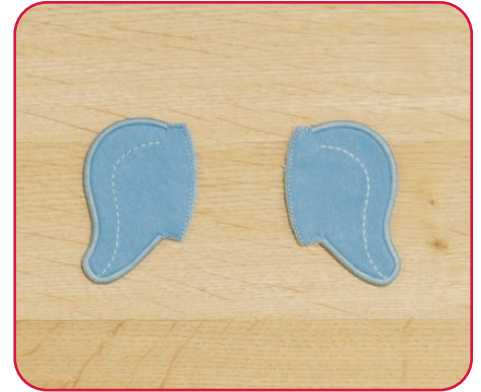

□ Step 15

- Press Right Panel, Left Panel, Lining Right Panel, and Lining Left Panel in half, wrong sides together, lengthwise.

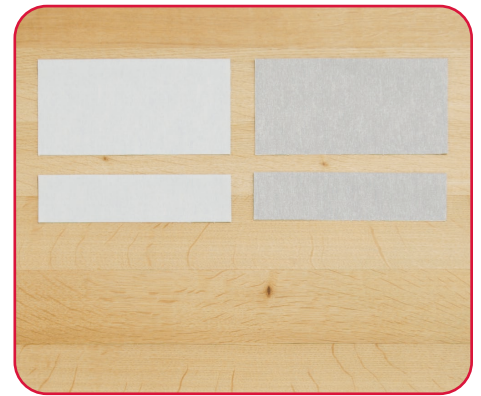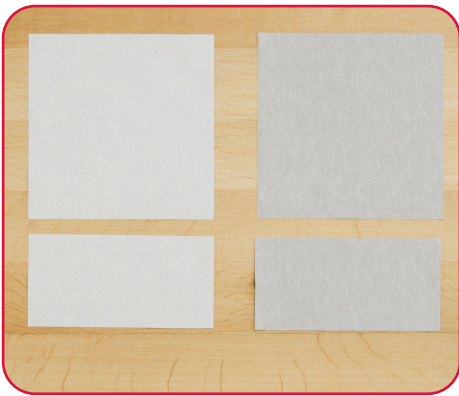

□ Step 16

- Apply Fusible Woven to the wrong side of the Right and Left Panel outer fabrics.
- Open the folded Right and Left Panels. Line up the Fusible Woven with the fold of the fabric.
- Press to apply the Fusible Woven.

✍ Note: The Fusible Woven is applied only to the outer fabrics, not the lining.




EMBROIDERY- POUCH BACK




Step 17

- Refold the Right and Left Panel outer fabrics and press.

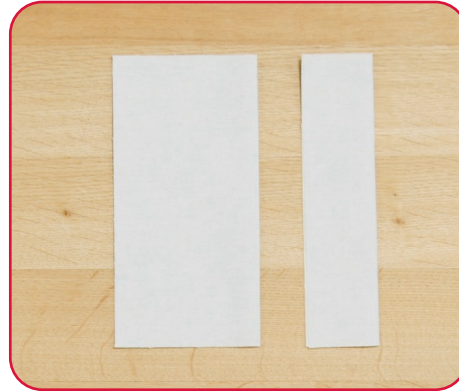

Step 18

- Using the OESD Grippy Grid, hoop one layer of Light Weight TearAway.

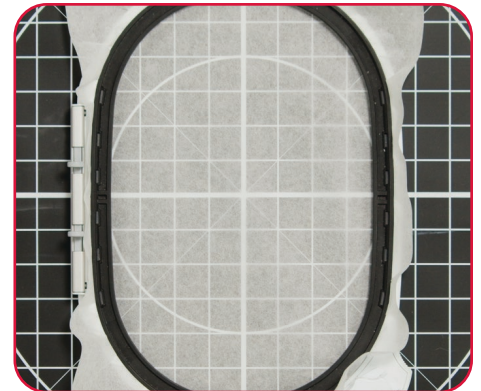


EMBROIDERY- POUCH BACK



□ Step 19

- Load the selected design into the machine.
- Example design is PK10145-08.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Zipper Placement Guide.

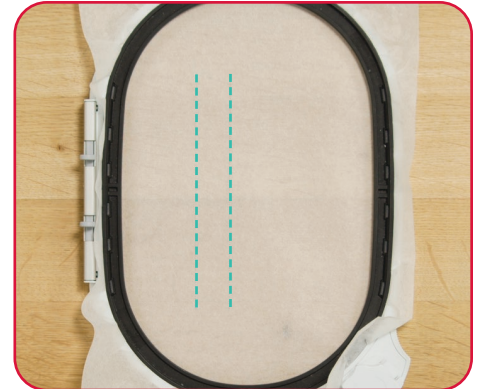

□ Step 20

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the zipper, right side up and centered, within the Zipper Placement Guide. The zipper head will be at the top of the hoop.
- Tape in place with OESD Expert Embroidery Tape WashAway to secure.



✍ **Note: Metal ends must be outside of the stitching area.**

🔔 **Tip: Use OESD Expert Embroidery Tape WashAway when working with or by the zipper so any remnants of the tape that have been stitched over can be easily removed with a damp cloth. In contrast, OESD Expert Embroidery Tape TearAway can become stuck in the teeth of the zipper.**




EMBROIDERY- POUCH BACK



□ Step 21

- Return the hoop to the machine.
- Stitch Machine Step 2, Zipper Tackdown.

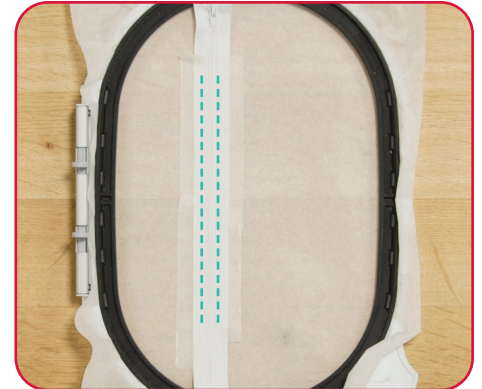

□ Step 22

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the folded edge of the Right Panel outer fabric to the right of the zipper teeth.
- Place the folded edge of the Left Panel outer fabric to the left of the zipper teeth.
- Cover the zipper tackdown lines. Do not cover the zipper teeth.
- Tape in place to secure.



✍ Note: The fabric side with the Fusible Woven attached needs to be on top to better support the embroidery stitches.



EMBROIDERY- POUCH BACK




Step 23

- Turn the hoop over and lay face down on a flat surface.
- On the back of the hoop, locate the Zipper Tackdown lines.
- Place the folded edge of the Right Panel Lining fabric slightly inside the right side Zipper Tackdown stitch line.
- Place the folded edge of the Left Side Lining fabric slightly inside the left side Zipper Tackdown stitch line.
- Tape in place to secure.



Step 24

- Return the hoop to the machine.
- Stitch Machine Step 3, Front and Back Panels Tackdown.

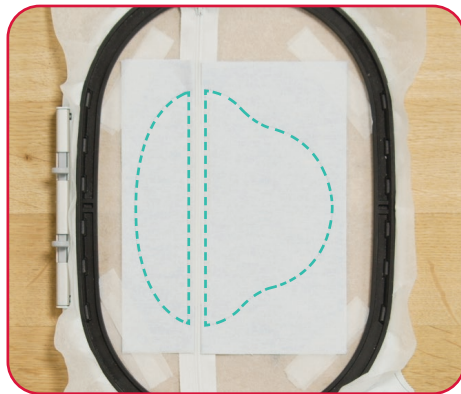


EMBROIDERY- POUCH BACK



□ Step 25


- Remove the hoop from the machine, but NOT the project from the hoop.
- Unzip the zipper halfway.

✍️ ***Note: This is the most important step in the whole project!***

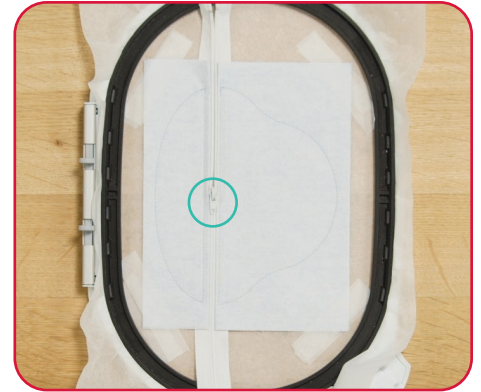

□ Step 26

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line.

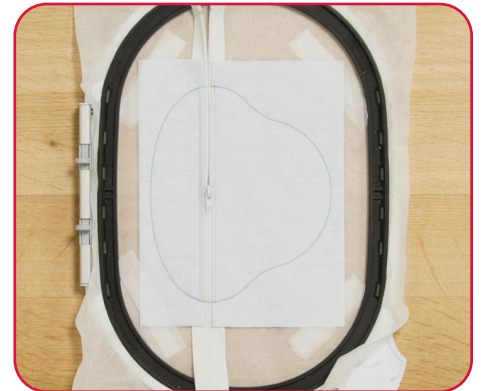

EMBROIDERY- POUCH BACK



Step 27

- When the design is complete, remove the project from the hoop.
- Remove all the tape.
- Trim approximately 1/8" outside the Cut Line.
- Gently remove the tear away stabilizer from the back of the design, including the zipper area.

Tip: If any of the washaway tape is left on the zipper, use a damp cloth or cotton bud to remove it.



Step 28

- The Pouch Back is complete.




EMBROIDERY- POUCH FRONT




Step 29

- Apply Fusible Woven to the wrong side of the Front Panel outer fabric.

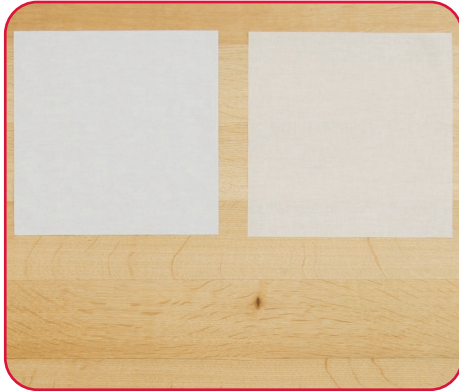

Step 30

- Using the OEESD Grippy Grid, hoop one layer of Light Weight TearAway.

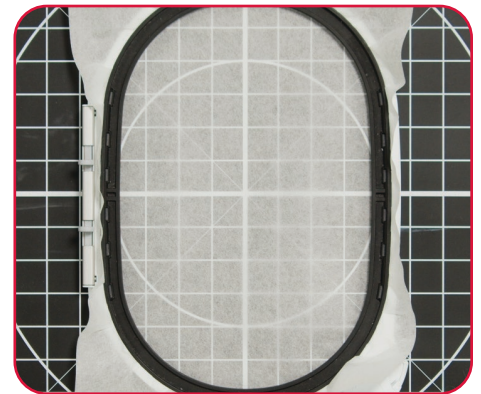


EMBROIDERY- POUCH FRONT



Step 31

- Load the selected design into the machine.
- Example design is PK10145-09.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Light Blue Fabric/Ear and Ribbon Placement Stitch.

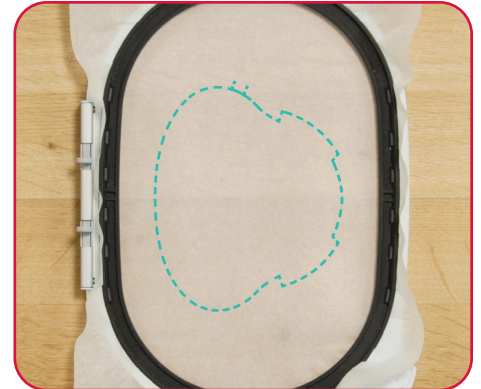


Step 32

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the Front Panel outer fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



Step 33

- Return the hoop to the machine.
- Stitch Machine Step 2, Fabric Tackdown.

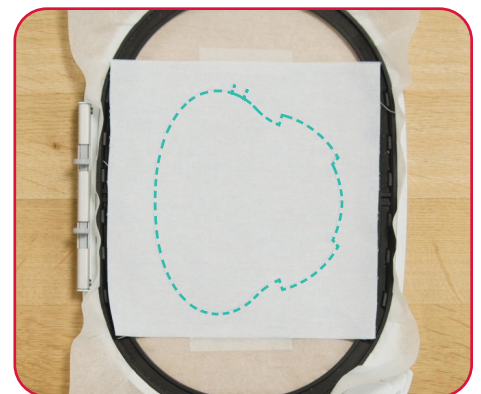

□ Step 34

- Stitch Machine Steps 3 – 6.



□ Step 35

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Using the placement stitches on the fabric, line up the ears, right side down, on the top of the head.
- Tape in place to secure.



 **Tip: Place Expert Embroidery Tape TearAway along the seam line. This allows the presser foot to glide along the height change from front panel to front panel and ear.**

 **Note: The ears will face towards the inside of the design**

EMBROIDERY- POUCH FRONT



□ Step 36


- Fold the 3" piece of ribbon in half.
- Align the folded ribbon between the placement lines as shown.
- Tape in place to secure.

✓ **Note:** The fold will be towards the inside of the design.



□ Step 37

- Return the hoop to the machine.
- Stitch Machine Step 7, Ear and Ribbon Tackdown.

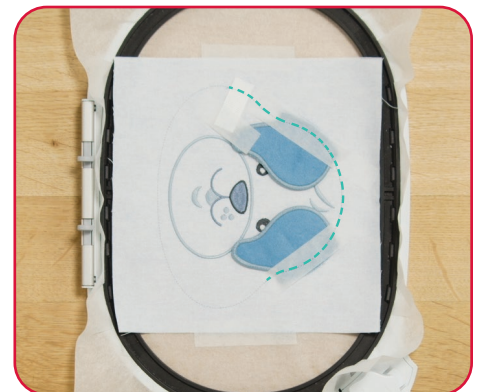

□ Step 38

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the tape from the ears.
- Place the Pouch Back, **right side/zipper head down**, aligning the edges with the tackdown stitches.
- Tape in place to secure.




✓ **Note: Make sure that the zipper still halfway undone.**

□ Step 39

- Return the hoop to the machine.
- Stitch Machine Step 8, Zipper Panel Tackdown.

🔔 **Tip: Slow the machine down and, if the machine allows it, raise the presser foot height.**

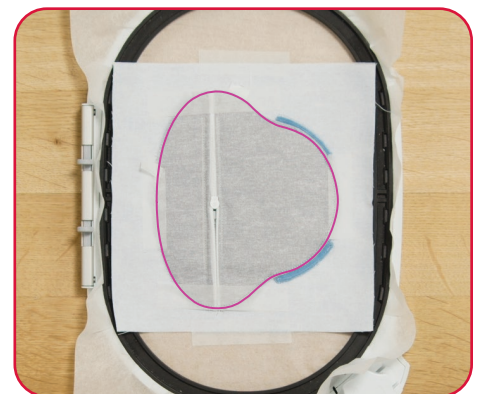

EMBROIDERY- POUCH FRONT



Step 40


- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Position the Front Panel Lining, right side down, completely covering the stitched pieces.



Step 41

- Return the hoop to the machine.
- Stitch Machine Step 9, Inner Lining Tackdown.

Note: The opening in the bottom is called the "neck". This opening is used for turning the pouch.

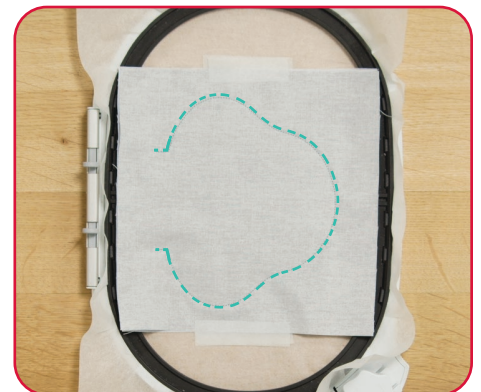

Step 42

- When the design is complete, remove the project from the hoop.
- Trim approximately 1/4" from the outermost stitching line.
- DO NOT cut the neck opening. Trim across the neck above the vertical lines of stitching.

Note: The zipper pouch is turned twice, so don't panic after the first turn!



□ Step 43

- Turn the pouch inside out to show the right side of the lining fabric.
- Use the large end of the Expert Point and Press tool to push out the corners and edges



□ Step 44

- Unzip the zipper.



EMBROIDERY- POUCH FRONT



Step 45

- Tuck the neck area to the inside of the bag.
- Press.
- Close the opening with a small piece of Fuse and Seal.



Step 46

- Turn the pouch right side out through the zipper.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.
- Press right side down on the Perfect Embroidery Press Cloth



EMBROIDERY- POUCH FRONT



□ Step 47

- The project is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

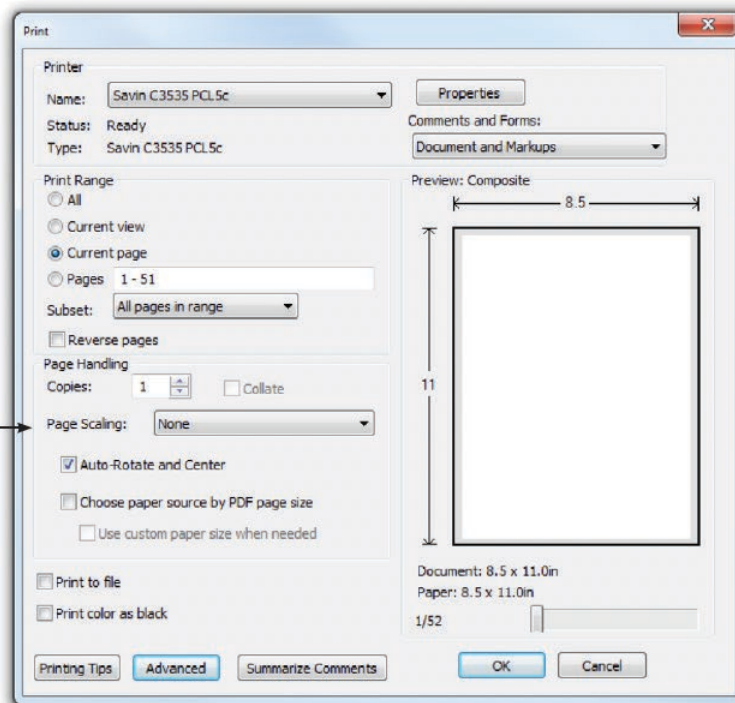

TO SAVE PAPER





Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

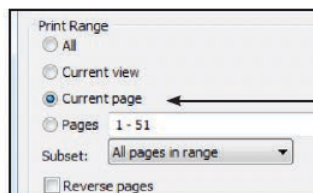

APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

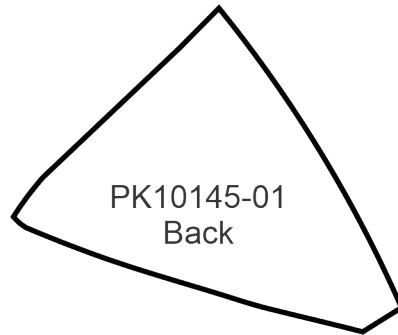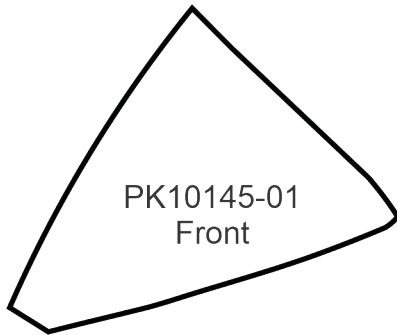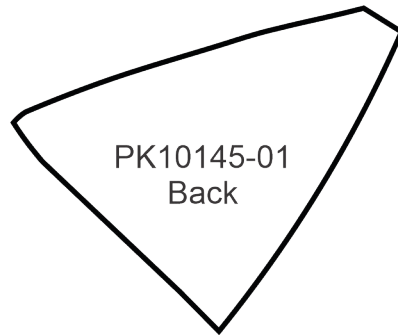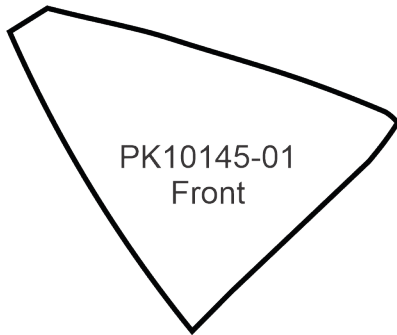

APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

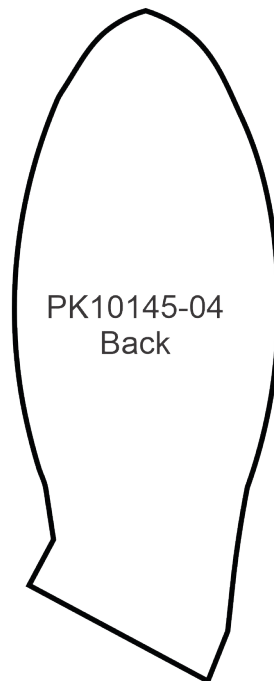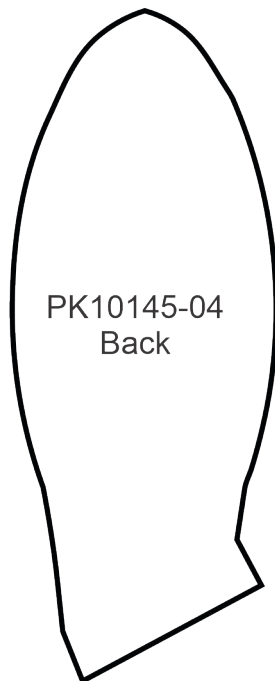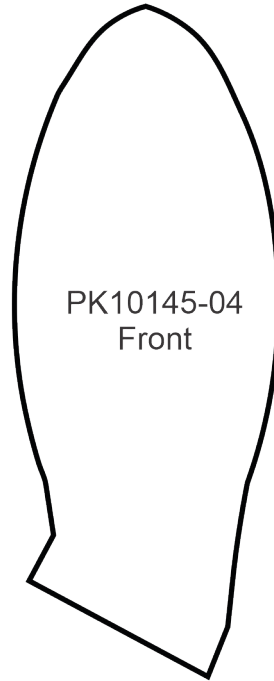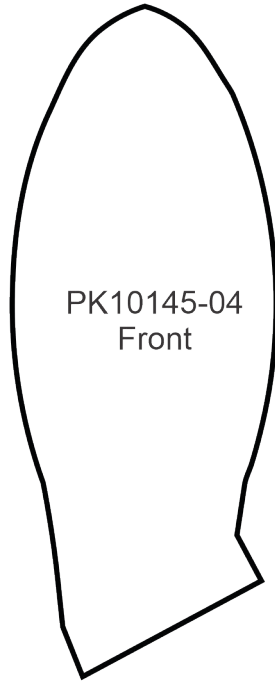

APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

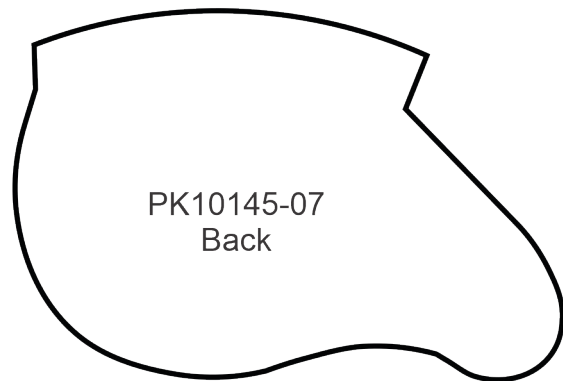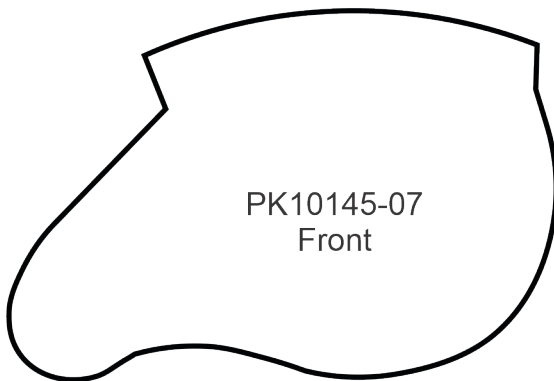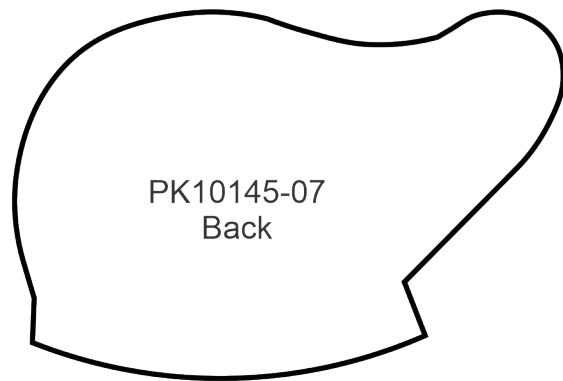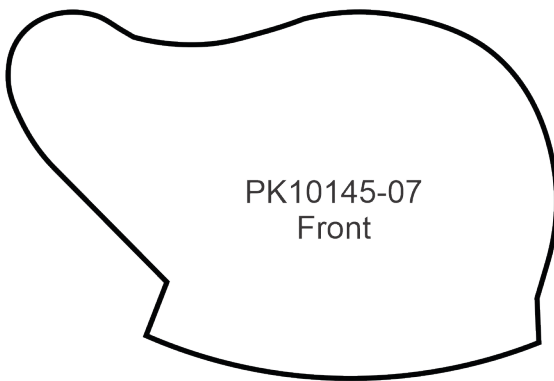

APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

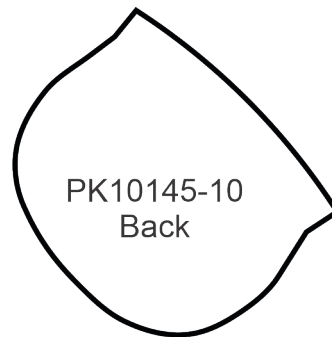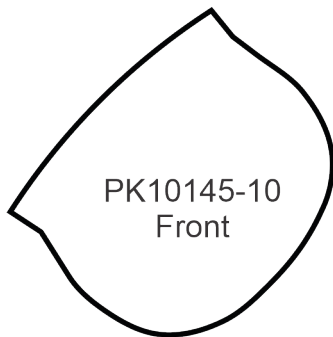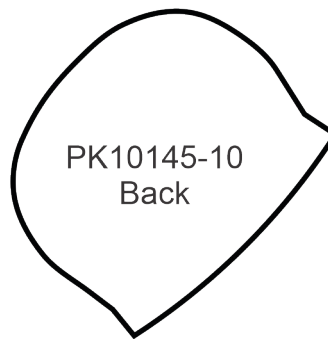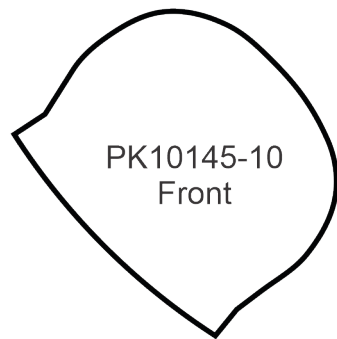

MIRRORED PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

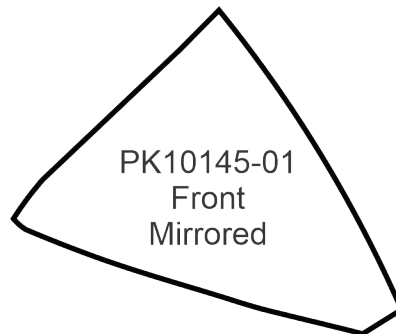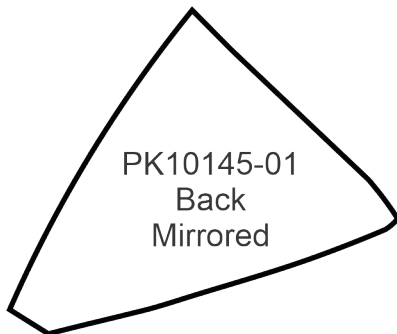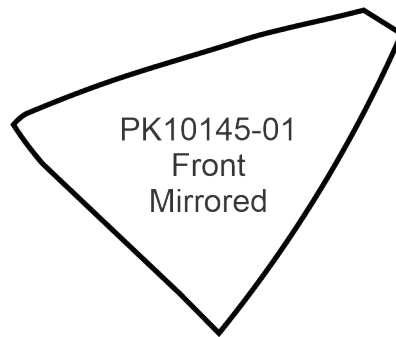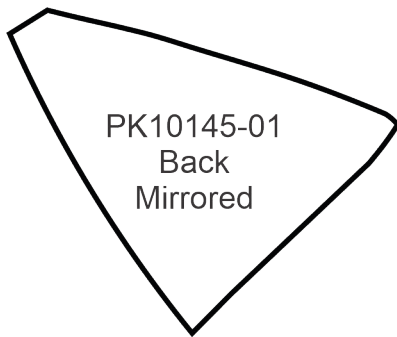

MIRRORED PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

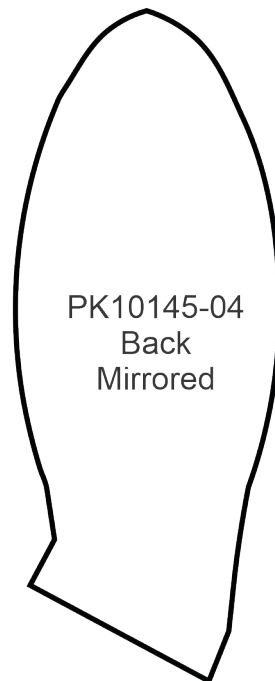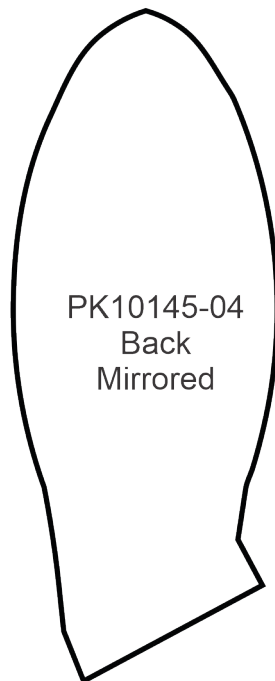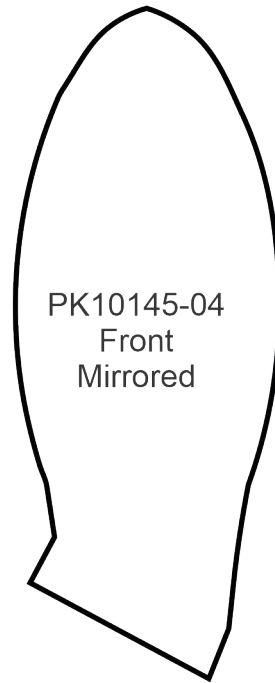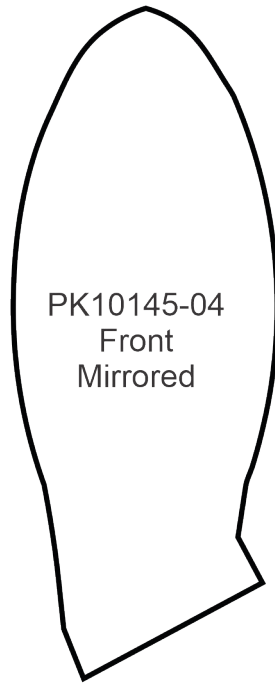

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

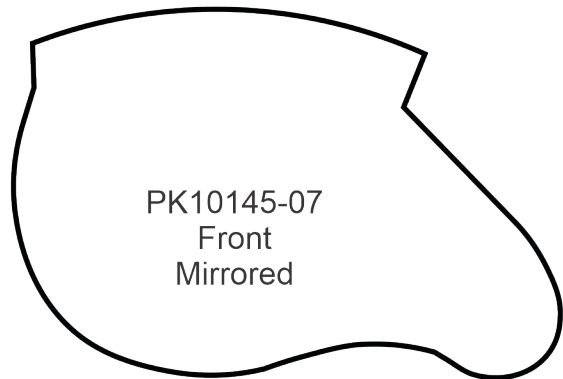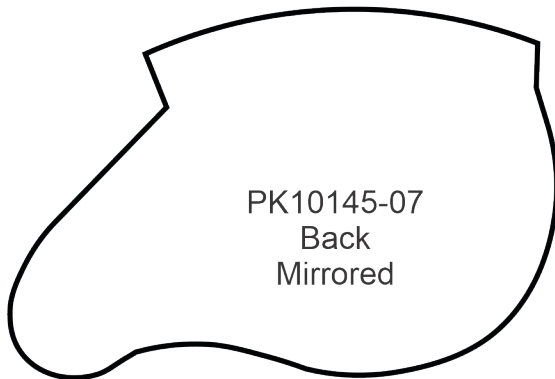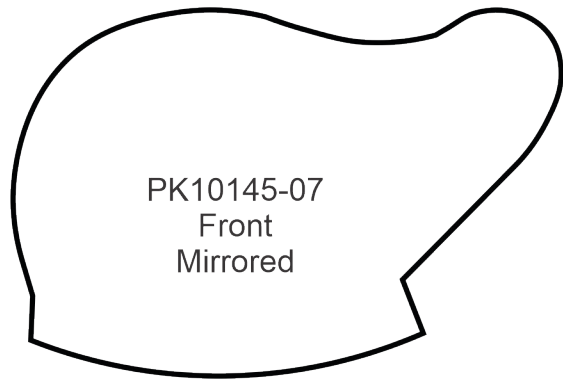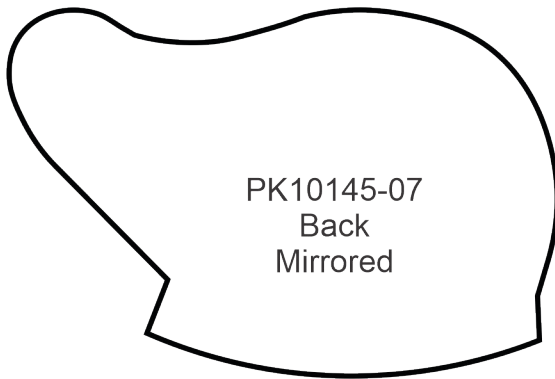

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

