OESD™ DESIGN PACK

Zippy Scissor Caddy



Collection No. PK10117
2 Designs

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

MATERIALS

OESD™ DESIGN PACK

Isacord Thread Colors

0020 Black

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

MATERIALS

OESD™ DESIGN PACK

Stabilizers

- OESD Light Weight TearAway
- OESD Fuse and Fleece
- OESD Fuse and Seal

Fabrics/Textiles

- Teal Quilter's Cotton
- Pink Quilter's Cotton
- Green Quilter's Cotton
- Novelty Quilter's Cotton

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape WashAway
- OESD Expert Embroidery Tape TearAway
- OESD Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11
- 14" Polyester or nylon zipper (NOT Metal)

Isacord Thread Colors

- Per the thread chart

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

SUMMARY

OESD™ DESIGN PACK

Zippy Scissor Caddy 1



Completed Size: 9 1/2" L x 4 3/4" W

CADDY 1	Right Panel	Left Panel	Fabric 2	Fabric 3	Back Panel
Outer Fabric	12" x 4"	12" x 8"	12" x 2"	6" x 2"	12" x 7"
Lining Fabric	12" x 4"	12" x 8"	-	-	12" x 7"
OESD Fuse and Fleece	12" x 2"	12" x 4"	-	-	12" x 7"

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

SUMMARY

OESD™ DESIGN PACK

Zippy Scissor Caddy 2



Completed Size: 9 1/2" L x 4 3/4" W

CADDY 2	Right Panel	Left Panel	Back Panel
Outer Fabric	12" x 4"	12" x 8"	12" x 7"
Lining Fabric	12" x 4"	12" x 8"	12" x 7"
OESD Fuse and Fleece	12" x 2"	12" x 4"	12" x 7"

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

General Instructions

The zipper pouch instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design PK10117-01 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

☐ Step 1

- Cut fabrics according to the summary page.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 2

- Press Left Panel, Right Panel, Left Panel Lining, and Right Panel Lining in half, wrong sides together, lengthwise.





Step 3

- Apply Fuse and Fleece to the wrong side of the Back Panel outer fabric.




It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 4

- Apply Fuse and Fleece to the wrong sides of the Right and Left Panels outer fabrics.
- Open the folded Right and Left Panels. Line up the Fuse and Fleece with the fold of the fabric.
- Press to apply the Fuse and Fleece.
- **Note: The Fuse and Fleece is applied only to the outer fabrics, not the lining.**





Step 5

- Refold Right and Left Panel outer fabrics and press.



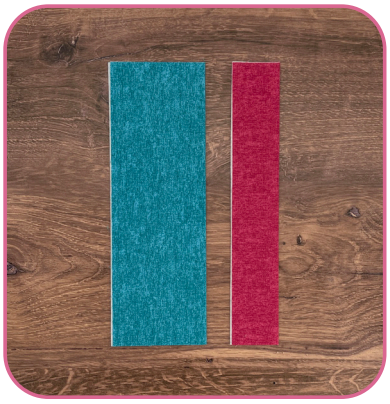

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 6

- Using the OESD Grippy Grid, hoop one layer of Light Weight TearAway.

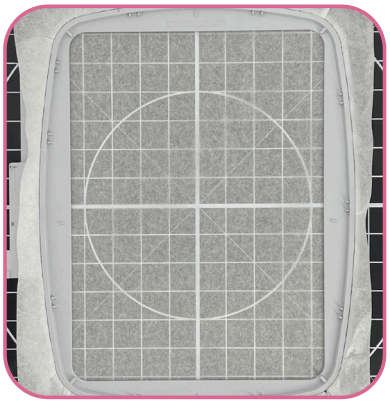

Step 7

- Load the selected design into the machine.
- Example design is PK10117-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Zipper Placement Guide.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the zipper, right side up, within the Zipper Placement Guide. The zipper head will be at the top of the hoop.
- Tape in place with OESD Expert Embroidery Tape WashAway to secure.
- **Note: Metal ends must be outside of the stitching area.**
- **Tip: Use OESD Expert Embroidery Tape WashAway when working with or by the zipper so any remnants of the tape that have been stitched over can be easily removed with a damp cloth. In contrast, OESD Expert Embroidery Tape TearAway can become stuck in the teeth of the zipper.**



Step 9

- Return the hoop to the machine.
- Stitch Machine Step 2, Zipper Tackdown.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the folded edge of the Right Panel outer fabric to the right of the zipper teeth.
- Cover the zipper tackdown line. Do not cover the zipper teeth.
- Tape in place to secure.
- **Note: The fabric side with the Fuse and Fleece attached needs to be on top to better support the embroidery stitches.**



Step 11

- Return the hoop to the machine.
- Stitch Machine Step 3, Right Panel Tackdown.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the folded edge of the Left Panel outer fabric to the left of the zipper teeth.
- Cover the zipper tackdown line. Do not cover the zipper teeth.
- Tape in place to secure.
- **Note: The fabric side with the Fuse and Fleece attached needs to be on top to better support the embroidery stitches.**



Step 13

- Return the hoop to the machine.
- Stitch Machine Step 4, Left Panel Tackdown.
- Stitch Machine Step 5, Fabric 2 Placement Guide.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Line up Fabric 2 approximately 1/8" past the Placement Guide 2, right side down. Most of Fabric 2 will be on the right side of the line.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.
- **Note: OESD Expert Embroidery Tape TearAway is recommended for fabric placement to prevent shifting during embroidery. As the zipper is already secured, there is no need to worry about the tape getting caught in the zipper teeth.**



Step 15

- Return the hoop to the machine.
- Stitch Machine Step 6, Fabric 2 Tackdown.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 16

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Fold the fabric open, finger press, and tape in place.



Step 17

- Return the hoop to the machine.
- Stitch Machine Step 7, Fabric 3 Placement Guide.



Step 18

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Line up Fabric 3 approximately 1/8" past the Placement Guide 3, right side down. Most of Fabric 3 will be on the right side of the line.
- Tape in place to secure.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 19

- Return the hoop to the machine.
- Stitch Machine Step 8, Fabric 3 Tackdown.



Step 20

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim Fabric 2 along the edge of Fabric 3.
- Fold the fabric open, finger press, and tape in place.





It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 21

- Return the hoop to the machine.
- Stitch Machine Step 9, Fabric Edge Tackdown.



Step 22

- Stitch Machine Steps 10 – 13.
- **Note: Each machine step is linework for a different fabric section, so it is effortless to customize the design.**



Step 23

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and lay face down on a flat surface.
- On the back of the hoop, locate the Zipper Tackdown lines.
- Place the folded edge of the Right Panel Lining fabric slightly inside the right side Zipper Tackdown stitch line.
- Tape in place to secure.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 24

- Return the hoop to the machine.
- Stitch Machine Step 14, Right Side Inner Lining Tackdown.



Step 25

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and lay face down on a flat surface.
- On the back of the hoop, locate the Zipper Tackdown lines.
- Place the folded edge of the Left Side Lining fabric slightly inside the left side Zipper Tackdown stitch line.



Step 26

- Return the hoop to the machine.
- Stitch Machine Step 15, Left Side Inner Lining Tackdown.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 27

- Remove the hoop from the machine, but NOT the project from the hoop.
- Unzip the zipper **halfway.**
- ***Note: This is the most important step in the whole project!***

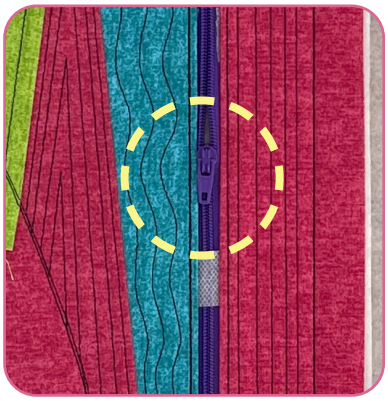

Step 28

- Position the Back Panel outer fabric, right side down, over the front of the zipper pouch, completely covering the stitched pieces.
- Tape in place to secure.
- **Note: This is the fabric prepared with Fuse and Fleece.**



Step 29

- Return the hoop to the machine.
- Stitch Machine Step 16, Backing Tackdown.

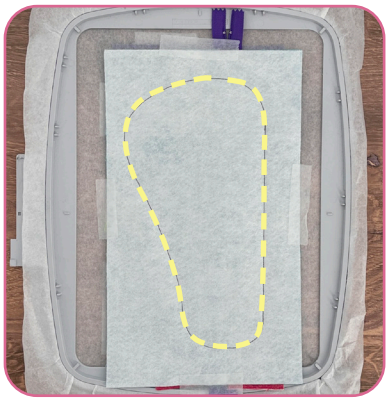

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 30

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and lay face down on a flat surface.
- Position the Back Panel Lining, right side down, on the back of the hoop.
- Tape in place to secure.



Step 31

- Return the hoop to the machine.
- Stitch Machine Step 17, Inner Lining Tackdown.
- **Note: The opening in the top is called the "neck". This opening is used for turning the back fabric.**



Step 32

- When the design is complete, remove the project from the hoop.
- Trim approximately 1/4" from the outermost stitching line.
- DO NOT cut the neck opening. Trim across the neck above the vertical lines of stitching.
- Clip the curves and on each inner corner of the neck clip to, but not through, the corner stitch.
- **Note: The zipper pouch is turned twice, so don't panic after the first turn!**



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 33

- Turn the pouch inside out to show the right side of the lining fabric.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.



Step 34

- Remove the stabilizer from the zipper area.
- Unzip the zipper.
- **Tip: If any of the washaway tape is left on the zipper, use a damp cloth to remove it.**



Step 35

- Tuck the neck area to the inside of the bag.
- Press.
- Close the opening with a small piece of Fuse and Seal.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

Step 36

- Turn the pouch right side out through the zipper.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.
- Press right side down on the Perfect Embroidery Press Cloth.



Step 37

- The project is complete. Enjoy!



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.