






Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

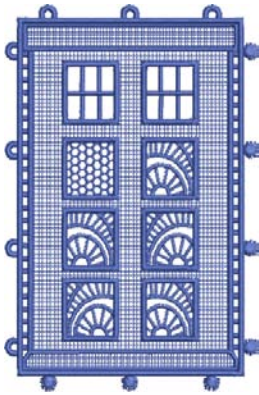


**12486-01 FSL Police Box Front**  
3.19 X 4.84 in.  
81.03 X 122.94 mm  
28,782 St.

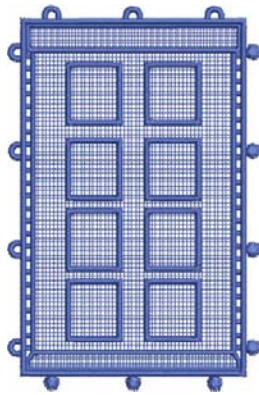


**12486-02 FSL Police Box Side**  
3.20 X 4.85 in.  
81.28 X 123.19 mm  
25,325 St.

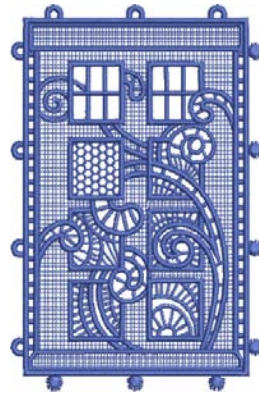


**12486-03 FSL Police Box Alternative Front**  
3.19 X 4.84 in.  
81.03 X 122.94 mm  
33,673 St.

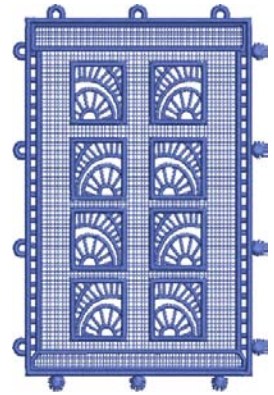


**12486-04 FSL Police Box Alternative Side**  
3.19 X 4.84 in.  
81.03 X 122.94 mm  
28,677 St.

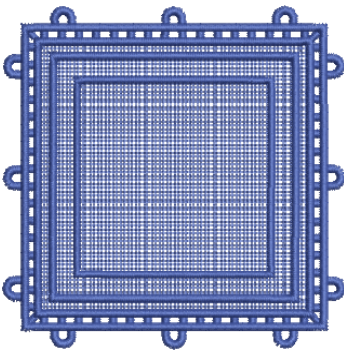

**12486-05 FSL Police Box Bottom**  
3.16 X 3.15 in.  
80.26 X 80.01 mm  
19,849 St.

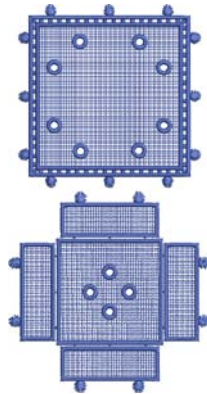

**12486-06 FSL Police Box Top Pieces**  
3.53 X 6.78 in.  
89.66 X 172.21 mm  
30,655 St. **L**

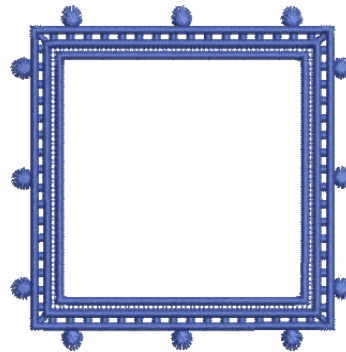

**12486-07 FSL Police Box Pencil Top**  
3.18 X 3.19 in.  
80.77 X 81.03 mm  
10,794 St.



**12486-08 FSL Police Box Top Light**  
1.91 X 1.91 in.  
48.51 X 48.51 mm  
6,371 St.

Listings below indicate color sample, stitching order and suggested thread color number. "I" refers to Isacord Thread and "T" refers to Timeless. Colors beginning with 20501 refer to YLI Fine Metallics, 7 refer to Yenmet Metallic, 8 refer to YLI Variations Variegated Thread and 9 refer to Isacord Multicolor Variegated.

	I	T		I	T		I	T
<b>12486-01 FSL Police Box Front</b>			<b>12486-04 FSL Police Box Alternative Side</b>			<b>12486-07 FSL Police Box Pencil Top</b>		
■ 1. Single Color Design.....	3611	14154	■ 1. Single Color Design.....	3611	14154	■ 1. Single Color Design.....	3611	14154
<b>12486-02 FSL Police Box Side</b>			<b>12486-05 FSL Police Box Bottom</b>			<b>12486-08 FSL Police Box Top Light</b>		
■ 1. Single Color Design.....	3611	14154	■ 1. Single Color Design.....	3611	14154	■ 1. Single Color Design.....	3611	14154
<b>12486-03 FSL Police Box Alternative Front</b>			<b>12486-06 FSL Police Box Top Pieces</b>					
■ 1. Single Color Design.....	3611	14154	■ 1. Single Color Design.....	3611	14154			

⌘ Design contains a loose fill.

⊛ Some white areas shown are not stitched.

**L** Design is larger than 5" (127 mm) in either direction.

**S** Design is smaller than 1.5" (38.1 mm) in either direction.

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.

Electronic designs are licensed to the original purchaser for use at one location. ©2013 OESD, LLC. All rights reserved.

### GENERAL FREESTANDING LACE GUIDELINES

#### SUPPLIES:

##### Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle.

##### Needles:

- Use an Organ 80/12 Titanium needle for extended needle life.

##### Stabilizer:

- Use water-soluble stabilizer or film water-soluble stabilizer.

#### GENERAL INSTRUCTIONS

1. Hoop two layers of water-soluble stabilizer.
2. Attach the hoop to the machine and select the design of your choice.
3. Stitch the design.
4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
5. Rinse away remaining stabilizer and allow it to dry.

#### HANDY HINTS:


- DO NOT RINSE away all of the stabilizer for a “stiffer” lace. Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

#### Drying Lace:

- Lay lace piece with right side down to dry. This will minimize the tendency for the lace to curl.

#### Handy tips:

- A pair of tweezers, hemostats, stiletto or a tiny crochet hook can be extremely helpful when inserting the buttonettes into the eyelets. (Please see **Diagram 1** for explanation of “buttonette” and “eyelet” and “hinge line”.)
- Insert the tip of the tweezers, hemostats or crochet hook into the eyelet, grasp the buttonette and pull through the eyelet.
- A stiletto could be used to “push” the buttonette through the eyelet.
- The lace looks best when left to dry completely. Be sure to flatten the piece out entirely and allow ample time to dry.
- If item becomes too limp to work with, dissolve scrap pieces of water-soluble stabilizer in warm water and apply to the item to re-stiffen.
- Alternatively you can iron the appliqué pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction.

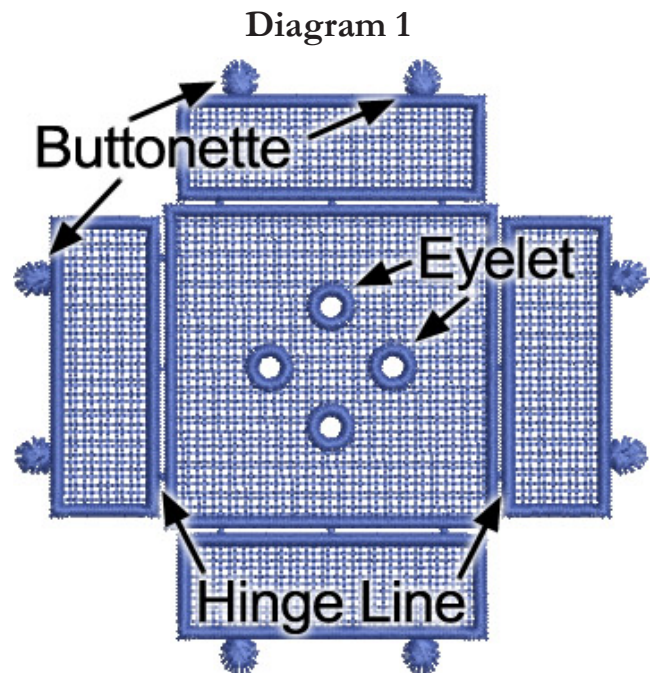

### Police Box - Summary


- Requires 3 FSL Police Box Sides 12486-02, or 3 FSL Police Box Alternative Sides 12486-04
- Requires 1 FSL Police Box Front 12486-01, or 1 FSL Police Box Alternative Front 12486-03
- Requires 1 FSL Police Box Bottom 12486-05
- Requires either 1 FSL Police Box Pencil Top 12486-07, or 1 FSL Police Box Top Pieces 12486-06 and 1 FSL Police Box Top Light 12486-08

### Supplies

- Blue Embroidery Thread
- Embroidery Machine
- Stabilizer
- *Optional* - tweezers, hemostats, stiletto or a tiny crochet hook



Diagram 2

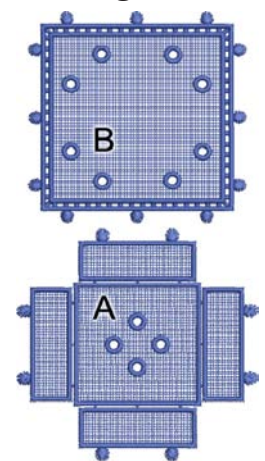

### Instructions for Police Box Construction

*Note that the police box has two different sides, two fronts, and two tops to choose from.*

1. Follow the *General Free Standing Lace Guidelines* and stitch the lace pieces required as listed in the summary above.
2. *Optional*, before assembly add embellishments as desired such as glitz crystals, sequins or beads.
3. Attach the police box sides (12486-02, or 12486-04) and the police box front (12486-01, or 12486-03) by inserting the four buttonettes along the right side of one piece into the four eyelets along the left side of the next piece. Continue in this manner until all three sides and the front are connected to one another. **(Photo A)**
4. Attach the police box bottom by inserting the three buttonettes along each bottom edge of the box sides and the box front into the three eyelets along each side of the box bottom. **(Photo B)**
5. For an open pencil box, attach the Police Box Pencil Top by inserting the three buttonettes along each side of the Pencil Box Top into the three eyelets along the top of each box side and box front. **(Photo C)**
6. To assemble the 3-Dimensional police box top, attach the Police Box Top Light to piece **A** (see **Diagram 2**) of the Police Box Top Pieces by folding the top light tabs together, and inserting the buttonettes into the eyelets in the center of piece **A**. **(Photo D)**
  - i. Fold the tabs of piece **A** down and insert the two buttonettes along each tab into the eyelets on piece **B**. **(Photo E)**
7. To attach the assembled Police Box Top, insert the three buttonettes along each side of piece **B** into the three eyelets along the top of each box side and box front. **(Photo F)**

