

# FREESTANDING HAUNTED HOUSE 2



1

Design

Fits hoop sizes 6" x 10" and larger

# THREAD LIST



## Isacord Thread Colors

- 0020 Black
- 1972 Silver Grey (or ISA Textlight Glow in the Dark thread)

## DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**



### 12641-01 Haunted Front Wall FSA

Size Inches:                      Size mm:                      Stitch Count:  
4.16 X 8.93 in.    105.66 X 226.82 mm    45,393 St.

- 1. Front Wall Placement Stitch ..... 0020
- 2. Cut Line & Tackdown ..... 0020
- 3. Windows Placement Stitch ..... 0020
- 4. Cut Line & Tackdown ..... 0020
- 5. Door Placement Stitch ..... 0020
- 6. Cut Line & Tackdown ..... 0020
- 7. Lace & Cover Stitch ..... 0020
- 8. Grey Linework ..... 1972

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

### 12641-02 Haunted Eaves FSL

Size Inches:                      Size mm:                      Stitch Count:  
 3.40 X 1.19 in.      86.36 X 30.23 mm      9,676 St.

- 1. Eaves ..... 0020



**\*Fabric Required**



### 12641-03 Haunted Side Wall 1 FSA

Size Inches:                      Size mm:                      Stitch Count:  
 3.94 X 5.76 in.      100.08 X 146.30 mm      31,052 St.

- 1. Side Wall Placement Stitch ..... 0020
- 2. Cut Line & Tackdown..... 0020
- 3. Window Placement Stitch..... 0020
- 4. Cut Line & Tackdown..... 0020
- 5. Lace & Cover Stitch..... 0020
- 6. Grey Linework ..... 1972

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**



**12641-04 Haunted Back Wall FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**4.16 X 8.95 in.    105.66 X 227.33 mm    39,839 St.**

- 1. Back Wall Placement Stitch..... 0020
- 2. Cut Line & Tackdown..... 0020
- 3. Window Placement Stitch..... 0020
- 4. Cut Line & Tackdown..... 0020
- 5. Shutters & Door Placement Stitch..... 0020
- 6. Cut Line & Tackdown..... 0020
- 7. Lace & Cover Stitch..... 0020
- 8. Grey Linework ..... 1972

**\*Fabric Required**



**12641-05 Haunted Side Wall 2 FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**3.92 X 6.64 in.    99.57 X 168.66 mm    36,511 St.**

- 1. Roof Placement Stitch..... 0020
- 2. Cut Line & Tackdown..... 0020
- 3. Lace & Cover Stitch..... 0020
- 4. Grey Linework ..... 1972


Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

### 12641-06 Haunted Roof 1 FSA

Size Inches:                      Size mm:                      Stitch Count:  
 5.45 X 5.10 in.    138.43 X 129.54 mm    48,783 St.

- 1. Roof Placement Stitch..... 0020
- 2. Cut Line & Tackdown..... 0020
- 3. Lace & Cover Stitch..... 0020
- 4. Grey Linework ..... 1972

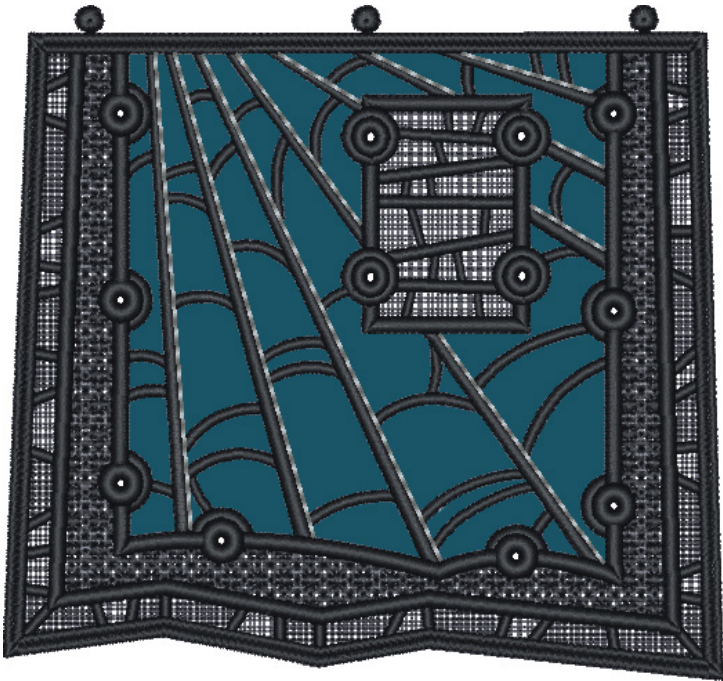


**\*Fabric Required**

### 12641-07 Haunted Roof 2 FSA

Size Inches:                      Size mm:                      Stitch Count:  
 5.41 X 4.63 in.    137.41 X 117.60 mm    42,109 St.

- 1. Roof Placement Stitch..... 0020
- 2. Cut Line & Tackdown..... 0020
- 3. Lace & Cover Stitch..... 0020
- 4. Grey Linework ..... 1972

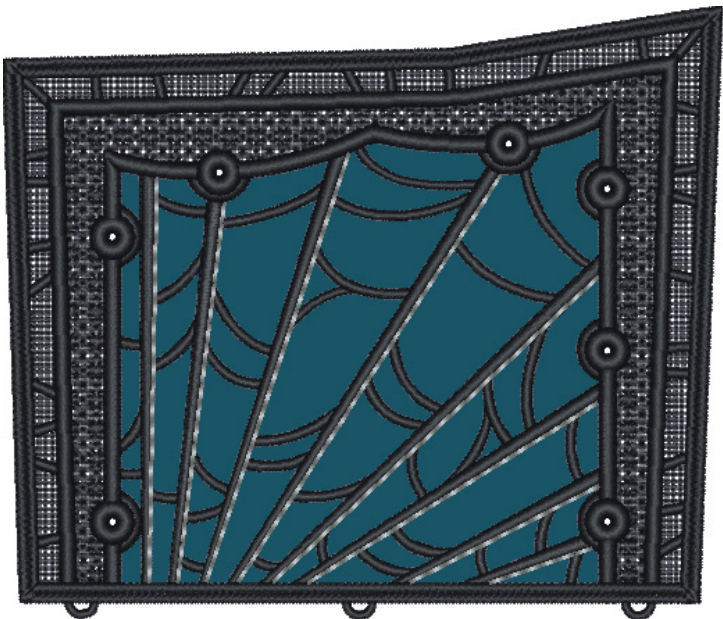


Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

**12641-08 Haunted Chimney FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**5.07 X 2.54 in.    128.78 X 64.52 mm    15,050 St.**

- 1. Chimney Placement Stitch ..... 0020
- 2. Cut Line & Tackdown..... 0020
- 3. Lace & Cover Stitch..... 0020

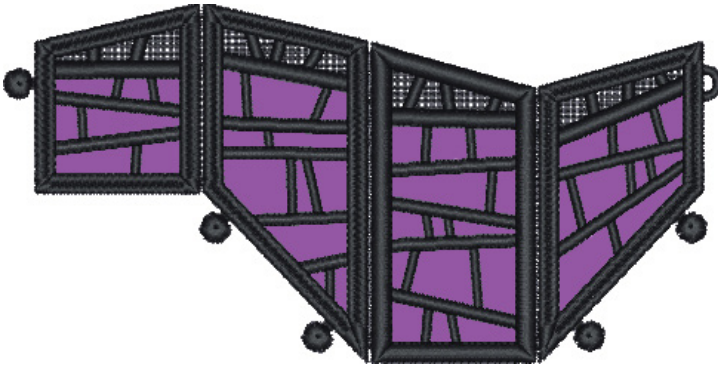


**\*Fabric Required**


**12641-09 Haunted Foundation FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**3.24 X 3.23 in.    82.30 X 82.04 mm    9,399 St.**

- 1. Foundation Placement Stitch ..... 0020
- 2. Cut Line & Tackdown..... 0020
- 3. Lace & Cover Stitch..... 0020

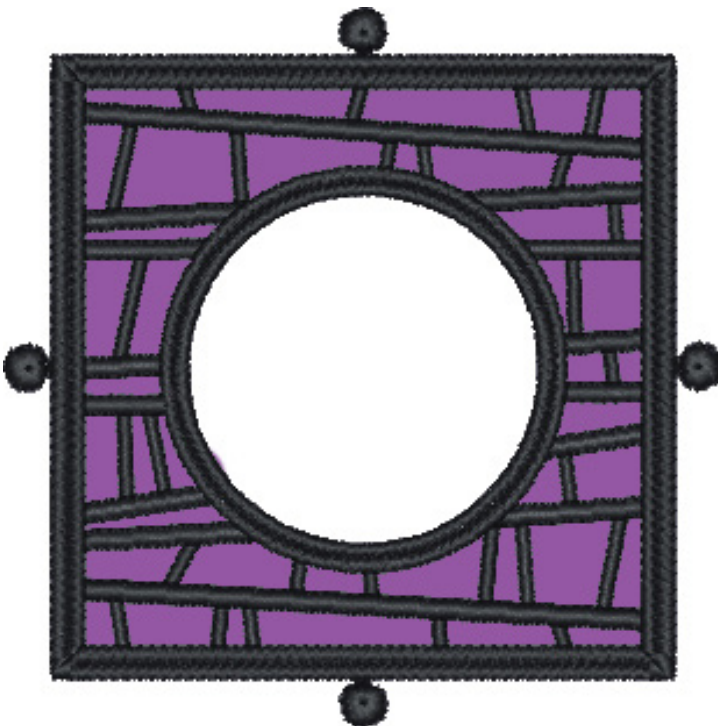

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

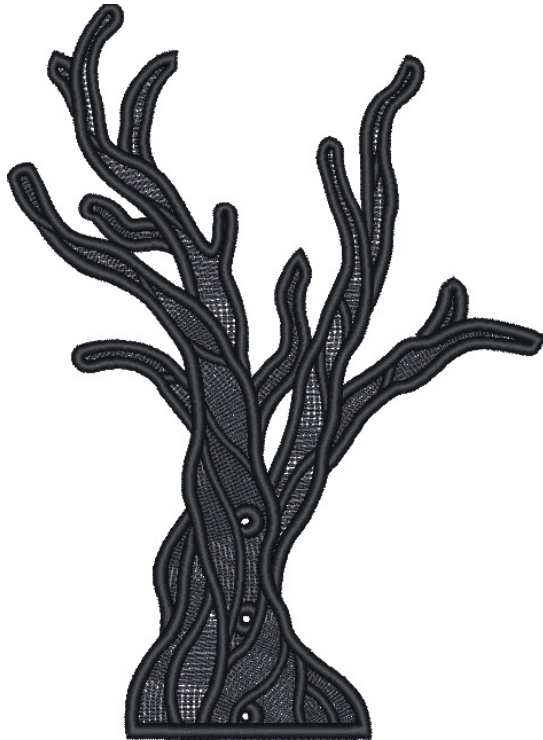

### 12641-10 Haunted Tree FSL

Size Inches:	Size mm:	Stitch Count:
4.91 X 6.71 in.	124.71 X 170.43 mm	33,641 St.

■ 1. Tree ..... 0020

### 12641-11 Haunted Tree Stand FSL

Size Inches:	Size mm:	Stitch Count:
1.95 X 2.38 in.	49.53 X 60.45 mm	8,706 St.

■ 1. Tree Stand ..... 0020




Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

### 12641-12 Haunted Fence FSL

Size Inches:	Size mm:	Stitch Count:
3.89 X 2.81 in.	98.81 X 71.37 mm	28,426 St.


■ 1. Fence Panel ..... 0020

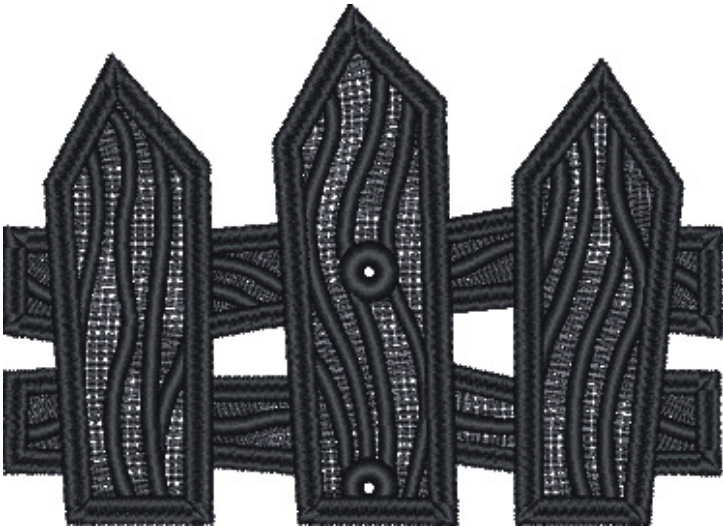

### 12641-13 Haunted Fence Stand FSL

Size Inches:	Size mm:	Stitch Count:
1.62 X 1.99 in.	41.15 X 50.55 mm	8,018 St.

■ 1. Fence Stand ..... 0020

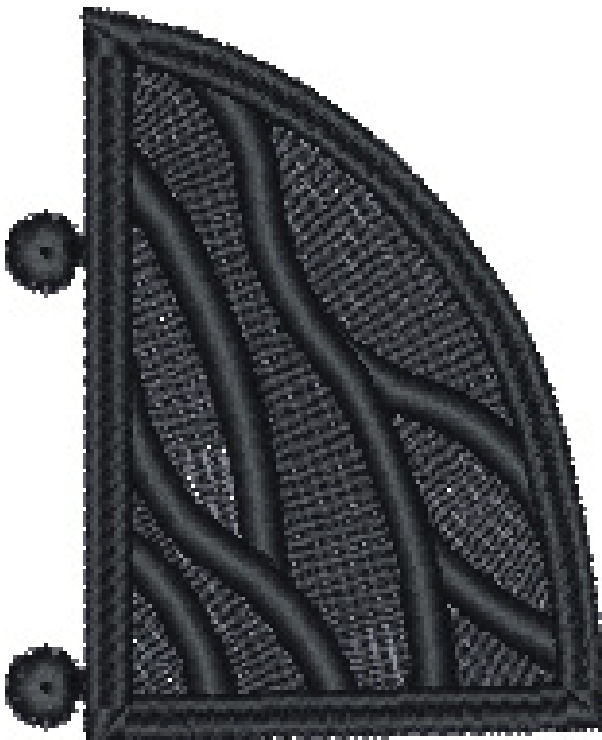



## Stabilizer

- AquaMesh WashAway
- BadgeMaster WashAway
- StabilStick CutAway

## Fabrics

- Wall fabric 1/8-yard (purple)
- Roof fabric 5" x 10" scrap (chartreuse)
- Doors/shutters fabric 5" x 5" scrap (orange)
- Windows fabric 6" x 6" fabric (white glow-in-the-dark)
- Apply two layers of StabilStick CutAway to the back of all fabrics.

## Supplies

- Expert Embroidery Tape TearAway
- OESD Alligator Clamps
- Perfect Embroidery Press Cloth
- 6" x 10" hoop
- Applique scissors
- Snips
- Tea lights and/or pixie lights (optional)
- Expert Point and Press Tool (optional)

# SUMMARY



12641-01



Requires 1 Design

12641-02



Requires 1 Design

12641-03



Requires 1 Design

12641-04



Requires 1 Design

12641-05



Requires 1 Design

12641-06



Requires 1 Design

12641-07




Requires 1 Design

12641-08




Requires 1 Design

12641-09

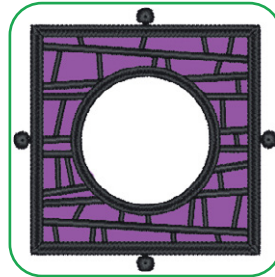

Requires 1 Design

12641-10

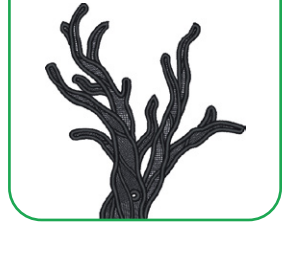

Requires 1 Design

12641-11



Requires 1 Design

12641-12



Requires 1 Design

12641-13



Requires 1 Design

## STEP 1

- The following applique instructions apply to all applique designs (FSA). See specific design instructions for details.
- Load machine and bobbin with the Isacord 0020 thread.
- Load design 12641-04, Haunted Back Wall FSA.
- Hoop one layer of AquaMesh WashAway with one layer of BadgeMaster in a hoop closest to the design size.




## STEP 2

- Stitch Color 1, Back Wall Fabric Placement.



## STEP 3

- Cut two pieces of prepared wall fabric slightly larger than the placement lines.
- Cover the placement lines with the prepared fabric. Tape in place as shown to secure.
- Return the hoop to the machine.

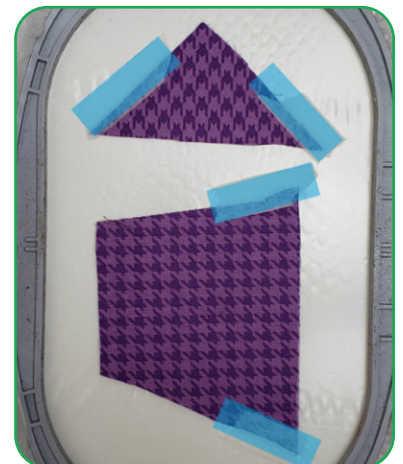

## STEP 4

- Stitch Color 2, Cut Line and Tackdown.
- Carefully remove the hoop from the machine, but not the project from the hoop.
- Trim excess fabric close to the placement line with sharp applique scissors.
- Return the hoop to the machine.




## STEP 5

- Stitch Color 3, Window Placement Stitch.
- Cut a piece of prepared fabric slightly larger than the window and position over the placement stitch. Tape to secure.
- Stitch Color 4, Cut Line and Tackdown
- Remove the hoop from the machine, but not the project from the hoop.
- Trim excess fabric close to the placement line with sharp applique scissors.
- Return the hoop to the machine.



## STEP 6

- Stitch Color 5, Shutters and Door Fabric Placement Stitch.
- Cut three pieces of prepared fabric slightly larger than the placement line and position it over the placement lines. Tape to secure.
- Stitch Color 6, Cut Line and Tackdown.
- Carefully remove the hoop from the machine, but not the project from the hoop.
- Trim away excess fabric, close to the stitching line.
- Return the hoop to the machine.

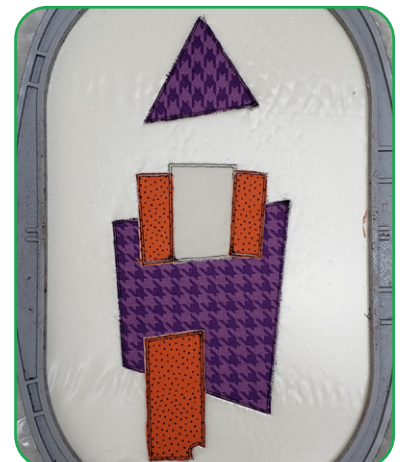


## STEP 7

- Stitch Color 7, Lace and Cover Stitch.
- Change upper thread to either grey or glow-in-the-dark thread.
- Stitch Color 8, Grey Linework.
- Remove the project from the hoop and trim away excess stabilizer to 1/4" - 1/2" from design.
- Repeat these instructions for all FSA pieces, except 12641-06 and 12641-09.



## STEP 1 Optional Instructions for Designs 06 and 09

- Stitch Color 1, Foundation Placement Stitch.

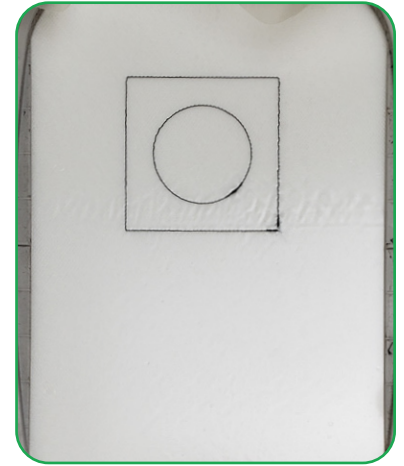

## STEP 2

- Place a piece of prepared wall fabric over the placement line.
- Tape to secure.



## STEP 3

- Stitch Color 2, Cut Line and Tackdown.




## STEP 4

- Carefully remove the hoop from the machine, but not the project from the hoop. Trim close to the tackdown stitching around the outer edge with applique scissors.
- Cut a slit in the hole then trim through all layers (including hooped stabilizers) close to the stitching as shown.



## STEP 5

- Cover the opening with a scrap of AquaMesh Plus, AquaMesh or BadgeMaster.
- Use 505 Temporary Spray Adhesive or a water-soluble glue stick to secure, if necessary. If using tape, make sure the tape is out of the way of the cover stitching.
- 

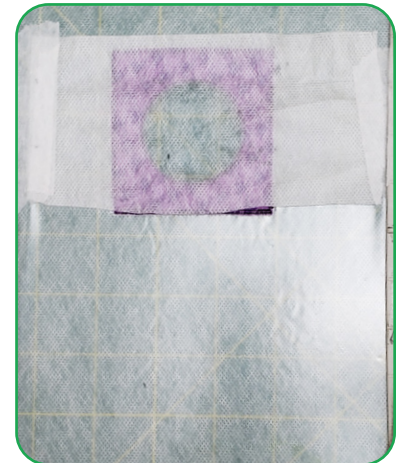

## STEP 6

- Return the hoop to the machine. Stitch the remaining colors).
- Remove completed design from the hoop and trim away excess stabilizer to 1/4"-1/2" from design.



# ASSEMBLY




## STEP 1

- Rinse all pieces in warm running water. For best results, rinse until the pieces are just slightly sticky.
- Lay the pieces right side down on a rack or smooth surface (i.e. parchment paper, wax paper) to dry completely.



## STEP 2

- Press pieces, right side down, on a Perfect Embroidery Pressing Cloth. Allow the pieces to cool in place.
- For pieces 02 (Haunted Eaves) and 08 (Haunted Chimney) also press the crease(s) where the pieces fold at the hinges.

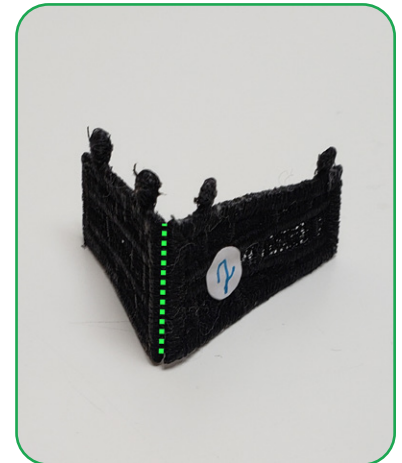

## STEP 3

- Insert piece 02 Haunted Eaves into 01 Haunted Front Wall by pulling the buttonettes on the Eaves through the eyelets above the Front Wall door as shown.
- If the eyelets need a bit of stretching, insert the small hole end of the Expert Point and Press Tool and gently stretch the opening.





# ASSEMBLY




## STEP 4

- Attach pieces 01, 03, 04 and 05 together in a row by pulling the buttonettes through the corresponding eyelets on the adjacent piece as shown.




## STEP 5

- Attach piece 01 to piece 05.

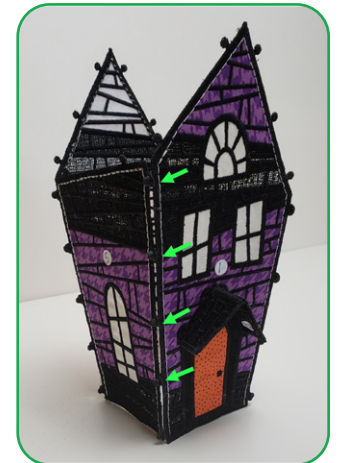

## STEP 6

- Pull the top eyelet on piece 08 through the eyelet on the opposite side to create the chimney.

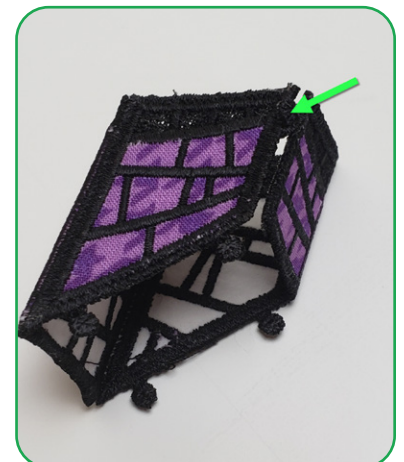

# ASSEMBLY



## STEP 7

- Pull the four buttonettes on the bottom of piece 08 (Chimney) through the eyelets in piece 06 (Roof 1) as shown.



## STEP 8

- Attach piece 06 to piece 07 (Roof 2) as shown.



## STEP 9

- Attach each side of the roof to the house structure as shown.




# ASSEMBLY



## STEP 10

- Attach each side of the foundation to the house structure as shown.

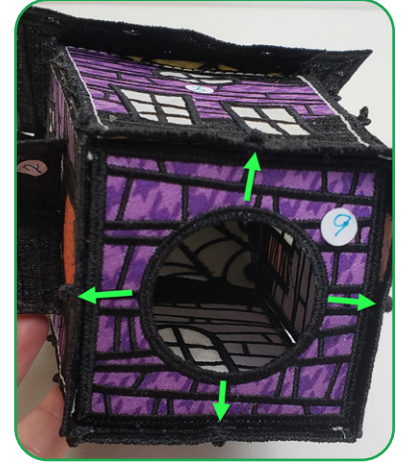


## STEP 11

- Pull the buttonettes on piece 11 (Tree Stand) through the eyelets on piece 10 (Tree).









## STEP 12


- Pull the buttonettes on piece 13 (Fence Stand) through the eyelets on piece 12 (Fence).

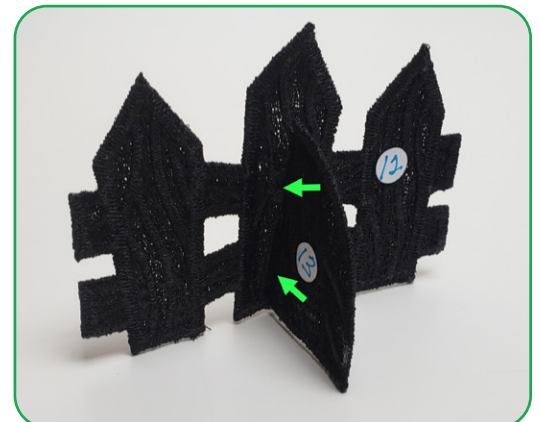


# APPLIQUE PATTERNS

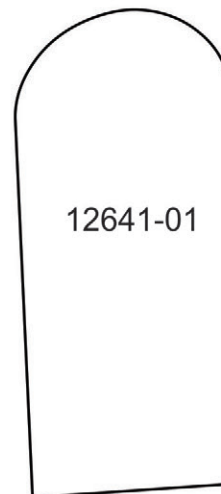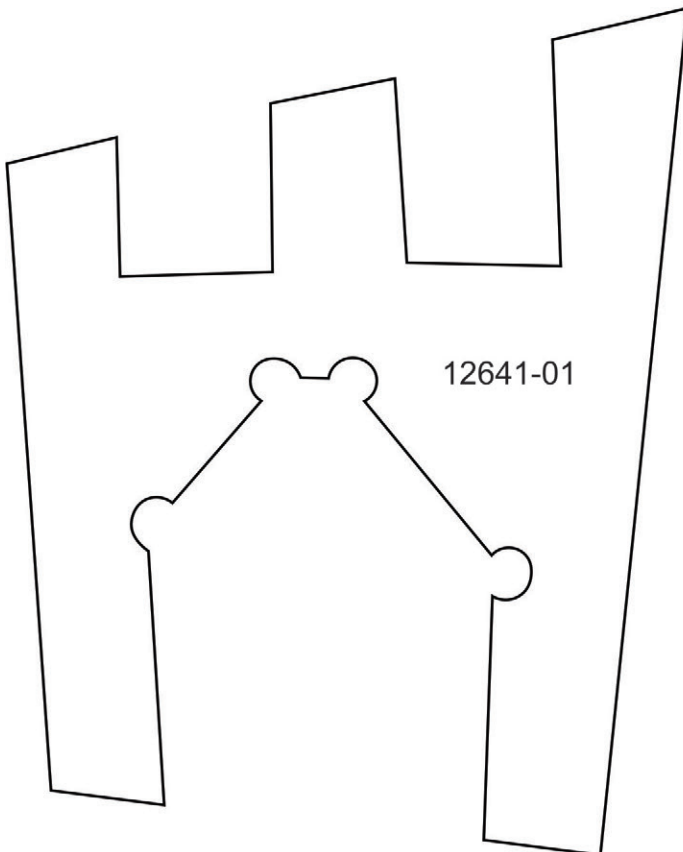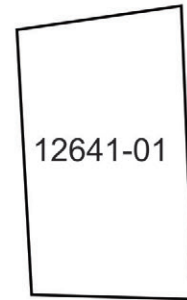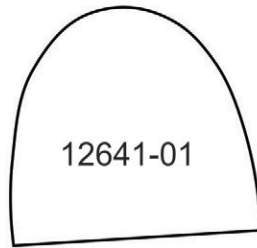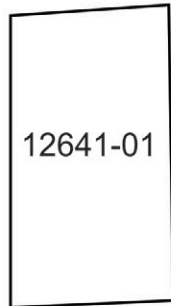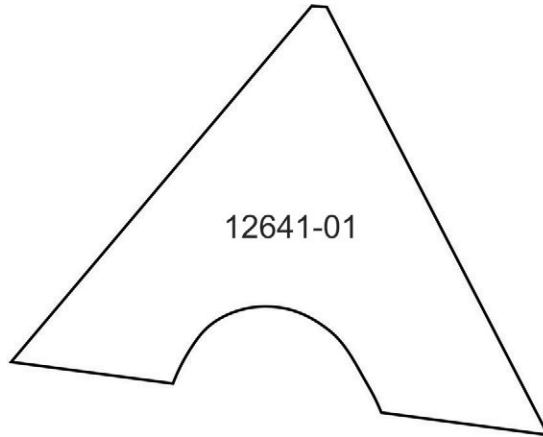




# APPLIQUE PATTERNS

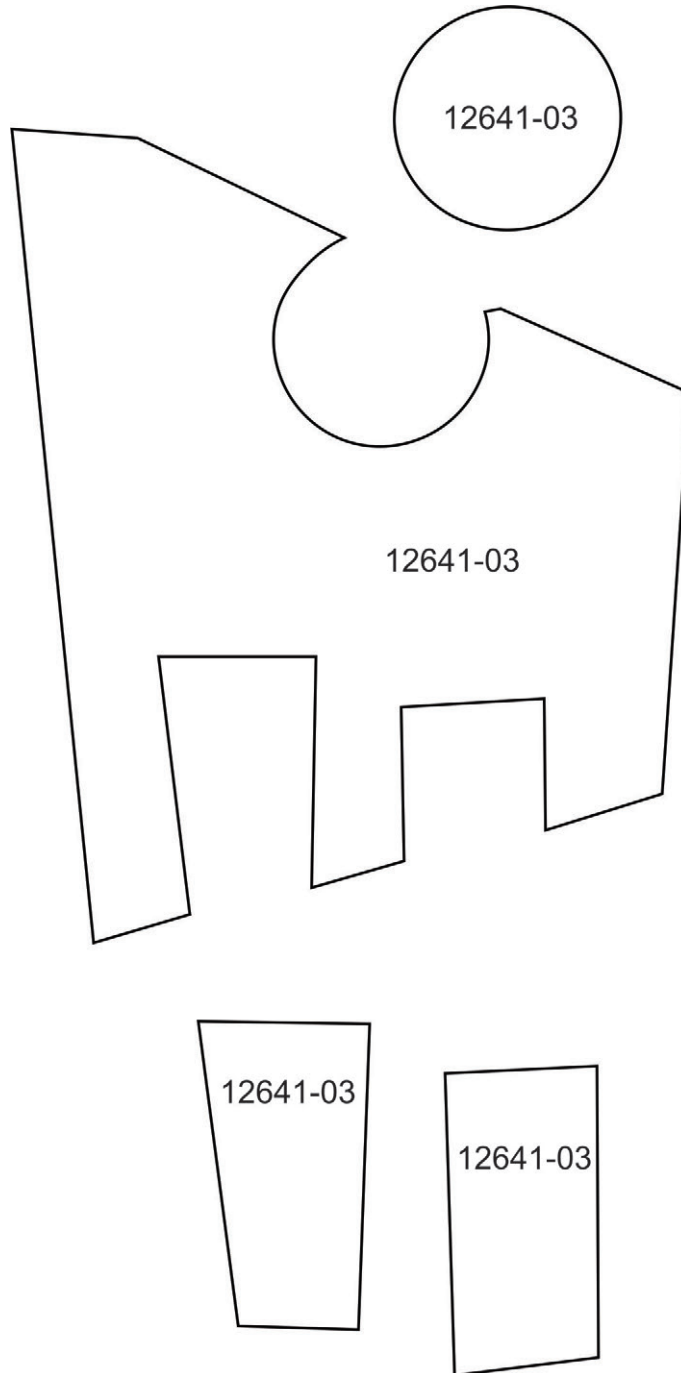




# APPLIQUE PATTERNS

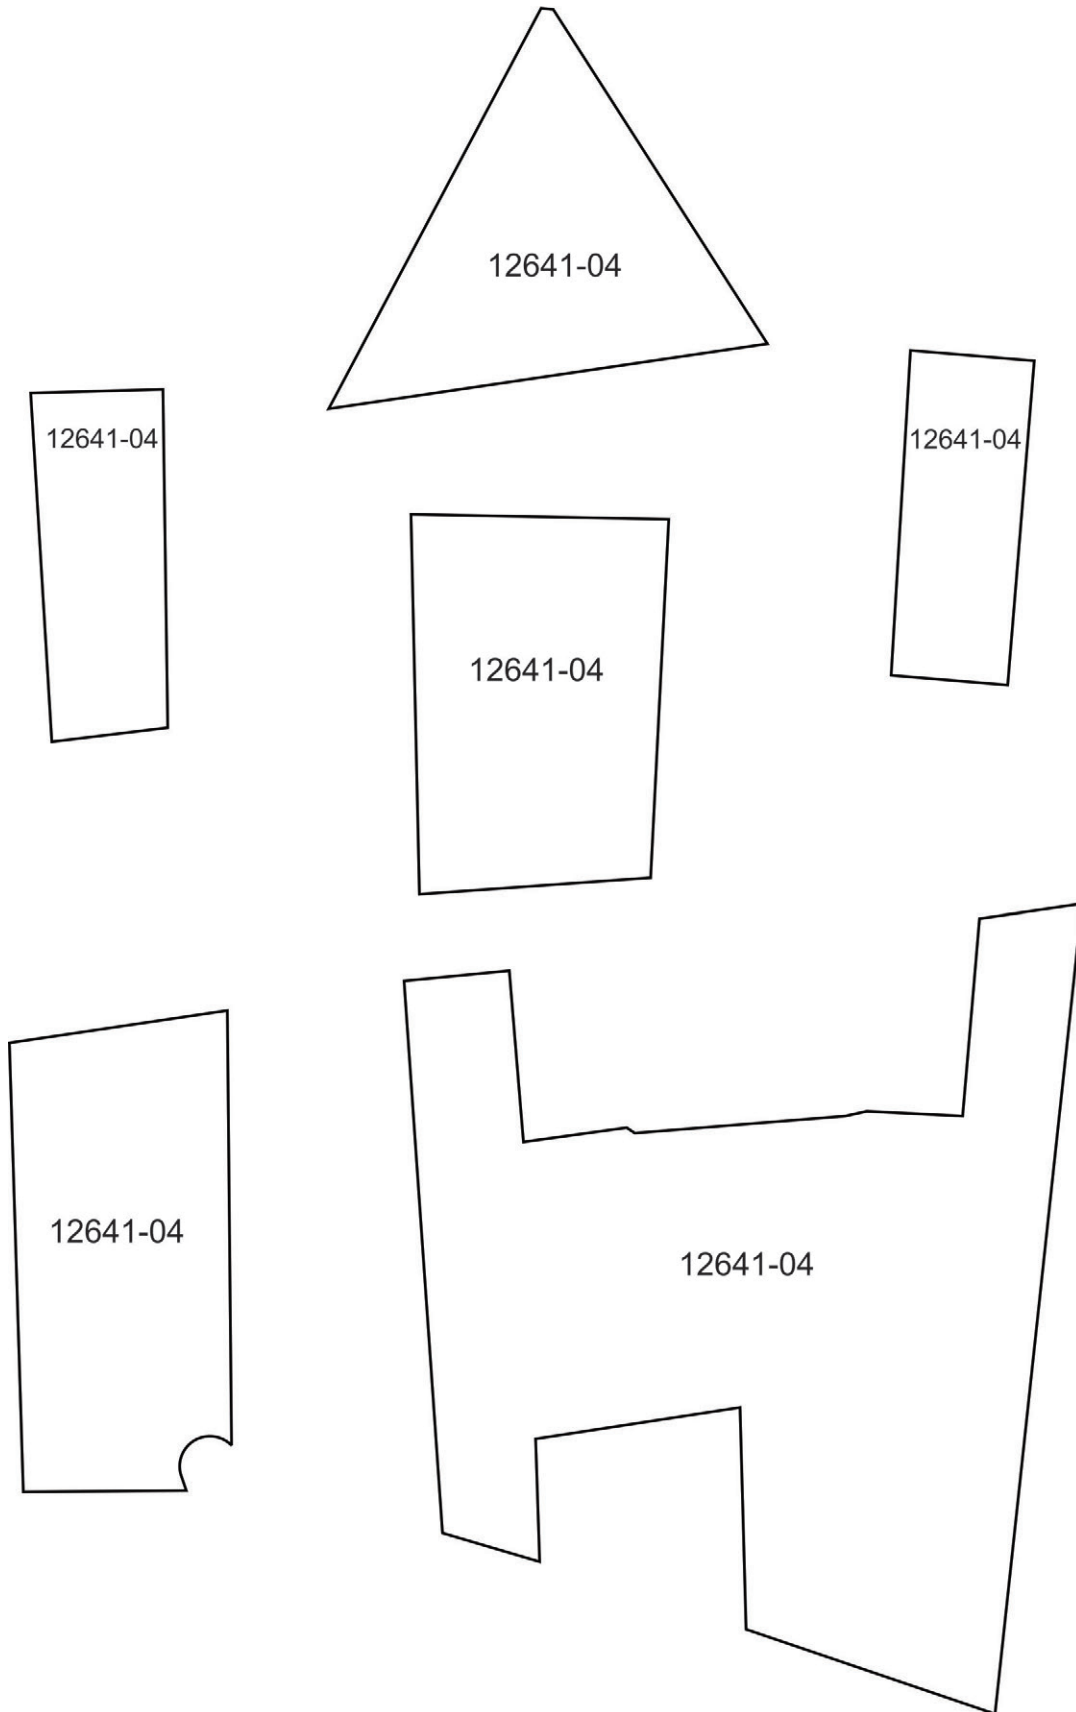

# APPLIQUE PATTERNS




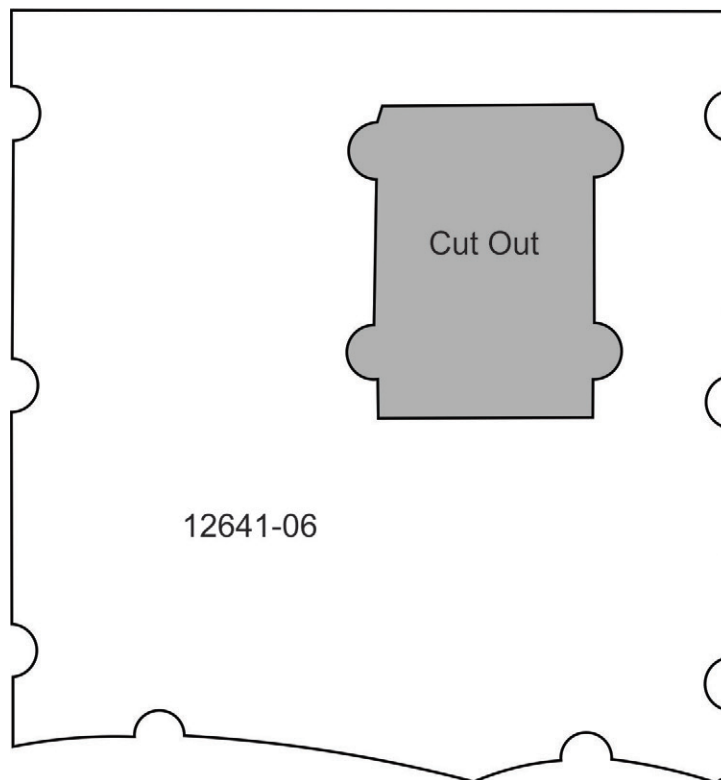
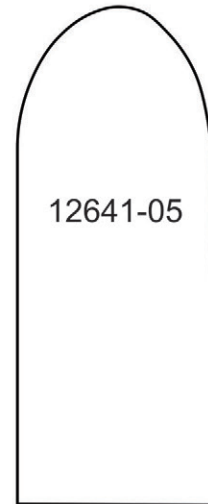
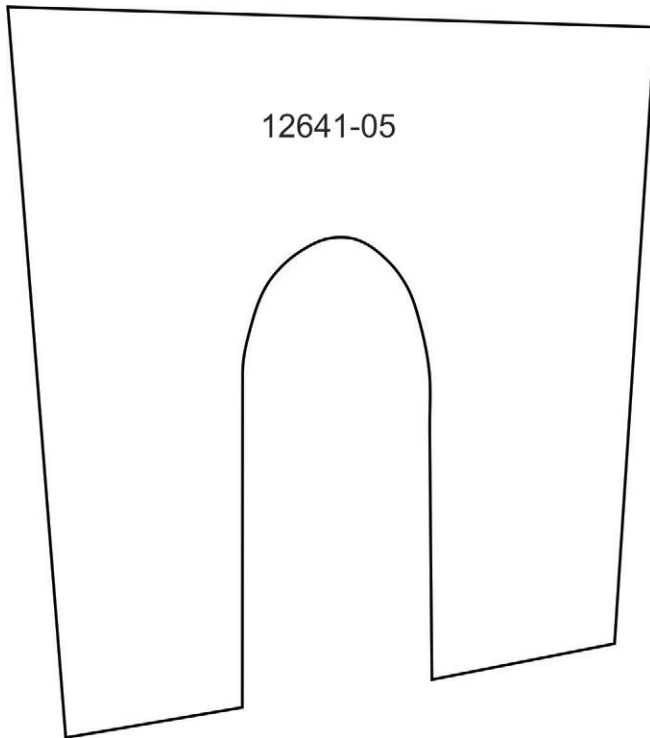


# APPLIQUE PATTERNS

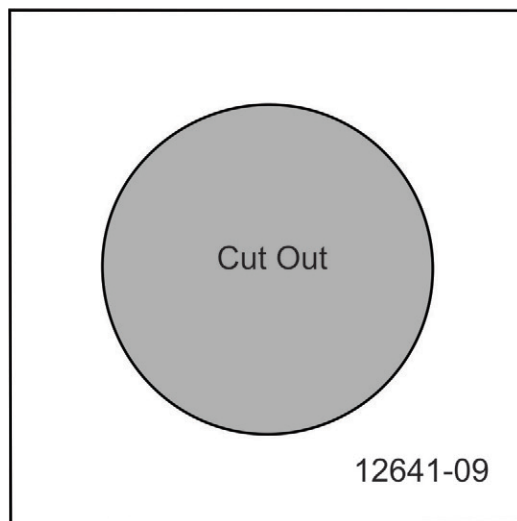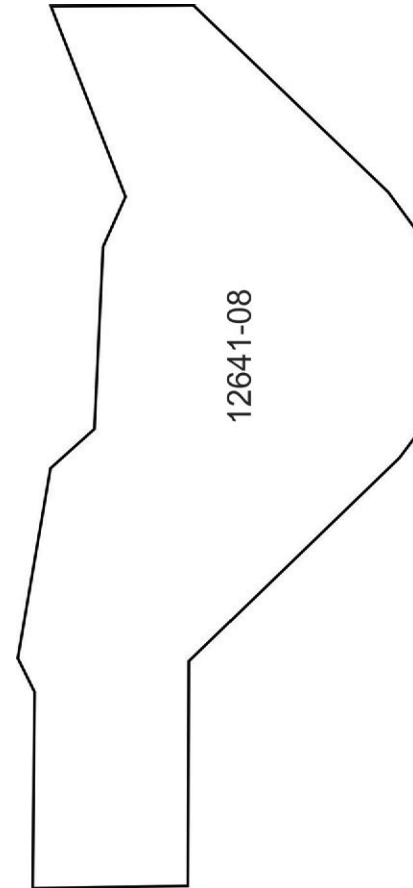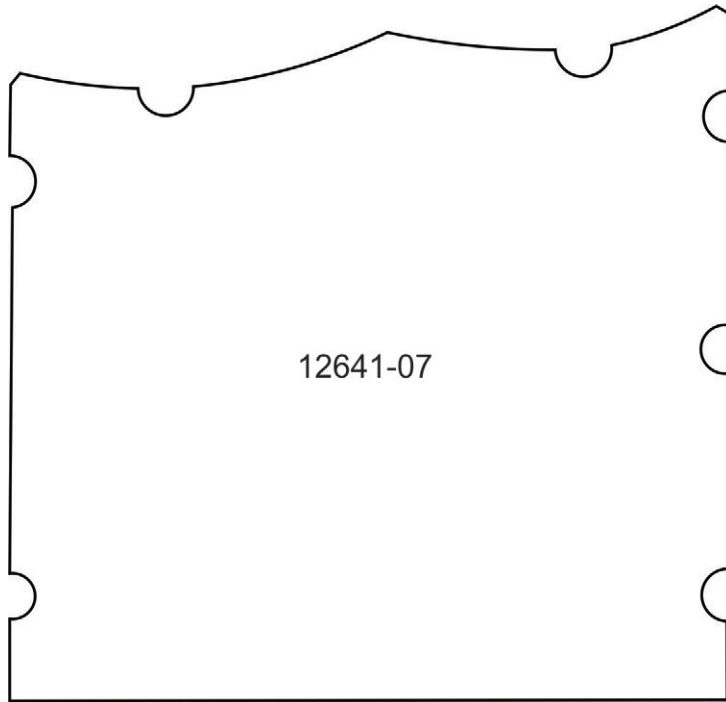





# MIRRORED PATTERNS

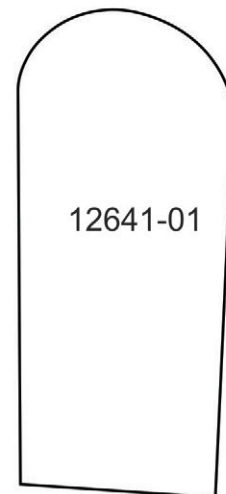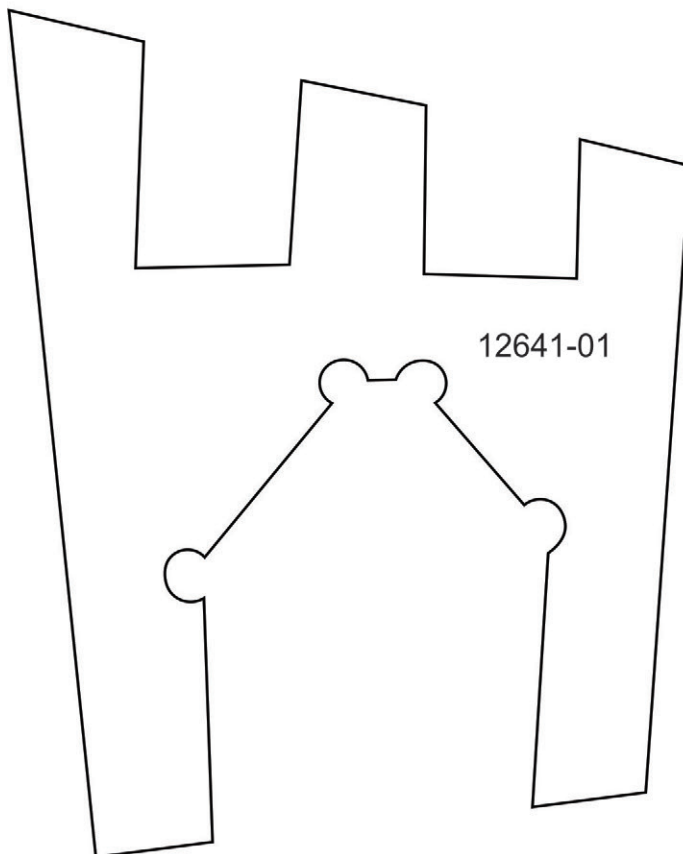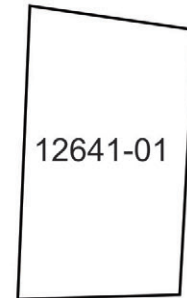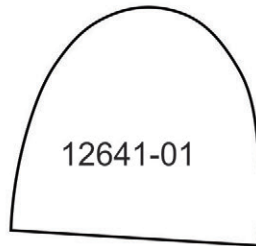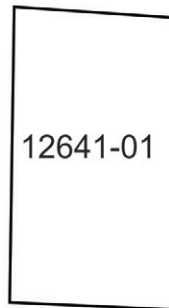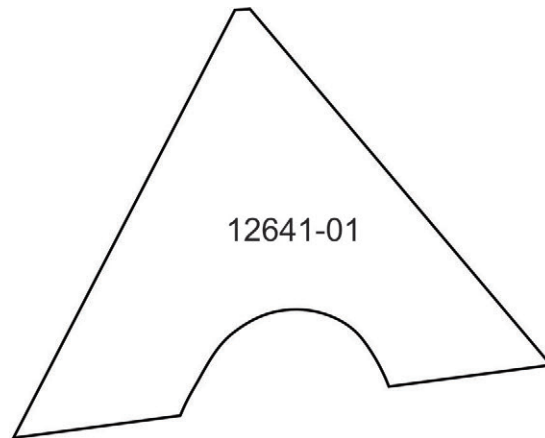



# MIRRORED PATTERNS

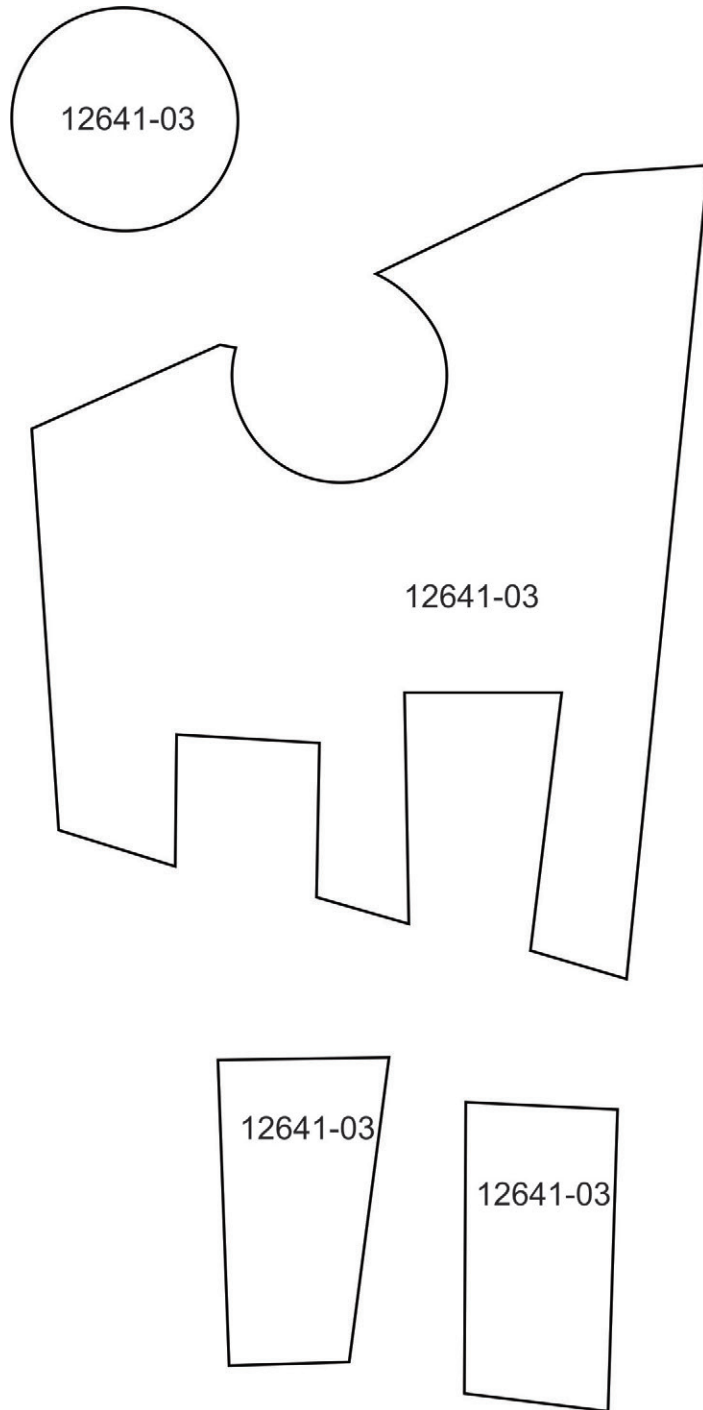




# MIRRORED PATTERNS

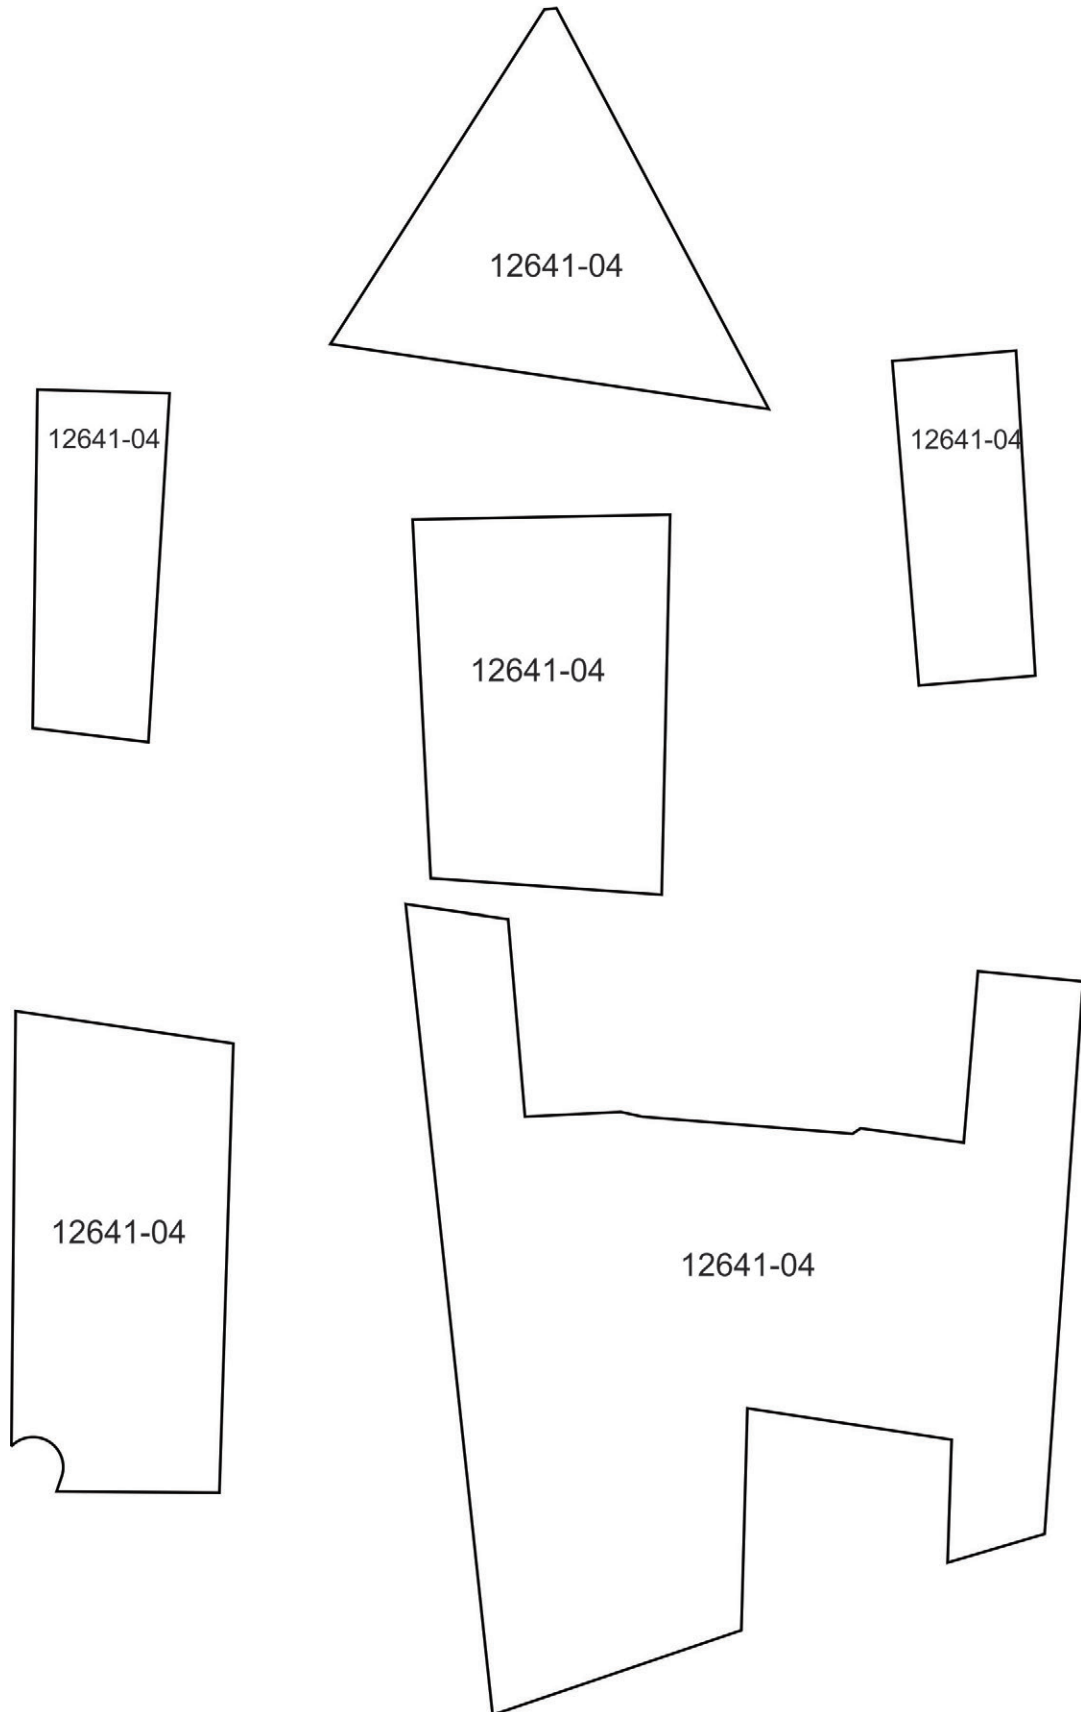

# MIRRORED PATTERNS

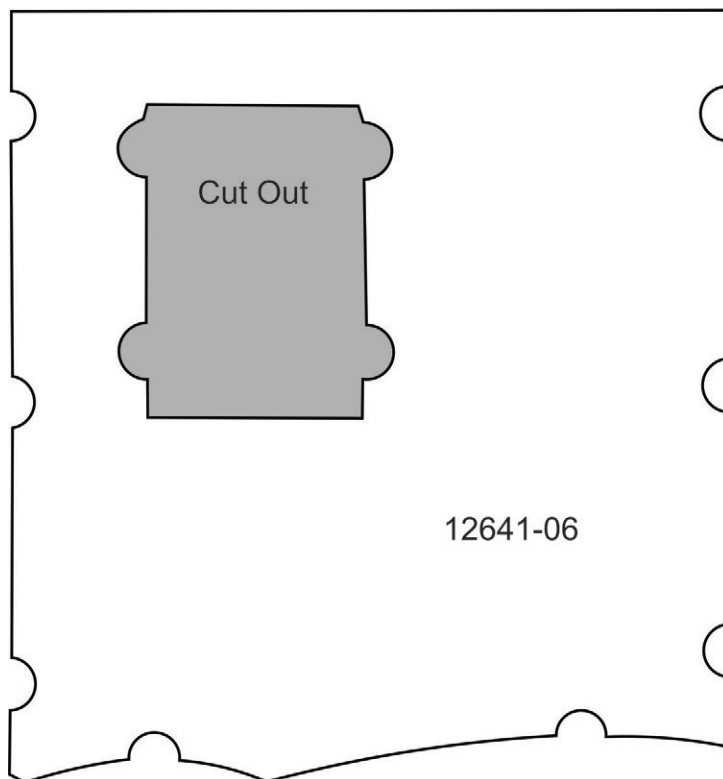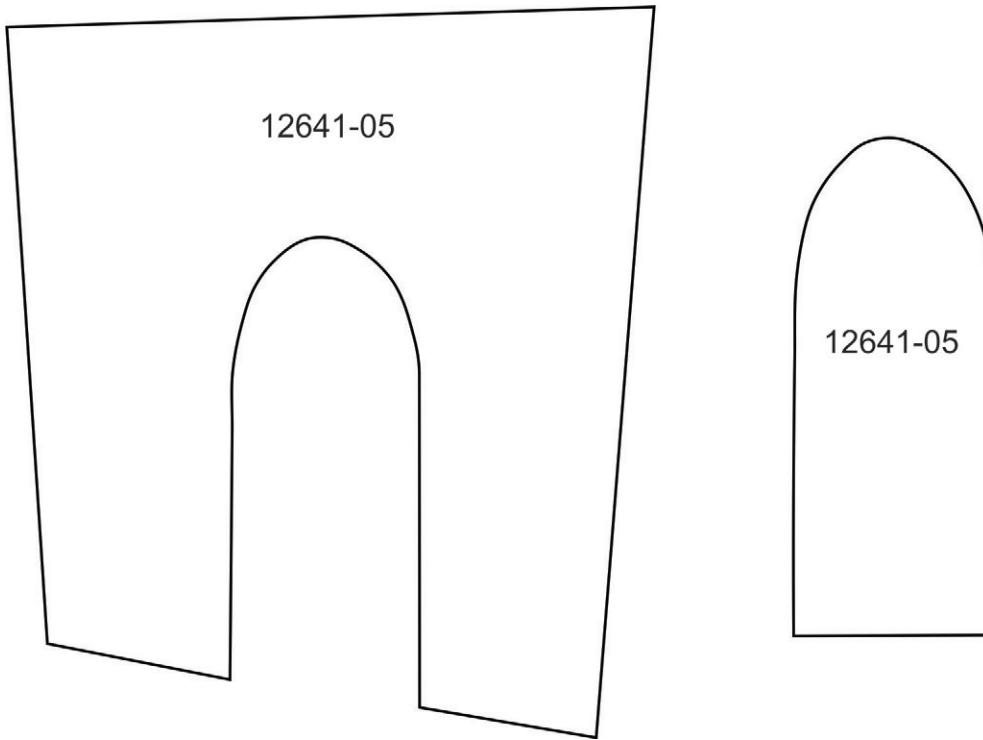

# MIRRORED PATTERNS

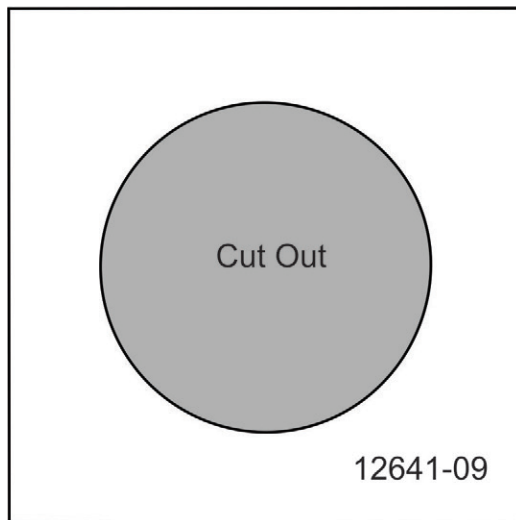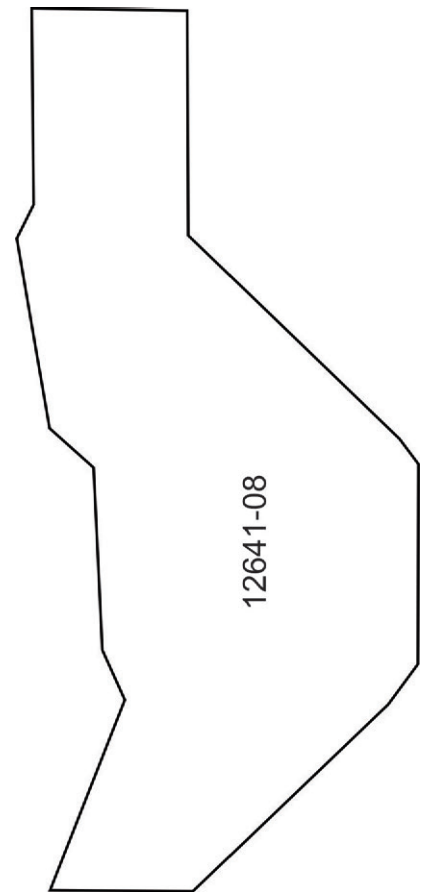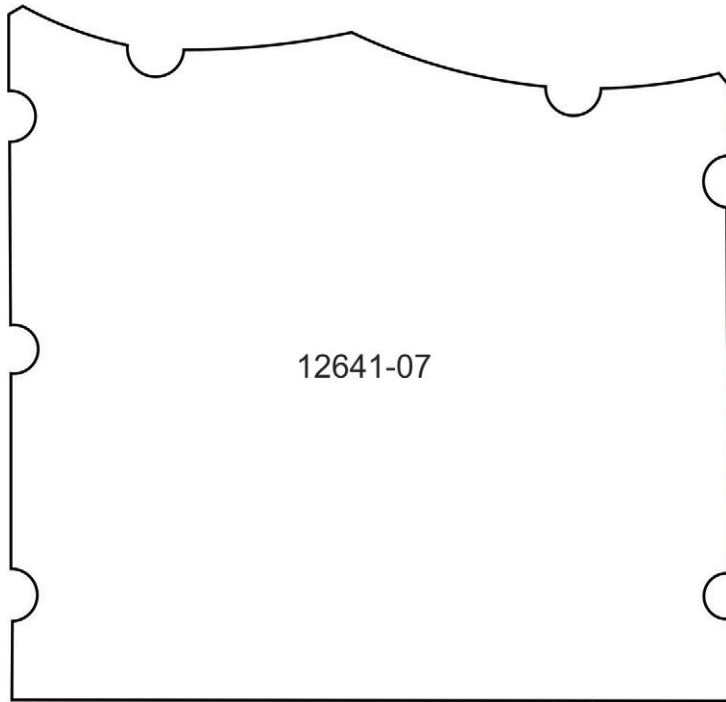

## General Freestanding Lace Guidelines

### Supplies:

#### Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle.

#### Needles:

- Use an Organ 80/12 Titanium needle for extended needle life.

#### Stabilizer:

- Use OESD AquaMesh stabilizer.

### Handy Hints:

#### For Stiffer Lace:

- DO NOT rinse away all of the stabilizer for a “stiffer” lace. Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

#### For Very Soft Lace:

- Cut away excess stabilizer. Remove remaining stabilizer by rinsing under warm running water until all traces of the stabilizer are gone. **NOTE:** If lace should become too limp to work with, dissolve stabilizer scraps in warm water and apply to the lace.

#### Drying Lace:

- The lace looks best when left to dry completely. Lay lace piece with right side down to dry. This will minimize the tendency for the lace to curl. Be sure to flatten the piece out entirely and allow ample time to dry.

### General Instructions

1. Hoop two layers of OESD AquaMesh Stabilizer.
2. Attach the hoop to the machine and select the design of your choice.
3. Stitch the design.
4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
5. Rinse away remaining stabilizer and allow it to dry.

### Handy Hints:

#### For 3D Lace Projects:

- If item becomes too limp to work with, iron the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction.
- A pair of tweezers, hemostats, stiletto or a tiny crochet hook can be extremely helpful when inserting the buttonettes into the eyelets. (Please see **Diagram 1** for explanation of “buttonette” and “eyelet”.)
- Insert the tip of the alligator clamps, tweezers, hemostats or crochet hook into the eyelet, grasp the buttonette and pull through the eyelet. Or a stiletto could be used to push the buttonette through the eyelet.

Diagram 1

