


Seasonal Settings

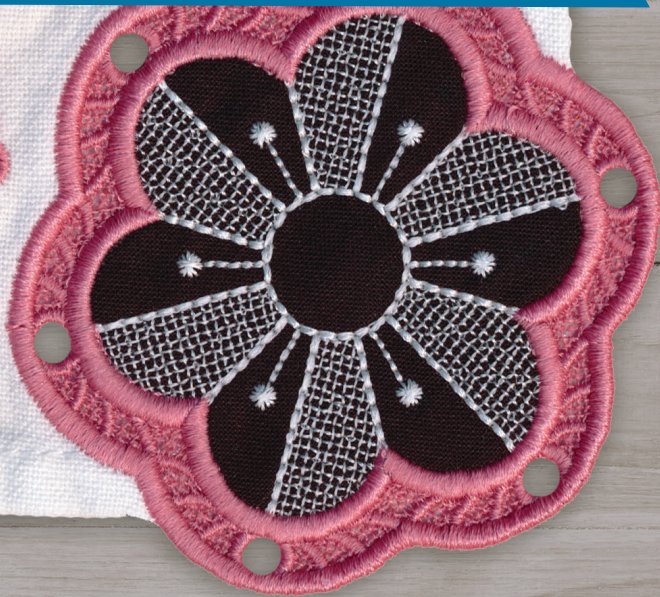

Collection No. 12648
12 Designs

MATERIALS



Isacord Thread Colors

- 0015 White
- 0150 Mystik Grey
- 1141 Tantone
- 1362 Shrimp
- 1430 Melon
- 2152 Heather Pink
- 2655 Aura
- 2810 Orchid
- 3963 Hint of Blue
- 4174 Charcoal
- 5650 Spring Frost

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD AquaMesh Plus WashAway
- OESD Fusible Woven
- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway

Fabrics/Textiles

- Various Quilter's Cotton
- (2) 4" x 4" per Napkin
- (2) 3 1/2" x 7" per Napkin Ring
- Napkins

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD MiniMat
- Craft Knife
- 1/2" Button per Napkin Ring

Isacord Thread Colors


- Per the thread chart




SUMMARY



Finished Project Size:
Napkin Ring: 6" L x 3" W

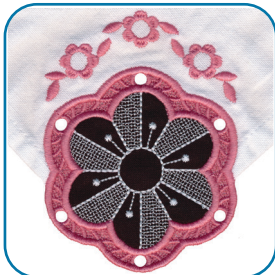

FLOWER NAPKIN
CORNER FSA
12648-01
REQUIRES 1 DESIGN

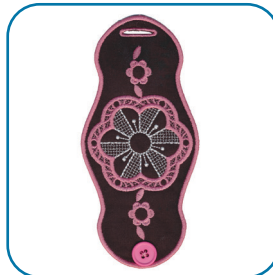

FLOWER NAPKIN
RING FSA
12648-02
REQUIRES 1 DESIGN



HEART NAPKIN
CORNER FSA
12648-03
REQUIRES 1 DESIGN



HEART NAPKIN
RING FSA
12648-04
REQUIRES 1 DESIGN



LEAF NAPKIN
CORNER FSA
12648-05
REQUIRES 1 DESIGN




LEAF NAPKIN
RING FSA
12648-06
REQUIRES 1 DESIGN



SNOWFLAKE NAPKIN
CORNER FSA
12648-07
REQUIRES 1 DESIGN




SNOWFLAKE NAPKIN
RING FSA
12648-08
REQUIRES 1 DESIGN

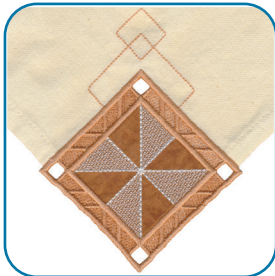


SQUARE NAPKIN
CORNER FSA
12648-09
REQUIRES 1 DESIGN



SQUARE NAPKIN
RING FSA
12648-10
REQUIRES 1 DESIGN

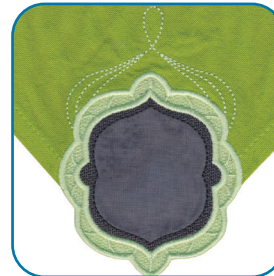

BLANK NAPKIN
CORNER FSA
12648-11
REQUIRES 1 DESIGN

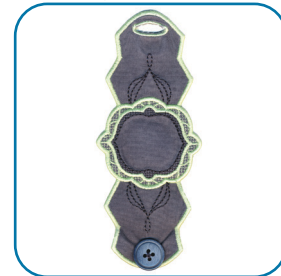

BLANK NAPKIN
RING FSA
12648-12
REQUIRES 1 DESIGN



General Instructions

The freestanding applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Designs 12648-01 and 12648-02 are shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with matching thread, top and bobbin.

NOTE: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

□ Step 1


- Gather the applique fabrics.
- Fuse one layer of Fusible Woven to the wrong side of all applique fabrics to provide body to the finished structure.



EMBROIDERY - NAPKIN CORNER


Step 2

- Using the OESD Grippy Grid, hoop one layer of Aquamesh Plus paper (shiny) side up.
- Use the Perfect Scoring Tool to score the paper.
- Remove the paper to reveal the adhesive surface.

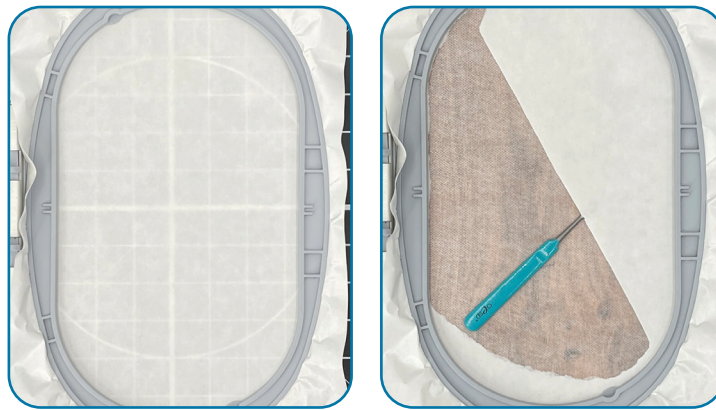


Step 3

- Load the selected design into the machine.
- Example design is 12648-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Napkin Placement Guide.

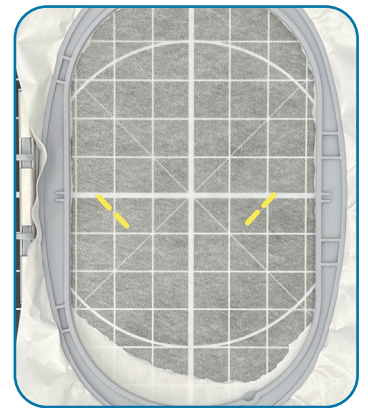

□ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Align the napkin corner with the placement guide.
- Finger press to secure.
Tip: The Grippy Grid lines assist with centering the napkin.

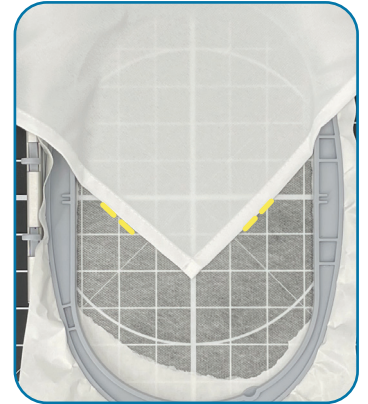

□ Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Corner Cut Line and Tackdown.




□ Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the corner of the napkin as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
Note: Be sure to trim on the side that will cut away the corner of the napkin and leave the body of the napkin intact.
Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



□ Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Flower Placement Stitch.

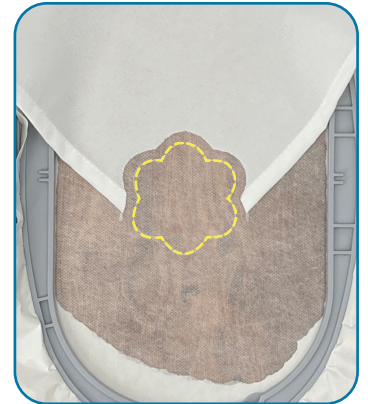

□ Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Completely cover the placement stitch with the prepared applique fabric.
- Finger press to secure.



□ Step 9

- Turn the hoop over and place the prepared applique fabric, right side up, completely covering the placement stitch.
- Carefully tape with OESD Expert Embroidery Tape TearAway to secure.
Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



□ Step 10

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.



□ Step 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



□ Step 12

- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.




Step 13

- Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.



Step 14

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.

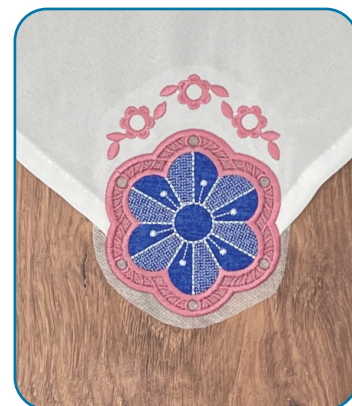


□ Step 15

- Gather the applique fabrics.
- Fuse one layer of Fusible Woven to the wrong side of all applique fabrics to provide body to the finished structure.




□ Step 16

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster.

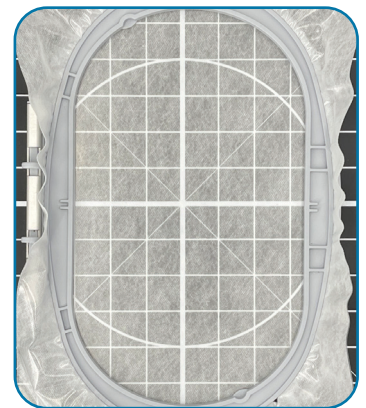


□ Step 17

- Load the selected design into the machine.
- Example design is 12648-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Ring Placement Stitch.

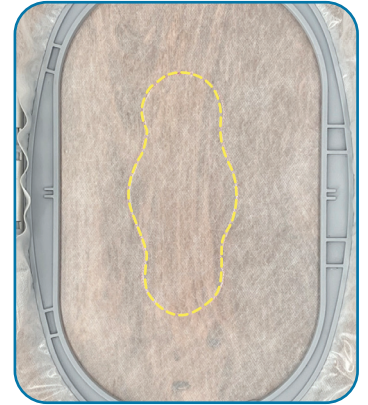


□ Step 18

- Remove the hoop from the machine, but NOT the project from the hoop.
- Completely cover the placement stitch with the prepared applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

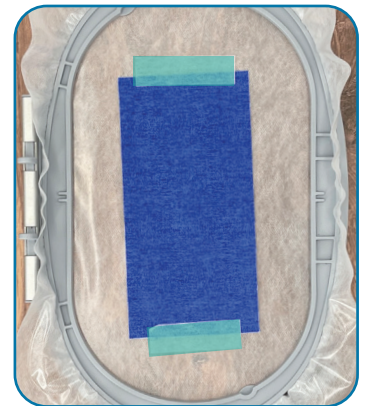


□ Step 19

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

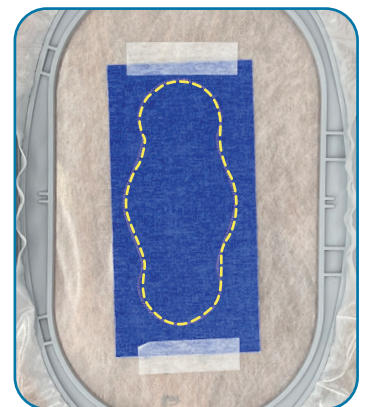

□ Step 20

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place. Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.

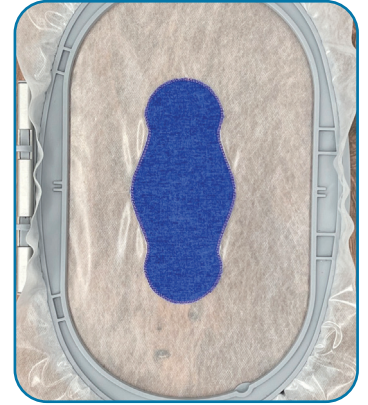

□ Step 21

- Return the hoop to the machine.
- Stitch Machine Step 3, Inner Flower Detail.
- Stitch Machine Step 4, Outer Flower Detail.



□ Step 22

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the prepared applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



□ Step 23

- Return the hoop to the machine.
- Stitch Machine Step 5, Back Cut Line and Tackdown.



□ Step 24

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



EMBROIDERY - NAPKIN RING

□ Step 25

- Return the hoop to the machine.
- Stitch Machine Step 6, Cover Stitch and Button Hole with matching bobbin thread.



□ Step 26

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.



ASSEMBLY


□ Step 27

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



□ Step 28

- Before assembly, use the OESD MiniMAT and a craft knife to cut open the button hole.
- Reference the Craft Knife Guides on page 18.
Tip: Take care not to cut the satin stitching.

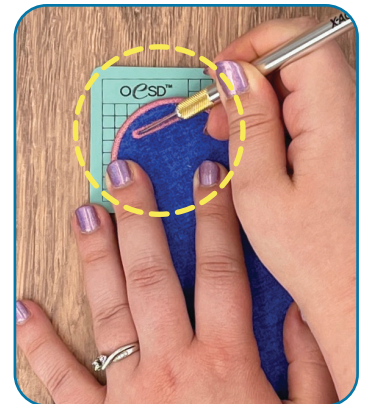

□ Step 29

- Sew a button on the button guide stitching.



ASSEMBLY

□ Step 30


- Button the napkin ring around the napkin.
- The project is complete. Enjoy!




CRAFT KNIFE GUIDES




12648-02

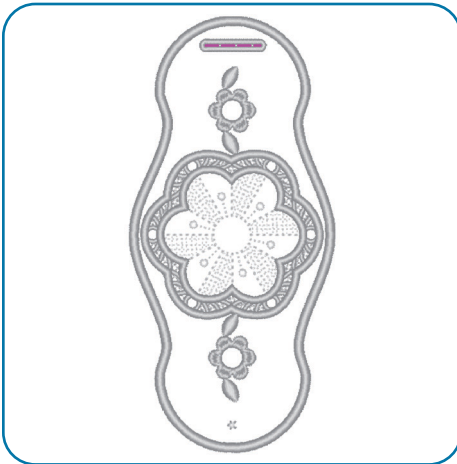


12648-04

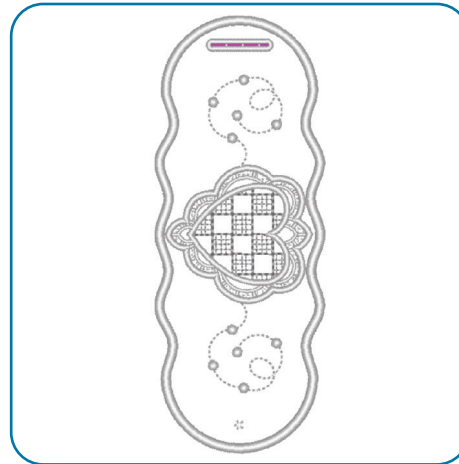


12648-06

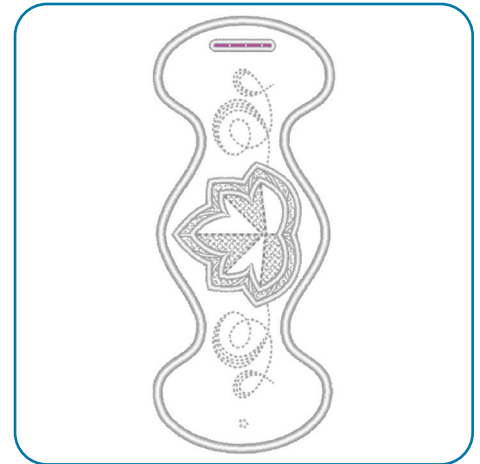


12648-08

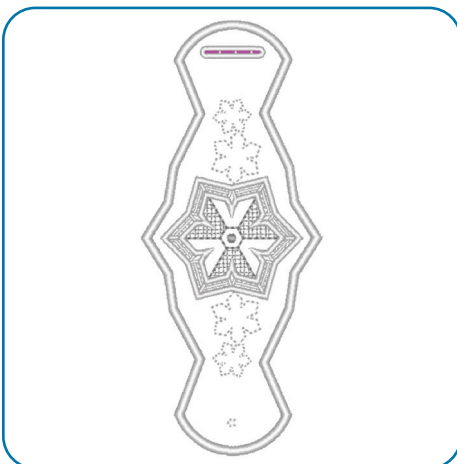

12648-10

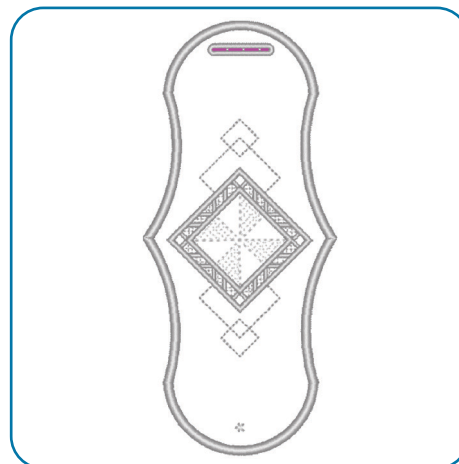

12648-12

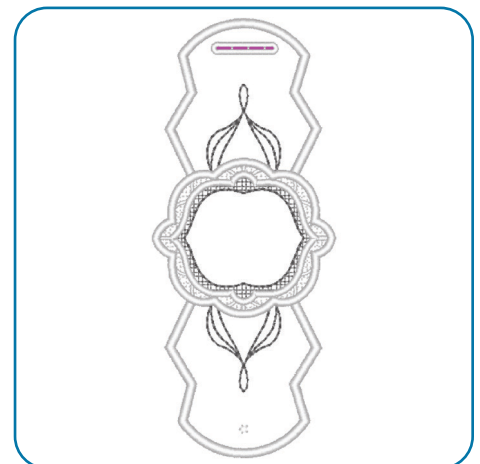

CRAFT KNIFE
