

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



12673-01 Swan Princess Appliqué

4.91 X 5.17 in.
124.71 X 131.32 mm
14,327 St.



12673-02 Princess Carriage Appliqué

4.86 X 5.93 in.
123.44 X 150.62 mm
28,674 St.



12673-03 Princess Crown Appliqué

3.43 X 4.13 in.
87.12 X 104.90 mm
13,649 St.

Listings below indicate color sample, stitching order and suggested thread color number. Most numbers indicate Isacord thread. Colors beginning with 20501 refer to YLI Fine Metallics, 7 refer to Yenmet Metallic, 8 refer to YLI Variations Variegated Thread and 9 refer to Isacord Multicolor Variegated.

12673-01 Swan Princess Appliqué

■	1. Gold Crown Detail.....	0542
■	2. Light Brass Crown and Bill.....	0221
□	3. Swan Placement Stitch.....	0015
□	4. Cut Line and Tackdown.....	0015
■	5. Cover Stitch.....	3730
■	6. Cover Stitch Linework.....	3713
■	7. Black Head Detail.....	0020
■	8. Dark Green Leaves.....	5722
■	9. Light Green Leaves.....	5650
■	10. Medium Green Leaves.....	5730
■	11. Dark Purple Petals.....	2715
■	12. Plum Petal Detail.....	2504
■	13. Dark Pink Petals and Stamens.....	2320
■	14. Rose Petal Detail.....	2530
■	15. Yellow Stamen.....	0221
□	16. White Stamens.....	0015

12673-02 Princess Carriage Appliqué

■	1. Carriage Placement Stitch.....	2560
■	2. Cut Line and Tackdown.....	2560
■	3. Carriage Center Placement Stitch.....	2560
■	4. Cut Line and Tackdown.....	2560
■	5. Blush Detail.....	2171
■	6. Light Brass Detail.....	0221
■	7. Pink Cover Stitch and Detail.....	2560
■	8. Gold Cover Stitch and Detail.....	0542
■	9. Dark Green Leaves.....	5722
■	10. Light Green Leaves.....	5650
■	11. Medium Green Leaves.....	5730
■	12. Dark Purple Petals.....	2715
■	13. Plum Petal Detail.....	2504
■	14. Dark Pink Petals and Stamens.....	2320
■	15. Rose Petal Details.....	2530
■	16. Light Brass Stamen.....	0221
□	17. White Stamens.....	0015

12673-03 Princess Crown Appliqué

■	1. Crown Placement Stitch.....	0542
■	2. Cut Line and Tackdown.....	0542
■	3. Light Pink Crown Detail.....	2560
■	4. Crown Detail.....	7003
■	5. Pink Linework.....	2532
■	6. Cover Stitch.....	0542
■	7. Light Brass Detail.....	0221
■	8. Light Green Leaves.....	5650
■	9. Dark Green Leaves.....	5722
■	10. Dark Purple Petals.....	2715
■	11. Plum Petal Detail.....	2504
■	12. Dark Pink Petals and Stamen.....	2320
■	13. Rose Petal Details.....	2530
■	14. Light Brass Stamen.....	0221
□	15. Stamens.....	0015

Isacord / Yenmet Metallic Thread Colors Used in "Princess Appliqués"
Collection #12673


0015 White	2504 Plum	3730 Something Blue
0020 Black	2530 Rose	5650 Spring Frost
0221 Light Brass	2532 Pretty in Pink	5722 Green Grass
0542 Ochre	2560 Azalea Pink	5730 Apple Green
2171 Blush	2715 Pansy	7003 (AN1) Pearlescence
2320 Raspberry	3713 Cornflower Blue	White

Pre-Cut Appliqué Instructions

1. Print out the necessary pages from the PDF of the appliqué pattern(s).
2. Mark the right side of the pattern pieces so you'll know which direction to lay the pattern on the fabric.
3. Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.
4. Place the pattern pieces on the right side of the fabric and carefully cut them out. **PHOTO 1**
5. Sew the placement stitch on your hooped fabric. **PHOTO 2**
6. With the paper still stuck to the right side of the appliqué fabric, spray the wrong side of the fabric with temporary spray adhesive.
7. Place the fabric inside the placement stitch, so that it completely covers the placement stitch and then remove the paper pattern. **PHOTO 3**
8. Sew the tackdown. **PHOTO 4**
9. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 5**


NOTE: The patterns are sized for the designs as they were made. If you resize the design, you will need to resize the pattern the same amount. You can print out the pattern at the normal size then copy it on a copy machine at the changed size. For example, resize the designs to 80%, resize the printed pattern to 80%.

TIP: When Printing the patterns, make sure that the “Fit to page” option is **UNCHECKED** in the Print Dialog Box. If this option is checked the printed patterns will not be actual size.

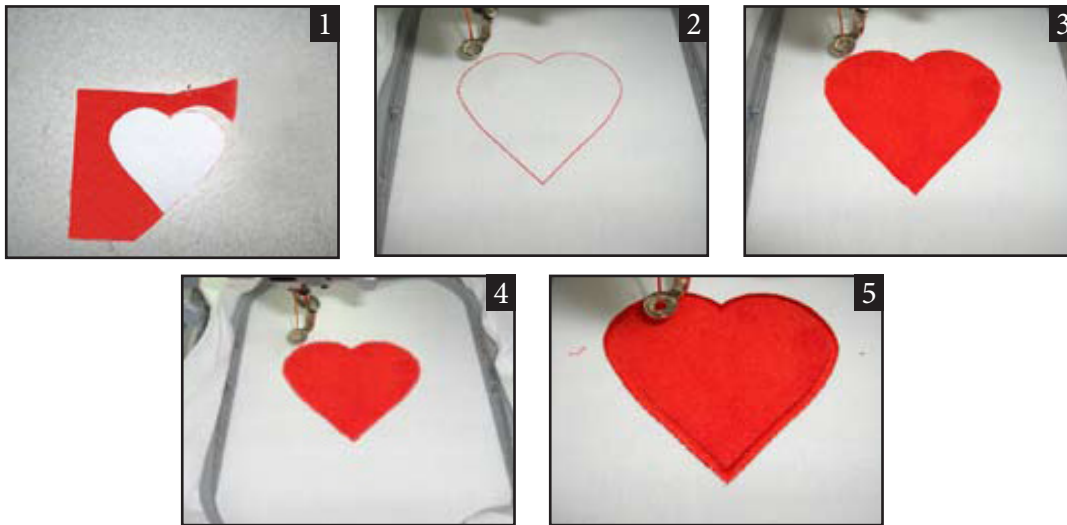


Cut-in-Place Appliqué Instructions

1. Hoop your fabric and backing.
2. Sew the placement stitch. **PHOTO 1**
3. Place a piece of appliqué fabric over the placement stitch so that it is completely covered.
4. Sew the cut line & tackdown.
5. Carefully cut away the excess appliqué fabric. **PHOTO 2**
6. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 3**

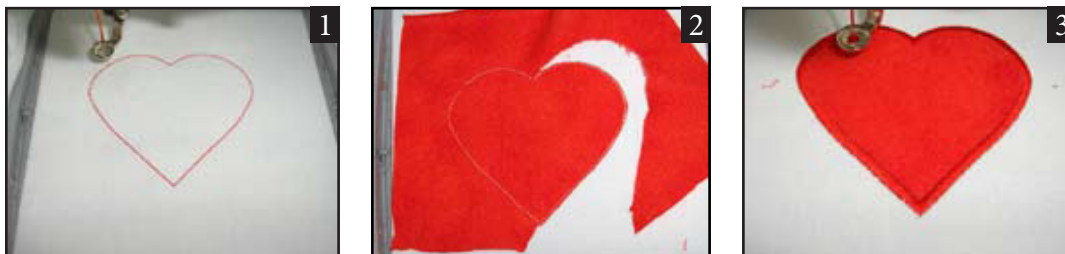

ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

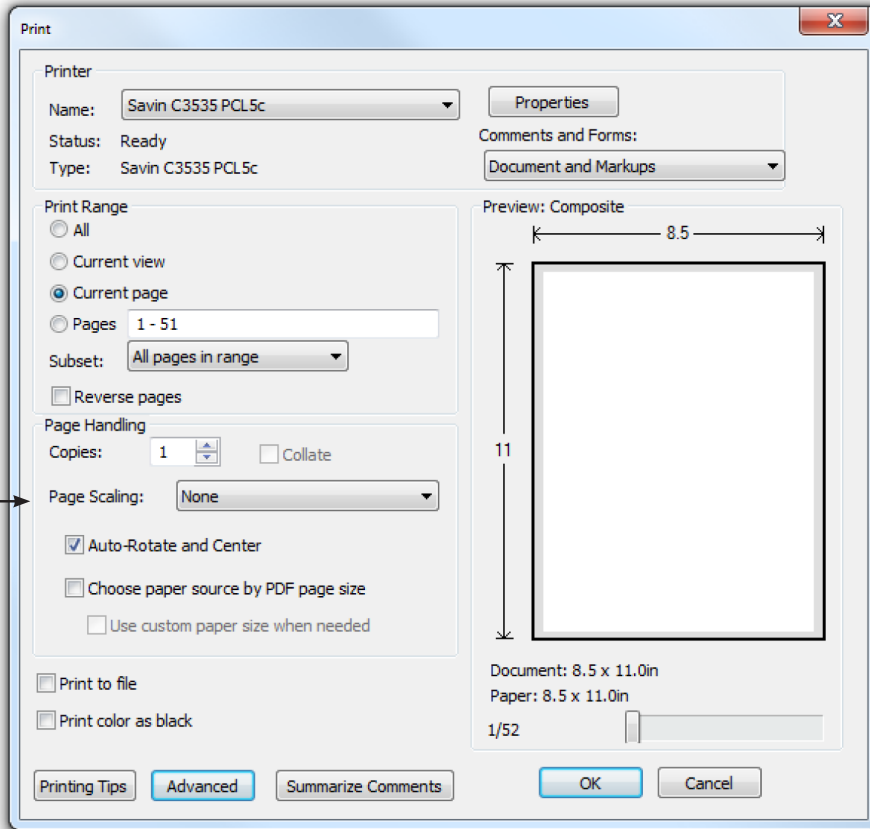

TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

