

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



**12674-01 Native Bison Appliqué**  
 7.30 X 4.91 in.  
 185.42 X 124.71 mm  
 39,408 St.



**12674-02 Native Dream Catcher Appliqué**  
 4.50 X 7.51 in.  
 114.30 X 190.75 mm  
 30,369 St.



**12674-03 Native Cross Appliqué**  
 4.06 X 6.10 in.  
 103.12 X 154.94 mm  
 22,475 St.

Listings below indicate color sample, stitching order and suggested thread color number. Most numbers indicate Isacord thread. Colors beginning with 20501 refer to YLI Fine Metallics, 7 refer to Yenmet Metallic, 8 refer to YLI Variations Variegated Thread and 9 refer to Isacord Multicolor Variegated.

**12674-01 Native Bison Appliqué**

- 1. Bison Front Half Placement Stitch ..... 0015
- 2. Cut Line and Tackdown ..... 0015
- 3. Bison Rear Placement Stitch ..... 0015
- 4. Cut Line and Tackdown ..... 0015
- 5. White Detail ..... 0015
- 6. Yellow Detail ..... 0713
- 7. Light Red Detail ..... 1704
- 8. Dark Red Detail ..... 1912
- 9. Tan Detail ..... 0851
- 10. Brown Detail ..... 1252
- 11. Orange Detail ..... 1010
- 12. Dark Orange Detail ..... 0940
- 13. Light Purple Detail ..... 2830
- 14. Dark Purple Detail ..... 2832
- 15. Black Detail ..... 0020

**12674-02 Native Dream Catcher Appliqué**

- 1. Catcher Placement Stitch ..... 0015
- 2. Cut Line and Tackdown ..... 0015
- 3. White Feather Detail ..... 0015
- 4. Catcher Purple Detail ..... 2830
- 5. Light Purple Feather Detail ..... 2830
- 6. Dark Purple Feather Detail ..... 2832
- 7. Light Orange Feather Detail ..... 1010
- 8. Catcher Orange Detail ..... 1010
- 9. Dark Orange Feather Detail ..... 0940
- 10. Catcher Yellow Detail ..... 0713
- 11. Tan Feather Detail ..... 0851
- 12. Brown Feather Detail ..... 1252
- 13. Catcher White Detail ..... 0015
- 14. Black Detail ..... 0020

**12674-03 Native Cross Appliqué**

- 1. Cross Placement Stitch ..... 0015
- 2. Cut Line and Tackdown ..... 0015
- 3. White Feather Detail ..... 0015
- 4. White Cross Detail ..... 0015
- 5. Tan Cross Detail ..... 0851
- 6. Tan Feather Detail ..... 0851
- 7. Yellow Cross Detail ..... 0713
- 8. Red Cross Detail ..... 1704
- 9. Light Purple Cross Detail ..... 2830
- 10. Light Purple Feather Detail ..... 2830
- 11. Dark Purple Feather Detail ..... 2832
- 12. Black Detail ..... 0020

**Isacord Thread Colors Used in "Native Appliqués"**  
 Collection #12674


0015 White	0940 Autumn Leaf	1912 Winterberry
0020 Black	1010 Toast	2830 Wild Iris
0713 Lemon	1252 Dark Tan	2832 Easter Purple
0851 Old Gold	1704 Candy Apple	

### Pre-Cut Appliqué Instructions

1. Print out the necessary pages from the PDF of the appliqué pattern(s).
2. Mark the right side of the pattern pieces so you'll know which direction to lay the pattern on the fabric.
3. Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.
4. Place the pattern pieces on the right side of the fabric and carefully cut them out. **PHOTO 1**
5. Sew the placement stitch on your hooped fabric. **PHOTO 2**
6. With the paper still stuck to the right side of the appliqué fabric, spray the wrong side of the fabric with temporary spray adhesive.
7. Place the fabric inside the placement stitch, so that it completely covers the placement stitch and then remove the paper pattern. **PHOTO 3**
8. Sew the tackdown. **PHOTO 4**
9. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 5**


**NOTE:** The patterns are sized for the designs as they were made. If you resize the design, you will need to resize the pattern the same amount. You can print out the pattern at the normal size then copy it on a copy machine at the changed size. For example, resize the designs to 80%, resize the printed pattern to 80%.

**TIP:** When Printing the patterns, make sure that the “Fit to page” option is **UNCHECKED** in the Print Dialog Box. If this option is checked the printed patterns will not be actual size.

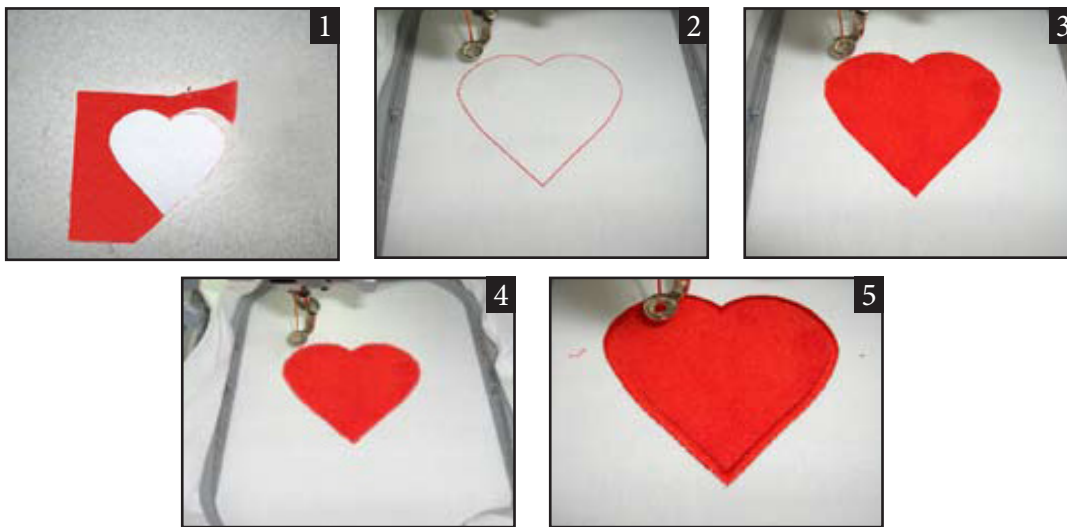


### Cut-in-Place Appliqué Instructions

1. Hoop your fabric and backing.
2. Sew the placement stitch. **PHOTO 1**
3. Place a piece of appliqué fabric over the placement stitch so that it is completely covered.
4. Sew the cut line & tackdown.
5. Carefully cut away the excess appliqué fabric. **PHOTO 2**
6. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 3**

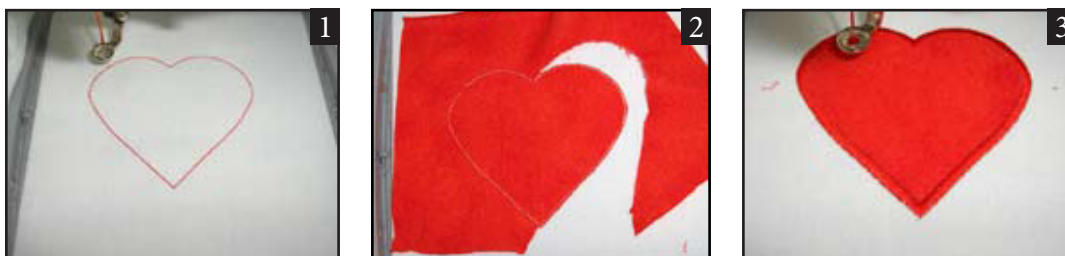


**ATTENTION**


When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

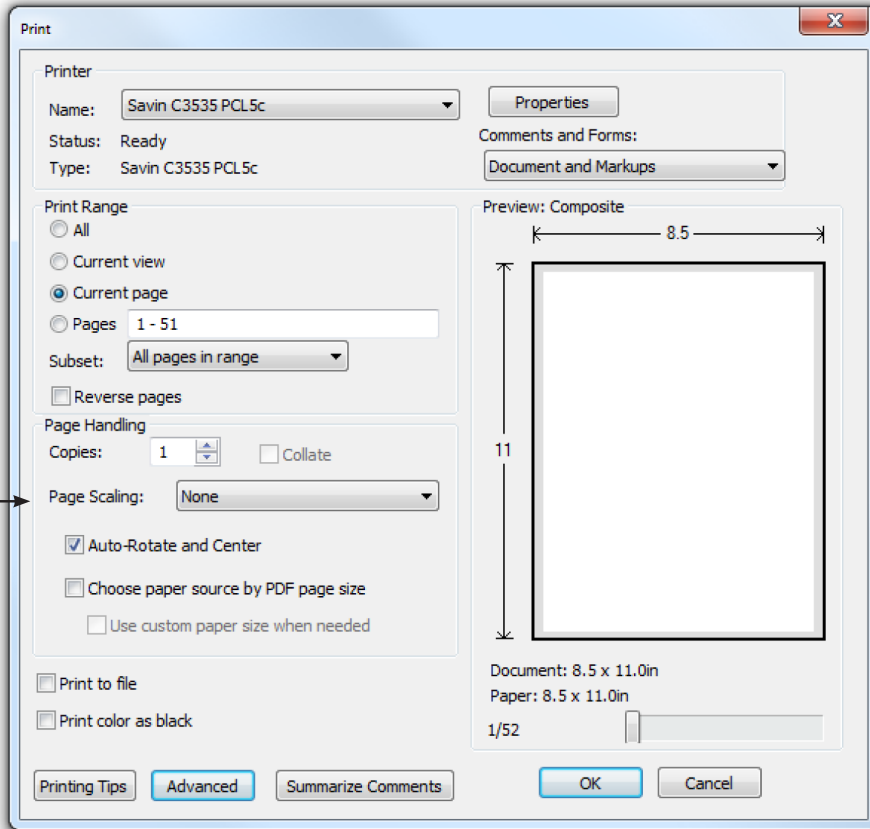


**TO SAVE PAPER**

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

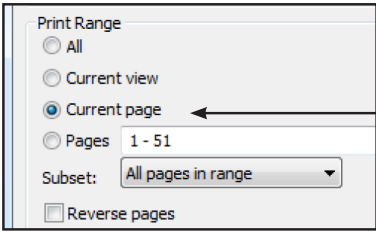

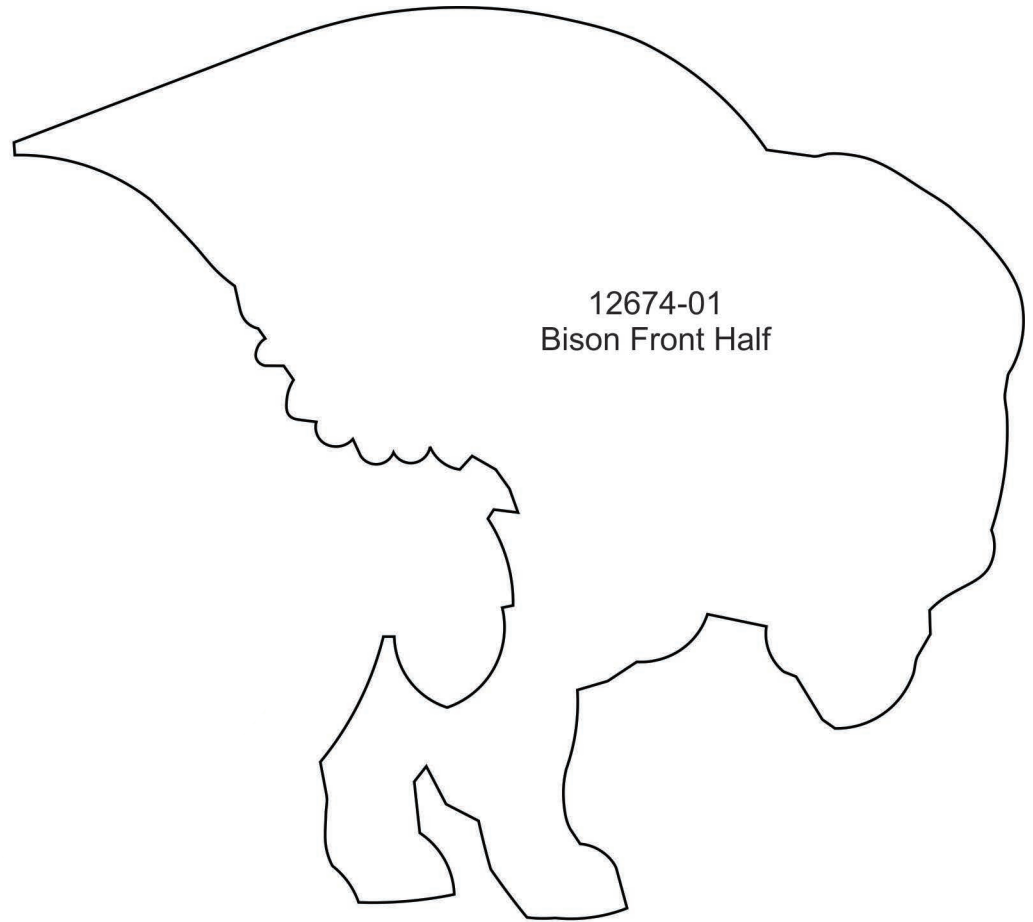

12674-01  
Bison Front Half

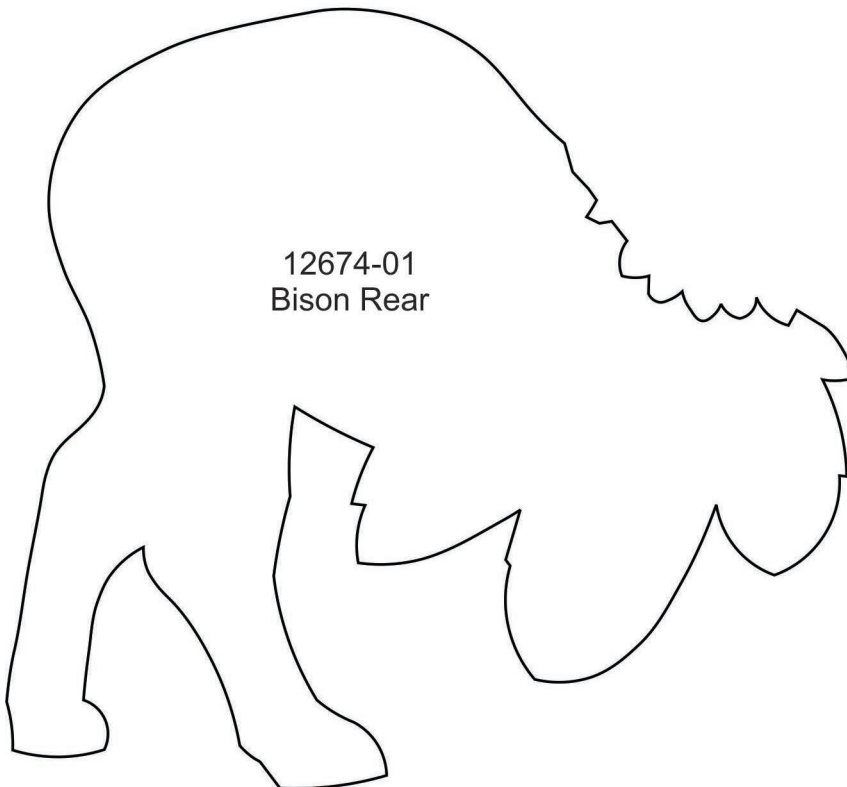

12674-01  
Bison Rear

