

#12740



3
DESIGNS

Hodge Podge Patches

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FSL = Freestanding Lace FSA = Freestanding Applique

12740-01 Peace Patch FSA

Size Inches: Size mm: Stitch Count:
 4.18 X 2.51 in. 106.17 X 63.75 mm 14,191 St.



1. Front Placement Stitch	0506
2. Front Cut Line and Tackdown.....	0506
3. Letter E.....	0506
4. Letter C.....	2300
5. Letter A.....	3900
6. Letter E.....	1950
7. Letter P and Flower	5830
8. Orange Flower.....	1200
9. White Detail	0015
10. Back Cut Line and Tackdown	1200
11. Cover Stitch.....	1200
12. White Linework.....	0015

12740-02 BEE Happy Patch FSA

Size Inches: Size mm: Stitch Count:
 3.16 X 3.15 in. 80.26 X 80.01 mm 9,910 St.



1. Front Placement Stitch	0622
2. Front Cut Line and Tackdown.....	0622
3. Gold Detail.....	0622
4. Dark Purple Detail	2864
5. Wings	3971
6. Wing Shimmers	7029
7. Light Purple Detail	3241
8. Back Cut Line and Tackdown	0622
9. Cover Stitch.....	0622
10. Gray Linework	3971

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FSL = Freestanding Lace FSA = Freestanding Applique

12740-03 I Want To BELIEVE Patch FSA

Size Inches: Size mm: Stitch Count:
3.01 X 4.12 in. 76.45 X 104.65 mm 11,695 St.



■	1. Front Placement Stitch	3750
■	2. Front Cut Line and Tackdown.....	3750
■	3. Saucer	3750
■	4. Stars and Lights	0501
■	5. Dark Blue Detail	3645
□	6. White Detail	0015
■	7. Back Cut Line and Tackdown	3645
■	8. Cover Stitch.....	3645
■	9. Gray Linework	3971

MATERIALS



Stabilizer

- OESD AquaMesh WashAway stabilizer
- OESD Fiber Form Craft Interfacing
- OESD Fuse & Seal CutAway

Fabric/Notions

- 2 Fabric scraps 1" larger than design

Isacord / Yenmet Thread Colors

- 0015 White
- 0501 Sun
- 0506 Yellow Bird
- 0622 Star Gold
- 1200 Sunset Orange
- 1950 Tropical Pink
- 2300 Bright Ruby
- 2864 Columbine
- 3241 Amethyst Frost
- 3645 Prussian Blue
- 3750 Winter Frost
- 3900 Cerulean
- 3971 Silver
- 5830 Chartreuse
- 7029 (AN3) Pearlescence Light Blue

INSTRUCTIONS




STEP 1

Print out the necessary Fiber Form applique pattern(s) from the PDF.

Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.


Place pattern piece(s) on the Fiber Form and carefully cut out. Remove paper pattern.

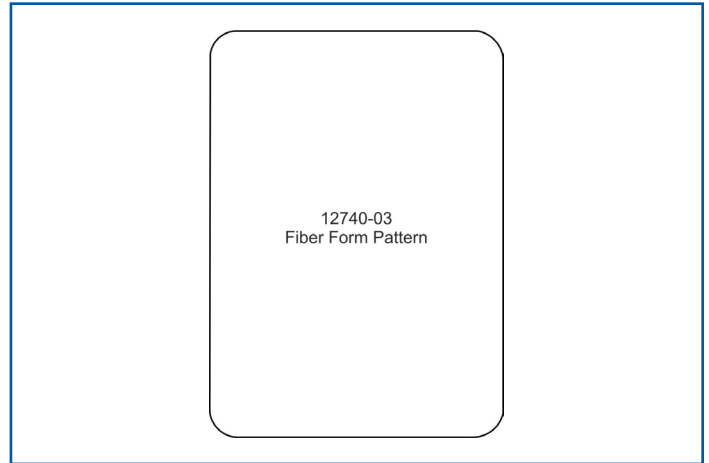

STEP 2

Hoop two layers of OESD AquaMesh stabilizer.

Stitch the placement stitch on your hooped fabric.

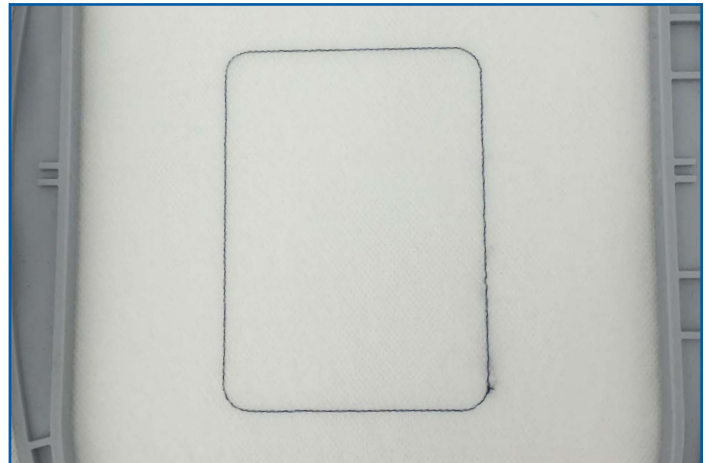

STEP 3

Spray Fiber Form piece with temporary spray adhesive.

Place Fiber Form inside the placement stitch, so that it completely covers the placement stitch.




INSTRUCTIONS



STEP 4


Spray wrong side of fabric with temporary spray adhesive.

Place fabric over Fiber Form, making sure fabric completely covers the Fiber Form.

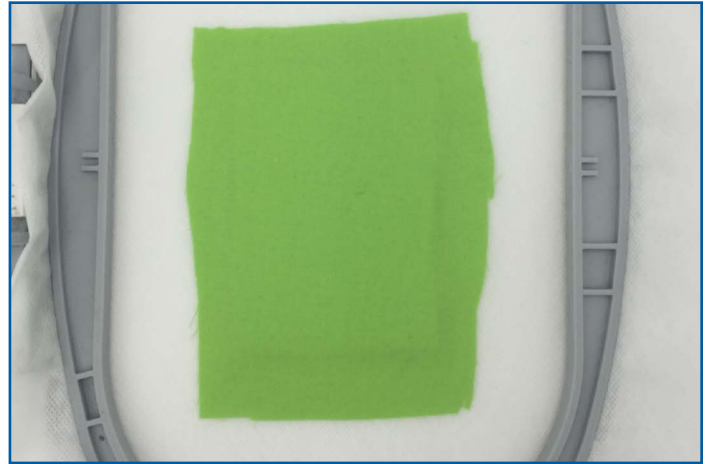

STEP 5

Stitch the Cut Line & Tackdown stitch.

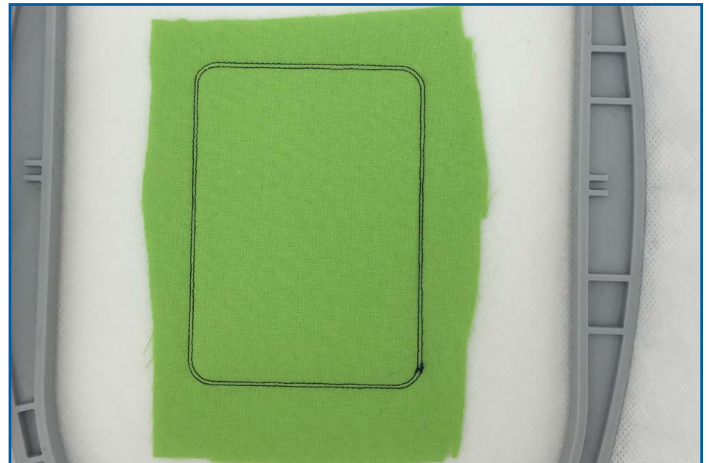

STEP 6

Carefully cut away the excess applique fabric.




INSTRUCTIONS



STEP 7

Continue stitching the design.

Stop machine, BEFORE stitching *Back Cut Line and Tackdown*.

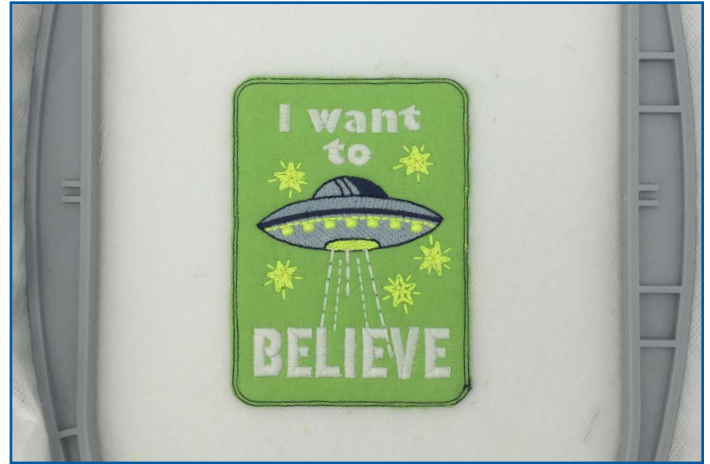

STEP 8


Remove hoop from machine and turn hoop to back side.



STEP 9

Spray wrong side of fabric with temporary spray adhesive.

Place fabric over design, making sure fabric completely covers the design.

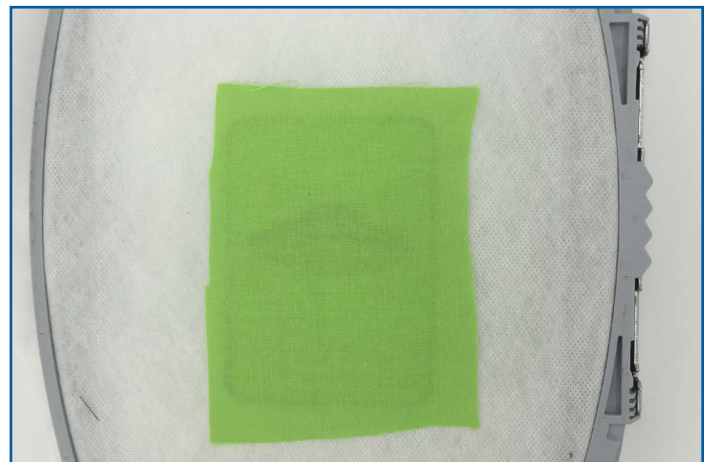

INSTRUCTIONS



STEP 10

Replace hoop onto machine.

Stitch the next color, *Back Cut Line and Tackdown*.



STEP 11

Remove hoop from machine and turn hoop to back side.

Carefully cut away the excess applique fabric.




STEP 12

Stitch the remainder of the design.

Remove the hoop from the machine and the design from the hoop.

Trim excess stabilizer from the design.

Rinse away remaining stabilizer and allow it to dry face down to prevent curling.

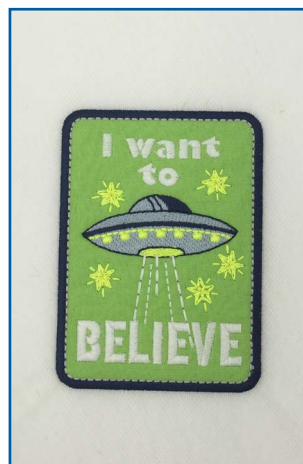

INSTRUCTIONS



STEP 13

Print out the necessary Fuse & Seal applique pattern(s) from the PDF.

Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.


Place pattern piece(s) on the Fuse & Seal and carefully cut out.

Follow Fuse & Seal instructions to adhere to patch.




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

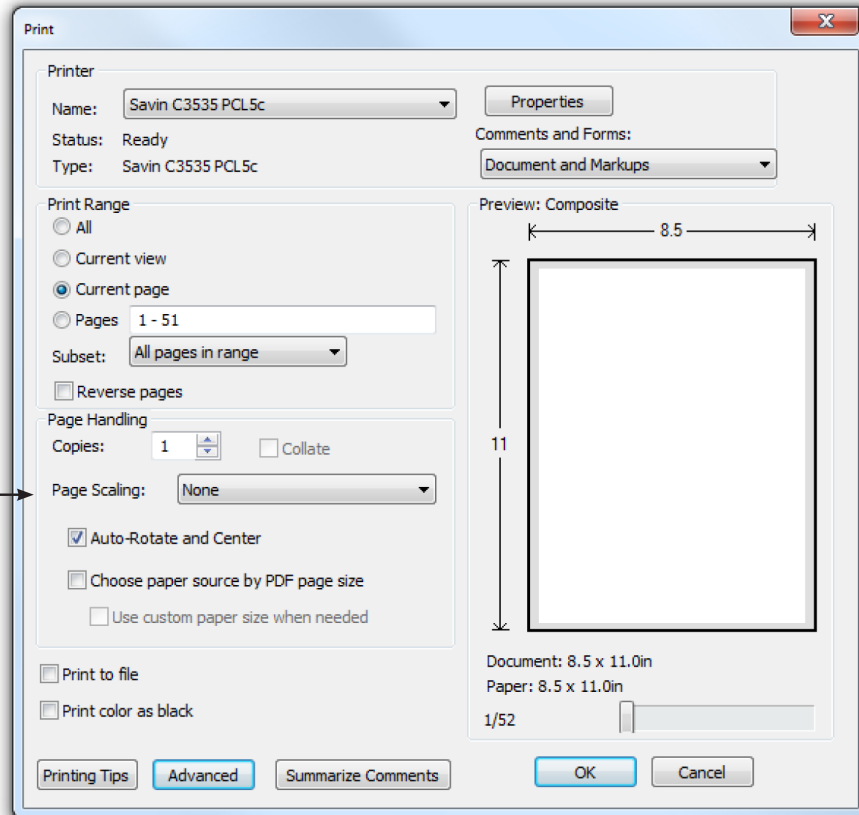

TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

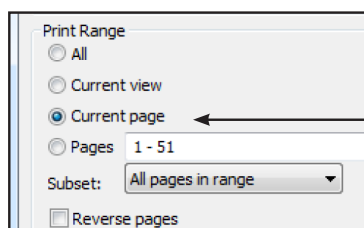

12740-01
Fiber Form Pattern

12740-02
Fiber Form Pattern

12740-03
Fiber Form Pattern

12740-01
Fuse & Seal
Pattern

12740-02
Fuse & Seal
Pattern

12740-03
Fuse & Seal
Pattern