




DESIGN

Freestanding Nutcracker





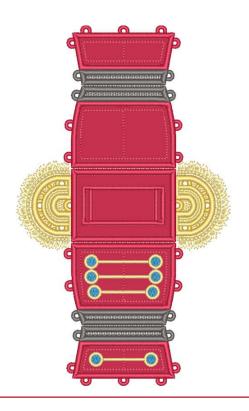

12764-01 Body 1 FSA

Size	e Inches:	Size mm:	Stitch Count:
5.25	X 8.85 in.	133.35 X 224.79 mm	37,101 St.
1 .	Coat Place	ement Stitch	0622
2.	Coat Cut L	ine and Tackdown	0622
3.	Shoulders		0622
4.	Shoulder C	Gold Metallic Detail	7008
5 .	Coat Cove	r Stitch and Detail	1904
6 .	Belt		4174
7 .	Blue Butto	ns	3711
8.	Gold Meta	llic Button Detail	7008



12764-02 Body 2 FSA

	s: Size mm: in. 74.42 X 246.13 mm	Stitch Count: 24,674 St.
1. Coat F	Placement Stitch	0622
2. Coat 0	Cut Line and Tackdown	0622
3. Gold E	Buttonettes	0622
4. Coat (Cover Stitch and Detail	1904
5. Belt		4174






12764-03 Arm 1 FSA



Size Inches:	Size mm:	Stitch Count:
3.33 X 3.74 in.	84.58 X 95.00 mm	15,243 St.
1. Sleeve Pla	cement Stitch	1904
2. Sleeve Cut	Line and Tackdown	1904
3. Sleeve Cov	er Stitch	1904
4. Hand		1362
5. Sleeve Trin	າ	0622
6. Gold Metal	lic Shimmers	7008

12764-04 Arm 2 FSA

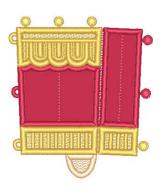


Size	Inches:	Size mm:	Stitch Count:
3.33	X 3.74 in.	84.58 X 95.00 mm	15,269 St.
1 .	Sleeve Pla	cement Stitch	1904
2.	Sleeve Cut	Line and Tackdown	1904
3 .	Sleeve Cov	ver Stitch	1904
4.	Hand		1362
5.	Sleeve Trir	n	0622
6.	Gold Metal	lic Shimmers	7008








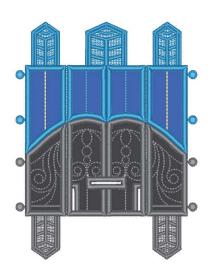

Size Inches:	Size mm:	Stitch Count:
4.71 X 6.14 in.	119.63 X 155.96 mm	28,840 St.
1. Pants Plac	ement Stitch	0138
2. Pants Cut	Line and Tackdown	0138
3. Boots Place	ement Stitch	0138
4. Boots Cut	Line and Tackdown	0138
5. Boot Cove	r Stitch and Detail	0138
6. Gold Metal	lic Detail	7008
7. Pants Cove	er Stitch and Lace	3711


12764-06 Back of Legs FSA




Size	Inches:	Size mm:	Stitch Count:
2.39	X 6.13 in.	60.71 X 155.70 mm	12,786 St.
1 .	Pants Plac	ement Stitch	0138
2.	Pants Cut	Line and Tackdown	0138
3.	Boots Plac	ement Stitch	0138
4.	Boots Cut	Line and Tackdown	0138
5 .	Boots Cove	er Stitch and Lace	0138
6.	Pants Cove	er Stitch and Lace	3711








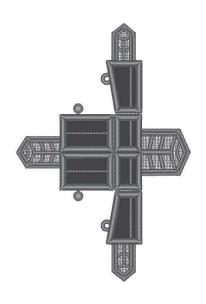

Size Inches:	Size mm:	Stitch Count:
4.03 X 5.97 in.	102.36 X 151.64 mm	13,844 St.
1. Boots Place	ement Stitch	0138
2. Boots Cut I	ine and Tackdown	0138
3. Boots Cove	er Stitch	0138

12764-08 Head FSA

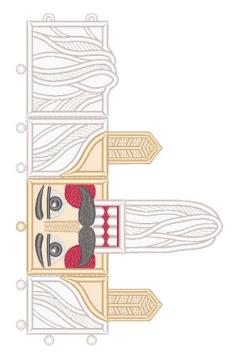

	Size mm:	
4./8 A /.08 in.	121.41 X 195.07 mm	32,31/ St.
☐ 1. Skin Place	ment Stitch	0015
2. Skin Cut Li	ne and Tackdown	0015
3. Hair Placer	ment Stitch	0015
4. Hair Cut Li	ne and Tackdown	0015
5. Cheeks an	d Mouth	1904
☐ 6. Hair Cover	Stitch and Lace	0015
7. Skin Cover	Stitch and Lace	1362
□ 8. Teeth/Mout	th Outline and Eyes	0015
9. Gray Eye D	Detail	0138
	Brows and Eyes	
	jht	






12764-09 Hat FSA



		Size mm: 60.96 X 225.30 mm	
□ 1.	Hat Top Pla	acement Stitch	0015
□ 2.	Hat Top Cu	it Line and Tackdown	0015
☐ 3.	Hat Bottom	Placement Stitch	0015
4 .	Hat Bottom	Cut Line and Tackdown	0015
□ 5.	White Triar	ngles	0015
6 .	Red Triang	les	1904
7.	Hat Top Co	over Stitch and Lace	3711
8.	Hat Bottom	Cover Stitch and Lace	0138
9.	Gold Emble	em	0622
1 0.	Gold Metal	lic Shimmers	7008

12764-10 Hat Base FSL

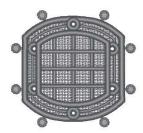







12764-11 Hat Top FSA



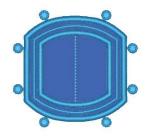


12764-12 Base Top FSA


Size	Inches:	Size mm:	Stitch Count:
4.64	X 4.64 in.	117.86 X 117.86 mm	18,779 St.
1 .	Placement	Stitch	1904
2.	Cut Line a	nd Tackdown	1904
3.	Cover Stite	ch and Lace	1904
4 .	White Deta	ail	

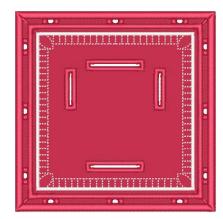










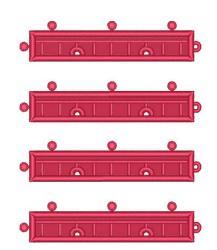


12764-14 Base Floor FSA

Size mm:

Size Inches:

4.61 X 4.61 in.	117.09 X 117.09 mm	9,533 St.
1. Placement	Stitch	1904
2. Cut Line ar	nd Tackdown	1904
3. Cover Stite	ch and Lace	1904

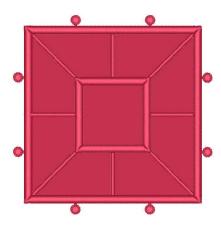

Stitch Count:







12764-15 Sword and Scabbard FSL

Size	e Inches:	Size mm:	Stitch Count:
1.83	X 3.78 in.	46.48 X 96.01 mm	4,681 St.
1.	Blade		0150
2.	Metallic Bla	ade Shimmer	7005
3.	Handle		0622
4.	Handle Hig	hlights	7008
5 .	Scabbard L	-oop	4174
6	Scabbard	•	0622

MATERIALS



Stabilizer

- Aguamesh WashAway
- StabilStick TearAway
- Fiber Form Craft Interfacing Sheet

Supplies

- Embroidery thread
- Fabric for applique
- Embroidery machine
- Optional -
 - alligator clamps, tweezers, hemostats, stiletto or a tiny crochet hook
 - Expert Embroidery Tape TearAway

Isacord Thread Colors

0015 White

0138 Heavy Storm

0150 Mystik Grey

0622 Star Gold

1362 Shrimp

1904 Cardinal

3711 Dolphin Blue

4174 Charcoal

7005 (SN1) Silver

7008 (S11) 10 kt. Gold

SUMMARY



Freestanding Nutcracker

Requires 1 Body 1 FSA - 12764-01 Requires 1 Body 2 FSA - 12764-02 Requires 1 Arm 1 FSA - 12764-03 Requires 1 Arm 2 FSA - 12764-04 Requires 1 Legs FSA - 12764-05

Requires 1 Back of Legs FSA - 12764-06

Requires 1 Feet FSA - 12764-07
Requires 1 Head FSA - 12764-08
Requires 1 Hat FSA - 12764-09
Requires 1 Hat Base FSL - 12764-10
Requires 1 Hat Top FSA - 12764-11
Requires 1 Base Top FSA - 12764-12
Requires 1 Base Walls FSA - 12764-13
Requires 1 Base Walls FSA - 12764-14
Requires 1 Base Walls FSA - 12764-15

Thread: most used 1904 - 1 spool

Fabric:

Fiber Form - 1 package Red Fabric - 1/3 yd Blue Fabric - 1/4 yd Black Fabric - 1/3 yd White Fabric - 10" x 6" piece Peach Fabric - 6" x 3" piece


Final Height: 12"





STEP 1

- Prep fabric by applying 2 sheets of StabilStick TearAway to the wrong side of the fabric.
- **Note** this stabilizes your fabric so it isn't too limp and produces a nice, crisp project.
- **Note** EXCEPT for the base. You will use Fiber Form on the pieces for the base.

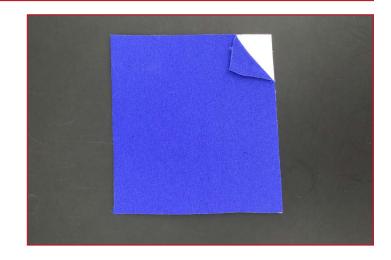


STEP 2

- · Hoop two sheets of Aquamesh.
- Sew placement stitch.




- Place fabric over placement stitch and make sure to cover stitches completely.
- Stitch cut line and tackdown.
- **Optional** use TearAway tape to hold items in place.

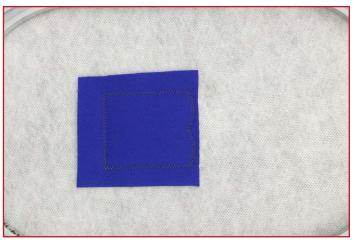




STEP 4

- · Remove tape, carefully.
- Remove hoop from machine, **DO NOT** unhoop fabric/stabilizer.
- Trim along cut line.
- Repeat placement and cut line steps for the remaining appliques.

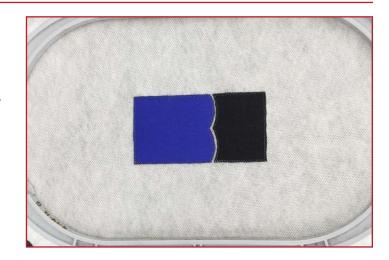


STEP 5

· Finish stitching design.

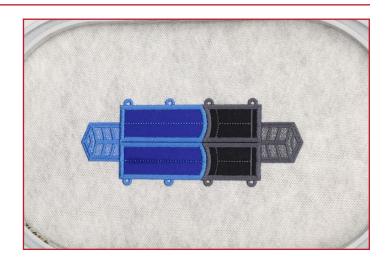


- Remove from hoop, trim Aquamesh ¼"-½" away from fabric, be careful NOT to cut your eyelets or buttonettes!
- Wash away stabilizer and let dry.
- **Note** for instructions and tips, see last page.

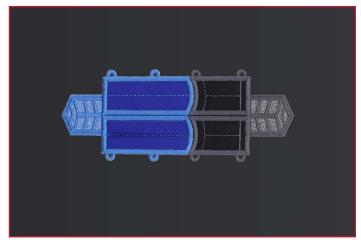




STEP 1

- Prep fabric by applying 1 sheet of Fiber Form to the wrong side of the fabric.
- Repeat for all base pieces.
- Note Fiber Form is used to balance weight for the tall structure and make it rigid

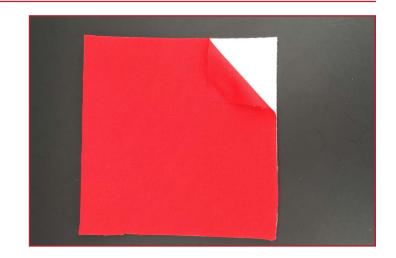


STEP 2

- · Hoop two sheets of Aquamesh.
- Stitch placement stitch.

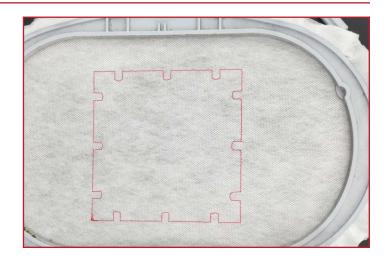


- Place prepped fabric with the Fiber Form over placement stitch and make sure to cover stitches completely.
- Stitch cut line and tackdown.
- **Optional** use TearAway tape to hold items in place.

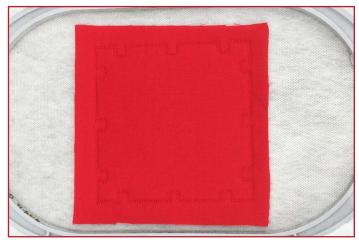




STEP 4

- · Remove tape, carefully.
- Remove hoop from machine, **DO NOT** unhoop fabric/stabilizer.
- Trim along cut line.
- Repeat placement and cut line steps for the remaining appliques.

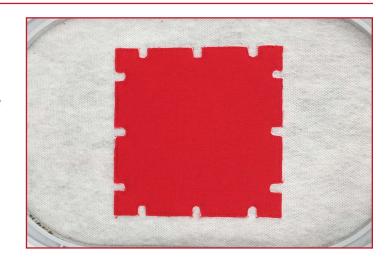


STEP 5

Finish stitching design

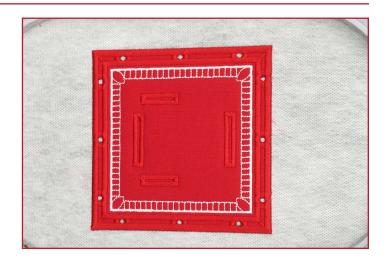

- Wash away stabilizer and let dry.
- **Note** for instructions and tips, see last page.

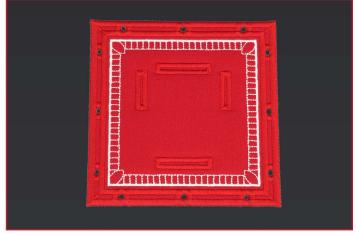



STEP 1


- BEFORE assembling your Nutcracker, use a fine blade to cut your tab slits on all applicable pieces.
- Assemble the hat by starting with folding the Hat FSA piece and buttoning the 2 buttonettes.



STEP 2

 Attach the 8 buttonettes on Hat Base FSL to the 8 eyelets on the bottom of Hat FSA.
 Do NOT attach Hat Top FSA yet.



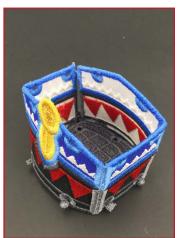

STEP 3

 Assemble the head by taking the Head FSA piece and folding it first and then buttoning the 2 buttonettes.





STEP 4

 From the top of the hat reach through and pull the 6 buttonettes from Head FSA through the 6 eyelets on Hat Base FSL using alligator clamps.





STEP 5


 Complete the Head and Hat Assembly by attaching the 8 buttonettes on Hat Top FSA to the 8 eyelets of Hat FSA.





STEP 6

- Note If you haven't already cut your tab slits, do so now.
- To begin the body assembly, take Body 1 FSA and Body 2 FSA and button the front, sides, top and bottom buttons only.
- Note leave the back unbuttoned to help attach the head and leg assemblies to the body.

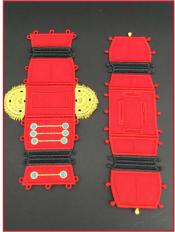







STEP 7

• To attach the head go through the unbuttoned back and pull the 2 tabs from Head FSA through the 2 slits on top of Body 1 FSA.












STEP 8


• To assemble the legs, take Legs FSA and Back of Legs FSA and insert the 8 buttonettes to their corresponding eyelets.

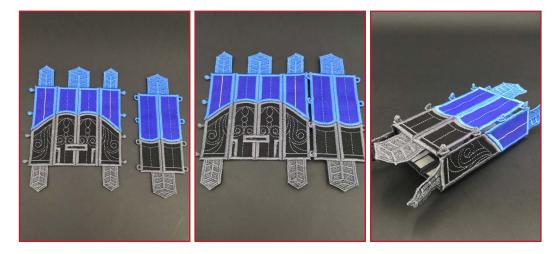

STEP 9

To create the Nutcracker's feet, insert the 2 buttonettes to their corresponding eyelets.



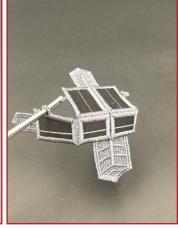



STEP 10

• To attach the feet to the leg assembly, insert the tabs on the feet through the slits on the leg assembly.





STEP 11

• To attach the scabbard, unbutton the belt's front left buttonette and place the loop over it and rebutton it to its corresponding eyelet.









STEP 12

• Using the unbuttoned back, attach the leg assembly to the body by inserting the 4 tabs from the leg assembly into the 4 slits on the bottom of the body.







STEP 13

 Now that the head and leg assemblies are attached to the body, button the remaining 13 buttonettes.







STEP 14

 To shape the Nutcracker's arms, simply fold and button the 3 buttonettes to their corresponding eyelets.







STEP 15

• To attach the arms to the body, use alligator clamps to pull the 3 buttonettes on the arm through the 3 eyelets of the shoulder. Repeat for the other arm.








STEP 16


 To build the Base, take the 4 Base Wall FSA pieces and attach them to the Base Top FSA by pulling the 3 buttonettes through the Base Top FSA. Attach each Base Wall FSA to its neighbor. **Do NOT** attach the Base Floor FSA piece just yet, because the Nutcracker must be on its base first.

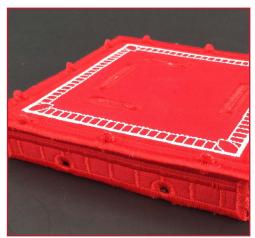



STEP 17

To attach the Nutcracker onto the base, arrange the base and Nutcracker so the tabs line up
to their corresponding slits. Through the base opening, pull the tabs through the base slits.
 To complete the project, insert the remaining 8 buttonettes on the Base Floor FSA to the 8
remaining eyelets on the walls.

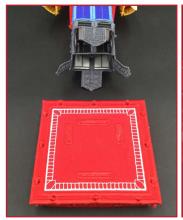







INSTRUCTIONS



General Freestanding Lace Guidelines

Supplies:

Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle. **Needles:**
- Use an Organ 80/12 Titanium needle for extended needle life. **Stabilizer:**
- Use OESD AquaMesh stabilizer.

Handy Hints:

For Stiffer Lace:

- DO NOT rinse away all of the stabilizer for a "stiffer" lace.
 Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

For Very Soft Lace:

 Cut away excess stabilizer. Remove remaining stabilizer by rinsing under warm running water until all traces of the stabilizer are gone. NOTE: If lace should become too limp to work with, dissolve stabilizer scraps in warm water and apply to the lace.

Drying Lace:

 The lace looks best when left to dry completely. Lay lace piece with right side down to dry. This will minimize the tendency for the lace to curl. Be sure to flatten the piece out entirely and allow ample time to dry.

General Instructions

- 1. Hoop two layers of OESD AquaMesh Stabilizer.
- 2. Attach the hoop to the machine and select the design of your choice.
- 3. Stitch the design.
- 4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
- 5. Rinse away remaining stabilizer and allow it to dry.

Handy Hints:

For 3D Lace Projects:

- If item becomes too limp to work with, iron the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction.
- A pair of tweezers, hemostats, stiletto or a tiny crochet hook can be extremely helpful when inserting the buttonettes into the eyelets. (Please see **Diagram 1** for explanation of "buttonette" and "eyelet".)
- Insert the tip of the alligator clamps, tweezers, hemostats or crochet hook into the eyelet, grasp the buttonette and pull through the eyelet. Or a stiletto could be used to push the buttonette through the eyelet.

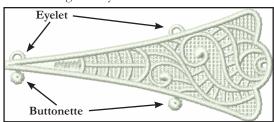


Diagram 1