



**FREESTANDING
Drug Store**



1

Design

Fits hoop size 6" x 10"

THREAD LIST



Isacord Thread Colors

0015 White (2 spools)

*** Project instructions included after design list.**

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.


DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required

12799-01 Front Wall FSA

Size Inches: Size mm: Stitch Count:
4.98 X 6.71 in. 126.49 X 170.43 mm 59,147 St.

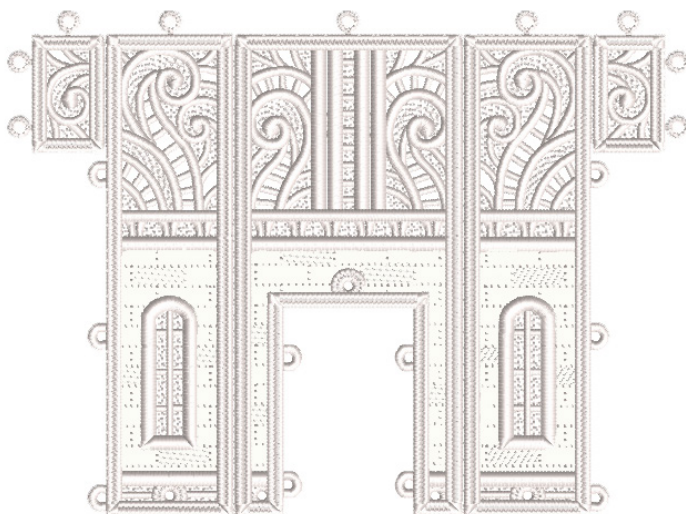


- 1. Fabric Placement Stitch 0015
- 2. Cut Line and Tackdown 0015
- 3. Cover Stitch and Lace 0015

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12799-02 Door FSA

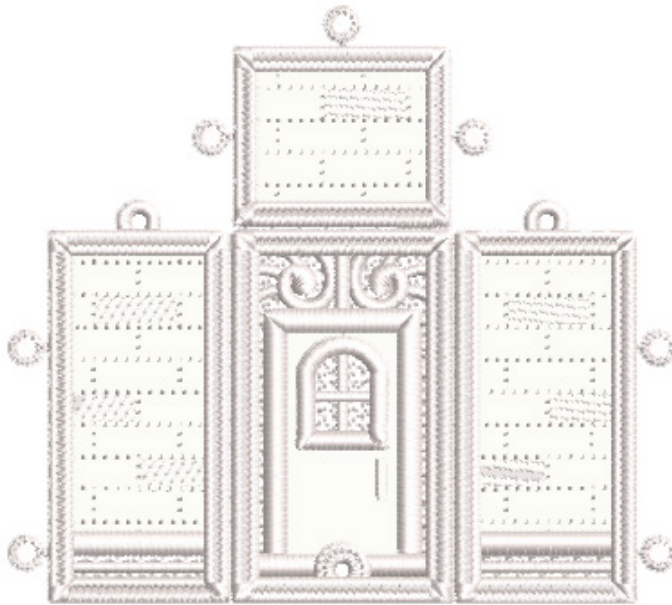

Size Inches:	Size mm:	Stitch Count:
4.06 X 3.63 in.	103.12 X 92.2 mm	20,492 St.

- 1. Wall Fabric Placement Stitch..... 0015
- 2. Wall Cut Line and Tackdown 0015
- 3. Door Fabric Placement Stitch..... 0015
- 4. Door Cut Line and Tackdown..... 0015
- 5. Cover Stitch and Lace 0015

***Fabric Required**

12799-03 Sign FSA



Size Inches:	Size mm:	Stitch Count:
2.84 X 3.14 in.	72.14 X 79.76 mm	17,267 St.


- 1. Fabric Placement Stitch 0015
- 2. Cut Line and Tackdown 0015
- 3. Cover Stitch and Lace 0015
- 4. Lettering 0015

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12799-04 Left Walls FSA

Size Inches: Size mm: Stitch Count:
4.07 X 7.12 in. 103.38 X 180.85 mm 61,866 St.

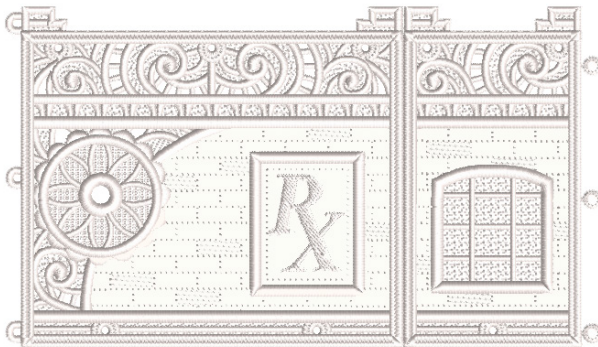


- 1. Wall Fabric Placement Stitch..... 0015
- 2. Wall Cut Line and Tackdown 0015
- 3. Sign Fabric Placement Stitch 0015
- 4. Sign Cut Line and Tackdown 0015
- 5. Cover Stitch and Lace 0015
- 6. RX Lettering 0015

***Fabric Required**

12799-05 Right Walls FSA

Size Inches: Size mm: Stitch Count:
4.07 X 7.18 in. 103.38 X 182.37 mm 57,559 St.

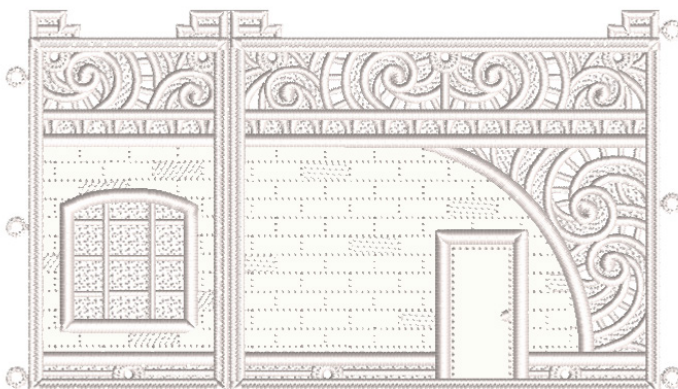

- 1. Wall Fabric Placement Stitch..... 0015
- 2. Wall Cut Line and Tackdown 0015
- 3. Door Fabric Placement Stitch..... 0015
- 4. Door Cut Line and Tackdown 0015
- 5. Cover Stitch and Lace 0015

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

12799-06 Back Wall to Cupola FSL

Size Inches: Size mm: Stitch Count:
 5.15 X 2.49 in. 130.81 X 63.25 mm 18,839 St.


1.Lace..... 0015



12799-07 Cupola Top FSL

Size Inches: Size mm: Stitch Count:
 3.9 X 3.28 in. 99.06 X 83.31 mm 29,818 St.

1.Lace..... 0015

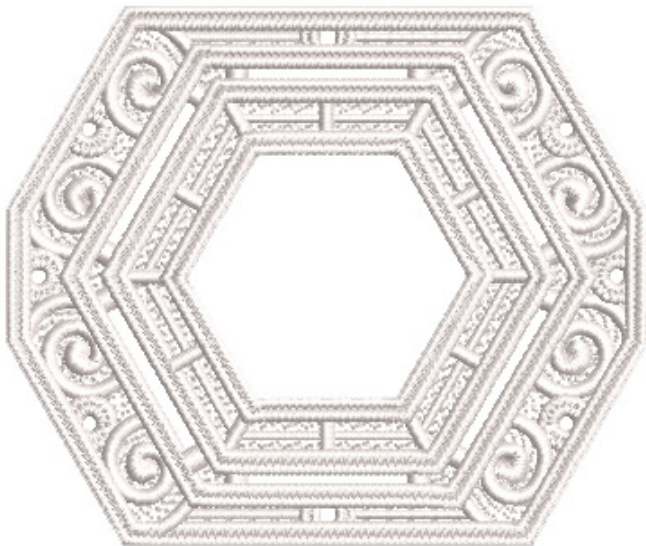

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12799-08 Cupola Roof FSA

Size Inches: Size mm: Stitch Count:
5.01 X 5.39 in. 127.25 X 136.91 mm 38,210 St.



- 1. Fabric Placement Stitch 0015
- 2. Cut Line and Tackdown 0015
- 3. Cover Stitch and Lace 0015

***Fabric Required**

12799-09 Cupola Roof with Snow FSA

Size Inches: Size mm: Stitch Count:
5.01 X 5.39 in. 127.25 X 136.91 mm 36,520 St.




- 1. Roof Fabric Placement Stitch 0015
- 2. Roof Cut Line and Tackdown 0015
- 3. Snow Fabric Placement Stitch 0015
- 4. Snow Cut Line and Tackdown 0015
- 5. Cover Stitch and Lace 0015

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12799-10 Roof FSA

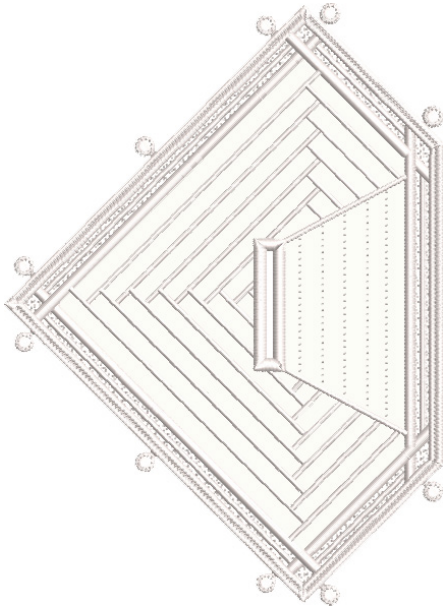


Size Inches: Size mm: Stitch Count:
4.72 X 6.47 in. 119.89 X 164.34 mm 24,537 St.

- 1. Fabric Placement Stitch 0015
- 2. Cut Line and Tackdown 0015
- 3. Cover Stitch and Lace 0015

***Fabric Required**

12799-11 Roof with Snow FSA

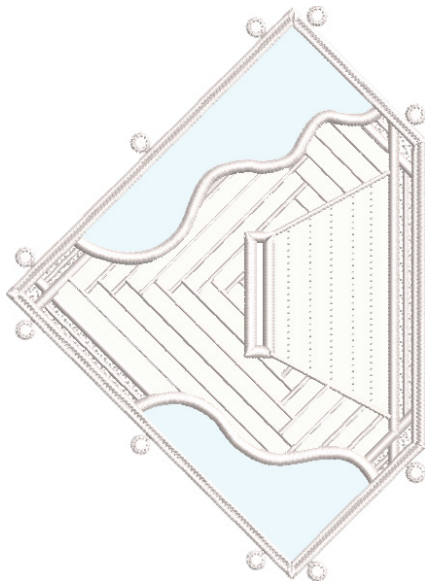

Size Inches: Size mm: Stitch Count:
4.72 X 6.47 in. 119.89 X 164.34 mm 24,537 St.

- 1. Roof Fabric Placement Stitch 0015
- 2. Roof Cut Line and Tackdown 0015
- 3. Snow Fabric Placement Stitch 0015
- 4. Snow Cut Line and Tackdown 0015
- 5. Cover Stitch and Lace 0015


Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12799-12 Foundation FSA

Size Inches: Size mm: Stitch Count:
5.19 X 5.19 in. 131.83 X 131.83 mm 17,837 St.

- 1. Fabric Placement Stitch 0015
- 2. Cut Line and Tackdown 0015
- 3. Cover Stitch and Lace 0015

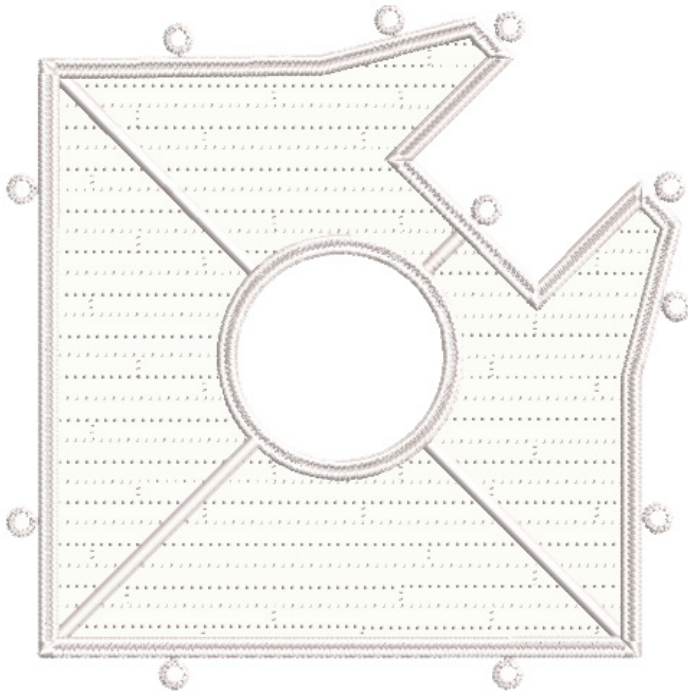

Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway

Fabrics/Textiles

- White version:
 - White cotton fabric ½ yard
- Color Version
 - Charcoal cotton fabric 10" x 10"
 - Blue cotton fabric ½ yard
 - White cotton fabric ¼ yard
- Note: Fabric sizes are estimates and may result in overage.

Notions & Tools

- OESD Alligator Clamps
- OESD Button Clips
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Perfect Point and Press Tool
- Utility Knife
- Embroidery Needle Sharp 75/11

Isacord Thread Colors


- Per thread chart
- Match bobbin thread to top thread
- 0015 White (2 spools)

SUMMARY




Completed Size: 6.5" H x 5" W x 5" D

12799-01

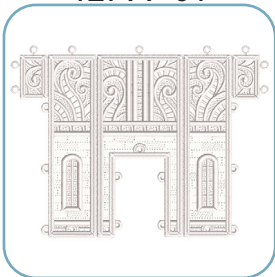


Requires 1 Design

12799-02

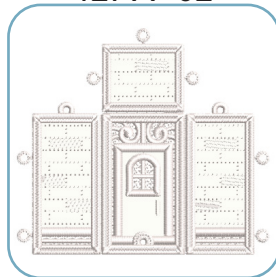


Requires 1 Design

12799-03

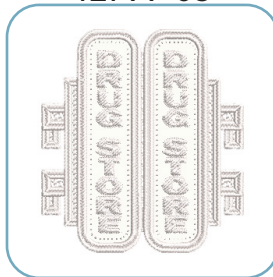


Requires 1 Design

12799-04

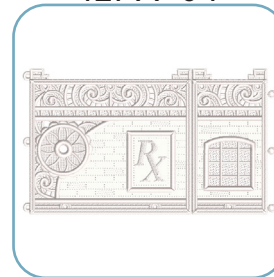


Requires 1 Design

12799-05

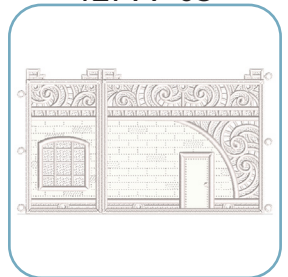


Requires 1 Design

12799-06

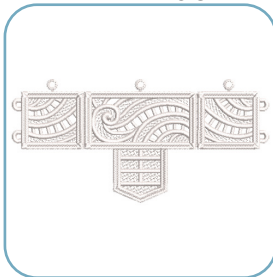


Requires 1 Design

12799-07

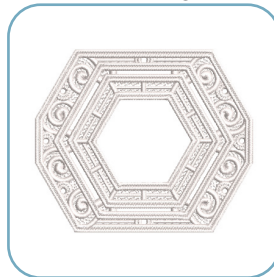

Requires 1 Design

12799-08

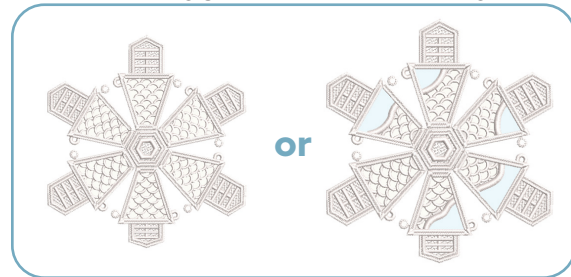


Requires 1 Design

12799-09




12799-10

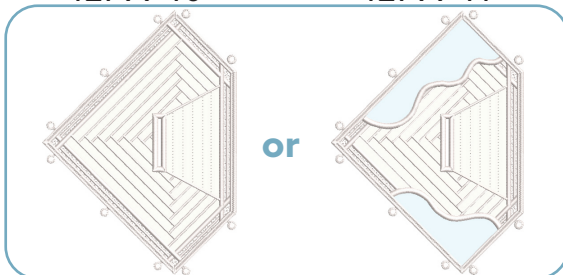


Requires 1 Design

12799-11

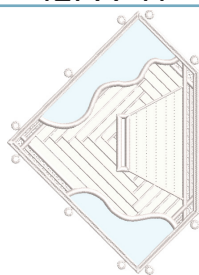

12799-12

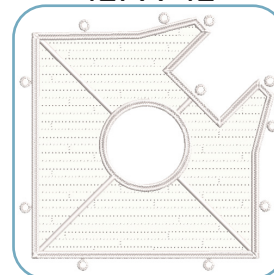

Requires 1 Design

Notes

The freestanding applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with matching thread, top and bobbin.

For other designs in the collection, use the applique templates as a guide to the dimensions of the various applique pieces.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

STEP 1

- Hoop one layer of AquaMesh and one layer of BadgeMaster for all designs.



STEP 2

- Adhere two layers of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished structure.
- Cut the prepared applique fabrics 1/4" - 1/2" larger than the templates.



EMBROIDERY




STEP 3

- Load selected design into the machine.
- Example design is Front Wall FSA (12799-01).
- Thread the machine per the thread chart.
- Place hoop on the machine.
- Stitch Machine Step 1, Fabric Placement Stitch.



STEP 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the prepared applique fabric, right side up, completely covering the placement stitch.
- Tape in place to secure.

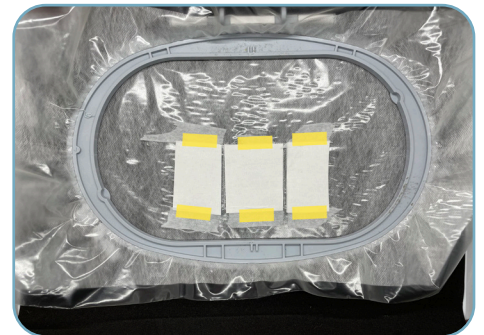


EMBROIDERY




STEP 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

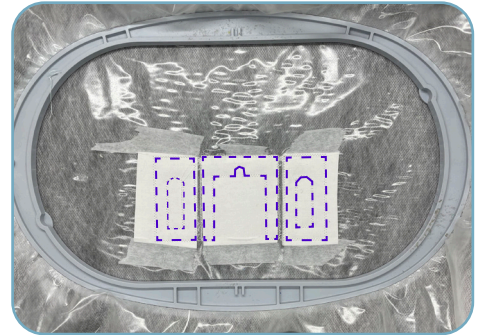

STEP 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line stitching as possible.
- Note: If the outermost row of stitching (cut line) is accidentally cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the OESD AquaMesh is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.

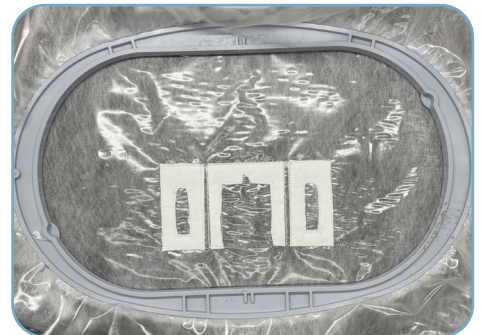


EMBROIDERY



STEP 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Cover Stitch and Lace.

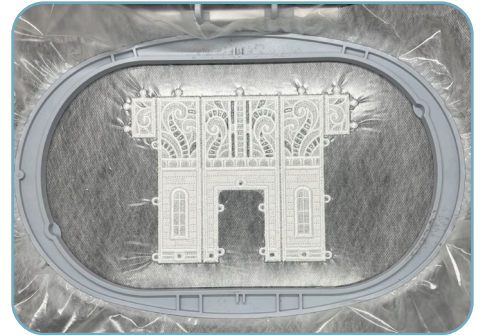

STEP 8

- When design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.
- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack will prevent curling. Dry completely.
- Once dry, press right side down on a Perfect Embroidery Press Cloth.




ASSEMBLY




STEP 9

- Before assembly, use a utility knife and cut through all layers of the tab entry Roof FSA (12799-10) or Roof with Snow FSA (12799-11).
- Tip: Take care to not cut the satin stitching.
- Note: Two roof styles are available to choose from, only one roof is needed.

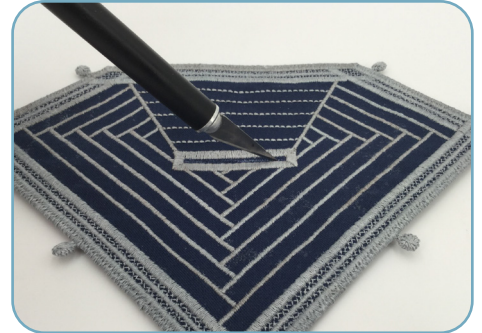


STEP 10

- Attach Left Walls FSA (12799-04) to Front Wall FSA (12799-01) by pulling the buttonettes into the eyelets to the Left of the Left Walls FSA.
- Attach the Right Walls FSA (12799-05) to Front Wall FSA (12799-01) by pulling the buttonettes into the eyelets to the right of the Right Walls FSA.

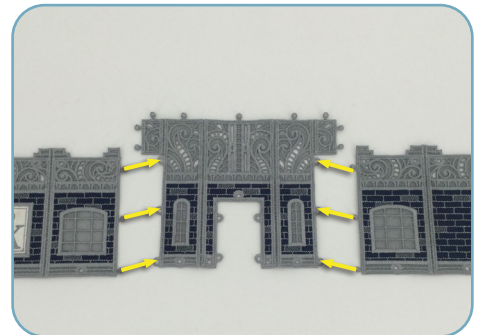


STEP 11

- Use Alligator Clamps to assemble the Door FSA (12799-02) by folding the top forward and pulling the buttonettes into the corresponding eyelets along the top and sides.

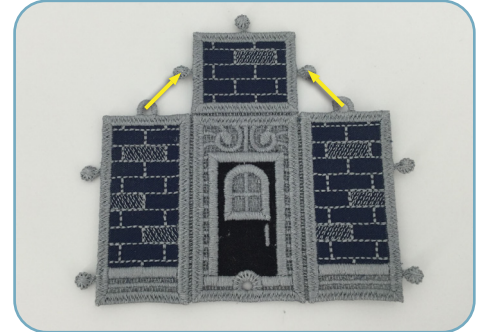

STEP 12

- Attach the Door FSA (12799-02) to the Front Wall FSA (12799-01) by pulling the five buttonettes of the Door FSA into the five eyelets in the Front Wall FSA.

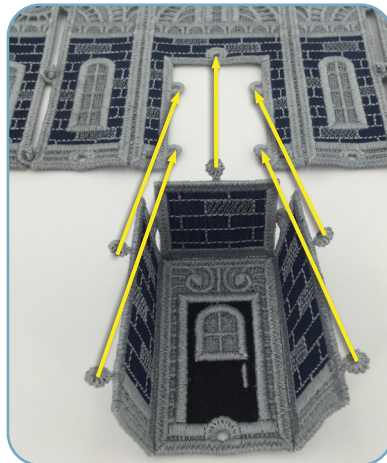


STEP 13

- Align the straight edge of the Roof FSA (12799-10) or Roof with Snow FSA (12799-11) and attach the five buttonettes into the eyelets of the Right Walls FSA (12799-05) and Front Walls FSA (12799-01).




STEP 14

- Repeat this process to attach the roof to the Front Walls FSA (12799-01) and Left Walls FSA (12799-04) by pulling the five buttonettes along the roof into the corresponding eyelets.

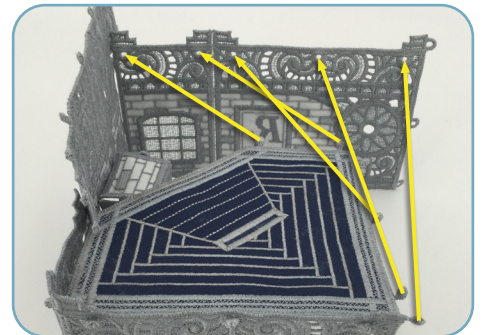



STEP 15

- Attach the Right Walls FSA (12799-05) to the Left Walls FSA (12799-04) by pulling the three buttonettes on right wall into the three eyelets of the left wall, using button clips to temporarily hold buttonettes in place as needed.

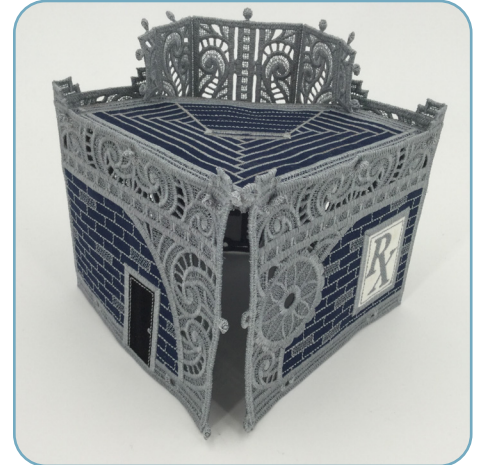

STEP 16

- Insert the tab of the Back Wall to Cupola FSL (12799-06) into the corresponding roof tab entry point.
- Attach the four buttonettes from the Front Walls FSA (12799-01) to the four remaining Cupola FSL (12799-06) eyelets.

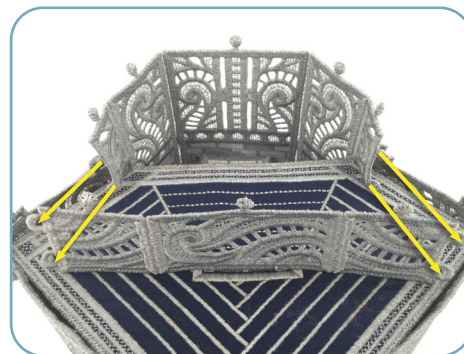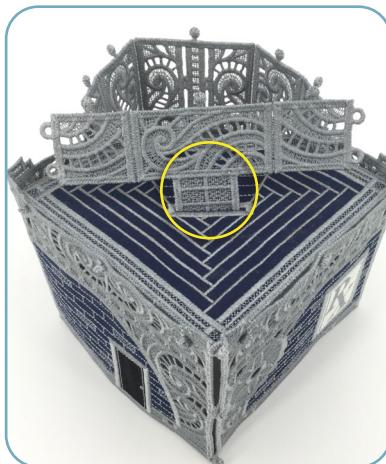


ASSEMBLY




STEP 17

- Attach the Cupola Top FLS (12799-07) to the Cupola FSL (12799-06) and Front Walls FSA (12799-01) by pulling the eight buttonettes to the corresponding eyelets.

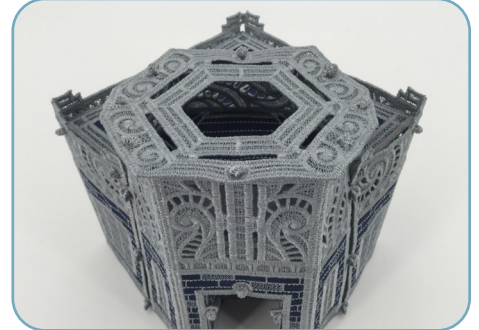



STEP 18

- Insert the Sign FSA (12799-03) tab into the Front Walls FSA (12799-01) tab entry point on each side of the sign.
- Gently push down on the Sign FSA (12799-03) to secure.

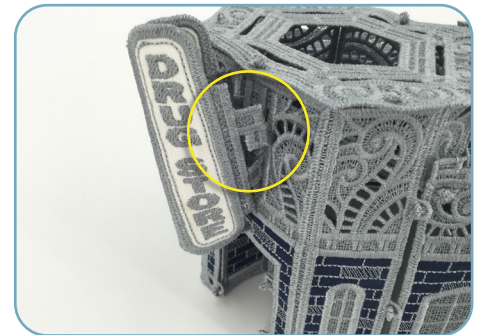



STEP 19

- Assemble the Cupola Roof FSA (12799-08) or Cupola Roof with Snow FSA (12799-09) by pulling the eight buttonettes into the corresponding eyelets to make a circle.

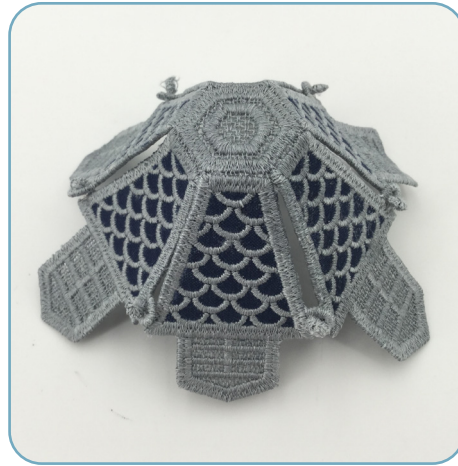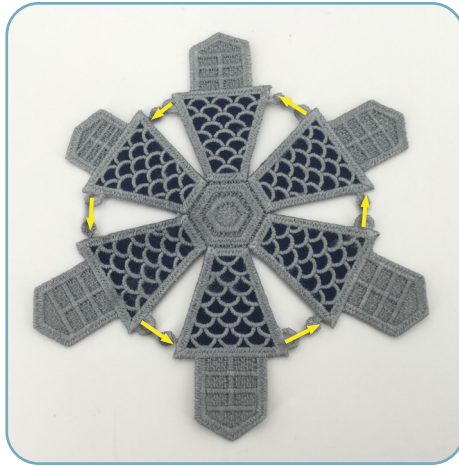

STEP 20

- Attach the chosen cupola roof by inserting the cupola tab into the entry point in the Cupola FSL (12799-06).

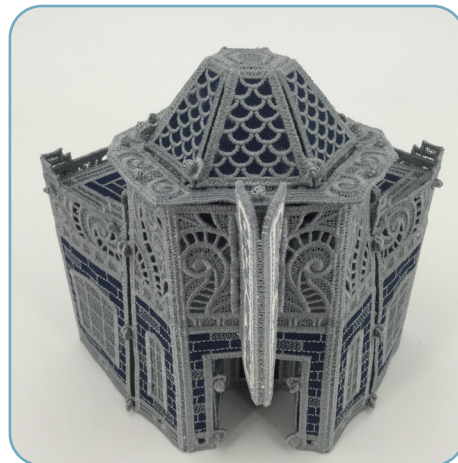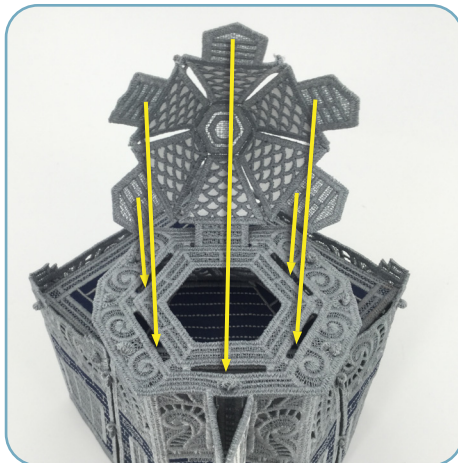


ASSEMBLY



STEP 21

- Attach the Foundation FSA (12799-12) to the bottom of the structure by pulling the buttonettes of the foundation into the eyelets of the structure.

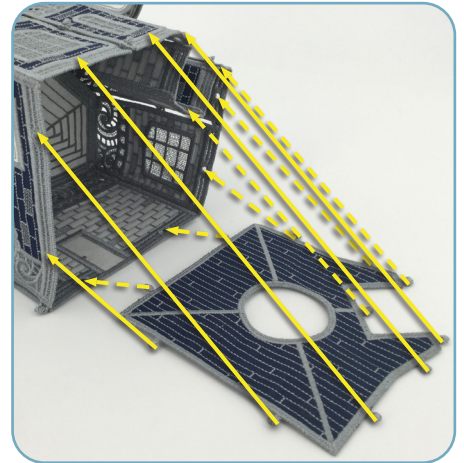

ASSEMBLY



FINISHING TOUCHES

- The drug store is complete. Enjoy.
- Add tea lights or pixie lights to create a glow.



Stabilizer

- OESD AquaMesh
- OESD BadgeMaster

Notions/Tools

- 80/12 Embroidery Ballpoint Titanium needle for extended needle life
- OESD Alligator Clamps
- OESD Button Clips
- OESD Perfect Point and Press Tool

Isacord Thread Colors

- All OESD designs are digitized with Isacord 40 wt. polyester thread as the top thread and in the bobbin.
- Refer to the thread chart for color specifications.
- Match bobbin thread color to the top thread.

Instructions

Step 1 - Hoop

For FSL structures, hoop one layer of OESD AquaMesh and one layer of OESD BadgeMaster. BadgeMaster contains more starch so, combined with the AquaMesh, the lace is more rigid. For other FSL, where a softer lace is desired, hoop two layers of AquaMesh.

Step 2 - Embroider

Stitch the design per the thread chart with matching thread in the bobbin at each color change. When complete, remove from the hoop and trim away excess stabilizer about 1/4"-1/2" from the stitching.

Step 3 - Rinse

Rinse remaining stabilizer out in warm running water. For stiffer lace and FSL structures, DO NOT rinse away all of the stabilizer. The lace should be just slightly tacky. For softer lace, rinse until all traces of the stabilizer are removed.

Step 4 - Dry

Lay right side down flat on a non-stick surface, such as a cooling rack, parchment paper or Teflon sheet. This minimizes the tendency for the lace to curl. Let the pieces dry completely before proceeding with any assembly.

Step 5 - Press

Once completely dry, press right side down on a OESD Perfect Embroidery Press Cloth.

Step 6 - Assemble Structure

Note: Specific assembly instructions for a design/collection may be found in the thread chart pdf following the individual design color charts.

Lace must be COMPLETELY DRY before assembly. Wetting the buttonettes or eyelets to assemble is not recommended and may result in them stretching and coming "unbuttoned" when dry.

Use a pair of OESD Alligator Clamps to insert the buttonettes into the eyelets. Insert the tip of the OESD Alligator Clamps into the eyelet, grasp the buttonette and pull through the eyelet. Alternatively, use a stiletto or tweezers to push the buttonette through the eyelet.

Helpful Tips

Limp Lace

If the design is not stiff enough, press the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction. Or easily re-stiffen by diluting some stabilizer scraps in water (or use liquid starch) and dipping the item in the solution. Lay flat to dry.

Eyelets Too Small

If any of the eyelets appear closed or too small to penetrate with Alligator Clamps, they may be stretched by inserting the small end of the OESD Perfect Point and Press Tool into the eyelet opening and stretching it open wide enough to accommodate the OESD Alligator Clamps.

Button Clips

During the assembly process, some structures pull on buttonettes that have already been inserted and could pull them out altogether. Putting a Button Clip on the assembled buttonette will keep it in position during the assembly process. Remove the Button Clips when the assembly is complete.


Alternative Construction Option

In some cases, the buttonettes may be pulled to the inside of a project, instead of being visible on the outside. Insert the OESD Alligator Clamps through the eyelet from the wrong, or inside, of the lace and grasp the corresponding buttonette. Pull the buttonette to the wrong side of the lace.

Pulling the buttonettes to the inside may cause stress on the ones already done. Button clips may be placed on the completed buttonette(s) to prevent them from pulling out of the eyelet during construction.


ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

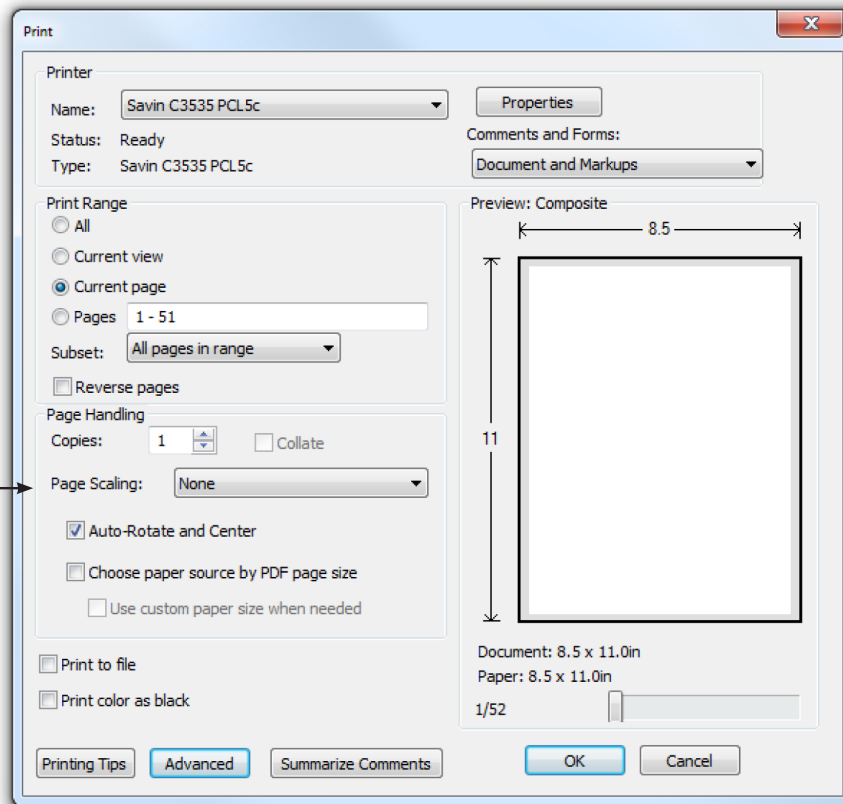

TO SAVE PAPER






Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

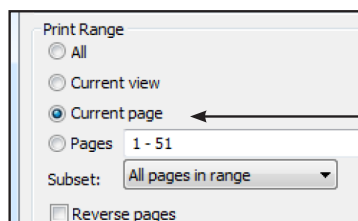

APPLIQUE PATTERNS









Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

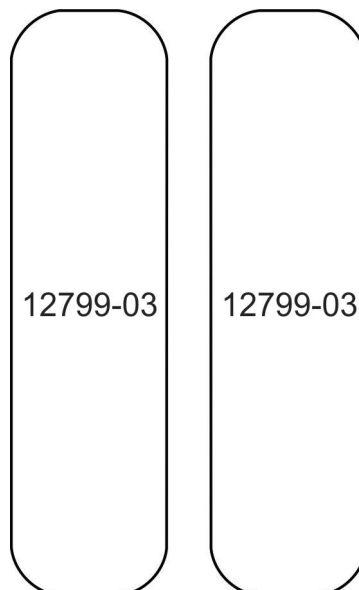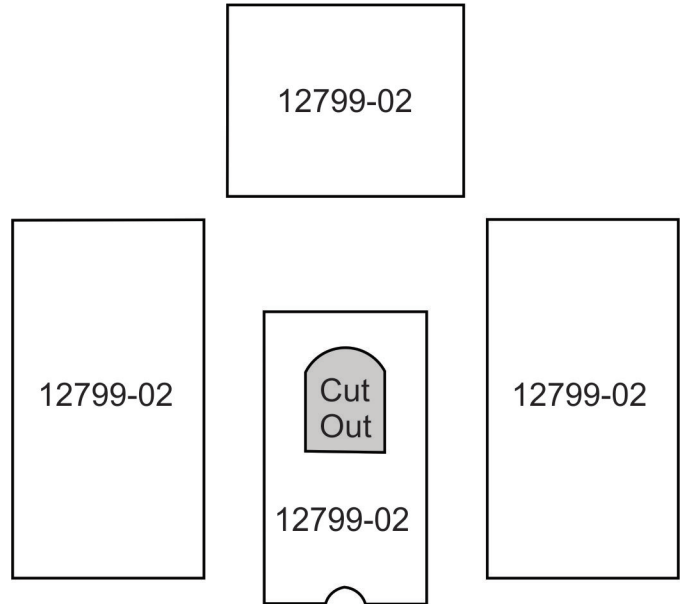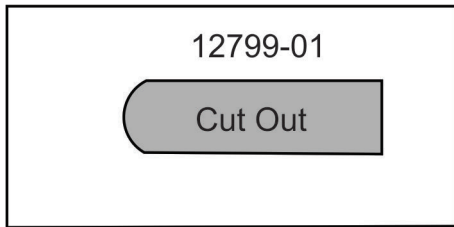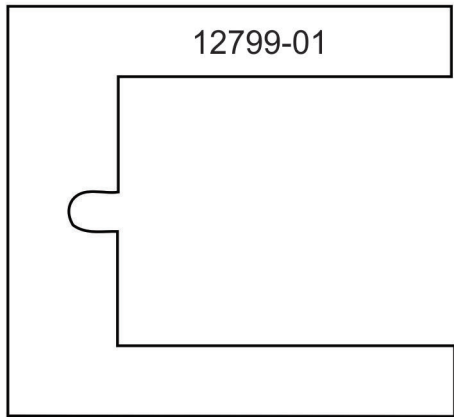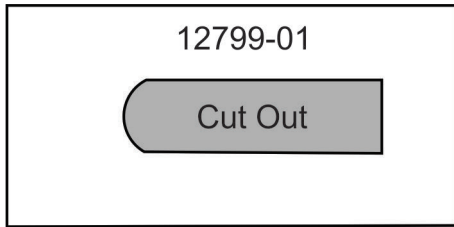

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

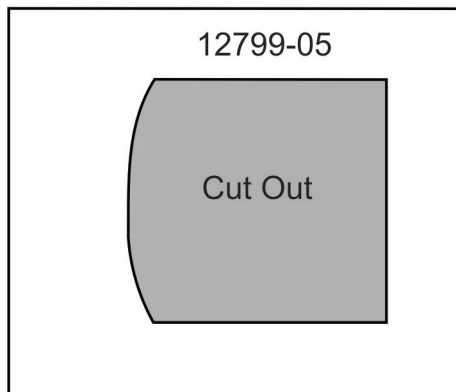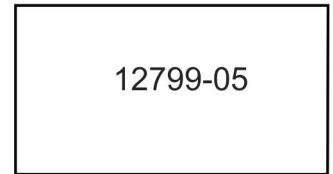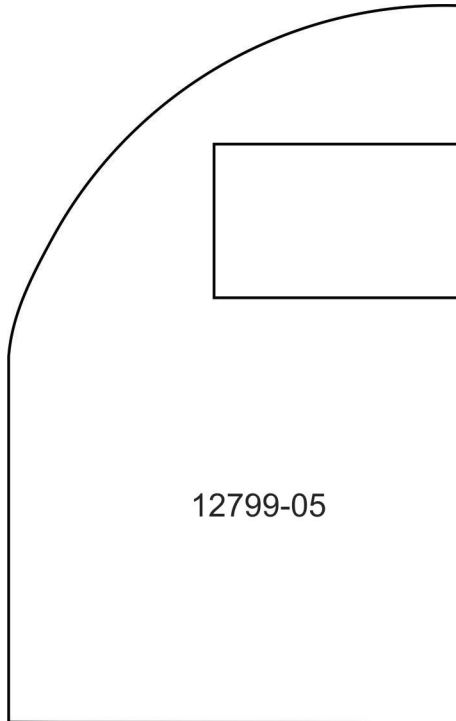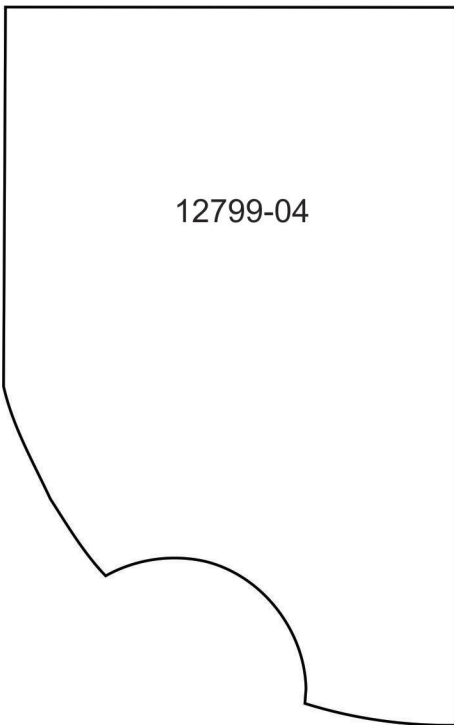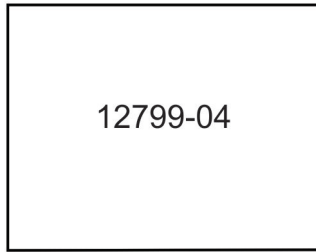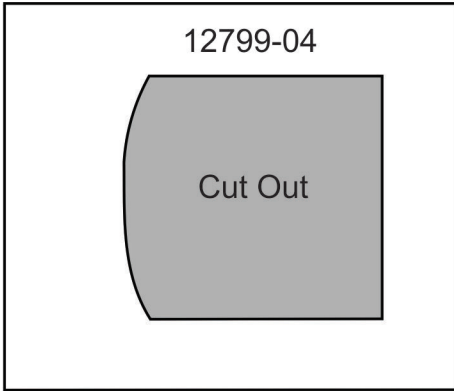

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

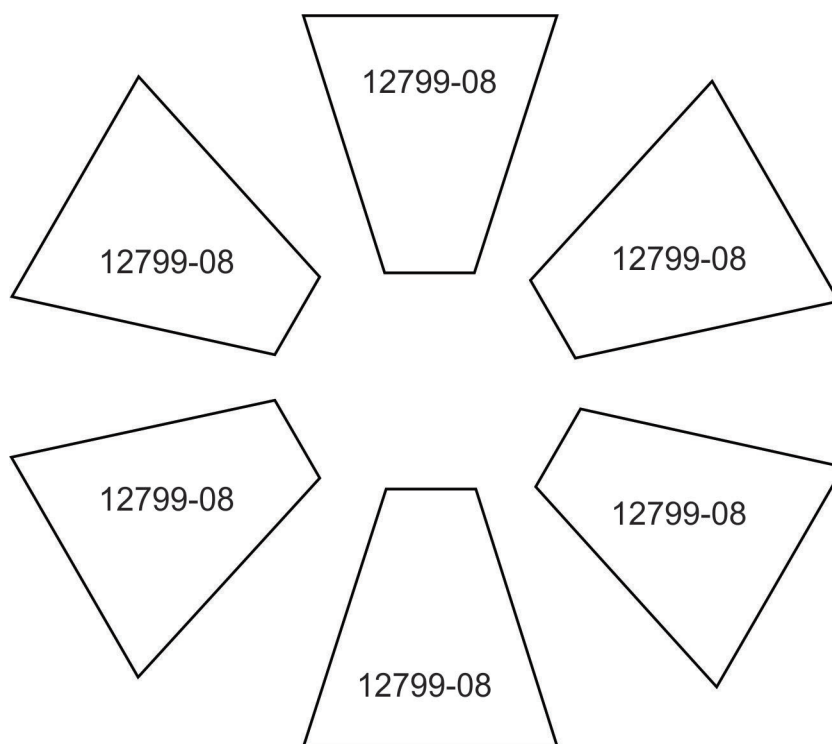

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

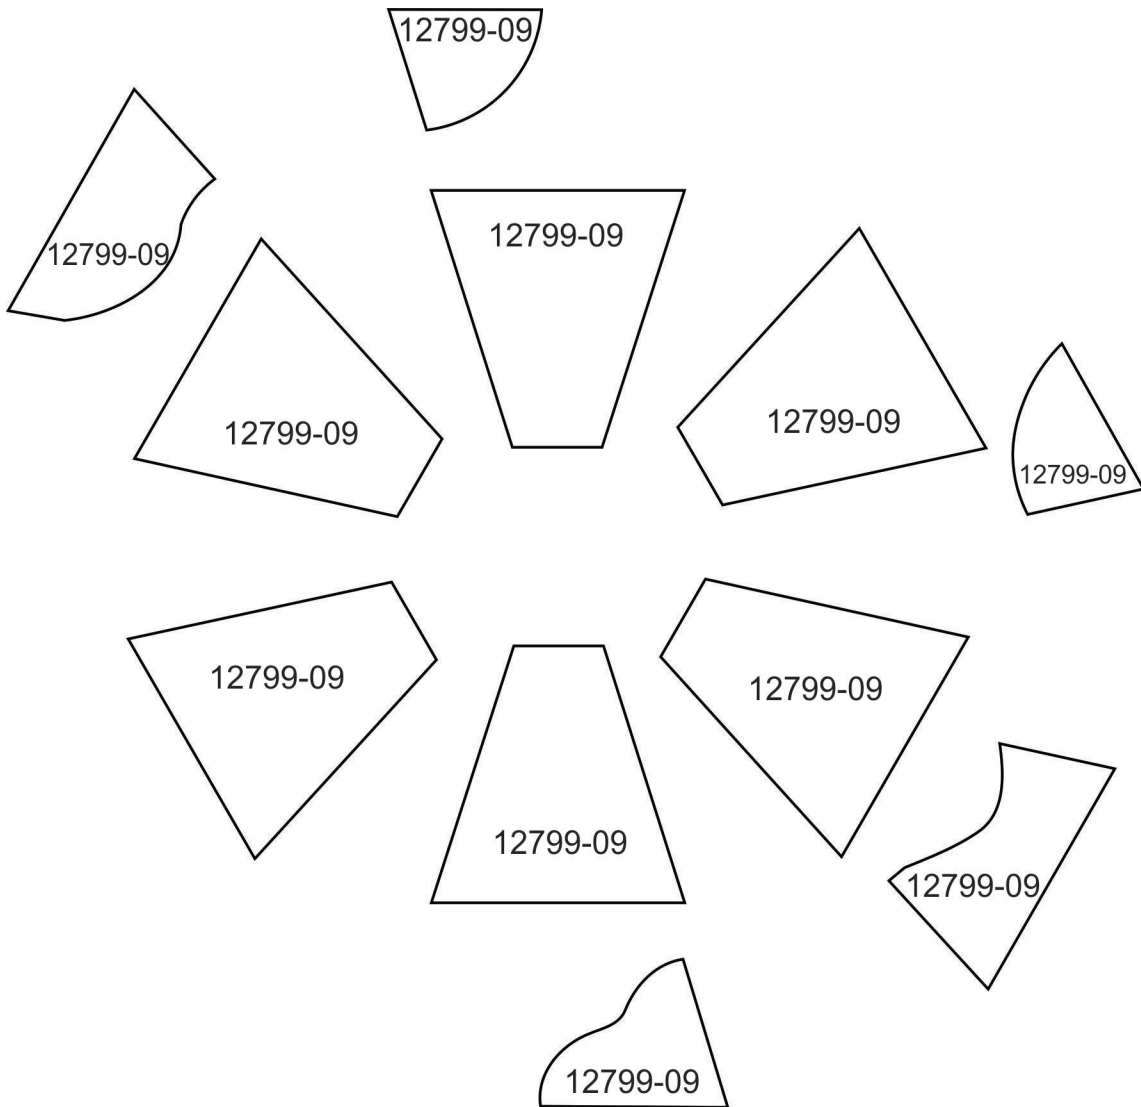

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

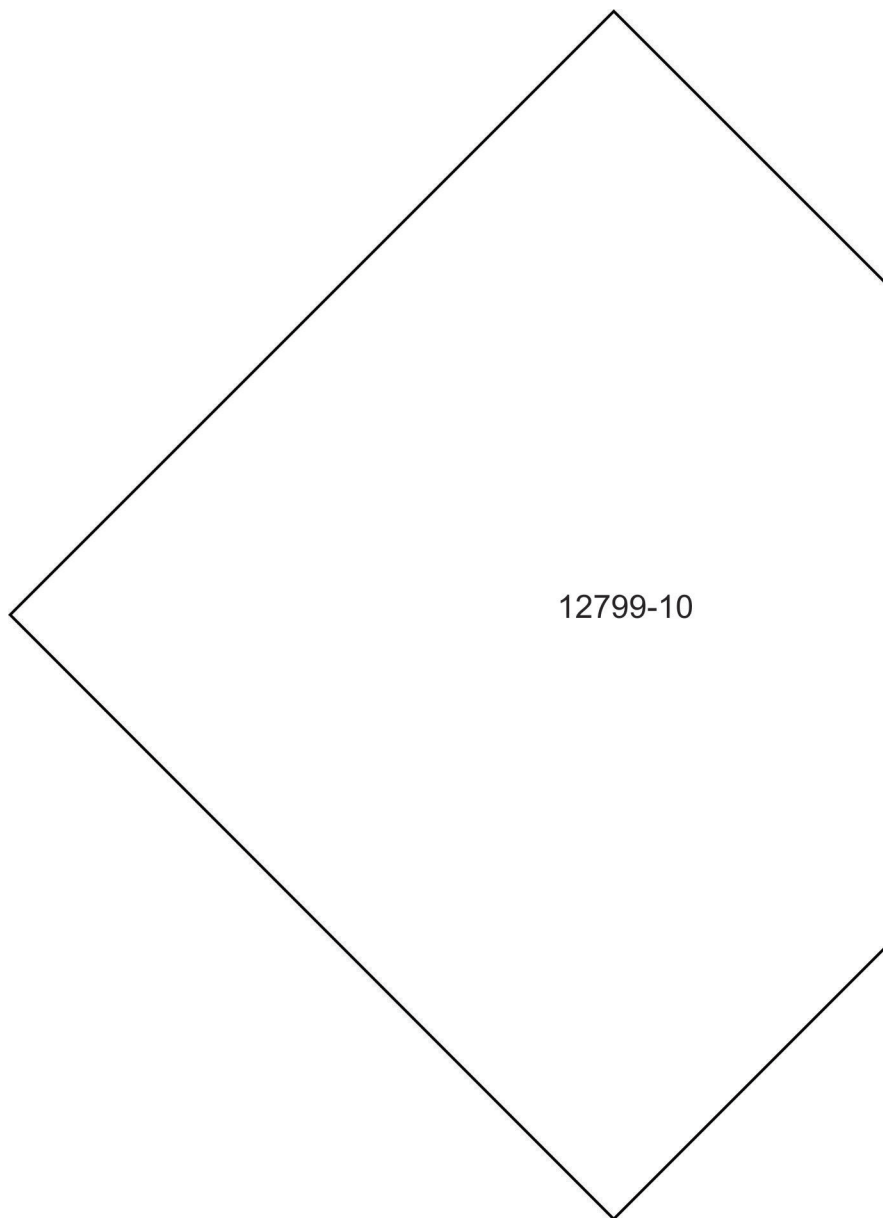


12799-10

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

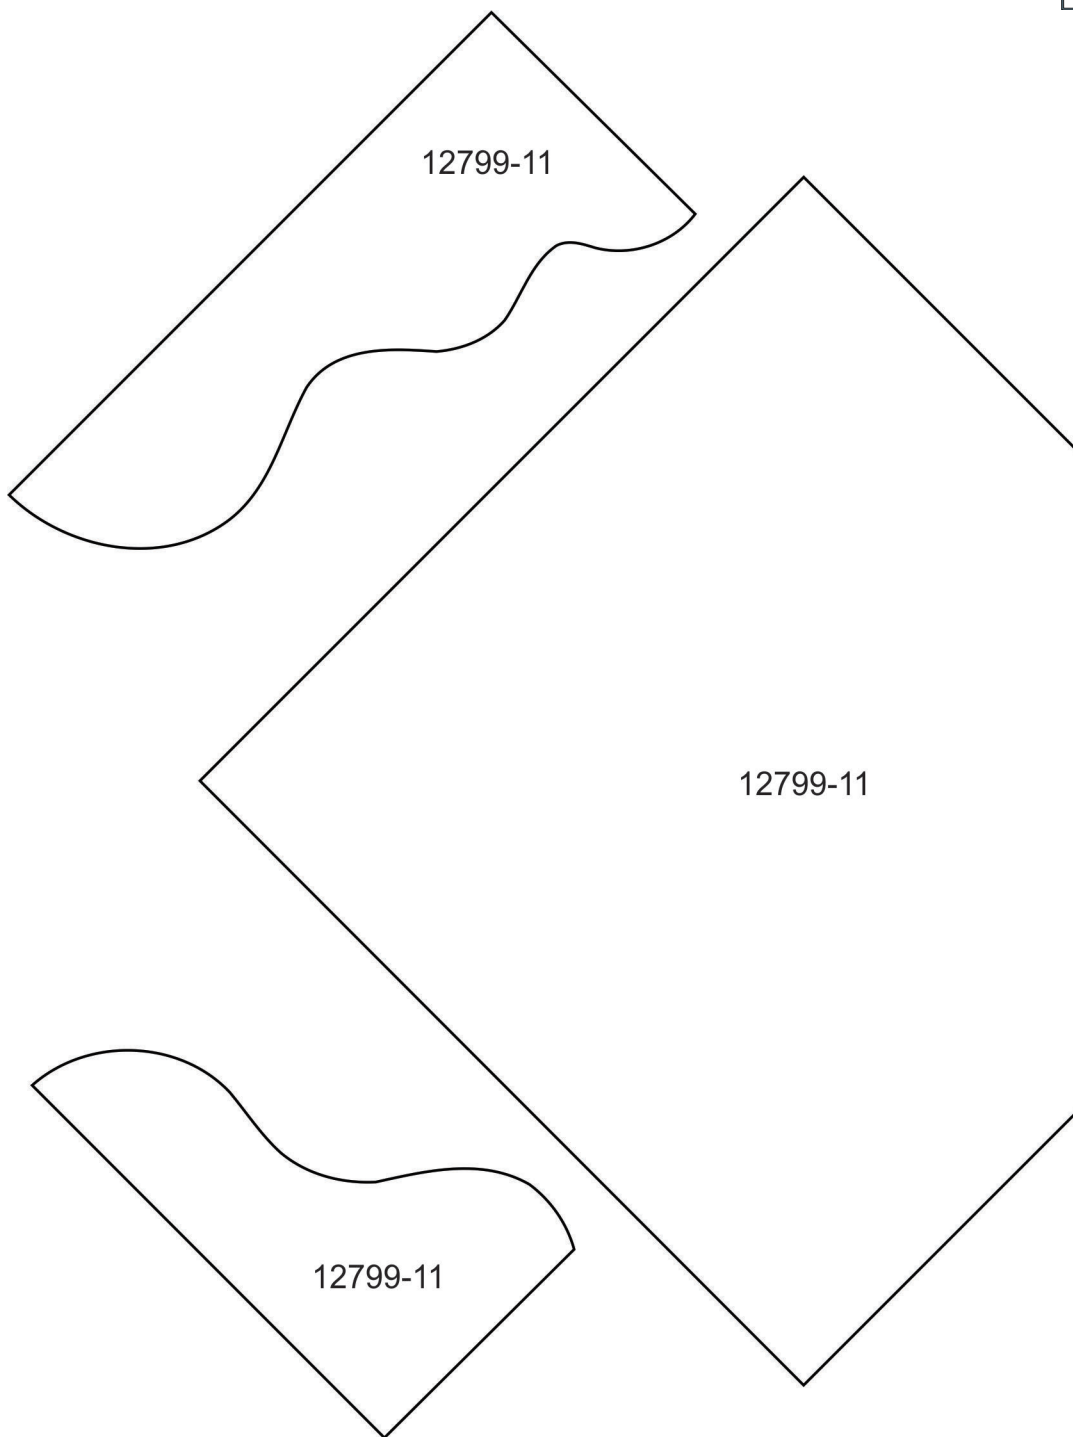

APPLIQUE PATTERNS











Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

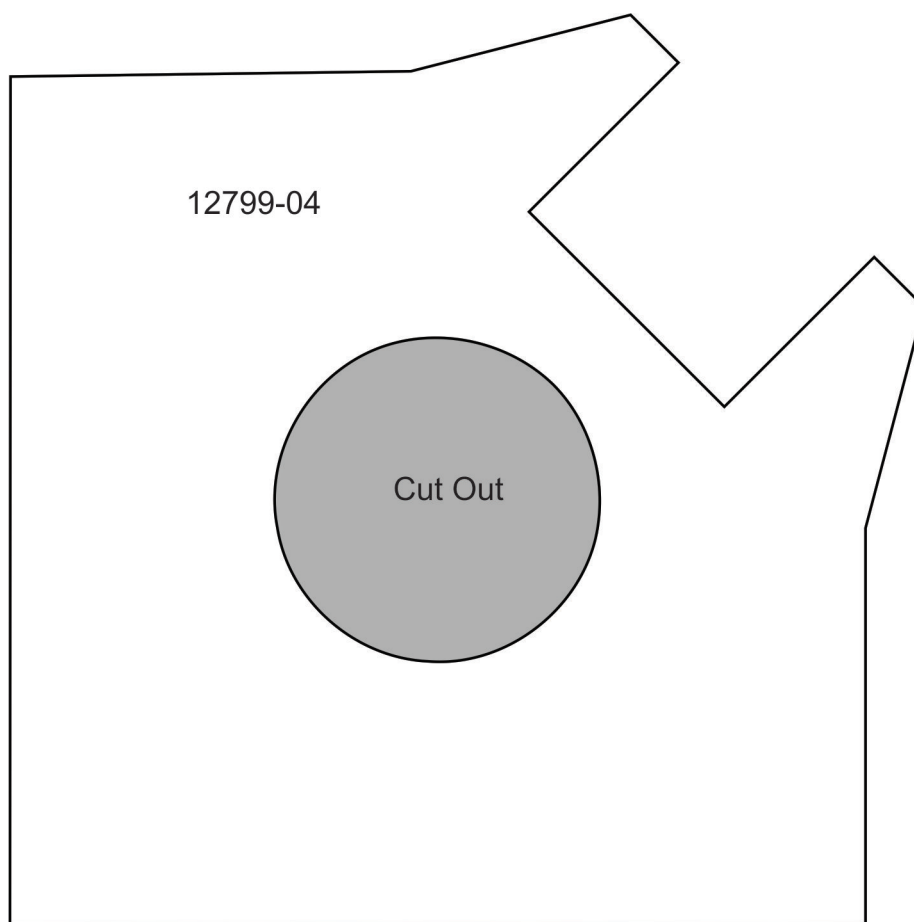

MIRRORED PATTERNS








Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

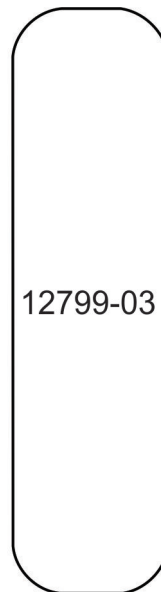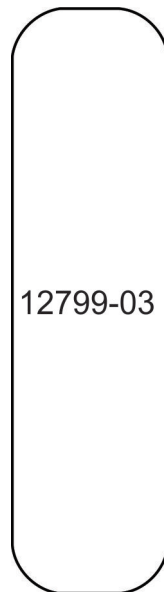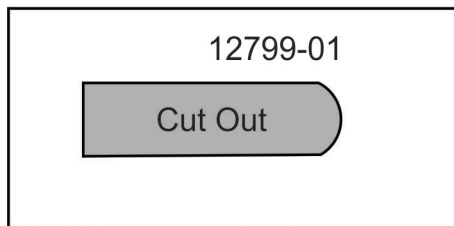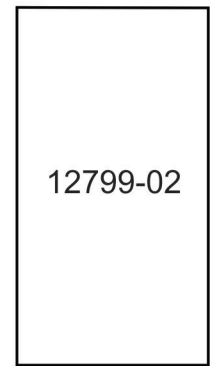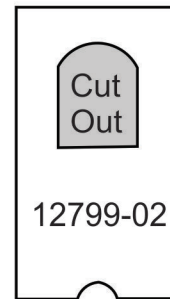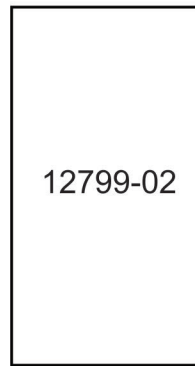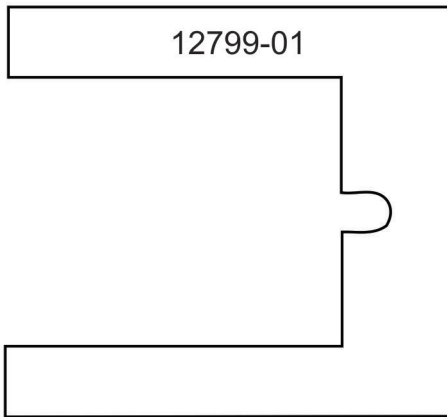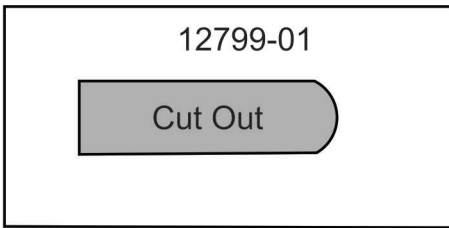

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

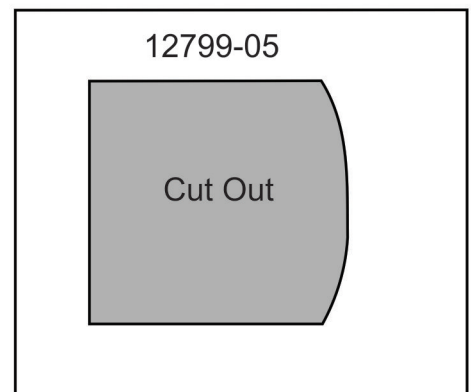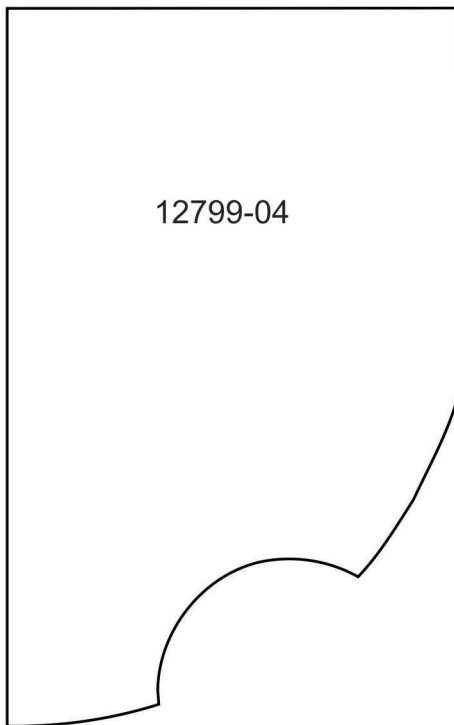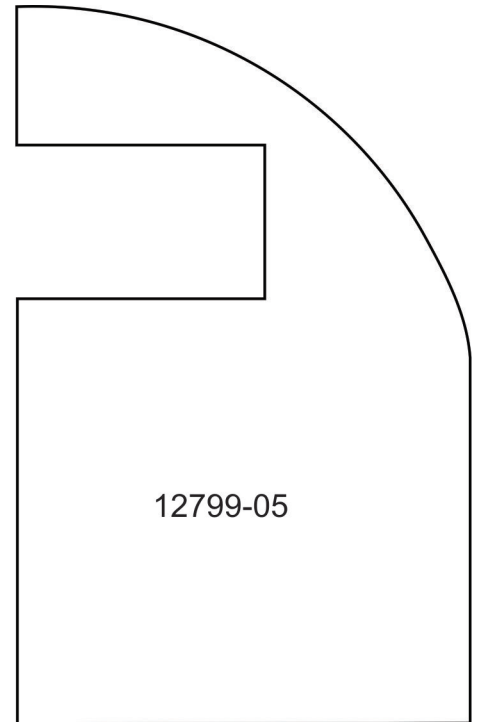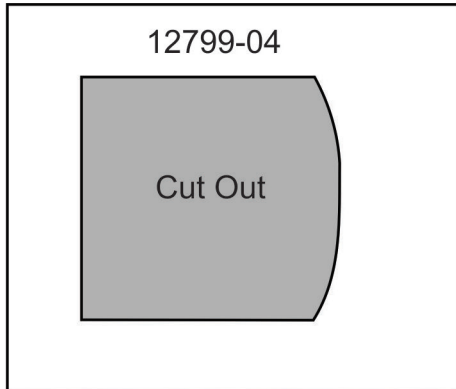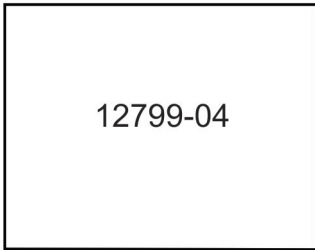

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

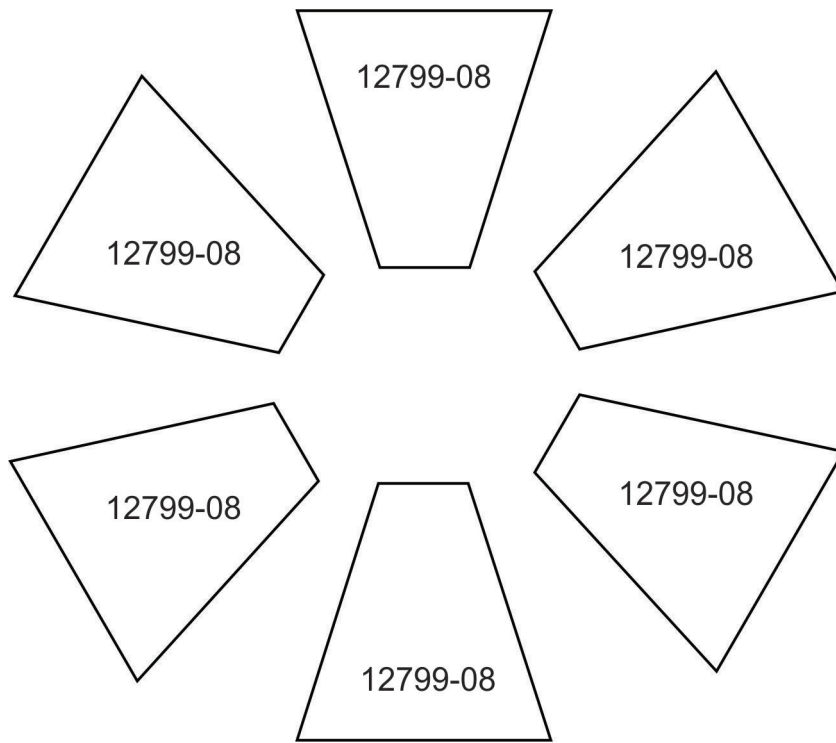

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

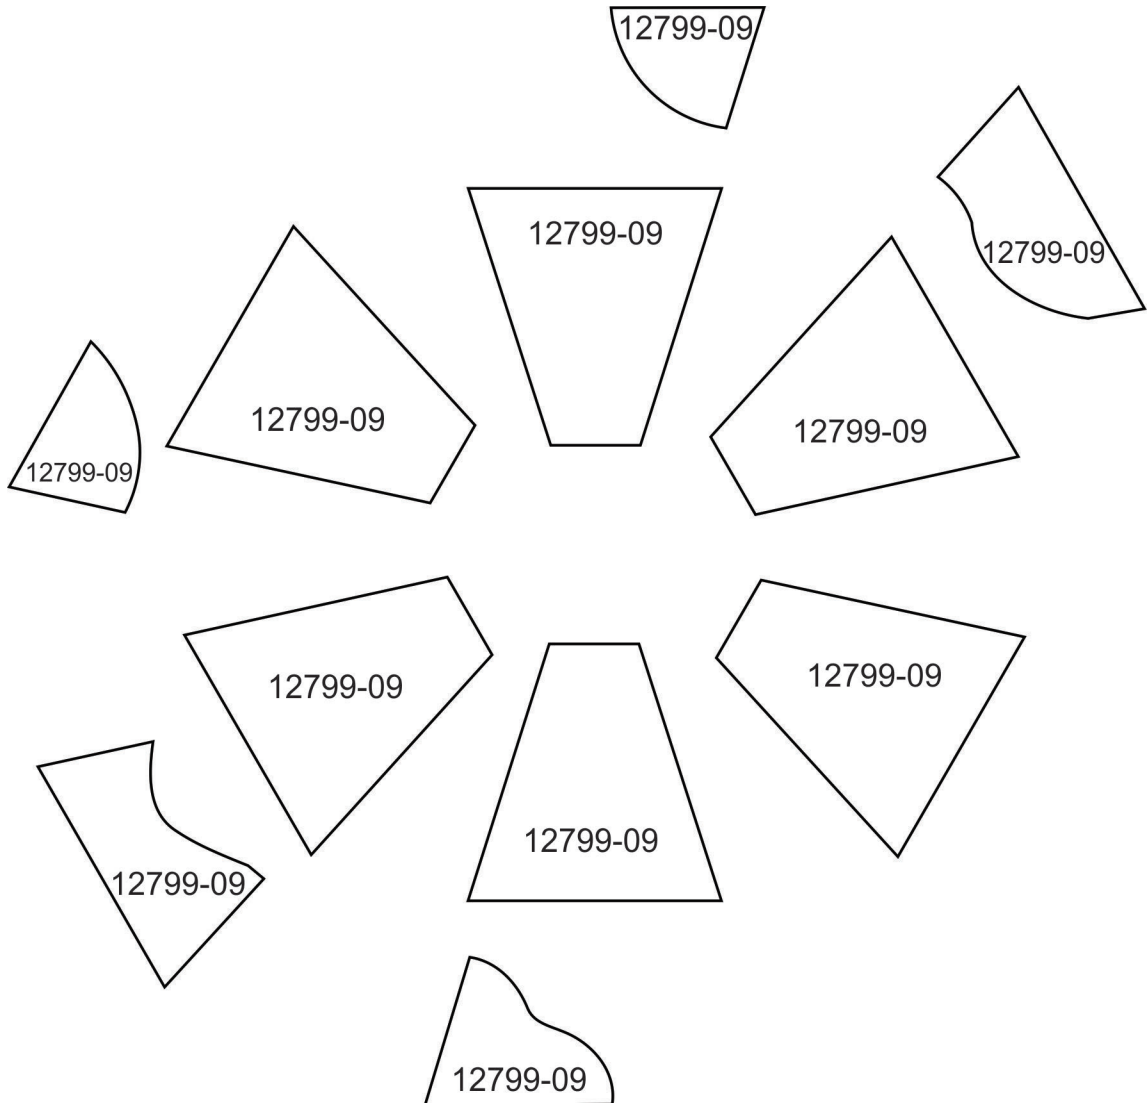

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

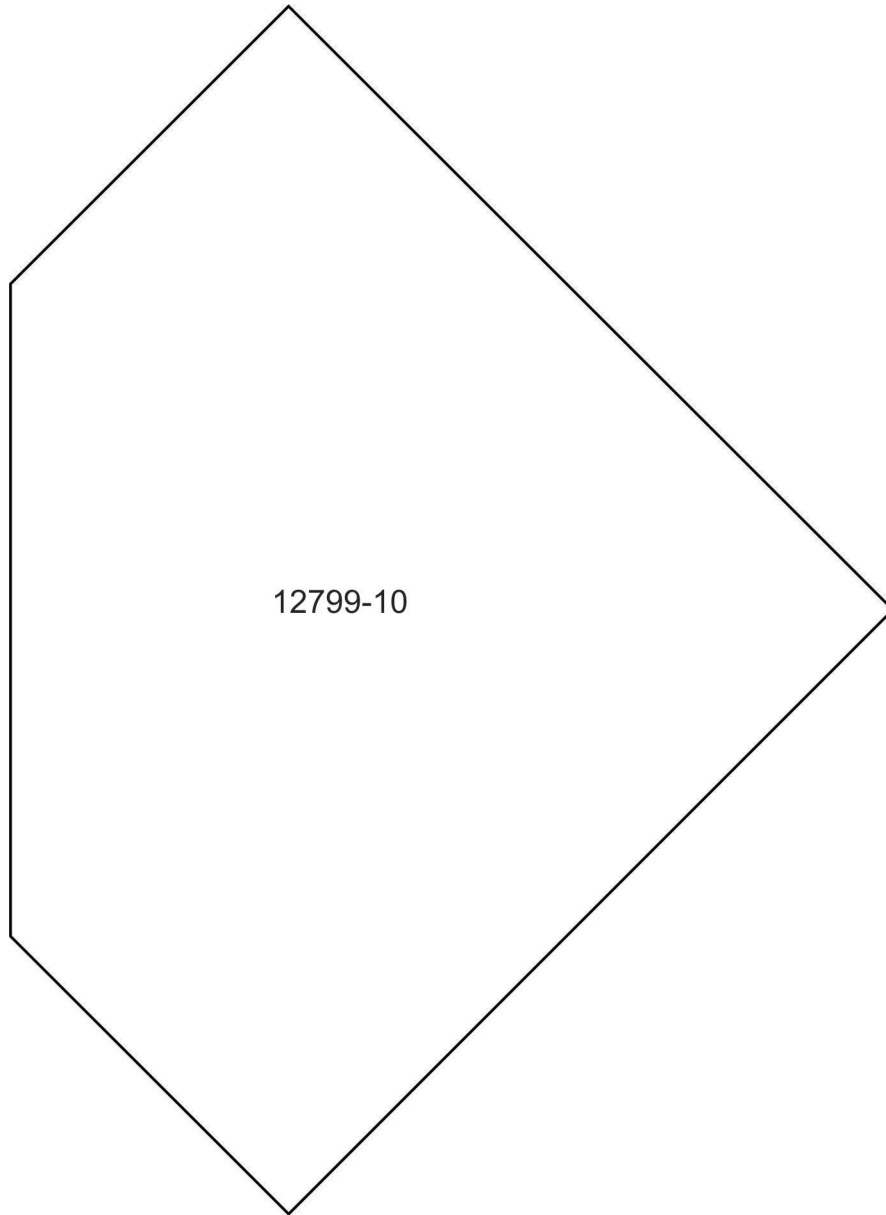

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

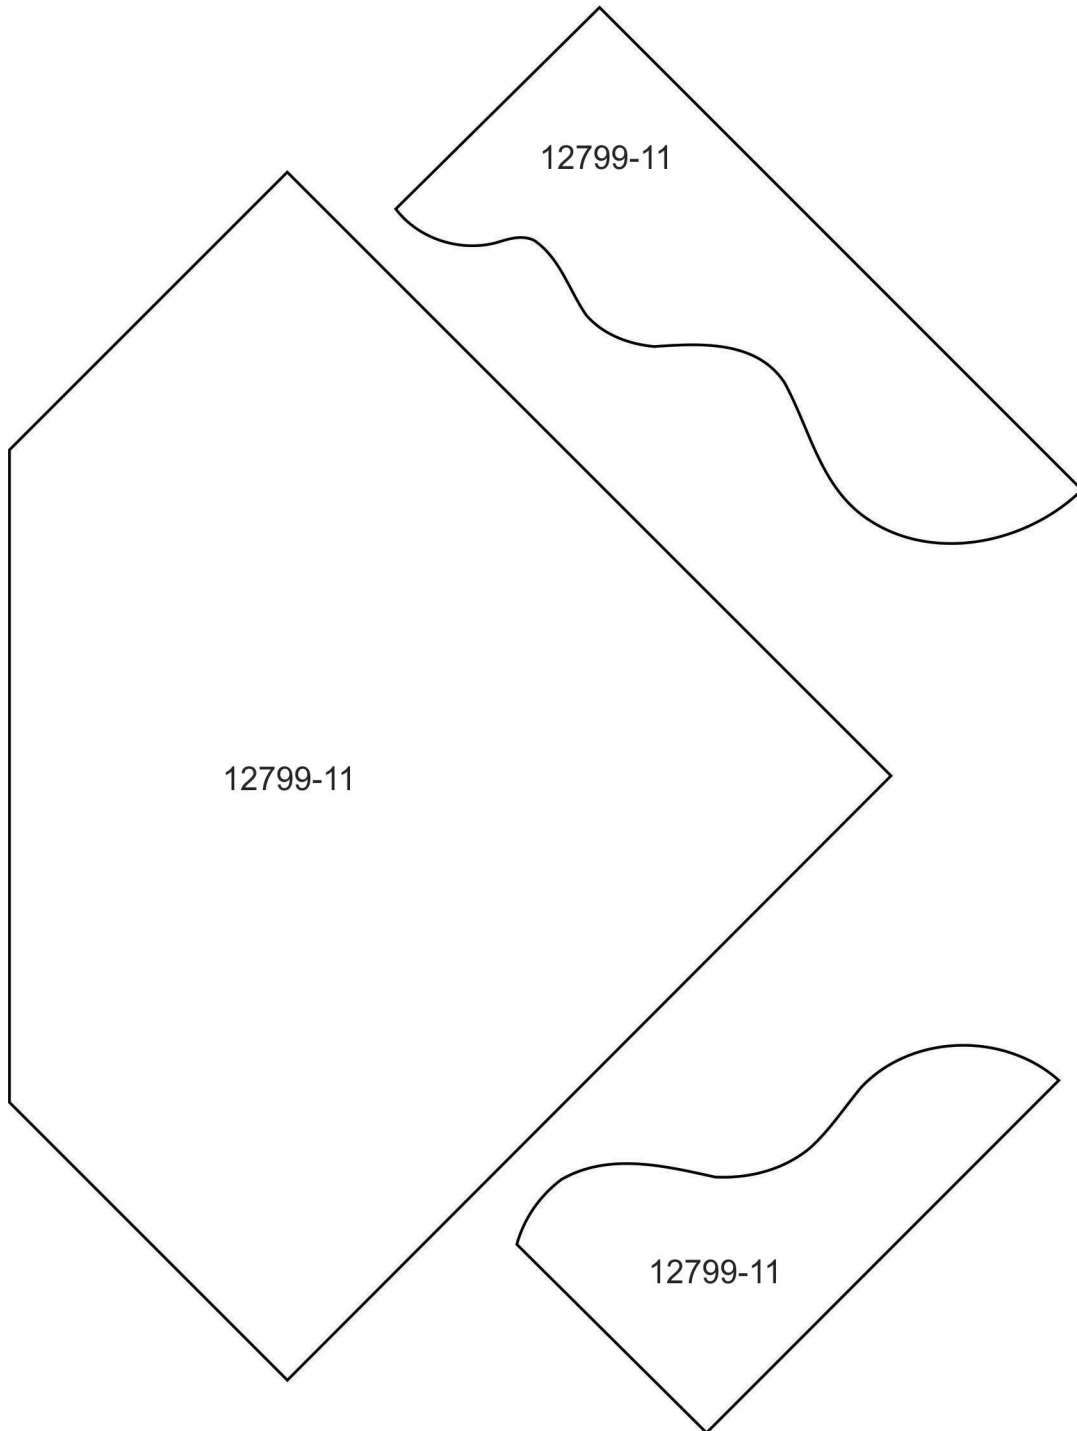

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

