#12829

- 4 freestanding lace designs
- 8 freestanding applique designs
- Project instructions included





12
DESIGNS

Freestanding Holiday Wreaths

THREAD LIST



Isacord Thread Colors

0010 Silky White

0670 Cream

1805 Strawberry

2113 Cranberry

5531 Pear

5643 Green Dust

7005 (SN1) Silver

7013 (S14) Mayan Gold

7029 (AN3) Pearlessence Light Blue





Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required



12829-01 FSA Holiday Wreath 1 Section

Size Inches:	Size mm:	Stitch Count:
6.44 X 5.35 in.	163.6 X 135.9 mm	19097 St.
	Front/Back Fabric Placem	
	Stitch	
	esr Cover Stitch	





*Fabric Required



12829-02 FSA Holiday Wreath 2 Section

Size Inches: Size mm: Stitch Count: 6.44 X 5.35 in. 163.6 X 135.9 mm 10923 St.

1. Fiber Form/Front/Back Fabric Placement Stitch ... 5531
2. Cut Line and Tackdown ... 5531
3. Outer Cover Stitch ... 5531
4. Cream Linework ... 0670
5. Green Stars ... 5531
6. Metallic Inner Cover Stitch ... 7005

*Fabric Required



12829-03 FSA Holiday Wreath 3 Section

Size Inches: Size mm: Stitch Count: 6.44 X 5.35 in. 163.6 X 135.9 mm 11778 St.

1. Fiber Form/Front/Back Fabric Placement Stitch ... 2113
2. Cut Line and Tackdown ... 2113
3. Outer Cover Stitch ... 2113
4. Cream Linework ... 0670
5. Red Linework ... 2113
6. Metallic Inner Cover Stitch ... 7013





*Fabric Required



12829-04 FSA Holiday Wreath 4 Section

Size	Inches:	5	Size mı	m:	Stitch Count:
6.44	X 5.35 in.	163.6	X 135	5.9 mm	15884 St.
1.	Fiber Form/F	ront/Bac	k Fabri	c Placeme	ent Stitch 5643
2.	Cut Line and	l Tackdov	vn		5643
3.	Outer Cover	Stitch			5643
4.	Green Linew	ork			5643
5 .	Cream Detai	I			0670
6.	Metallic Inne	r Cover S	Stitch		7005

*Fabric Required



12829-05 FSA Holiday Wreath 5 Section

			Stitch Count: 9 mm 13510 St.
2. Cut Liu3. Outer4. Red L5. Cream	ne and Tacko Cover Stitch inework n Stars	down	Placement Stitch 1805





*Fabric Required



12829-06 FSA Holiday Wreath 6 Section

Size Inches: Size mm: Stitch Count: 6.44 X 5.35 in. 163.6 X 135.9 mm 18882 St.

1. Fiber Form/Front/Back Fabric Placement Stitch ... 2113
2. Cut Line and Tackdown ... 2113
3. Outer Cover Stitch ... 2113
4. Red Linework ... 2113
5. Cream Linework ... 0670
6. Metallic Inner Cover Stitch ... 7013

*Fabric Required



12829-07 FSA Holiday Wreath 7 Section

Size Inches: Size mm: Stitch Count: 6.44 X 5.35 in. 163.6 X 135.9 mm 10646 St.

1. Fiber Form/Front/Back Fabric Placement Stitch ... 5531
2. Cut Line and Tackdown ... 5531
3. Outer Cover Stitch ... 5531
4. Green Linework ... 5531
5. Cream Linework ... 0670
6. Metallic Inner Cover Stitch ... 7005





*Fabric Required



12829-08 FSA Holiday Wreath 8 Section

Size	Inches:	S	ize mm:	Stitch Count:
6.44	X 5.35 in.	163.6	X 135.9 m	m 16132 St.
1.	Fiber Form/F	ront/Bacl	k Fabric Plac	ement Stitch 1805
2.	Cut Line and	Tackdow	'n	1805
3 .	Outer Cover	Stitch		1805
4.	Red Linewor	k		1805
5 .	Cream Stars			0670
6.	Metallic Inne	r Cover S	titch	7013

12829-09 FSL Mini Holiday Lace 1 Size Inches: Size mm: Stitch Count:



1.	Blue Lace	7029
2.	White Lace	0010

74.9 X 65.0 mm

2.95 X 2.56 in.

9393 St.








12829-10 FSL Mini Holiday Lace 2

Size Inches:	Size mm:	Stitch Count:
2.48 X 2.30 in.	63.0 X 58.4 mm	8941 St.
1. Blue Lace		7029
2. White Lace		0010

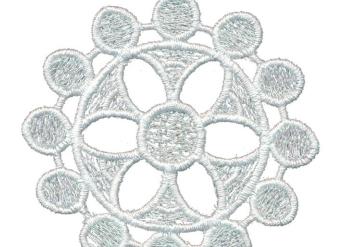


12829-11 FSL Mini Holiday Lace 3

Size Inches:	Size mm:	Stitch Count:
2.23 X 2.22 in.	56.6 X 56.4 mm	7462 St.
1. Blue Lace		7029
2. White Lace.		0010





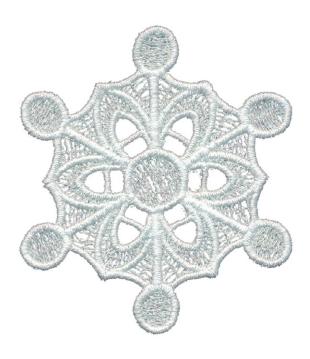

12829-12 FSL Mini Holiday Lace 4

Size Inches:	Size mm:	Stitch Count:
2.55 X 2.27 in.	64.8 X 57.7 mm	8453 St.
1. Blue Lace		7029
2. White Lace		0010

PROJECT SUPPLIES



Stabilizer

- OESD AguaMesh Plus
- Fiber Form 1 package (18" x 22")

Supplies

- Light Red Fabric 4 pieces 7" x 8" (¼ yd)
- Dark Red Fabric 4 pieces 7" x 8" (¼ yd)
- Light Green Fabric 4 pieces 7" x 8" (¼ yd)
- Dark Green Fabric 4 pieces 7" x 8" (¼ yd)
- Isacord/Yenmet thread in the color used for the the freestanding applique and lace designs
- Bobbin with matching Isacord/Yenmet thread
- OESD Expert Embroidery Tape WashAway (optional)
- OESD Perfect Embroidery Press Cloth or Ironing Board Cover
- Monofilament Thread

Project Summary

This wreath can be sewn in any variation of 8 sections. The wreath shown requires the following designs sewn.


- Requires 1 FSA Holiday Wreath 1 Section- 12829-01
- Requires 1 FSA Holiday Wreath 2 Section- 12829-02
- Requires 1 FSA Holiday Wreath 3 Section- 12829-03
- Requires 1 FSA Holiday Wreath 4 Section- 12829-04
- Requires 1 FSA Holiday Wreath 5 Section- 12829-05
- Requires 1 FSA Holiday Wreath 6 Section- 12829-06
- Requires 1 FSA Holiday Wreath 7 Section- 12829-07
- Requires 1 FSA Holiday Wreath 8 Section- 12829-08
- Requires 2 FSL Mini Holiday Lace 1- 12829-09
- Requires 2 FSL Mini Holiday Lace 2- 12829-10
- Requires 2 FSL Mini Holiday Lace 3- 12829-11
- Requires 2 FSL Mini Holiday Lace 4- 12829-12


Final Dimensions: Approx. 17 ¾" x 17 ¾"




ALTERNATE WREATHS



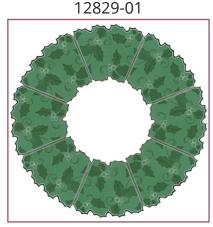

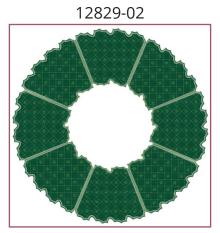


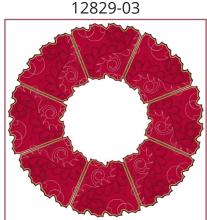



Requires 8 Designs

Requires 8 Designs

Requires 8 Designs

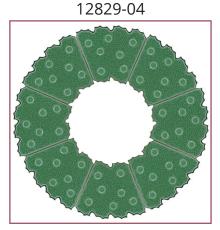

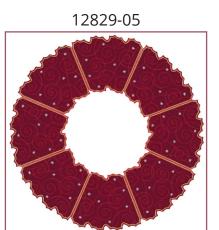


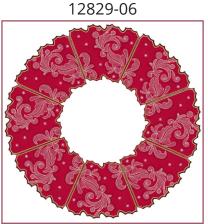


Requires 8 Designs

Requires 8 Designs

Requires 8 Designs

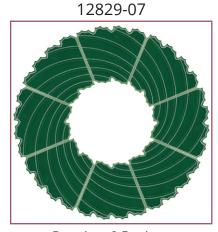

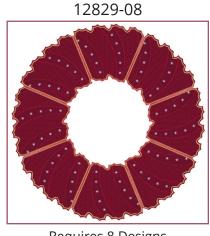


Requires 8 Designs

Requires 8 Designs




STEP 1

• Using the template provided, cut out the 8 Fiber Form pieces needed to create the wreath.

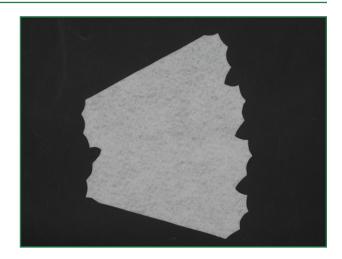


STEP 2

 Hoop 1 layer of AquaMesh Plus with the paper side up. Score and remove the paper from the hoop.

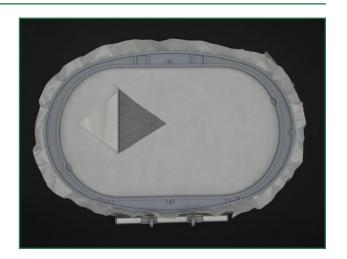

STEP 3


 Sew Color 1 Fiber Form/Front and Back Fabric Placement Stitch.

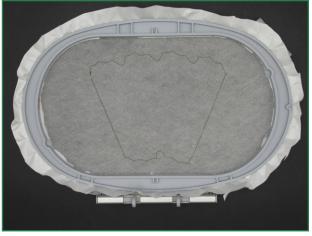




STEP 4

• Place the Fiber Form over the placement stitch.

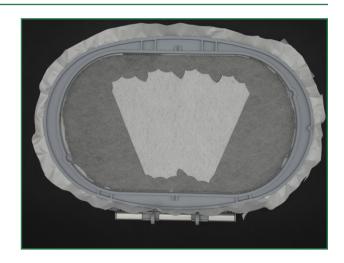


STEP 5

 Place the Front fabric on top of the Fiber Form covering it completely.

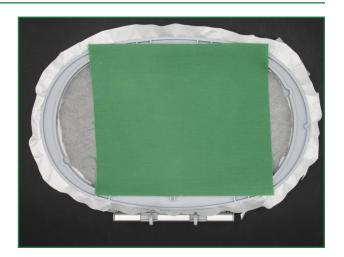

STEP 6


- Remove the hoop from the machine and turn it over.
- Place the back fabric, right side up, over the placement stitch, covering it entirely.
- Hold in place with either temporary spray adhesive or with OESD Expert Embroidery WashAway Tape.

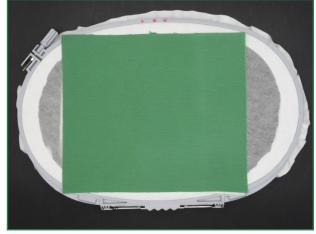




STEP 7

• Return the hoop to the machine and stitch Color 2 Cut Line and Tackdown.

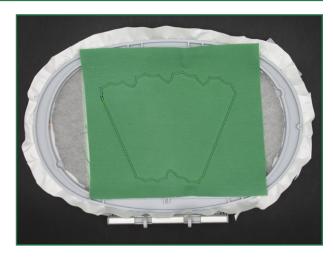

STEP 8

 Trim fabric along the Cut Line on the front side of the hoop, flip the hoop over and repeat for the back side of the hoop.

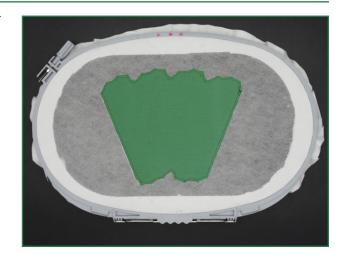

STEP 9


- **Note**: Match bobbin to top thread.
- Return the hoop to the machine and stitch Color 3, Outer Cover Stitch.





STEP 10

 Sew Colors 4 and 5 which is the interior detail, changing colors as indicated. Finishing with color 6, Inner Cover Stitch.

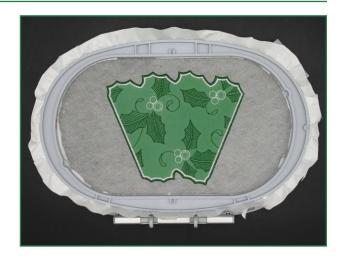

STEP 11

• Once the design is finished sewing, remove the design from the hoop and trim away the extra AquaMesh Plus ¼" from the design. Wash away the remaining stabilizer and let dry.






ASSEMBLY



STEP 1

- Determine the right and wrong side of the freestanding applique. Arrange pieces in the desired order.
- Place a piece of WashAway tape under the edge of the connecting part of the design. Finger press to secure.

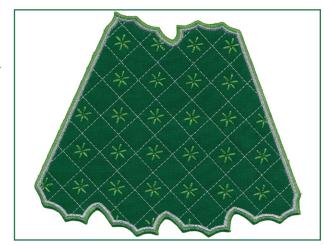

STEP 2

 Connect an adjacent piece by lining up the sides of the connecting parts of the design. Finger press to secure to the tape.



STEP 3

 Continue assembling with tape until all pieces are placed or stitch the pieces together in small assemblies before joining all together.




ASSEMBLY



STEP 4

- Set the machine to a multi-step zig-zag stitch.
 This is often called a serpentine stitch, where the
 needle drops into the fabric multiple times while
 traveling from side to side. Set the stitch width to
 3.5 mm. Set the stitch length to 2.5 mm.
- Install an open toe or clear foot to be able to see the stitches as they are sewn.

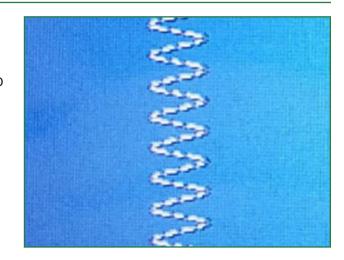


STEP 5

- Thread your machine with monofilament (invisible) thread in the needle and embroidery bobbin thread in the bobbin.
- Stitch the parts together right side up.



STEP 6

- Once the connections have been sewn, trim excess threads on top and bottom.
- For quick removal of the tape, dip a cotton swab in water and apply to the back of the stitches.
 Simply lift the tape away from the design parts.
 There is no need to rinse the entire wreath.
- Lay flat to allow any damp parts to dry.

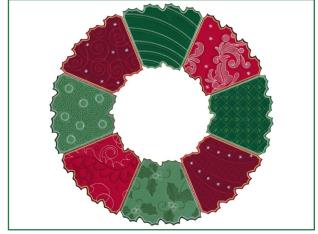

ASSEMBLY



STEP 7

• Use a bartack stitch on your sewing machine to attach the Mini Lace Designs.



INSTRUCTIONS



General Freestanding Lace Guidelines

Supplies:

Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle. **Needles:**
- Use an Organ 80/12 Titanium needle for extended needle life. **Stabilizer:**
- Use OESD AquaMesh stabilizer.

Handy Hints:

For Stiffer Lace:

- DO NOT rinse away all of the stabilizer for a "stiffer" lace.
 Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

For Very Soft Lace:

 Cut away excess stabilizer. Remove remaining stabilizer by rinsing under warm running water until all traces of the stabilizer are gone. NOTE: If lace should become too limp to work with, dissolve stabilizer scraps in warm water and apply to the lace.

Drying Lace:

 The lace looks best when left to dry completely. Lay lace piece with right side down to dry. This will minimize the tendency for the lace to curl. Be sure to flatten the piece out entirely and allow ample time to dry.

General Instructions

- 1. Hoop two layers of OESD AquaMesh Stabilizer.
- Attach the hoop to the machine and select the design of your choice.
- 3. Stitch the design.
- 4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
- 5. Rinse away remaining stabilizer and allow it to dry.

Handy Hints:

For 3D Lace Projects:

- If item becomes too limp to work with, iron the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction.
- A pair of tweezers, hemostats, stiletto or a tiny crochet hook can be extremely helpful when inserting the buttonettes into the eyelets. (Please see **Diagram 1** for explanation of "buttonette" and "eyelet".)
- Insert the tip of the alligator clamps, tweezers, hemostats or crochet hook into the eyelet, grasp the buttonette and pull through the eyelet. Or a stiletto could be used to push the buttonette through the eyelet.

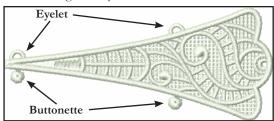


Diagram 1

APPLIQUE PATTERNS



