

#12842

- Project instructions included
- Fits hoop sizes 5" x 7" and larger



**9**  
DESIGNS

# Freestanding Basket For All Seasons

# THREAD LIST




## Isacord Thread Colors

- 0101 Eggshell
- 0552 Flax
- 0781 Candlewick
- 1123 Caramel Cream
- 1133 Peru
- 1430 Melon
- 2550 Soft Pink
- 3650 Ice Cap
- 6141 Spring Green

## DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

\*Fabric Required

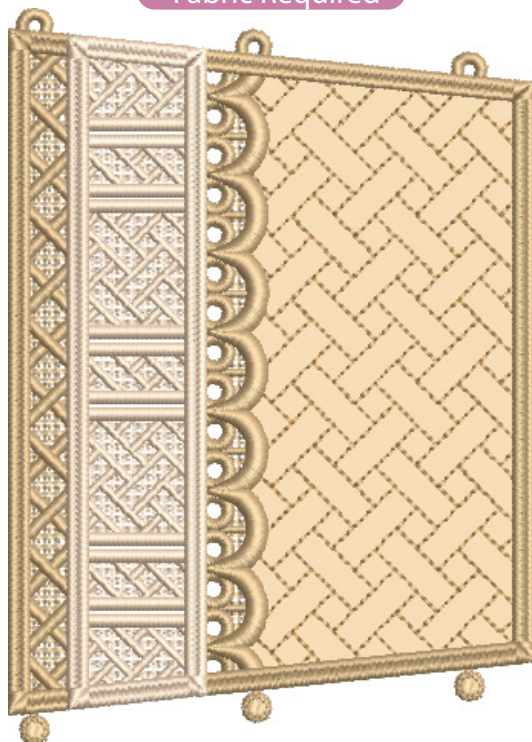


### 12842-01 Basket Side 1 FSA

Size Inches:                      Size mm:                      Stitch Count:  
**5.61 X 4.01 in. 142.5 X 101.9 mm 31608 St.**

- 1. Tan Fabric Placement..... 1123
- 2. Cut Line and Tackdown..... 1123
- 3. Brown Cover Stitch and Lace Detail..... 1123
- 4. Tan Lace Detail..... 0781

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

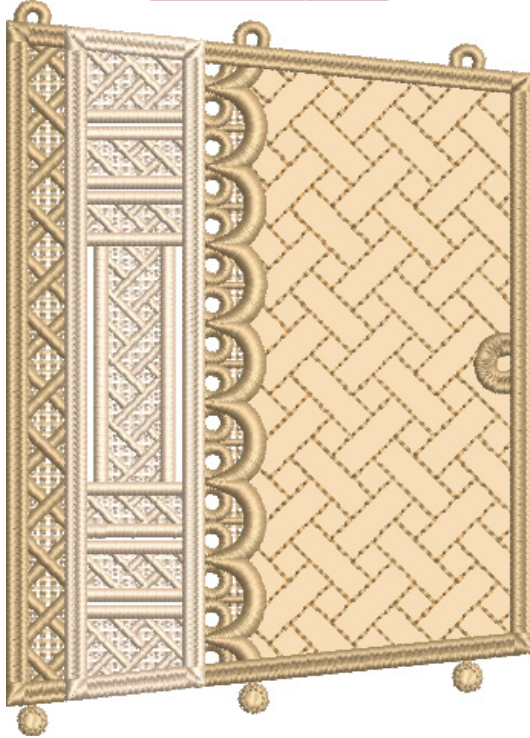


## 12842-02 Basket Side 2 FSA

Size Inches:                      Size mm:                      Stitch Count:  
**5.61 X 4.01 in. 142.5 X 101.9 mm 31150 St.**

- 1. Tan Fabric Placement Stitch..... 1123
- 2. Cut Line and Tackdown ..... 1123
- 3. Brown Cover Stitch and Lace Detail..... 1123
- 4. Tan Lace Detail..... 0781

**\*Fabric Required**

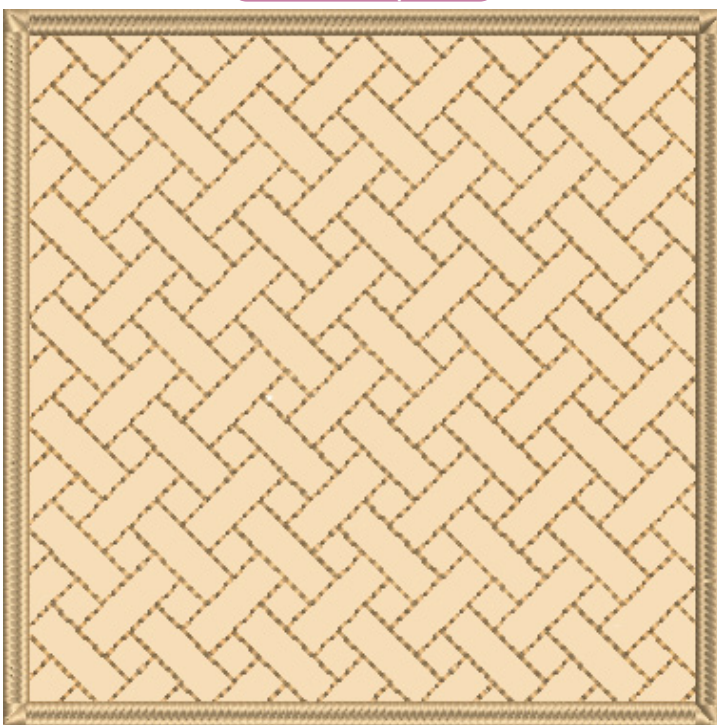


## 12842-03 Basket Floor FSA

Size Inches:                      Size mm:                      Stitch Count:  
**4.42 X 4.42 in. 112.3 X 112.3 mm 11254 St.**

- 1. Tan Fabric Placement Stitch..... 1123
- 2. Cut Line and Tackdown ..... 1123
- 3. Cover Stitch and Detail..... 1123


Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

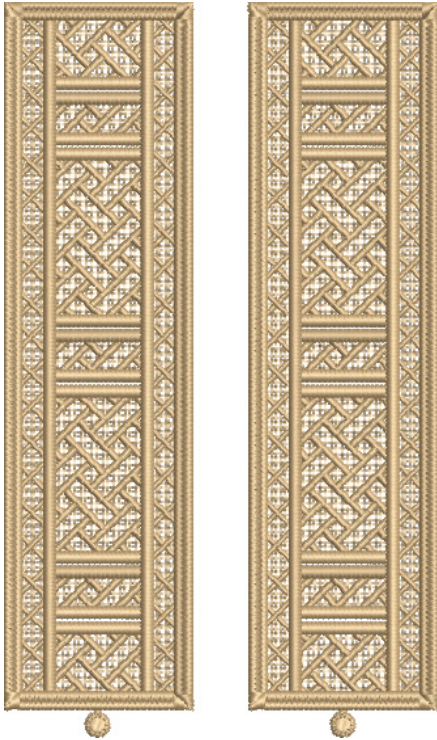

### 12842-04 Basket Handle Side Parts FSL

Size Inches:	Size mm:	Stitch Count:
<b>6.59 X 3.89 in.</b>	<b>167.4 X 98.8 mm</b>	<b>48160 St.</b>

■ 1. Single Color Design.....1123

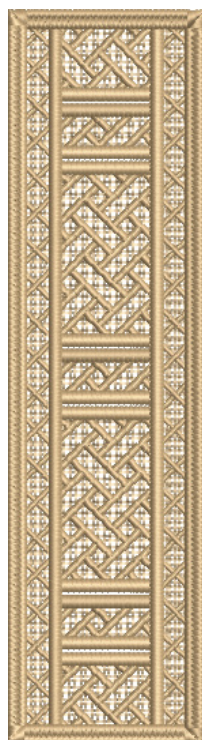

### 12842-05 Basket Handle Top Part FSL

Size Inches:	Size mm:	Stitch Count:
<b>6.34 X 1.70 in.</b>	<b>161.0 X 43.2 mm</b>	<b>23994 St.</b>

■ 1. Single Color Design.....1123

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**



**12842-06 Spring Basket Accent 1 FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**2.79 X 2.60 in.    70.9 X 66.0 mm    7291 St.**

- 1. Pink Fabric Placement Stitch ..... 6141
- 2. Cut Line and Tackdown ..... 6141
- 3. Leaves ..... 6141
- 4. Flower Cover Stitch ..... 2550
- 5. White Stamen ..... 0101

**\*Fabric Required**



**12842-07 Spring Basket Accent 2 FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**3.69 X 2.59 in.    93.7 X 65.8 mm    10611 St.**

- 1. Pink Fabric Placement Stitch ..... 6141
- 2. Cut Line and Tackdown ..... 6141
- 3. Leaves ..... 6141
- 4. Flower Cover Stitch ..... 2550
- 5. White Stamens ..... 0101

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**



### 12842-08 Summer Basket Accent 1 FSA

Size Inches:                      Size mm:                      Stitch Count:  
**3.57 X 2.59 in.    90.7 X 65.8 mm    5082 St.**

- 1. Aqua Fabric Placement Stitch ..... 0552
- 2. Cut Line and Tackdown ..... 0552
- 3. Tan Cover Stitch ..... 0552

**\*Fabric Required**



### 12842-09 Summer Basket Accent 2 FSA

Size Inches:                      Size mm:                      Stitch Count:  
**2.91 X 2.58 in.    73.9 X 65.5 mm    5837 St.**

- 1. Yellow Fabric Placement Stitch ..... 0552
- 2. Cut Line and Tackdown ..... 0552
- 3. Tan Cover Stitch ..... 0552

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**



**12842-10 Fall Basket Accent 1 FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**3.23 X 2.90 in.    82.0 X 73.7 mm    8121 St.**

- 1. Rust Fabric Placement Stitch ..... 1133
- 2. Cut Line and Tackdown ..... 1133
- 3. Tan Lace Detail..... 1133
- 4. Red Cover Stitch ..... 1430

**\*Fabric Required**



**12842-11 Fall Basket Accent 2 FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**2.63 X 2.59 in.    66.8 X 65.8 mm    8418 St.**

- 1. Brown Fabric Placement Stitch ..... 1430
- 2. Cut Line and Tackdown ..... 1430
- 3. Red Lace Detail..... 1430
- 4. Tan Cover Stitch ..... 1133


Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

### 12842-12 Winter Basket Accent 1 FSA

Size Inches:                      Size mm:                      Stitch Count:  
**3.45 X 3.17 in.    87.6 X 80.5 mm    12268 St.**

- 1. Blue Fabric Placement Stitch ..... 3650
- 2. Cut Line and Tackdown ..... 3650
- 3. Light Blue Cover Stitch ..... 3650

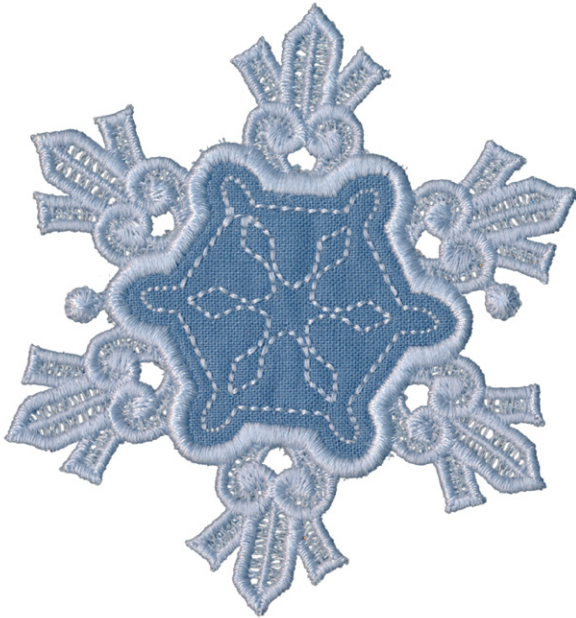

### 12842-13 Winter Basket Accent 2 FSL

Size Inches:                      Size mm:                      Stitch Count:  
**3.47 X 2.58 in.    88.1 X 65.5 mm    11649 St.**

- 1. Single Color Design..... 3650





# COLLECTION SUPPLIES



## Stabilizer

- AquaMesh WashAway
- BadgeMaster AquaFilm


## Supplies

- StabilStick CutAway
- Tweezers, Alligator Clamps
- Temporary Spray Adhesive
- Expert Embroidery Tape TearAway

## Summary


- Completed Assembled Height- 8" tall
- Thread usage (including bobbin)- 1 spool 1123, 1 spool 0781
- Fabric (Basket)- ¼ yd
- Cut (8) 5.5" x 3.5" pc of your basket color for sides. We used a tan fabric.
- Cut (2) 5" x 5" pcs of your basket color for bottom. We used a tan fabric.
- Cut (8) 5.5" x 3.5" pc of StabilStick CutAway
- Cut (2) 5" x 5" pc of StabilStick CutAway
- 5/8" Ribbon- 20" for Handle, 24" for Basket

12842-01

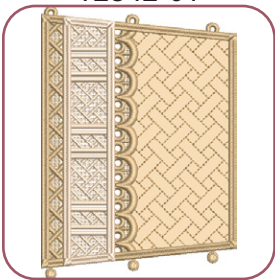


Requires 2 Designs

12842-02

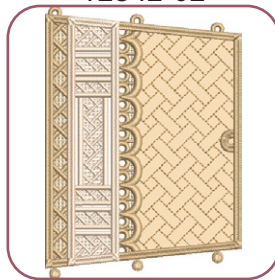

Requires 2 Designs

12842-03

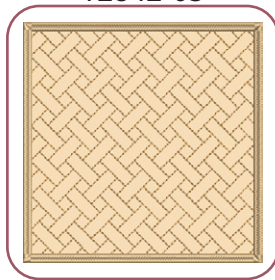


Requires 1 Design

12842-04



Requires 1 Design

12842-05

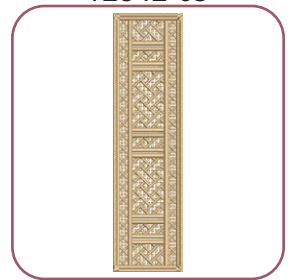

Requires 1 Design

# BASKET




## STEP 1

- Prep 2 pieces of your applique fabric with one layer of StabilStick CutAway on each peice.




## STEP 2

- **Note - Match bobbin to top thread.**
- Hoop one sheet of AquaMesh WashAway and one sheet of BadgeMaster AquaFilm (BadgeMaster on top).

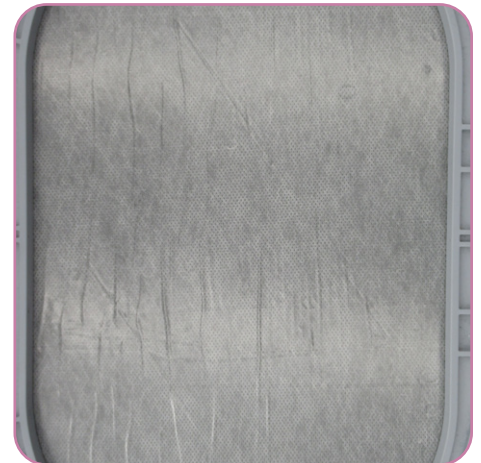

## STEP 3

- Sew machine step #1, Tan Fabric Placement Stitch.

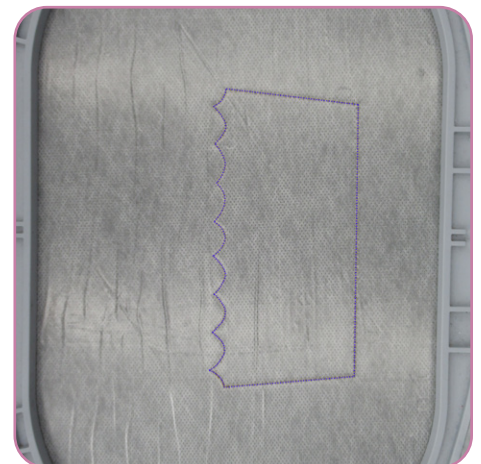


# BASKET




## STEP 4

- With right side up, place front applique piece directly over the placement stitch, covering it entirely. Tape in place with Expert Embroidery Tape TearAway.

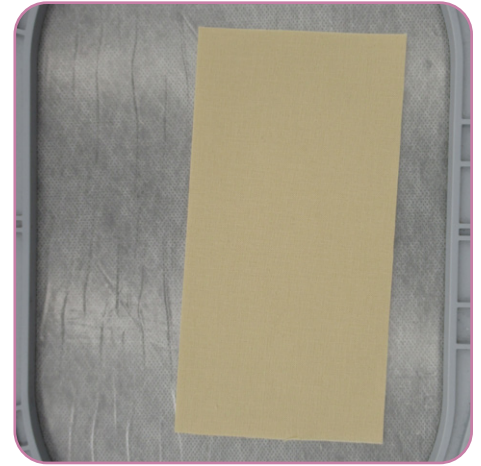


## STEP 5

- Flip the hoop over and repeat step #4 for the back-applique piece.

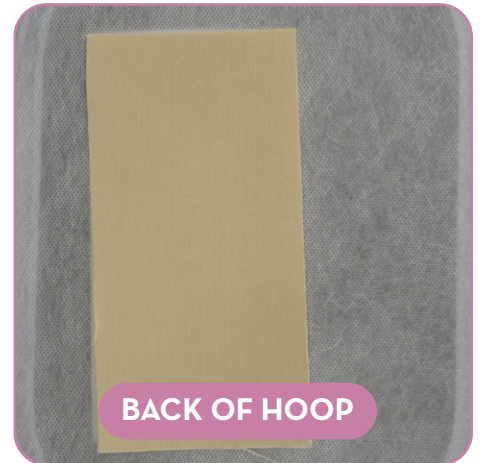

## STEP 6

- Sew machine step #2, Cut Line and Tackdown.

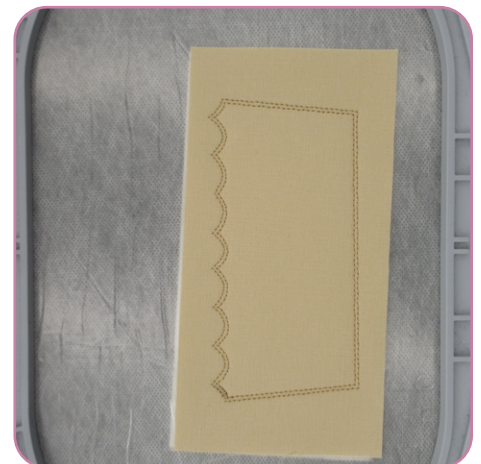


# BASKET




## STEP 7

- Remove the hoop from the machine, **DO NOT** remove the design from the hoop. Trim along the cut line of the front applique.

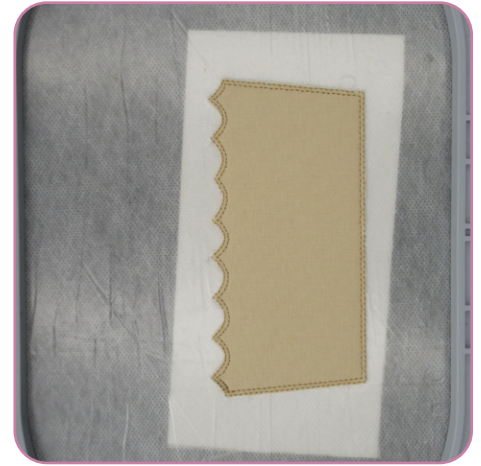

## STEP 8

- Flip the hoop over and repeat step #7 on the back-applique.

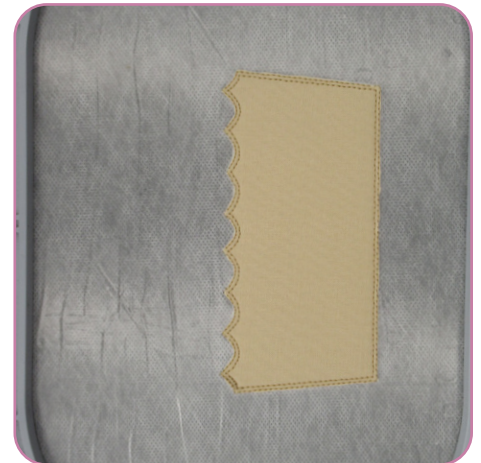

## STEP 9

- Return the hoop to the machine and sew the remaining machine steps to complete the design.



# BASKET



## STEP 10

- Remove the design from the hoop and cut away the extra stabilizer ¼" away from the design.



## STEP 11

- Rinse away the remaining stabilizer and lay face down to dry.



# ACCENT PIECES



## STEP 1

- **Note - Match bobbin to top thread.**
- Hoop one sheet of AquaMesh WashAway and one sheet of BadgeMaster AquaFilm (BadgeMaster on top).



## STEP 2

- Prep 2 pieces of your applique fabric with one layer of StabilStick CutAway.



## STEP 3

- Sew machine step #1, Placement Stitch.




# ACCENT PIECES



## STEP 4

- Lightly spray the wrong side of the front applique piece with temporary spray adhesive. Place front applique piece directly over the placement stitch covering it entirely.

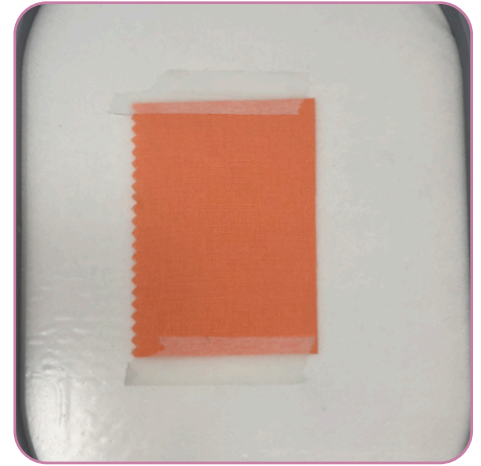

## STEP 5

- Flip the hoop over and repeat for the back-applique piece.



## STEP 6

- Sew machine step #2, Cut Line and Tackdown.



# ACCENT PIECES



## STEP 7

- Remove the hoop from the machine, **DO NOT** remove the design from the hoop. Trim along the cut line of the front applique. Flip the hoop over and repeat on the back-applique.




## STEP 8

- Return the hoop to the machine and sew the remaining machine steps to complete the design.



## STEP 9

- Remove the design from the hoop and cut away the extra stabilizer ¼" away from the design. Rinse away the remaining stabilizer and lay face down to dry.

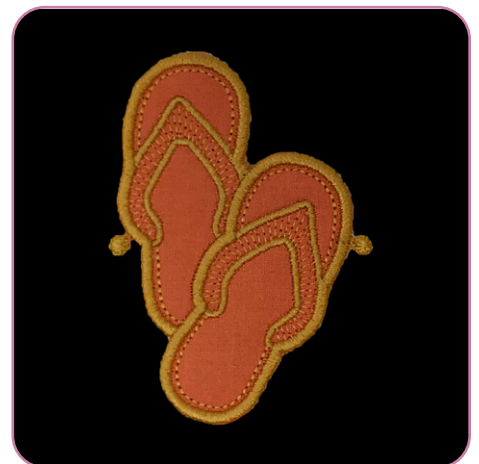




# ASSEMBLY




## STEP 1

- Start assembly by laying out the basket pieces as shown. Basket sides face up and the Basket Floor lying face down. Make sure the matching sides are opposite of each other.

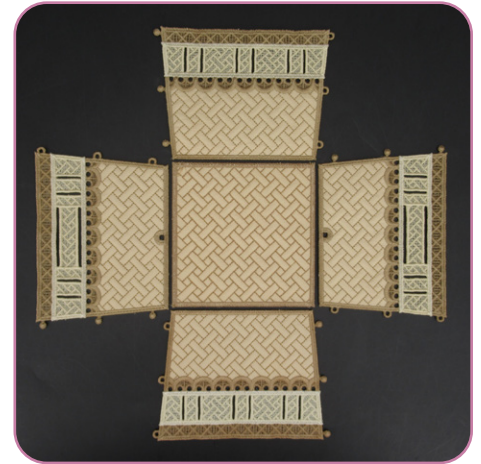


## STEP 2

- Using an edge stitch foot on your sewing machine, sew the bottom of each side piece to the basket floor using a zig-zag stitch.

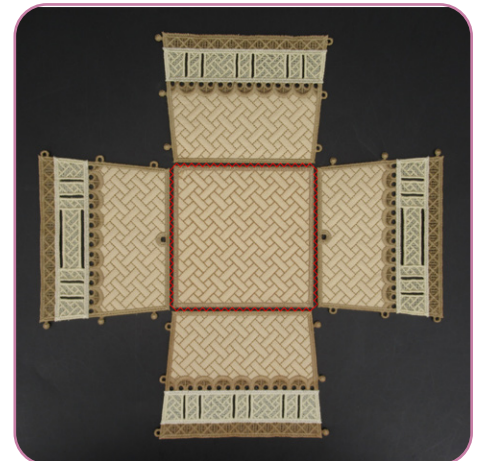

## STEP 3

- Once each side piece is sewn to the basket floor, connect the 12 buttonettes to their corresponding eyelets.

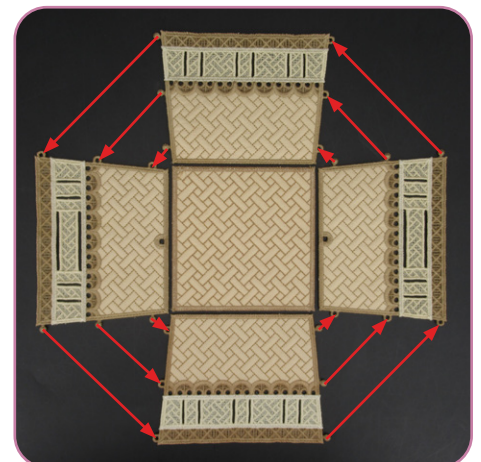

# ASSEMBLY



## STEP 4

- To assemble the Handle, arrange the 3 handle pieces as shown with the 2 buttonettes on the ends.
- Zig-zag together as shown.



## STEP 5

- After stitching the 3 handle pieces together, weave the 20" ribbon through the handle openings as shown.
- For a stiffer handle don't rinse away all the BadgeMaster, or spray the handle with some starch and let dry, before assembly.
- **\*Tip - cut the ends of your ribbon with pinking shears to reduce fraying. We left ends unattached to the handle so that you can easily switch out ribbon for the season.**



# ASSEMBLY



## STEP 6

- Weave the 24" ribbon through the vertical openings along the basket brim, trim ends as shown in picture. They will be hidden by handle in later step.



## STEP 7

- With the nicer side facing outwards, weave the handle through the 2 horizontal openings on one of the basket sides with an eyelet.
- Connect the button and curl the handle over and repeat on the other side. Your ribbon ends should now be hidden under the handle.



# ASSEMBLY



## STEP 8

- Each freestanding accent piece in the collection has 2 buttonettes.
- To attach these accent pieces, use tweezers or alligator clamps and pull one of the buttonettes through the inside of the basket as shown. Repeat this process for the other buttonette.



## General Freestanding Lace Guidelines

### Supplies:

#### Embroidery Thread:

- Use the same embroidery thread in the bobbin as the needle.

#### Needles:

- Use an Organ 80/12 Titanium needle for extended needle life.

#### Stabilizer:

- Use OESD AquaMesh stabilizer.

### Handy Hints:

#### For Stiffer Lace:

- DO NOT rinse away all of the stabilizer for a “stiffer” lace. Note that the thread may appear a shade darker if stabilizer is not removed completely.
- If you happen to wash too much out, easily re-stiffen by diluting some stabilizer scraps in water and dipping the item in the solution.

#### For Very Soft Lace:

- Cut away excess stabilizer. Remove remaining stabilizer by rinsing under warm running water until all traces of the stabilizer are gone. **NOTE:** If lace should become too limp to work with, dissolve stabilizer scraps in warm water and apply to the lace.

#### Drying Lace:

- The lace looks best when left to dry completely. Lay lace piece with right side down to dry. This will minimize the tendency for the lace to curl. Be sure to flatten the piece out entirely and allow ample time to dry.

### General Instructions


1. Hoop two layers of OESD AquaMesh Stabilizer.
2. Attach the hoop to the machine and select the design of your choice.
3. Stitch the design.
4. Remove the hoop from the machine and the design from the hoop. Trim excess stabilizer from the design.
5. Rinse away remaining stabilizer and allow it to dry.

### Handy Hints:




#### For 3D Lace Projects:

- If item becomes too limp to work with, iron the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction.
- A pair of tweezers, hemostats, stiletto or a tiny crochet hook can be extremely helpful when inserting the buttonettes into the eyelets. (Please see **Diagram 1** for explanation of “buttonette” and “eyelet”.)
- Insert the tip of the alligator clamps, tweezers, hemostats or crochet hook into the eyelet, grasp the buttonette and pull through the eyelet. Or a stiletto could be used to push the buttonette through the eyelet.








Diagram 1

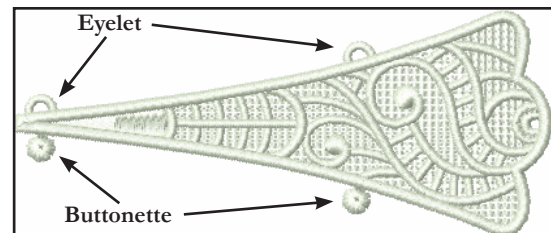




# APPLIQUE PATTERNS

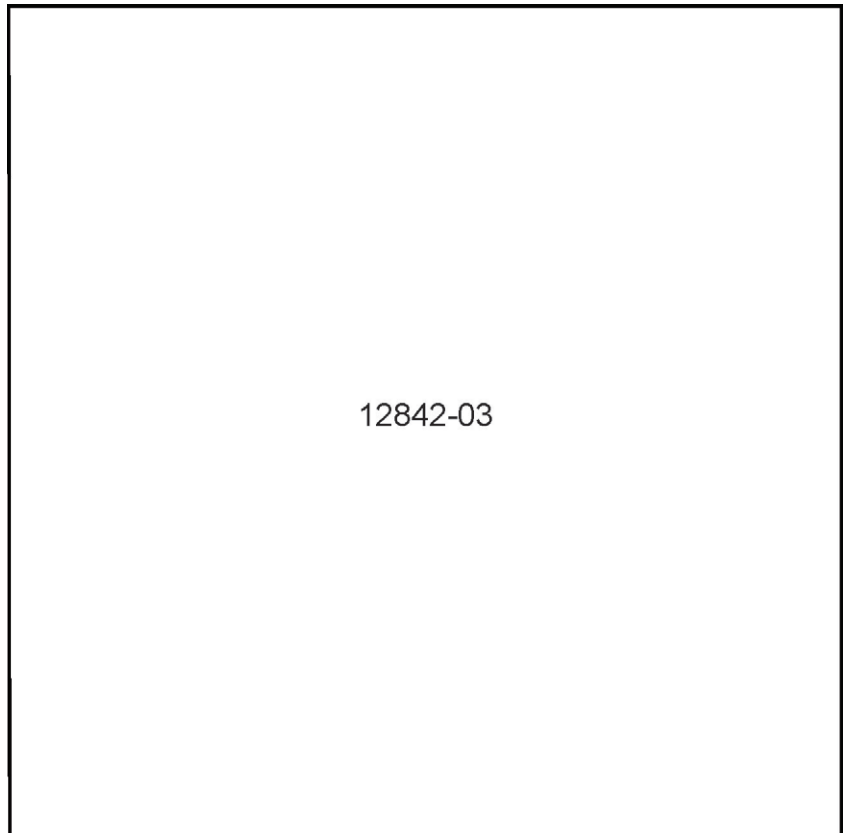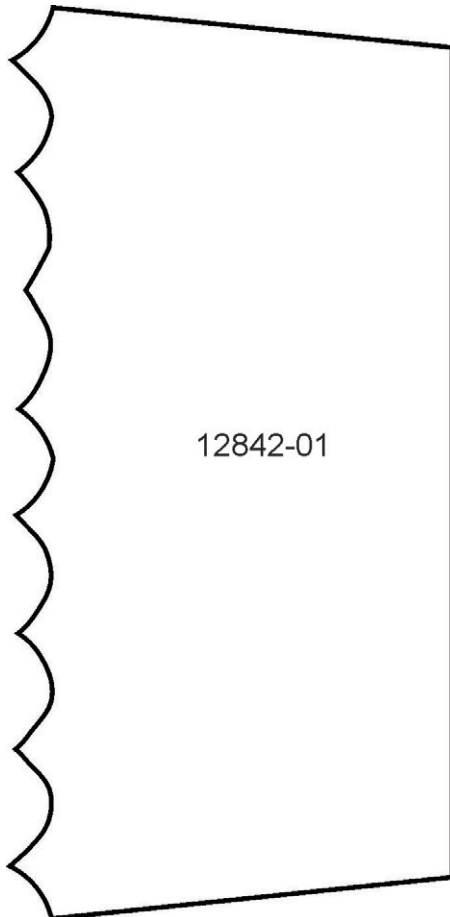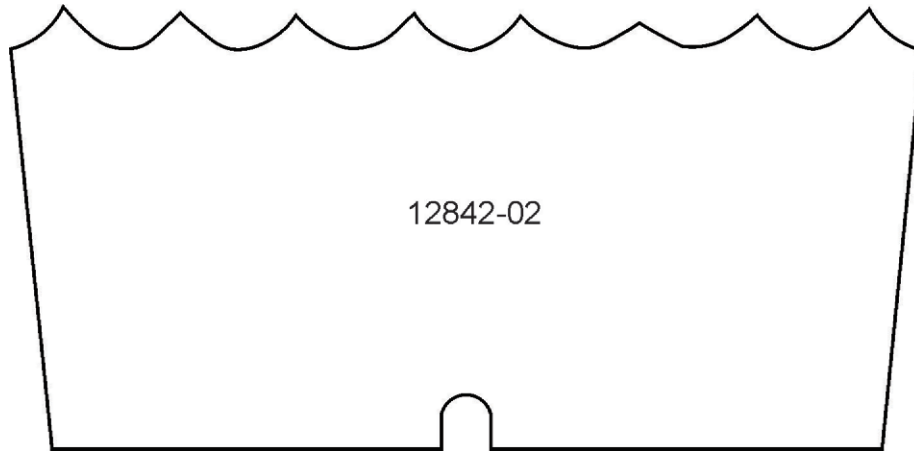

# APPLIQUE PATTERNS

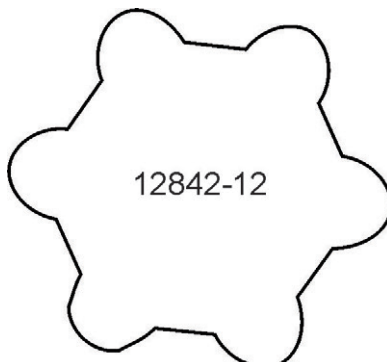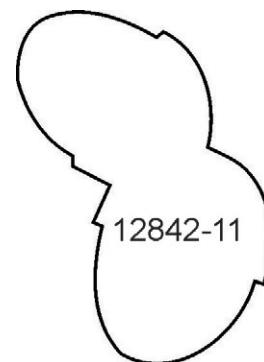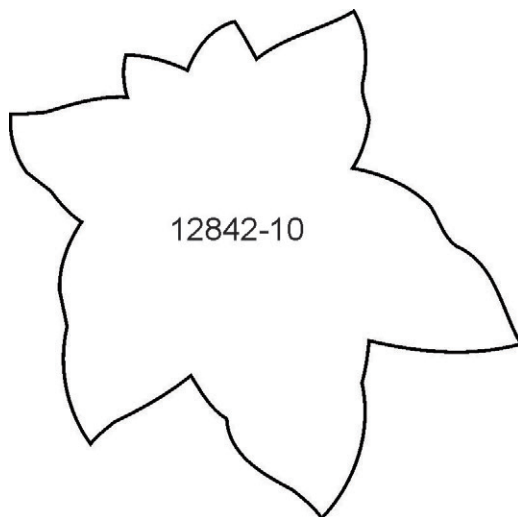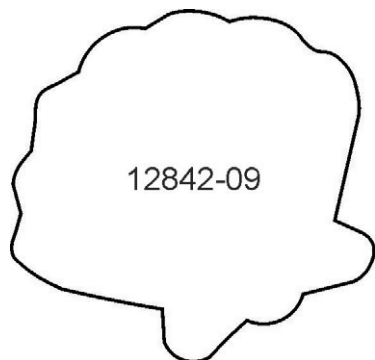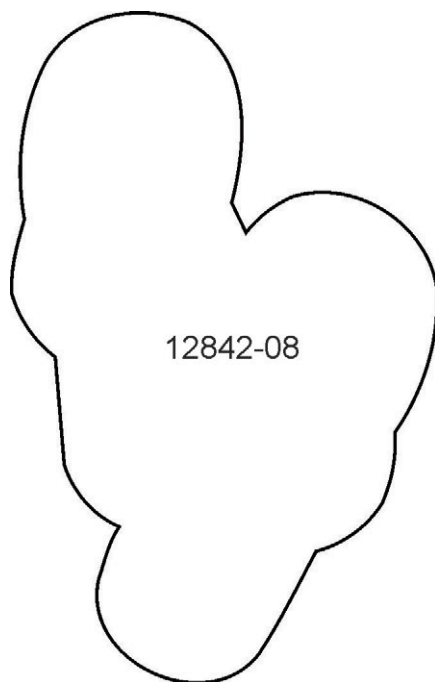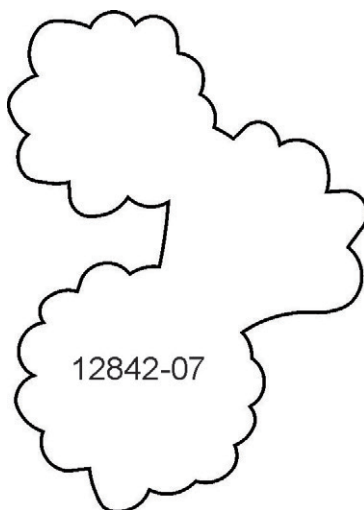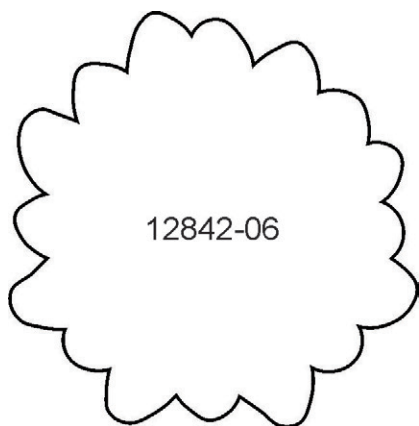

# MIRRORED PATTERNS

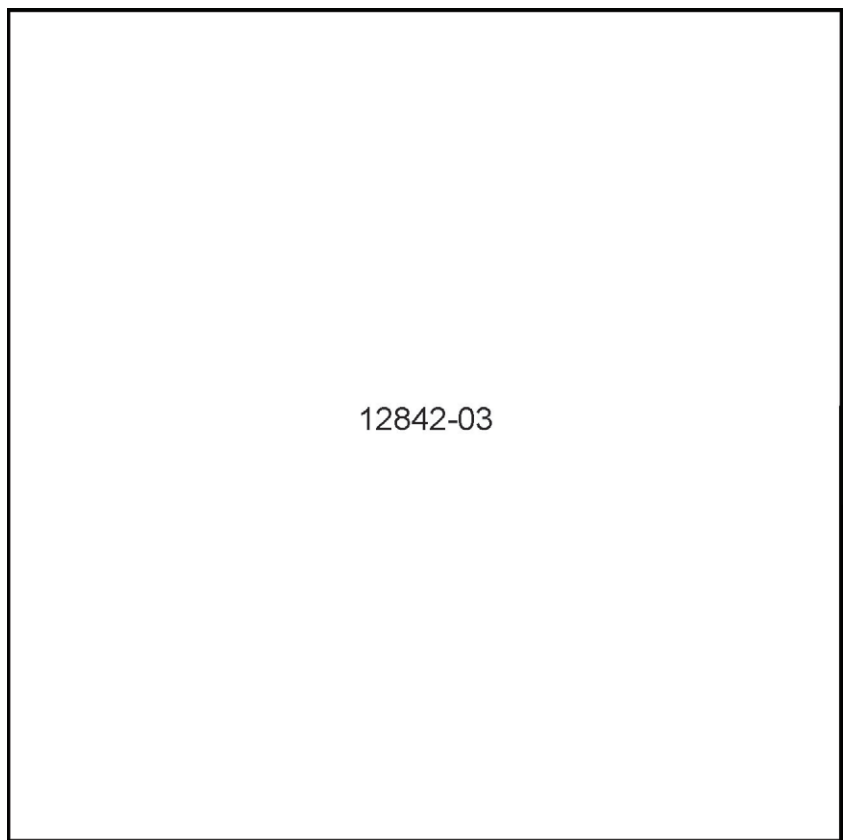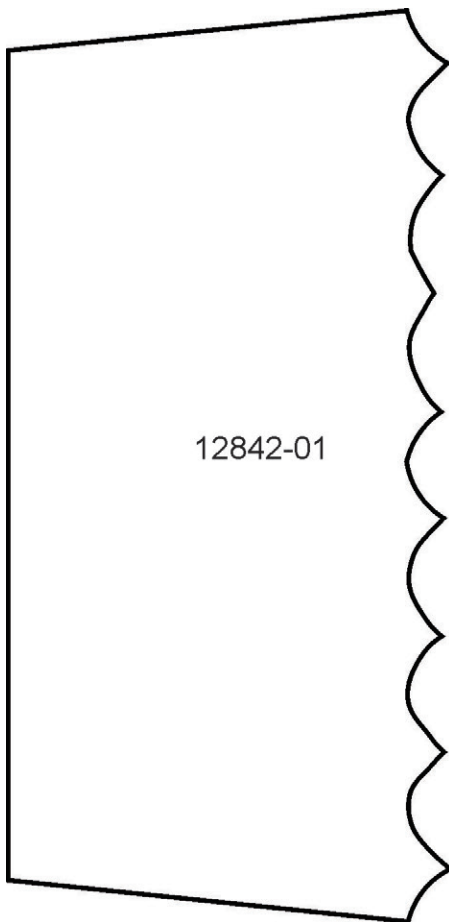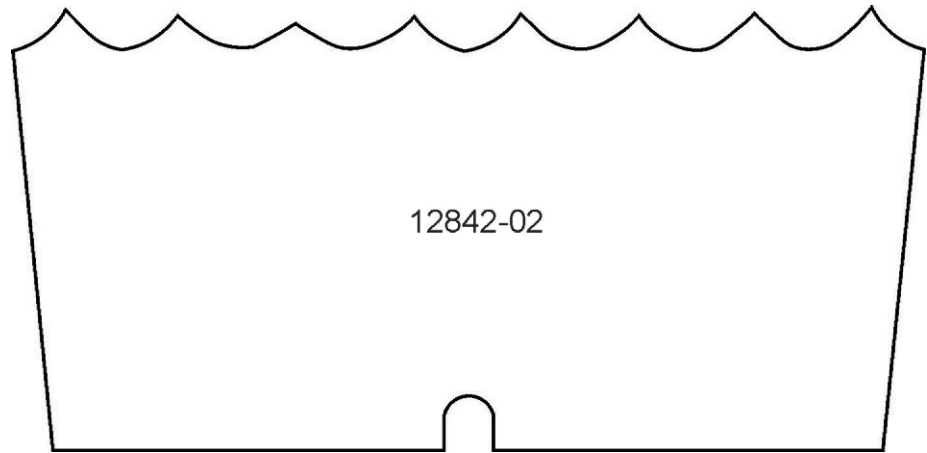



# MIRRORED PATTERNS

