

FREESTANDING ROCKING HORSE



1

Design

Fits hoop sizes 6" x 10" and larger

THREAD LIST



Isacord Thread Colors

0731 Applesauce
7012 (S4) 14 kt. Gold

DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required

12847-01 Horse Body FSA

Size Inches: Size mm: Stitch Count:
7.43 X 4.84 in. 188.7 X 122.9 mm 18021 St.

- 1. Red Fabric Placement Stitch 0731
- 2. Cut Line and Tackdown 0731
- 3. Brown Fabric Placement Stitch 0731
- 4. Cut Line and Tackdown 0731
- 5. Tan Fabric Placement Stitch 0731
- 6. Cut Line and Tackdown 0731
- 7. Metallic Gold Detail 7012
- 8. Cover Stitch and Lace 0731




Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12847-02 Horse Legs & Rocker FSA

Size Inches: Size mm: Stitch Count:
8.99 X 5.37 in. 228.3 X 136.4 mm 21937 St.

- 1. Tan Fabric Placement Stitch..... 0731
- 2. Cut Line and Tackdown 0731
- 3. Red Fabric Placement Stitch..... 0731
- 4. Cut Line and Tackdown 0731
- 5. Metallic Gold Detail 7012
- 6. Cover Stitch and Lace 0731

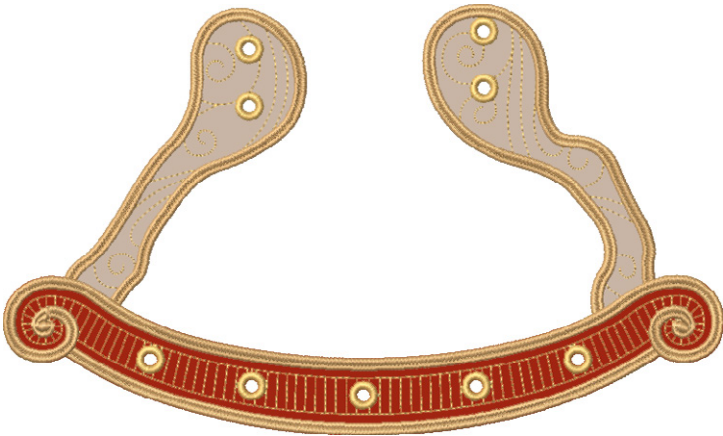

***Fabric Required**

12847-03 Platform FSA

Size Inches: Size mm: Stitch Count:
6.60 X 2.98 in. 167.6 X 75.7 mm 10767 St.

- 1. Brown Fabric Placement Stitch 0731
- 2. Cut Line and Tackdown 0731
- 3. Metallic Gold Detail 7012
- 4. Cover Stitch and Lace 0731



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12847-04 Platform For Plaque FSA

Size Inches: Size mm: Stitch Count:
6.60 X 2.98 in. 167.6 X 75.7 mm 11971 St.

- 1. Brown Fabric Placement Stitch 0731
- 2. Cut Line and Tackdown 0731
- 3. Metallic Gold Detail 7012
- 4. Cover Stitch and Lace 0731




***Fabric Required**

12847-05 Plaque FSA

Size Inches: Size mm: Stitch Count:
4.94 X 4.99 in. 125.5 X 126.7 mm 14721 St.

- 1. White Fabric Placement Stitch 0731
- 2. Cut Line and Tackdown 0731
- 3. Metallic Gold Detail 7012
- 4. Cover Stitch and Lace 0731


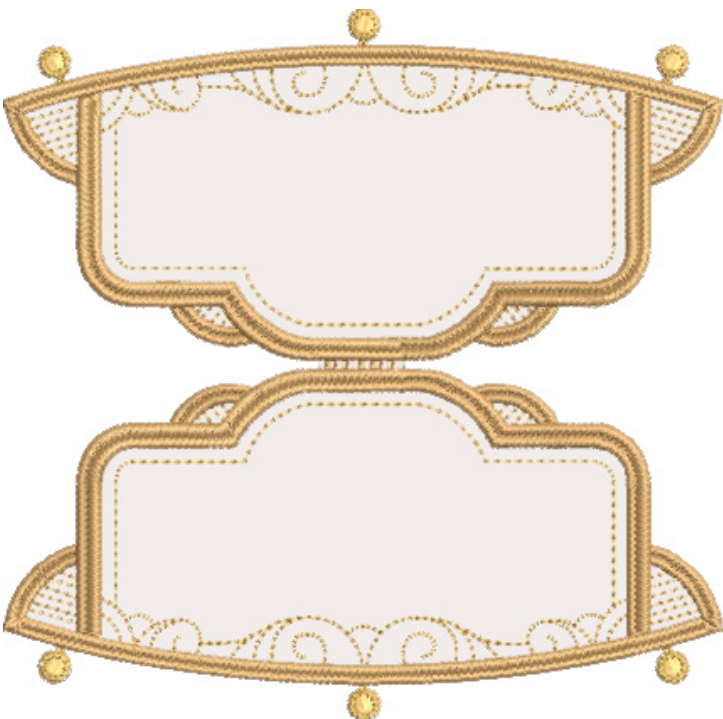


Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12847-06 Horse Leg Connectors FSA

Size Inches: Size mm: Stitch Count:
4.06 X 1.93 in. 103.1 X 49.0 mm 6955 St.

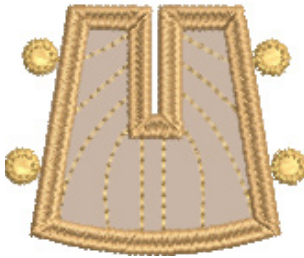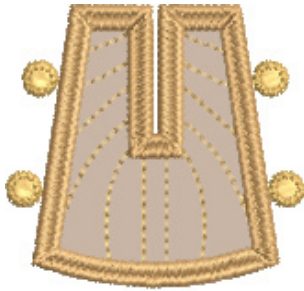

- 1. Tan Fabric Placement Stitch..... 0731
- 2. Cut Line and Tackdown 0731
- 3. Metallic Gold Detail 7012
- 4. Cover Stitch and Lace 0731

SUMMARY

OPTION 1



12847-01




Requires 1 Design

12847-02




Requires 2 Designs

12847-03

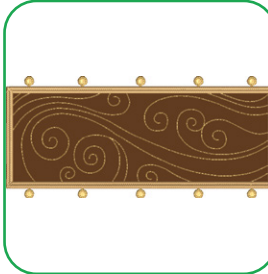

Requires 1 Design

12847-06

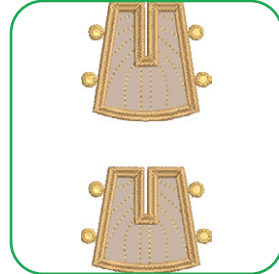

Requires 1 Design




Completed Assembled Height - 8" tall

SUMMARY

OPTION 2




12847-01

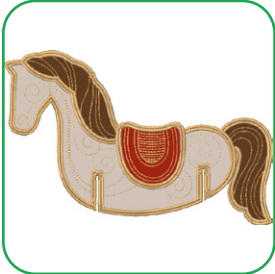


Requires 1 Design

12847-02

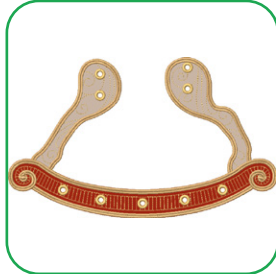


Requires 2 Designs

12847-04

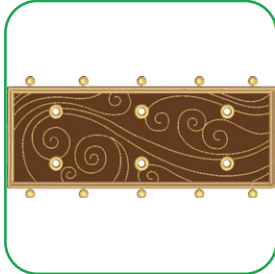


Requires 1 Design

12847-05

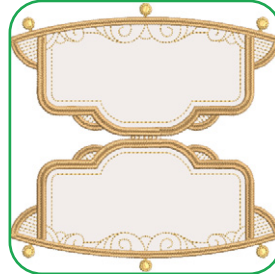

Requires 1 Design

12847-06

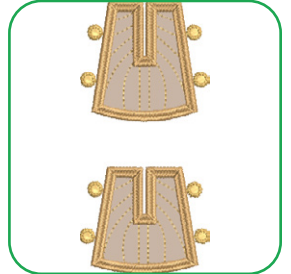

Requires 1 Design



Completed Assembled Height - 8" tall

COLLECTION SUPPLIES



Stabilizer

- AquaMesh WashAway
- BadgeMaster
- StabilStick CutAway (backing for applique fabrics)

Supplies

- OESD Perfect Punch Tool
- Alligator Clamps or Tweezers
- Temporary Spray Adhesive
- Expert Embroidery Tape TearAway (optional)
- Button Clips (optional)

Fabric

- **Note:** These fabric requirements are estimates and may result in overage depending on hooping.
- Horse - 1/8 yd Tan Cotton
- Mane, Tail, and Platform - 1/8 yd Brown Cotton
- Saddle and Rocker - 1/8 yd Red Cotton
- Plaque - 1/8 yd White Cotton

Thread


- 0731 Applesauce - 1 spool
- 7012 (S4) 14 kt. Gold - 1 spool
- Bobbin wound with each color of thread used in the project.

EMBROIDERY



STEP 1

- **Note:** Match all bobbin thread with top thread.
- Prep the mane, tail, saddle and horse applique pieces by adhering two layers of StabilStick CutAway to the wrong side of each fabric piece.
- This provides a more rigid structure.

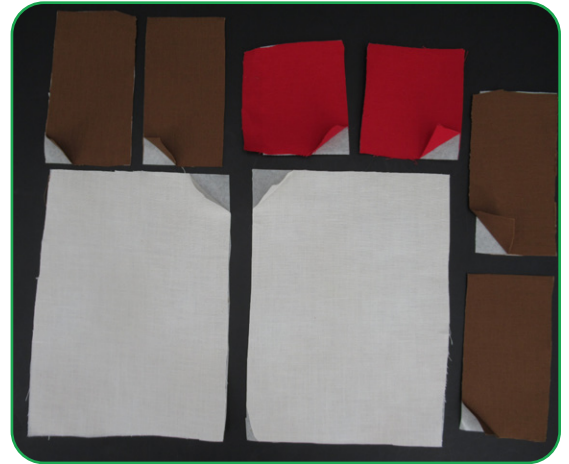

STEP 2

- Hoop one sheet of AquaMesh WashAway and one sheet of BadgeMaster.



STEP 3

- Stitch Machine Step 1, Red Fabric Placement Stitch.
- Remove the hoop from the machine, DO NOT remove the design from the hoop.




EMBROIDERY



STEP 4

- Lightly spray the wrong side of the front applique piece with temporary spray adhesive. Place front applique piece directly over the placement stitch covering it entirely.
- **Optional:** Tape in place.

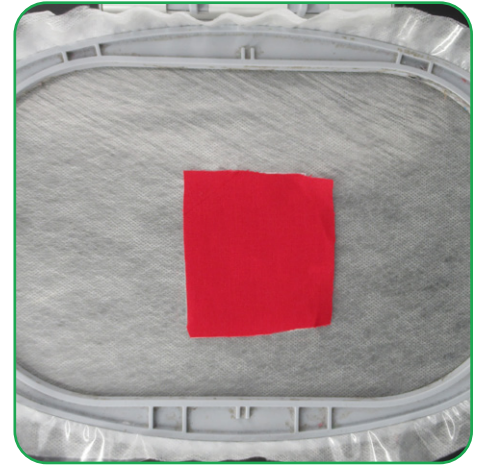

STEP 5

- Flip the hoop over and repeat Step 3 for the back-applique piece.
- Place the hoop back onto the machine.



STEP 6

- Stitch Machine Step 2, Cut Line and Tackdown.



STEP 7

- Remove the hoop from the machine, DO NOT remove the design from the hoop.
- Trim along the cut line of the front applique.



STEP 8

- Flip the hoop over and repeat Step 6 on the back-applique.



STEP 9

- Return the hoop to the machine.
- Stitch Machine Step 3, Brown Fabric Placement Stitch.




EMBROIDERY



STEP 10

- Remove the hoop from the machine, do NOT remove the project from the hoop.
- Lightly spray the wrong side of the front applique pieces with temporary spray adhesive.
- Place front applique pieces directly over the placement stitches covering them entirely.
- **Optional:** Tape in place.

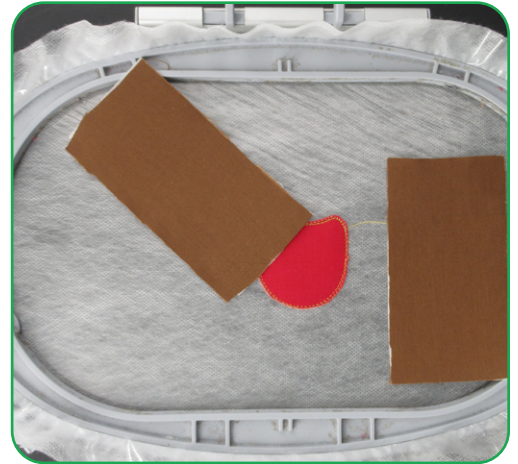


STEP 11

- Flip the hoop over and repeat Step 10 for the back-applique pieces.



STEP 12

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

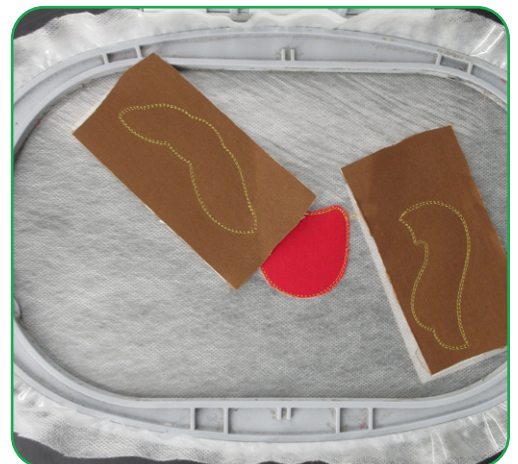

STEP 13

- Remove the hoop from the machine, do NOT remove the design from the hoop.
- Trim along the cut line of the front applique.




STEP 14

- Flip the hoop over and repeat Step 13 on the back-applique.
- Return the hoop to the machine.



STEP 15

- Stitch Machine Step 5, Tan Fabric Placement Stitch.

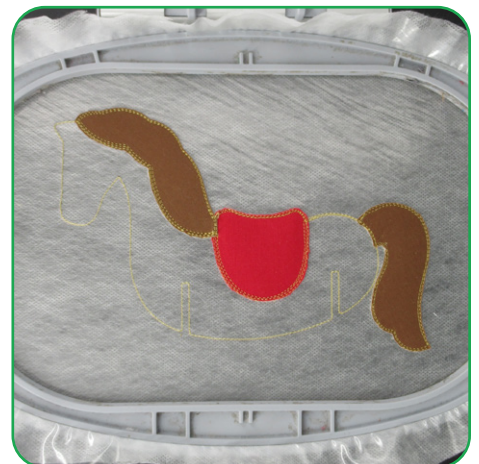

STEP 16

- Remove the hoop from the machine, do NOT remove the project from the hoop.
- Lightly spray the wrong side of the front applique piece with temporary spray adhesive.
- Place front applique piece directly over the placement stitch covering it entirely.
- **Optional:** Tape in place.



STEP 17

- Flip the hoop over and repeat Step 16 for the back-applique piece.



STEP 18

- Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.



STEP 19

- Remove the hoop from the machine, DO NOT remove the design from the hoop.
- Trim along the cut line of the front applique.



STEP 20

- Flip the hoop over and repeat Step 19 on the back-applique.



STEP 21

- Return the hoop to the machine and stitch the remaining machine steps to complete the design.



STEP 22

- Remove the design from the hoop and cut away the extra stabilizer ¼" from the design.




STEP 23

- Rinse away the remaining stabilizer with warm running water, and lay face down to dry.



STEP 24


- Once all pieces are stitched, rinsed and dry, press face down on a Perfect Press Cloth.
- Use the Perfect Punch Tool with the 3.0mm punch to cut holes in all eyelets as shown.

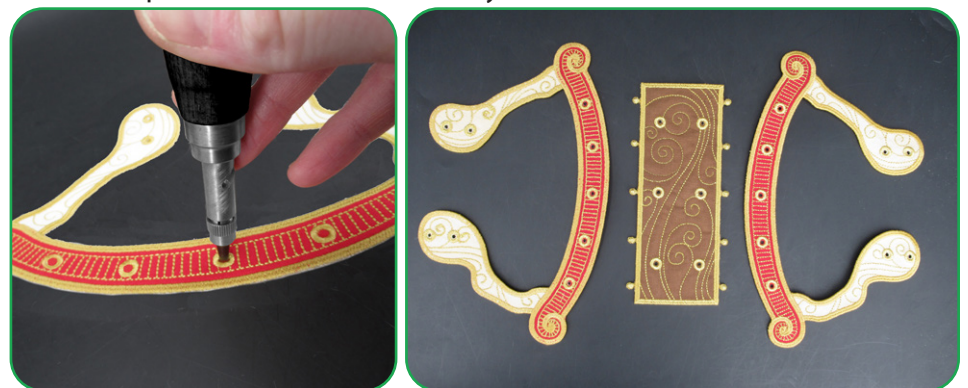

ASSEMBLY


STEP 1

- Lay out rocking horse legs and platform piece as shown.
- Platform piece is right side up.
- One set of legs will be good side up, the other good side down.
- Note: If using Platform FSA [no plaque] then skip Step 3.

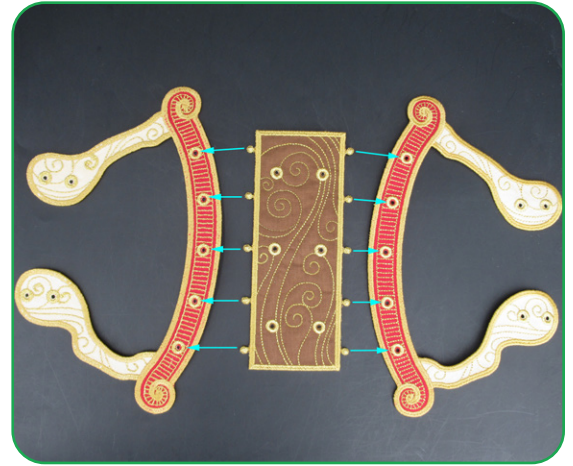


STEP 2

- Button the 10 buttonettes into the corresponding eyelets.

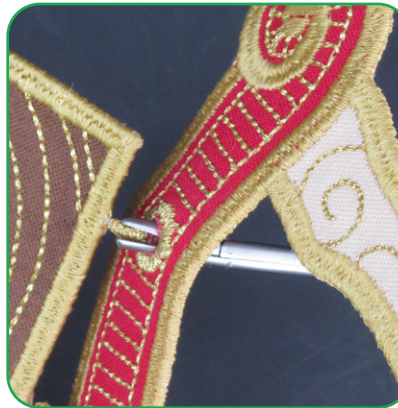

STEP 3

- Next fold plaque with wrong sides together and connect the 6 buttonettes on the plaque into the corresponding eyelets in the platform.
- **Note:** The horse faces left.

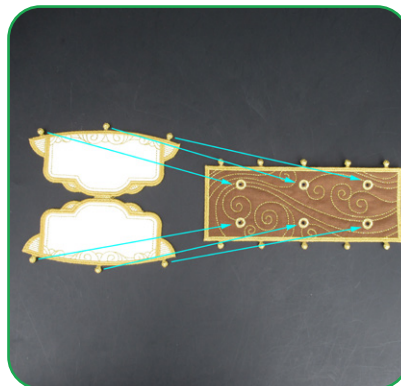

ASSEMBLY

STEP 4

- Next button the horse leg connectors to the corresponding eyelets in the legs, making sure the good sides face to the left.
- The larger connector attaches to the straighter front legs.
- The smaller connector attaches to the back legs.




STEP 5




- Insert horse body into slots in horse legs connectors.



APPLIQUE PATTERNS

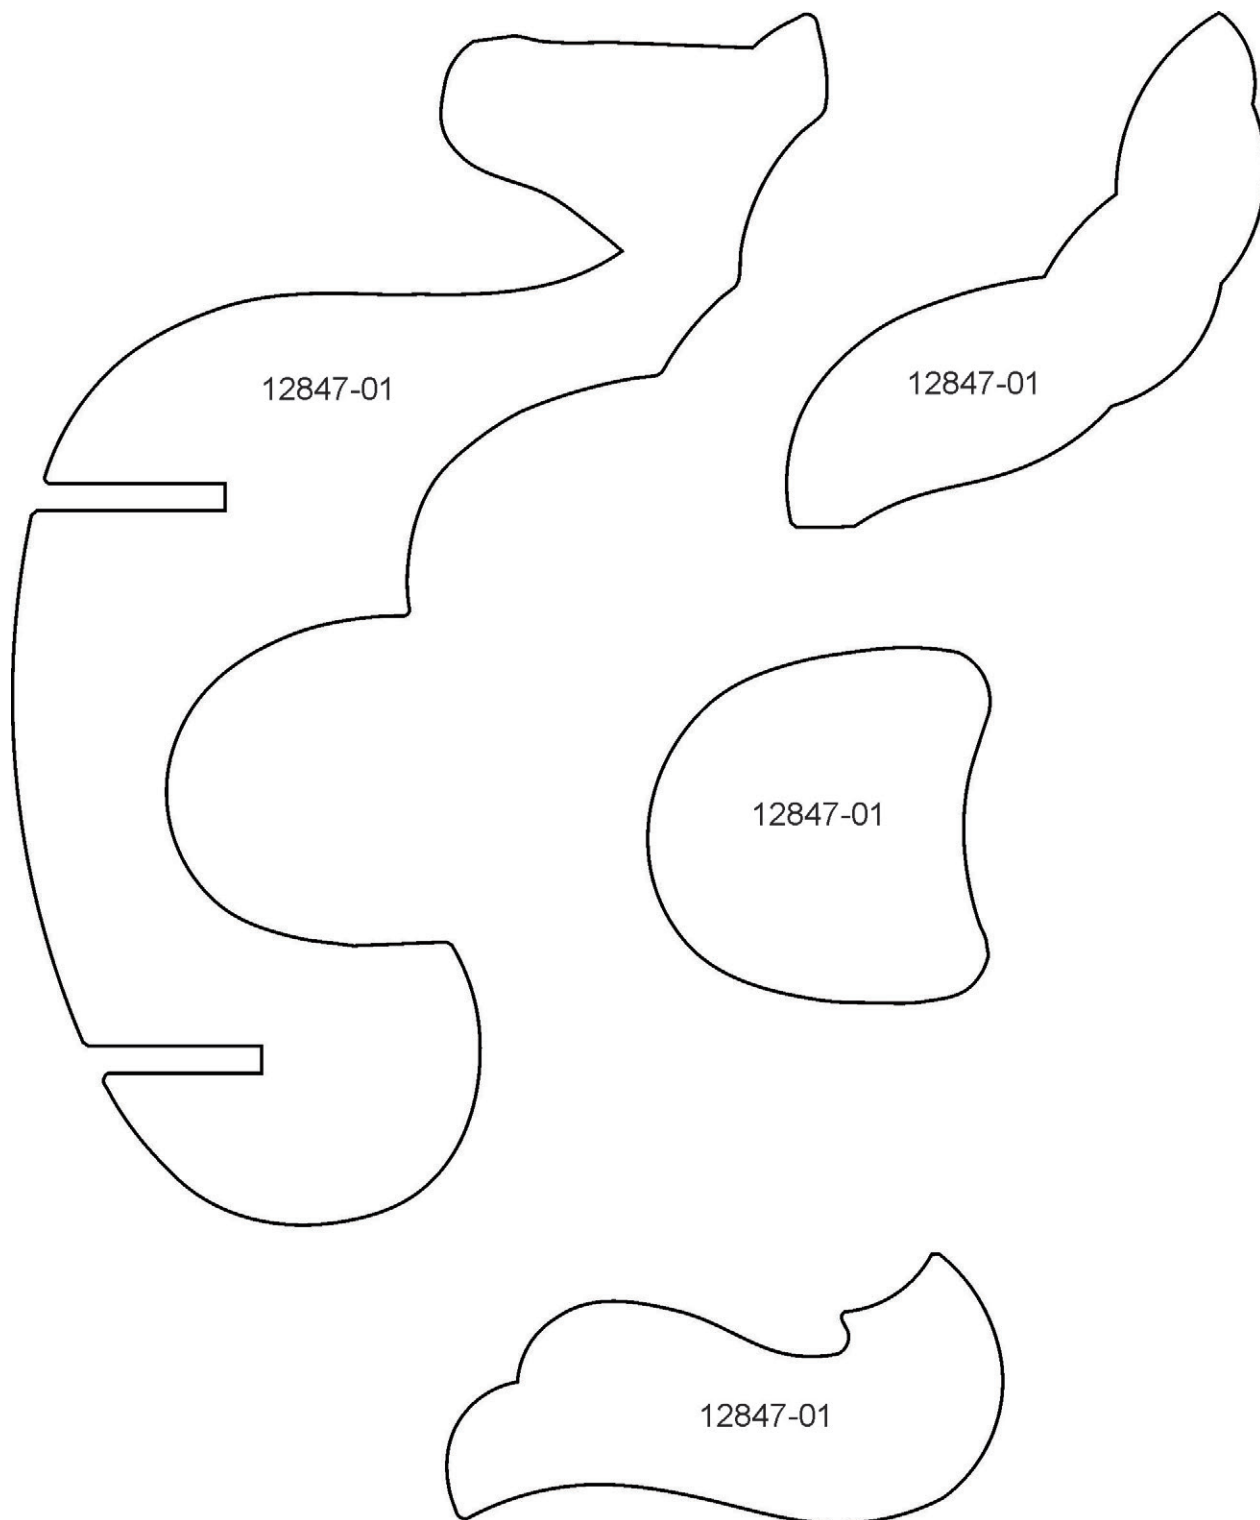

APPLIQUE PATTERNS


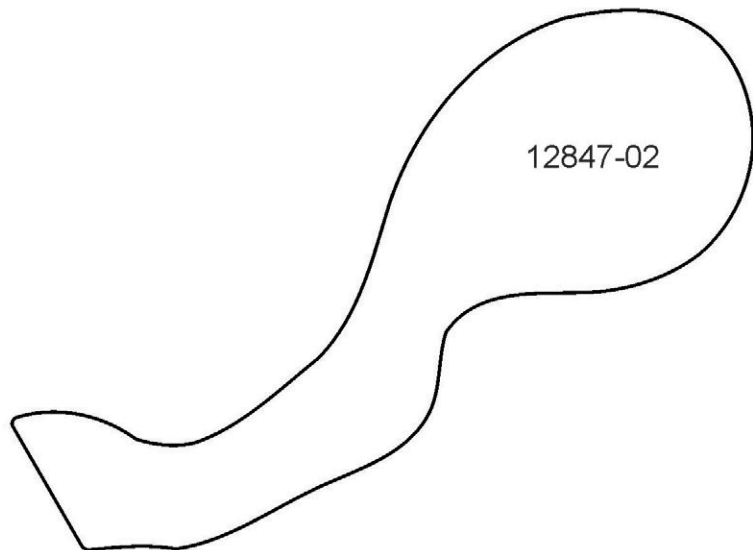
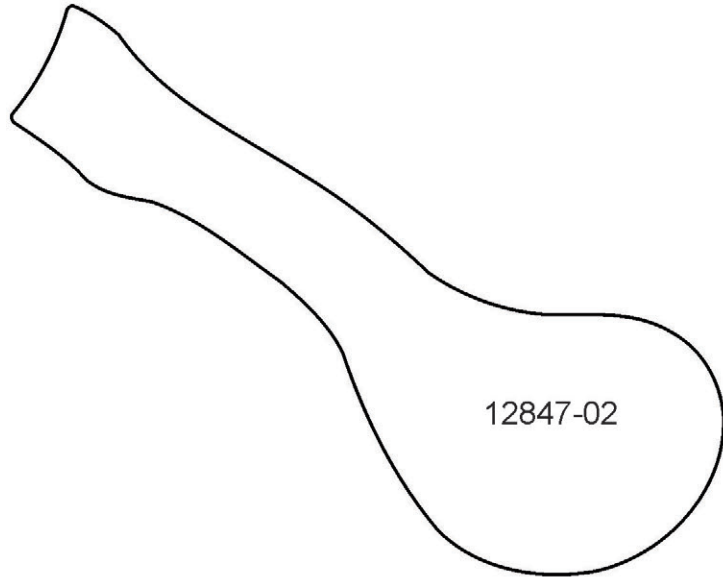
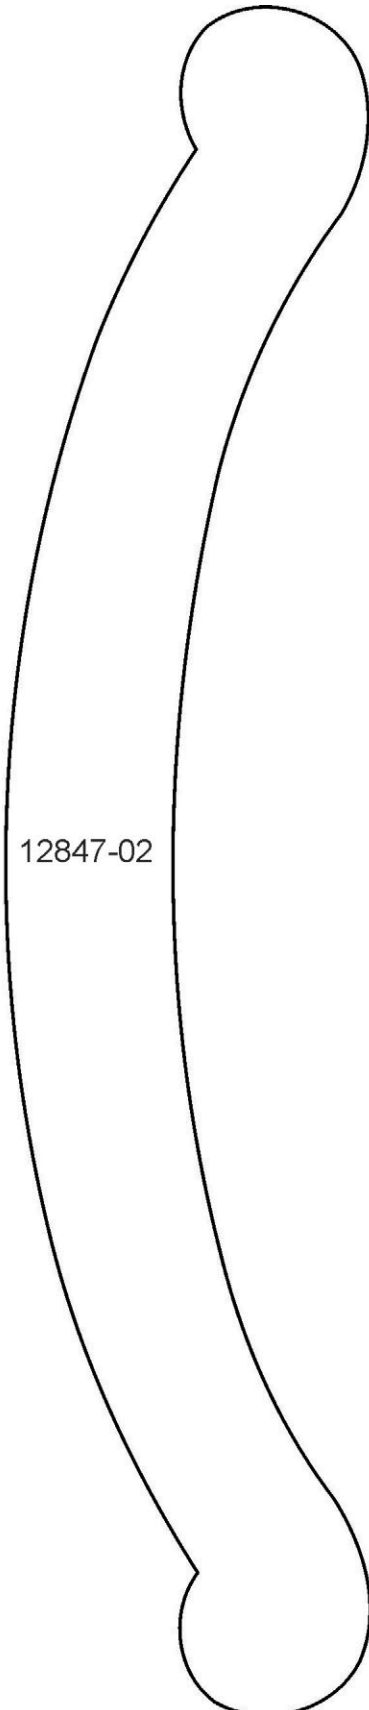


APPLIQUE PATTERNS




12847-03




12847-04

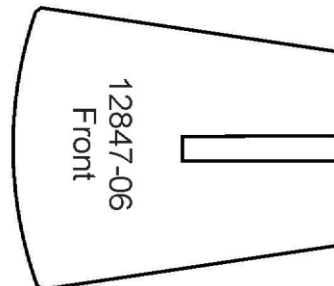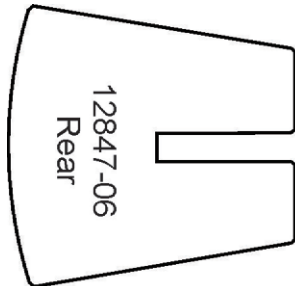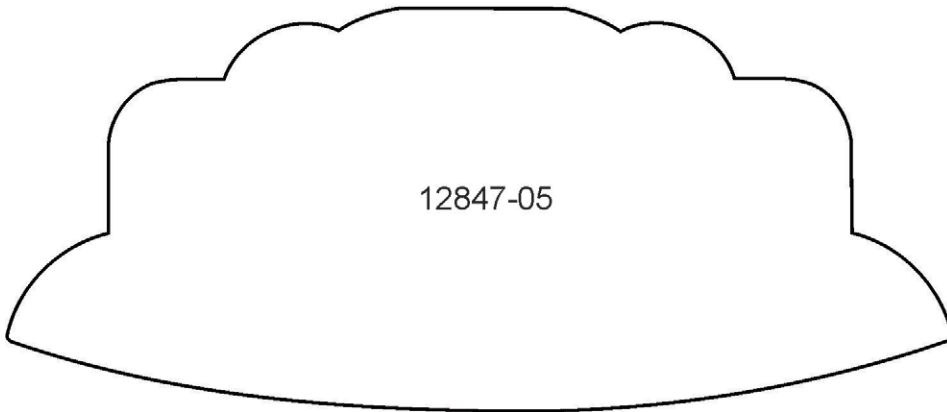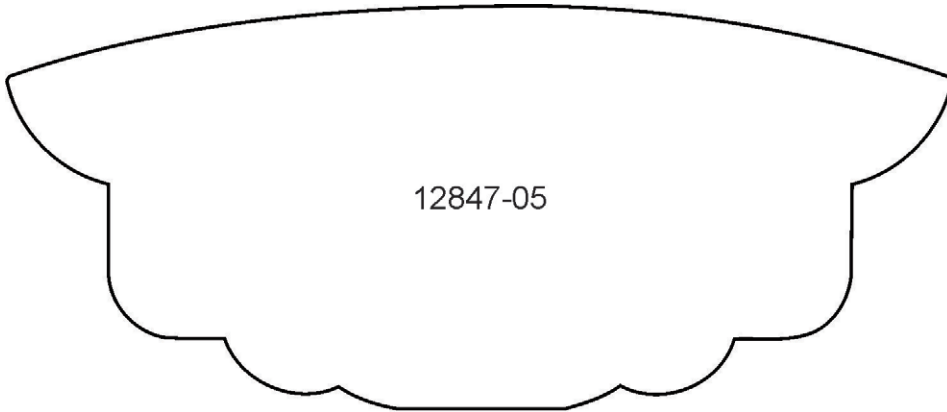

MIRRORED PATTERNS

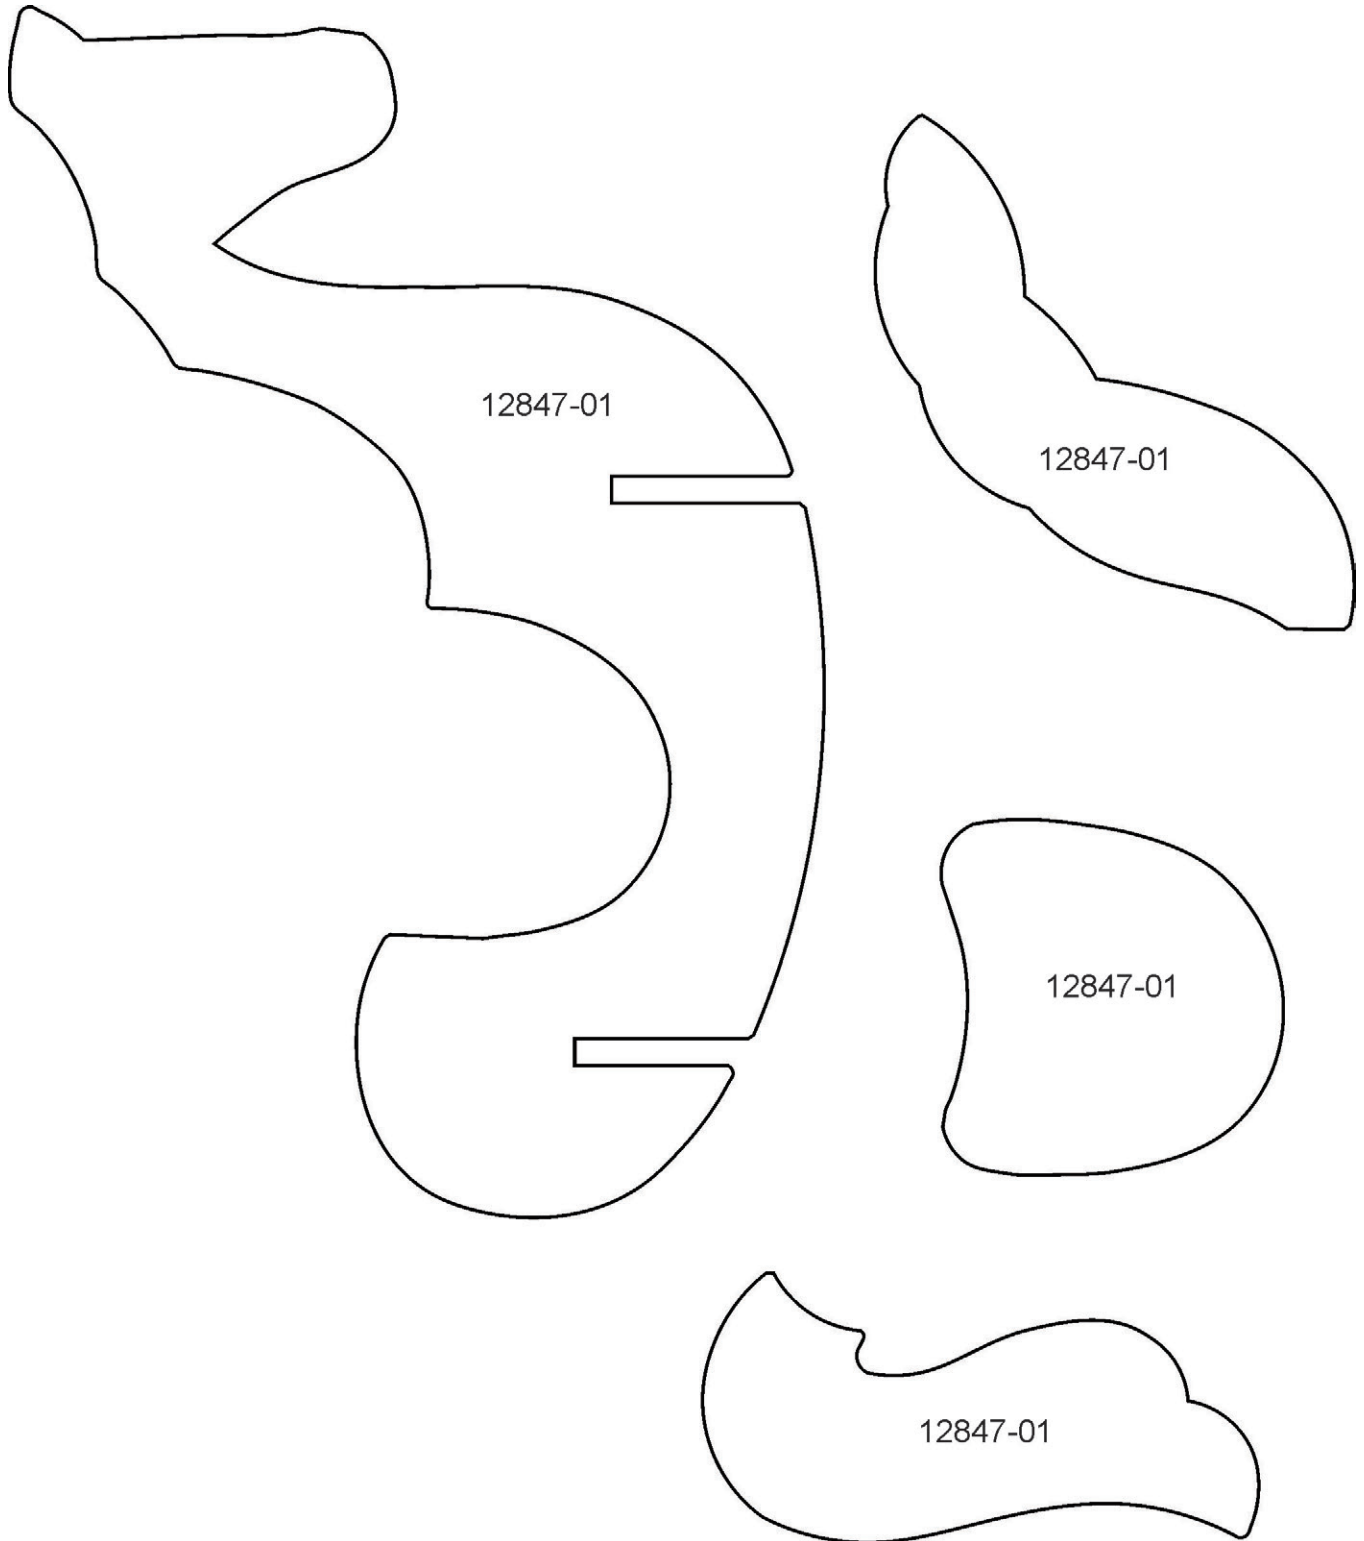

MIRRORED PATTERNS

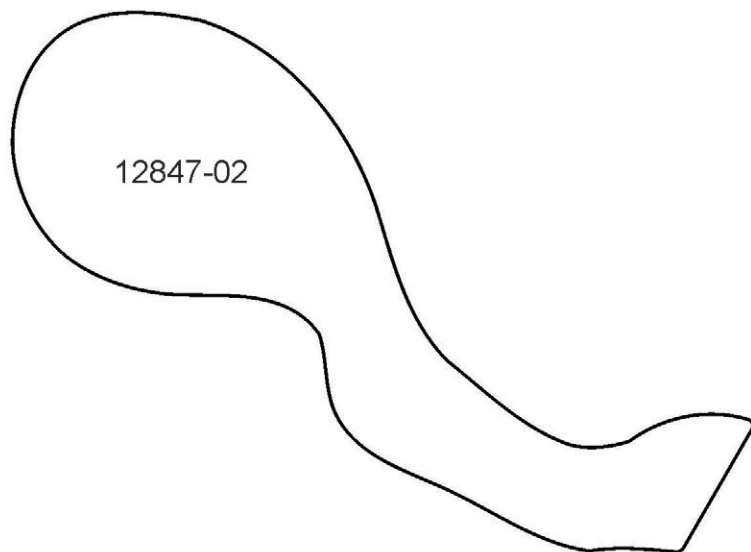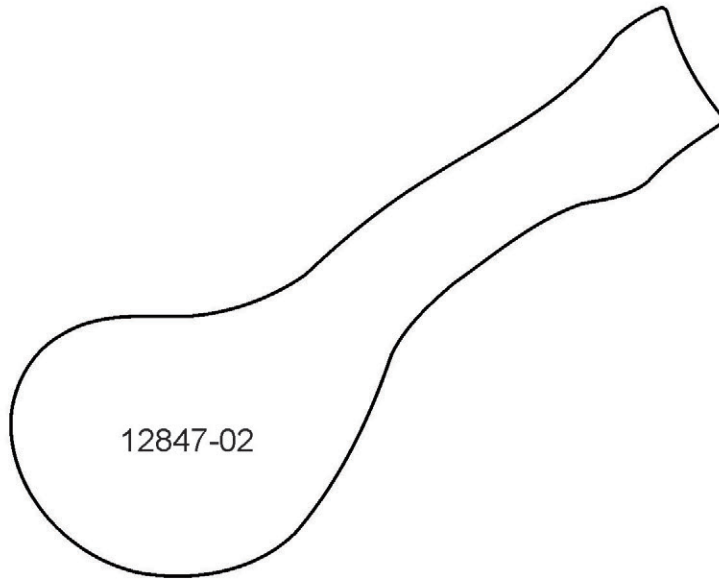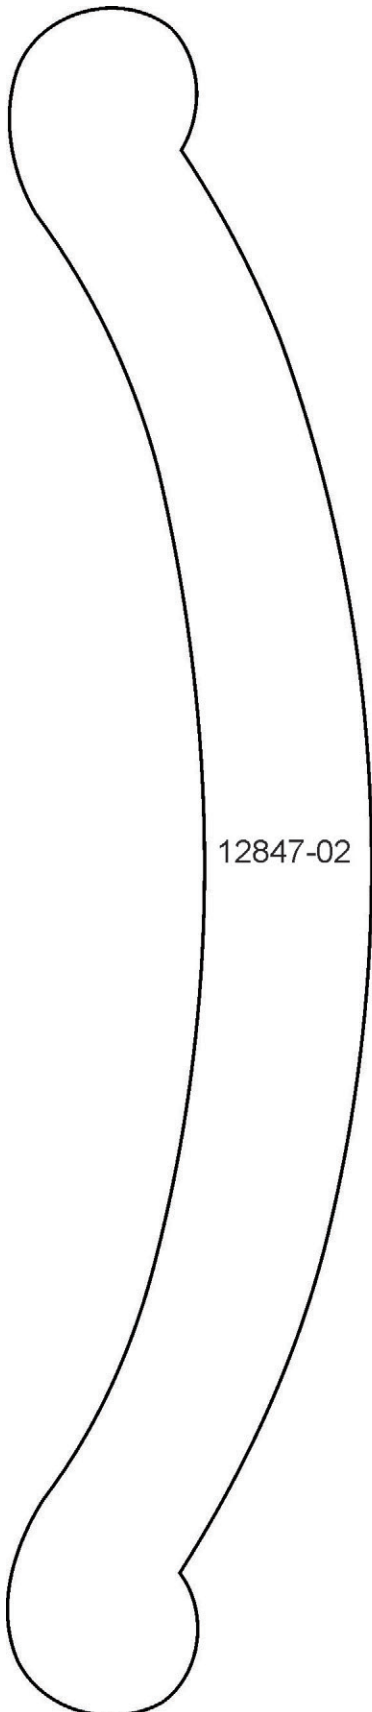

MIRRORED PATTERNS



12847-03

12847-04

MIRRORED PATTERNS

