

TAPESTRY ZIPPER BAGS



3

Designs

Fits hoop sizes 6" x 10" and larger

THREAD LIST

Isacord Thread Colors

0670 Cream
0713 Lemon
1102 Pumpkin
1800 Wildfire
2508 Hot Pink
2640 Frosted Plum
2655 Aura
2912 Sugar Plum
2953 Concord Fog
4620 Jade
5326 Evergreen
5722 Green Grass
5912 Erin Green

***Project instructions included after design list**

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

12869-01 Tapestry Zipper Bag 1

*Fabric Required




	Size Inches:	Size mm:	Stitch Count:
S	7.06 X 5.39 in.	179.5 X 136.8 mm	26845 St.
L	7.83 X 5.98 in.	199.0 X 151.9 mm	31261 St.

1. Zipper Placement Guide.....	2912
2. Zipper Tackdown	2912
3. Front Panels Tackdown	2912
4. Medium Purple Detail	2912
5. Dark Purple Detail	2953
6. Pale Purple Detail.....	2655
7. Light Purple Detail	2640
8. Inner Panels Tackdown	2912
9. Backing Tackdown.....	2912
10. Inner Lining Tackdown.....	2912

12869-02 Tapestry Zipper Bag 2

*Fabric Required

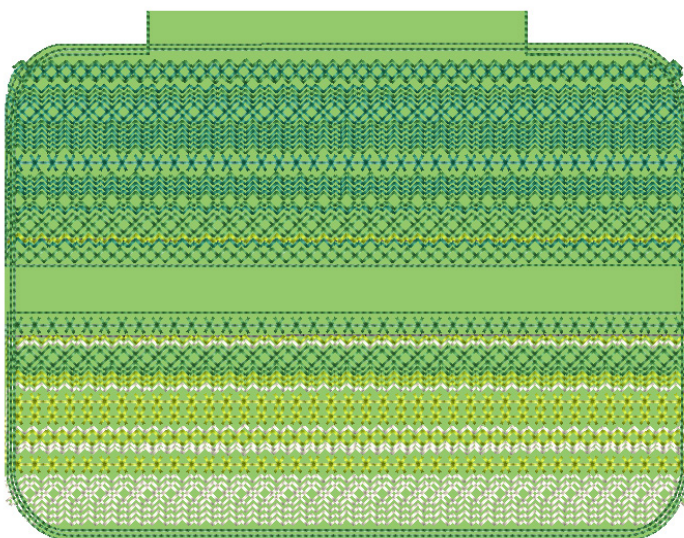


	Size Inches:	Size mm:	Stitch Count:
S	7.19 X 5.39 in.	182.7 X 136.8 mm	35651 St.
L	7.76 X 5.99 in.	197.2 X 152.0 mm	44393 St.

1. Zipper Placement Guide.....	5722
2. Zipper Tackdown	5722
3. Front Panels Tackdown	5722
4. Dark Green Detail.....	5326
5. Medium Green Detail	5722
6. Light Green Detail	5912
7. Cream Detail	0670
8. Inner Panels Tackdown	5722
9. Backing Tackdown.....	5722
10. Inner Lining Tackdown.....	5722

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

12869-03 Tapestry Zipper Bag 3

*Fabric Required

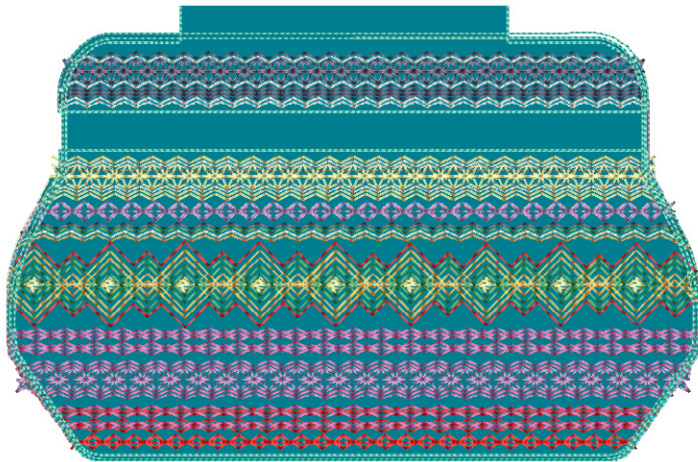

	Size Inches:	Size mm:	Stitch Count:
S	8.27 X 5.38 in.	210.0 X 136.6 mm	25578 St.
L	9.11 X 5.98 in.	231.5 X 151.8 mm	30599 St.

1. Zipper Placement Guide.....	4620
2. Zipper Tackdown	4620
3. Front Panels Tackdown	4620
4. Yellow Detail	0713
5. Cream Detail	0670
6. Dark Purple Detail	2953
7. Dark Green Detail.....	5722
8. Orange Detail	1102
9. Light Purple Detail	2912
10. Red Detail.....	1800
11. Pink Detail	2508
12. Inner Panels Tackdown	4620
13. Backing Tackdown.....	4620
14. Inner Lining Tackdown.....	4620

COLLECTION SUPPLIES



Information

- Embroidery Hoop to accommodate: Largest Design 6" X 10"
- Finished project size: Size see chart

Stabilizers

- OESD Medium Weight TearAway
- OESD Fusible Woven

Fabrics/Textiles

- See chart for fabric requirements
- Note: Fabric sizes are estimates and may result in overage.

Notions & Tools


- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- 10"-14" Polyester or nylon zipper at least 2" larger than opening (NO metal zippers)


Isacord Thread Colors

- As per thread chart
- OESD Bobbin Thread

SUMMARY




Teal Bag			
	Front Panel Top Cut 1 of outer fabric and 1 of lining	Front Panel Bottom Cut 1 of outer fabric and 1 of lining	Back Cut 1 of outer fabric and 1 of lining
Large Bag Plastic/Nylon Zipper: at least 14" Long	8.5 x 3.5 Cut Fusible Woven 8.5 x 1.75	10 x 10 Cut Fusible Woven 10 x 5	10 x 7 Cut Fusible Woven 10 x 7
Small Bag Plastic/Nylon Zipper: at least 10" Long	7.5 x 3 Cut Fusible Woven 7.5 x 1.5	9 x 9.5 Cut Fusible Woven 9 x 4.75	9 x 6 Cut Fusible Woven 9 x 6

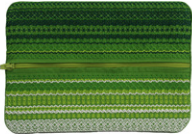Green Bag			
	Front Panel Top Cut 1 of outer fabric and 1 of lining	Front Panel Bottom Cut 1 of outer fabric and 1 of lining	Back Cut 1 of outer fabric and 1 of lining
Large Bag Plastic/Nylon Zipper: at least 14" Long	8.5 x 7 Cut Fusible Woven 8.5 x 3.5	8.5 x 7 Cut Fusible Woven 8.5 x 3.5	8.5 x 8 Cut Fusible Woven 8.5 x 8
Small Bag Plastic/Nylon Zipper: at least 10" Long	7.5 x 6 Cut Fusible Woven 7.5 x 3	7.5 x 6 Cut Fusible Woven 7.5 x 3	7.5 x 7 Cut Fusible Woven 7.5 x 7

SUMMARY



Purple Bag			
	Front Panel Top	Front Panel Bottom	Back
	Cut 1 of outer fabric and 1 of lining	Cut 1 of outer fabric and 1 of lining	Cut 1 of outer fabric and 1 of lining
Large Bag Plastic/Nylon Zipper: at least 14" Long	8.5 x 3.5 Cut Fusible Woven 8.5 x 1.75	8.5 x 10 Cut Fusible Woven 8.5 x 5	8.5 x 7 Cut Fusible Woven 8.5 x 7
Small Bag Plastic/Nylon Zipper: at least 10" Long	7.5 x 3 Cut Fusible Woven 7.5 x 1.5	7.5 x 8.5 Cut Fusible Woven 7.5 x 4.25	7.5 x 6 Cut Fusible Woven 7.5 x 6

***The In-The-Hoop instructions included in the design pack are general instructions for the collection. For demonstration purposes, a sample design that best represents the entire collection is shown. Fabric and thread requirements will vary by design, but the general technique will be the same.**

EMBROIDERY




STEP 1

- Press Bottom Front, Top Front, Top Front Lining and Bottom Front Lining in 1/2 wrong sides together, lengthwise.
- OESD Fusible Woven is applied only to the outer fabrics, not the lining.
- Open outer fabrics and press OESD Fusible Woven to one half of the wrong side of the fabric, lining up the Fusible Woven with the fold of the fabric.
- Press a whole piece of Fusible Woven to the wrong side of the Back fabric.



STEP 2

- Re-fold outer fabrics and press.

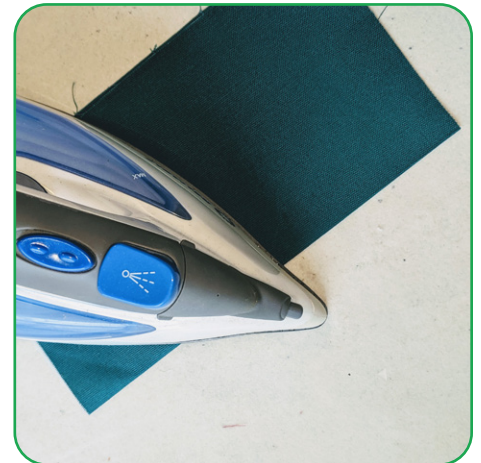


STEP 3

- Design used for this project is 12869-03L.
- Hoop 1 piece of OESD Medium Weight TearAway Stabilizer.
- Stitch Machine Step 1, Zipper Placement Guide.




STEP 4

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Place the zipper, right side up, within the Placement Guide and tape to hold in place.
- Metal ends must be outside of the stitching area.
- Return the hoop to the machine.
- Stitch Machine Step 2, Zipper Tackdown.

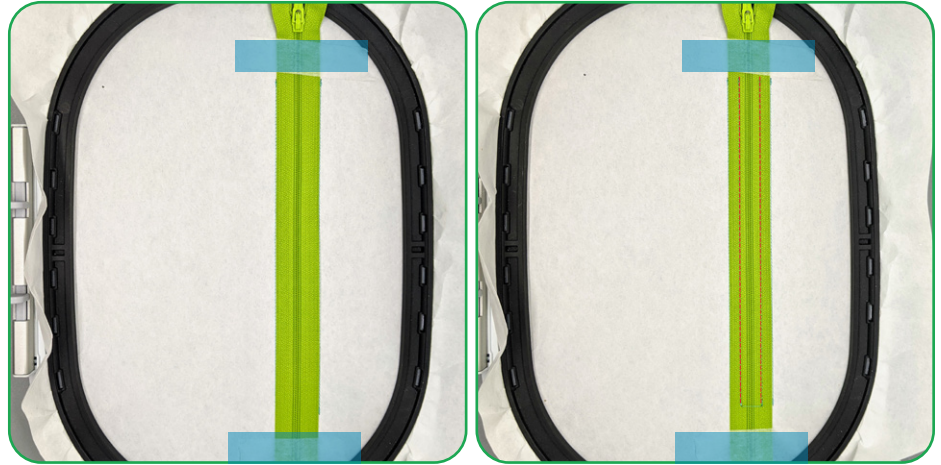

STEP 5

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Place the folded edges of the Top and Bottom Front Panels next to the teeth of the zipper.
- Note: The fabric side with the Fusible Woven attached needs to be on top to support the embroidery stitches.
- Cover the Zipper Tackdown line, but not the zipper teeth.
- Tape to hold.

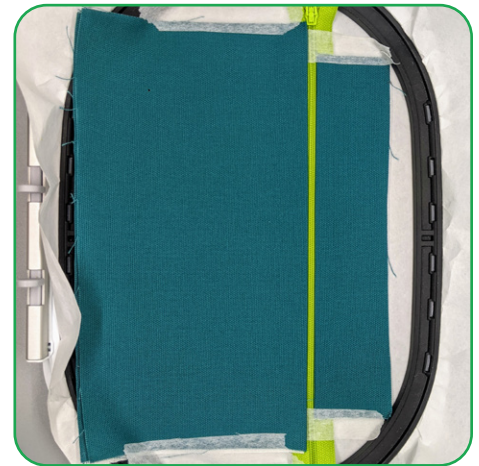


EMBROIDERY



STEP 6

- Return the hoop to the machine.
- Stitch Machine Step 3, Front Panels Tackdown.

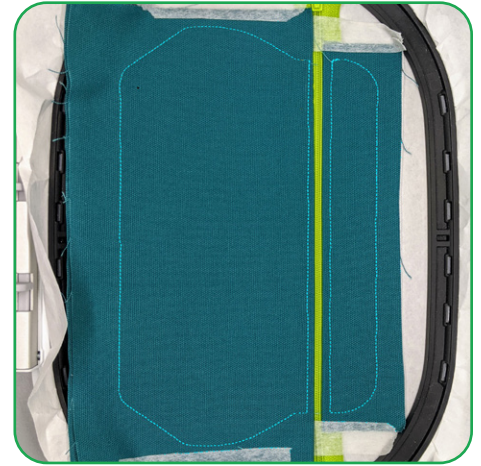

STEP 7

- Follow the color chart and stitch the remaining embroidery details, machine steps 4-11.



STEP 8

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Turn hoop over and lay face down on a flat surface.
- On the back of the hoop, locate the Zipper Tackdown lines.
- Place the folded edges of the Top and Bottom Lining fabric slightly inside the Zipper Tackdown.
- Gently secure with tape. (Do not press too hard!)



STEP 9

- Return the hoop to the machine.
- Stitch Machine Step 12, Inner Panels Tackdown.



STEP 10

- Note: This is the most important step in the whole project!
- Without it, you will need a seam ripper!
- Unzip the zipper halfway!
- Not all the way, just HALFWAY!




STEP 11

- Position the back fabric, right side down over the front of the zipper pouch completely covering the stitched pieces. (Fusible Woven prepped fabric).



STEP 12

- Stitch Machine Step 13, Backing Tackdown.

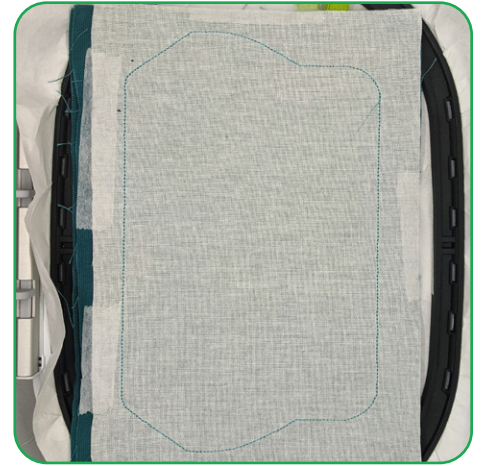

STEP 13

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Turn the hoop over and position the back lining, face down on the back of the hoop.
- Tape fabric to hold it in place.



STEP 14

- Return the hoop to the machine.
- Stitch Machine Step 14, Inner Lining Tackdown.
- Note the "neck" opening in the top for turning the back lining.



STEP 15

- The stitching is now complete.
- Remove the project from the hoop and trim approximately 1/4" from the outermost stitching line as shown.
- DO NOT cut off the "neck" opening at the top. Trim across the opening above the vertical lines of stitching.
- Clip each inner corner to, but not through, the stitches in the corner.



STEP 16

- Turn the pouch inside out to show the right side of the lining fabric.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.
- Remove the excess stabilizer from the zipper area.
- Unzip the zipper completely.



STEP 17

- Tuck the "neck" area to the inside of the bag, press.
- Close the opening by hand stitching.
- Turn the pouch right side out, through the zipper. Use the Expert Point and Press Tool to help push out the corners and sides.
- Press with a dry iron, zipper down, on Perfect Embroidery Press Cloth.

