

FREESTANDING BASKET FOR THE HOLIDAYS



9

Designs

Fits hoop sizes 5" x 7" and larger

THREAD LIST



Isacord Thread Colors

0010 Silky White	0853 Pecan	2530 Rose
0221 Light Brass	0861 Tantone	2640 Frosted Plum
0630 Buttercup	1030 Passion Fruit	3713 Cornflower Blue
0722 Khaki	1900 Geranium	5440 Mint

***Project instructions included after design list**


DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required

12871-01 Basket Side 1 FSA

Size Inches:	Size mm:	Stitch Count:
5.56 X 4.08 in.	141.2 X 103.7 mm	32315 St.

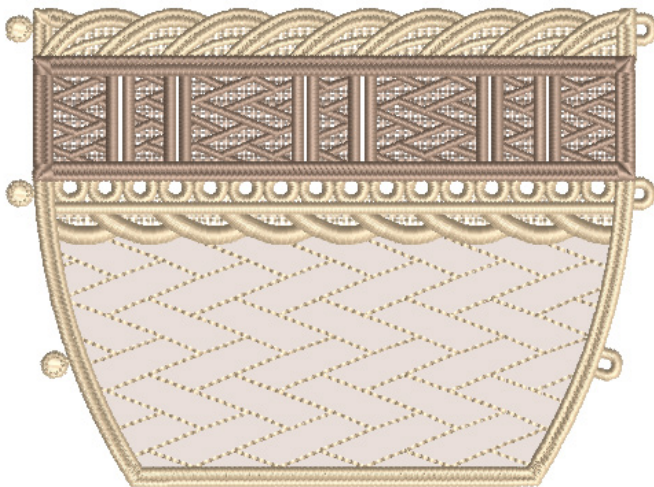






- | | |
|---------------------------------------------|------|
| ■ 1. Tan Fabric Placement Stitch..... | 0861 |
| ■ 2. Cut Line and Tackdown | 0861 |
| ■ 3. Tan Cover Stitch and Lace Detail | 0861 |
| ■ 4. Brown Lace Detail | 0722 |

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

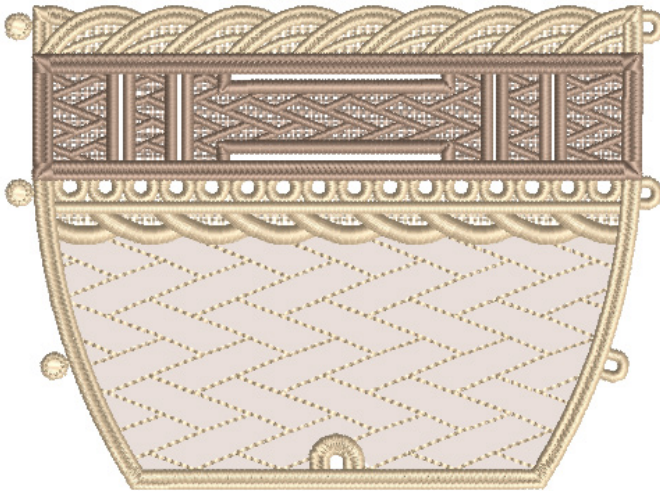***Fabric Required**


12871-02 Basket Side 2 FSA






Size Inches:	Size mm:	Stitch Count:
5.56 X 4.08 in.	141.2 X 103.7 mm	31667 St.
 1. Tan Fabric Placement Stitch.....		0861
 2. Cut Line and Tackdown		0861
 3. Tan Cover Stitch and Lace Detail		0861
 4. Brown Lace Detail		0722

***Fabric Required**

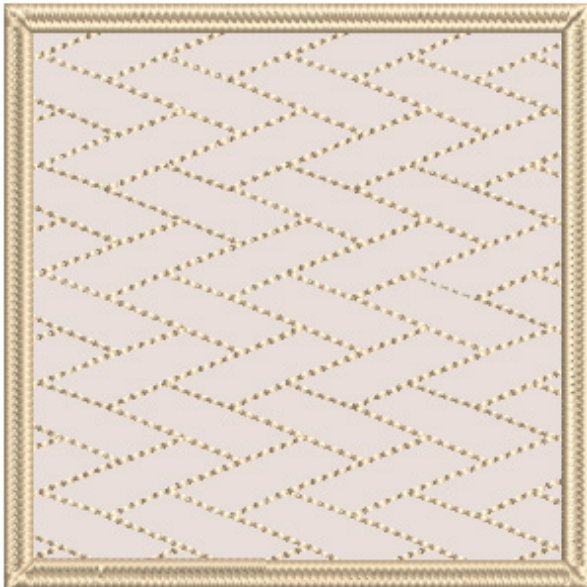
12871-03 Basket Floor FSA



Size Inches:	Size mm:	Stitch Count:
3.47 X 3.48 in.	88.2 X 88.4 mm	7488 St.
 1. Tan Fabric Placement Stitch.....		0861
 2. Cut Line and Tackdown		0861
 3. Cover Stitch and Detail.....		0861

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

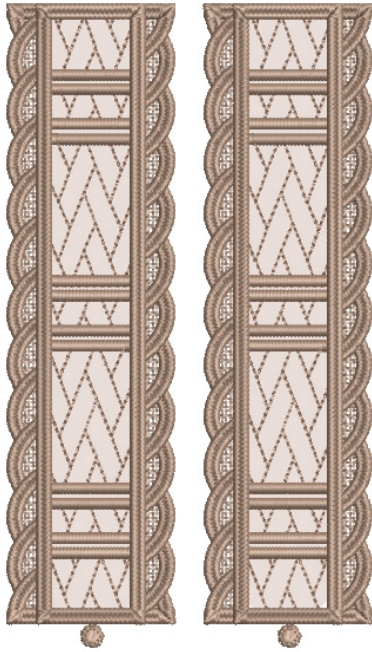


12871-04 Basket Handle Side Parts FSA

Size Inches:	Size mm:	Stitch Count:
6.41 X 3.64 in.	162.8 X 92.5 mm	37713 St.

- 1. Tan Fabric Placement Stitch..... 0722
- 2. Cut Line and Tackdown 0722
- 3. Brown Cover Stitch and Lace 0722

***Fabric Required**

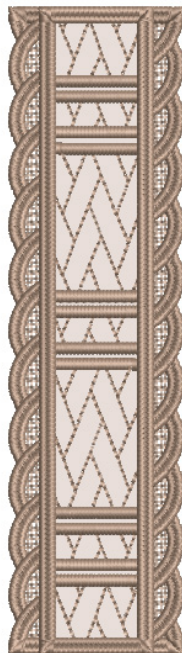

12871-05 Basket Handle Top Part FSA

Size Inches:	Size mm:	Stitch Count:
6.17 X 1.68 in.	156.8 X 42.7 mm	18711 St.

- 1. Tan Fabric Placement Stitch..... 0722
- 2. Cut Line and Tackdown 0722
- 3. Brown Cover Stitch and Lace 0722

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12871-06 Valentines Basket Accent 1 FSA

Size Inches: Size mm: Stitch Count:
2.49 X 2.89 in. 63.2 X 73.5 mm 6112 St.



- 1. Pink Fabric Placement Stitch 2640
- 2. Cut Line and Tackdown 2640
- 3. Purple Detail 2640
- 4. Red Cover Stitch and Lace 1900

***Fabric Required**

12871-07 Valentines Basket Accent 2 FSA

Size Inches: Size mm: Stitch Count:
3.39 X 2.30 in. 86.1 X 58.4 mm 7959 St.








- 1. Pink Fabric Placement Stitch 2640
- 2. Cut Line and Tackdown 2640
- 3. Purple Detail 2640
- 4. White Lace 0010
- 5. Red Cover Stitch and Lace 1900

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

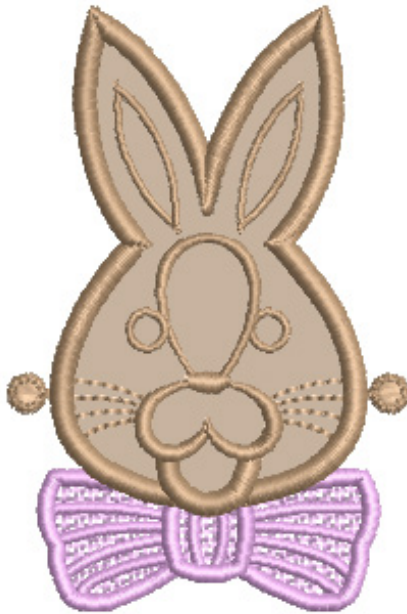***Fabric Required**

12871-08 Easter Basket Accent 1 FSA



Size Inches:	Size mm:	Stitch Count:
3.48 X 2.31 in.	88.3 X 58.7 mm	7687 St.
 1. Tan Fabric Placement Stitch.....		0853
 2. Cut Line and Tackdown		0853
 3. Purple Lace		2640
 4. Brown Cover Stitch and Detail		0853

***Fabric Required**


12871-09 Easter Basket Accent 2 FSA



Size Inches:	Size mm:	Stitch Count:
2.47 X 2.29 in.	62.7 X 58.1 mm	5616 St.
 1. Yellow Fabric Placement Stitch		2530
 2. Cut Line and Tackdown		2530
 3. Pink Cover Stitch.....		2530
 4. Green Cover Stitch.....		5440
 5. Purple Cover Stitch		2640

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

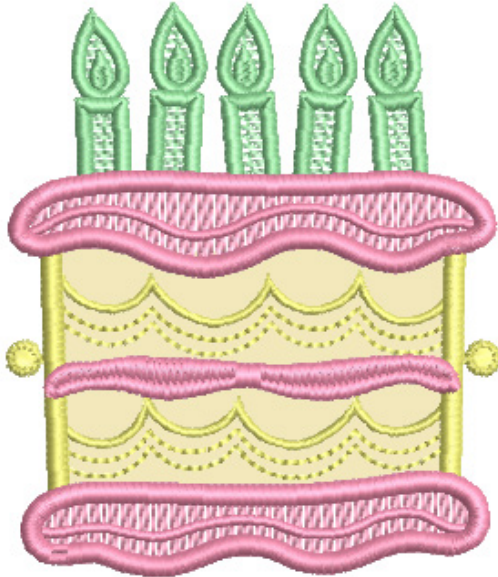

12871-10 Birthday Basket Accent 1 FSA

Size Inches: Size mm: Stitch Count:
3.69 X 3.17 in. **93.7 X 80.6 mm** **12956 St.**

- 1. Yellow Fabric Placement Stitch 0221
- 2. Cut Line and Tackdown 0221
- 3. Yellow Cover Stitch..... 0221
- 4. Green Lace..... 5440
- 5. Pink Detail and Cover Stitch..... 2530

12871-11 Birthday Basket Accent 2 FSL

Size Inches: Size mm: Stitch Count:
5.01 X 1.85 in. **127.2 X 46.9 mm** **13346 St.**

- 1. Pink Lace..... 2530
- 2. Orange Lace..... 1030
- 3. Green Lace..... 5440
- 4. Yellow Lace 0630
- 5. Blue Lace 3713



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**



12871-12 Christmas Basket Accent 1 FSA

Size Inches:	Size mm:	Stitch Count:
3.46 X 2.31 in.	88.0 X 58.6 mm	7853 St.

- 1. Green Fabric Placement Stitch 5440
- 2. Cut Line and Tackdown 5440
- 3. Green Cover Stitch and Lace 5440
- 4. Red Lace 1900

***Fabric Required**



12871-13 Christmas Basket Accent 2 FSA

Size Inches:	Size mm:	Stitch Count:
2.74 X 2.53 in.	69.7 X 64.2 mm	7761 St.

- 1. Brown Fabric Placement Stitch 0010
- 2. Cut Line and Tackdown 0010
- 3. White Lace 0010
- 4. Yellow Cover Stitch 0221

Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
 - Cut (8) 6" x 3.5" StabilStick CutAway
 - Cut (2) 4.5" x 4.5" StabilStick CutAway
 - Cut (6) 7" x 2" StabilStick CutAway

Fabrics/Textiles

- Tan Fabric ¼ yd
 - Cut (8) 6" x 3.5" tan fabric for basket sides
 - Cut (2) 4.5" x 4.5" tan fabric for basket floor
 - Cut (6) 7" x 2" tan fabric for basket handle
- 5/8" Ribbon - 20" for Handle
- 5/8" Ribbon - 24" for Basket
- Note: Fabric sizes are estimates and may result in overage.

Notions & Tools

- OESD Alligator Clamps
- OESD Button Clips
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Expert Punch Tool
- OESD Perfect Embroidery Press Cloth
- Organ Needle Embroidery 75/11 Sharp


Isacord Thread Colors

- As per thread chart
- Match bobbin thread to top thread

SUMMARY




12871-01

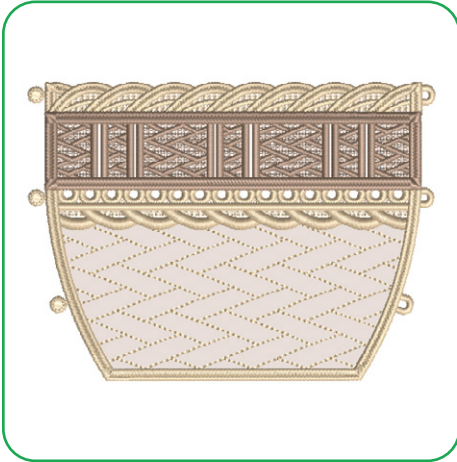


Requires 2 Designs

12871-02

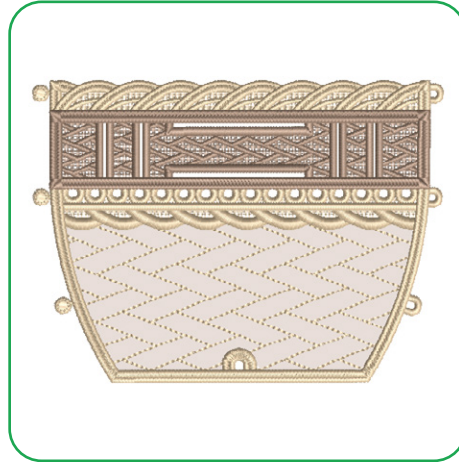


Requires 2 Designs

12871-03

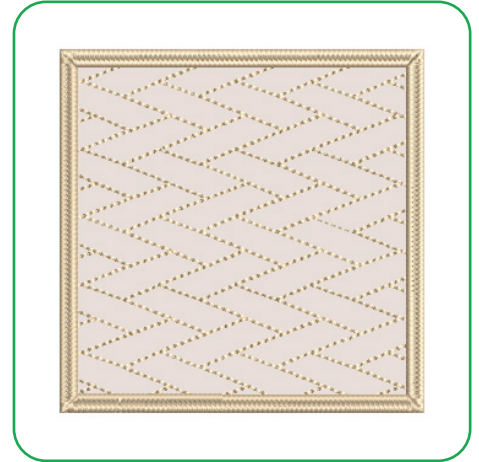


Requires 1 Design

12871-04

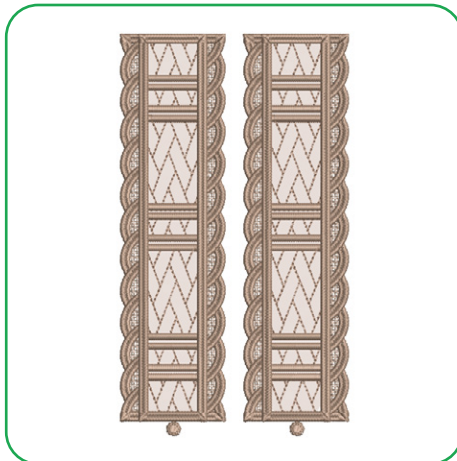

Requires 1 Design

12871-05

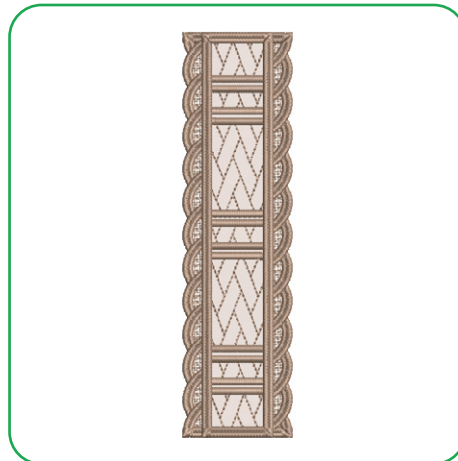

Requires 1 Design


***The applique instructions included in the design pack are general instructions for the collection. For demonstration purposes, a sample design that best represents the entire collection is shown. Fabric and thread requirements will vary by design, but the general technique will be the same.**

EMBROIDERY




STEP 1

- Prep the front and back applique fabrics with one layer of StabilStick CutAway.

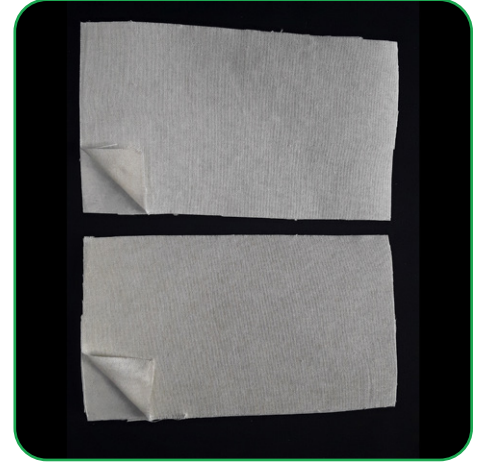


STEP 2

- All designs are stitched with matching thread in the top and bobbin.
- Hoop one layer of OESD AquaMesh and one layer of OESD BadgeMaster in the hoop for all designs.

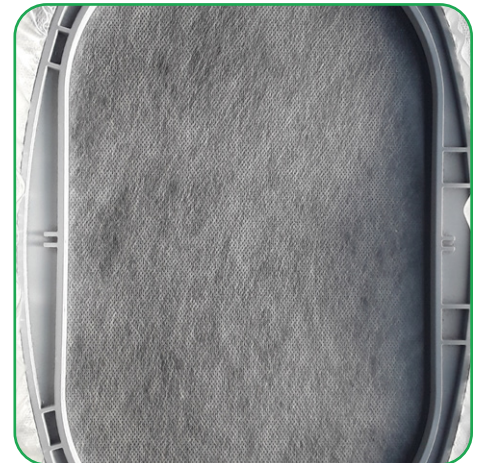

STEP 3

- Load selected design into the machine.
- Design in the example is 02.
- Thread the machine per the thread chart.
- Stitch Machine Step 1, Tan Fabric Placement Stitch.

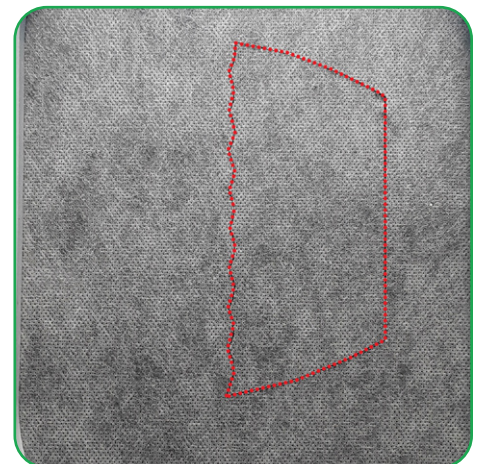

EMBROIDERY



STEP 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay the hoop on a flat surface.
- Place the fabric right side up, covering the placement line completely.
- Tape in place to secure with OESD Tape TearAway.




STEP 5

- Turn the hoop over and place the bottom fabric right side up covering the placement stitch.
- Carefully tape to secure. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



STEP 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

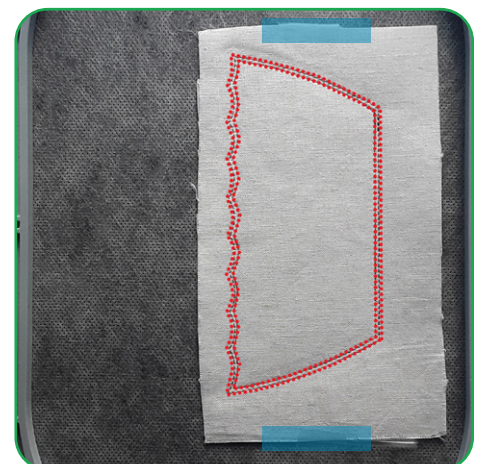

EMBROIDERY



STEP 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the tackdown stitching as possible. If the outermost stitches are cut, the inner stitches will still hold the applique in place.
- Tip: If the AquaMesh is cut or a hole is created while trimming the fabric. Use OESD Expert Embroidery Tape WashAway as a patch.




STEP 8

- Turn the hoop over and repeat step 7 on the back applique.



STEP 9

- Return the hoop to the machine and stitch the remaining steps according to the thread chart.
- Remember to match the bobbin thread to the upper thread colors.

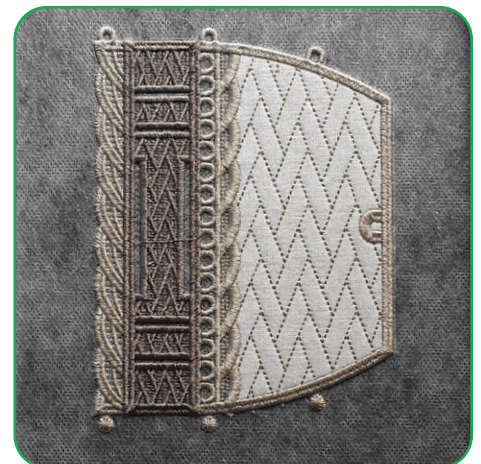

EMBROIDERY



STEP 10

- When design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.



STEP 11

- Rinse away stabilizer with warm running water. Lay flat face down on a non-stick surface to dry.
- Let dry completely. Press each piece, right side down, on OESD Perfect Embroidery Press Cloth.
- Set aside.




ACCENT PIECES




STEP 1

- Prep the front and back applique fabrics with one layer of StabilStick CutAway.

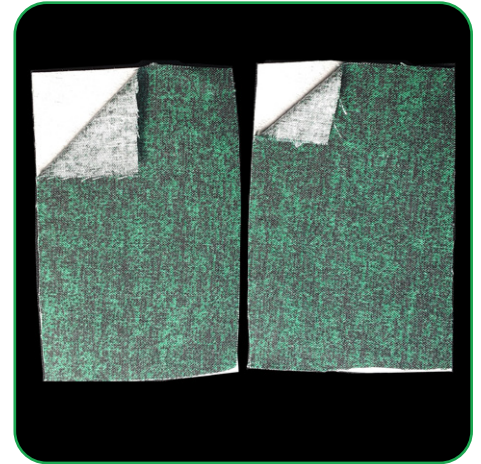


STEP 2

- All designs are stitched with matching thread in the top and bobbin.
- Hoop one piece of AquaMesh and one piece of BadgeMaster in the hoop for all designs.

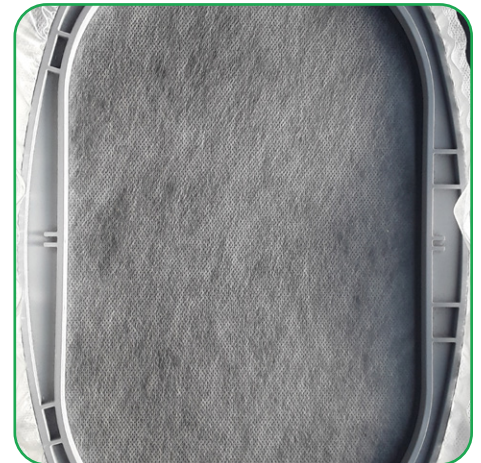

STEP 3

- Load selected design into the machine.
- Design in the example is 12.
- Thread the machine per the thread chart.
- Stitch Machine Step 1, Green Fabric Placement Stitch.

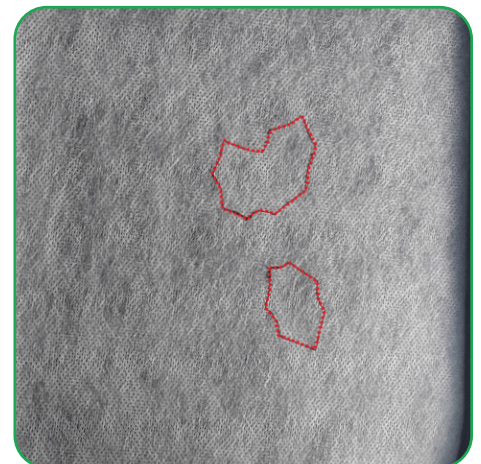


ACCENT PIECES



STEP 4

- Remove the hoop from the machine, but NOT the project from the hoop. Lay the hoop on a flat surface.
- Cover the placement line completely with the prepared top fabric.
- Tape in place to secure.

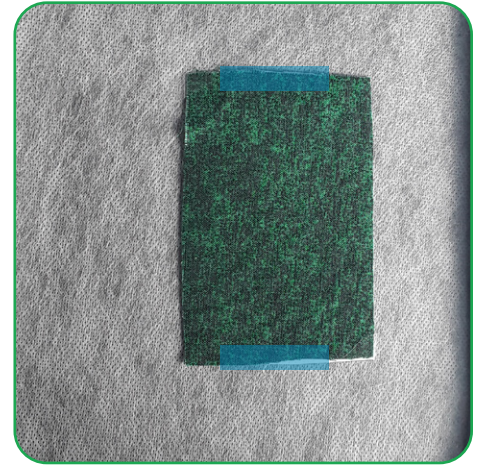

STEP 5

- Turn the hoop over and place the bottom fabric right side up covering the placement stitch.
- Carefully tape to secure. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



STEP 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.




ACCENT PIECES



STEP 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the tackdown stitching as possible. If the outermost stitches are cut, the inner stitches will still hold the applique in place.

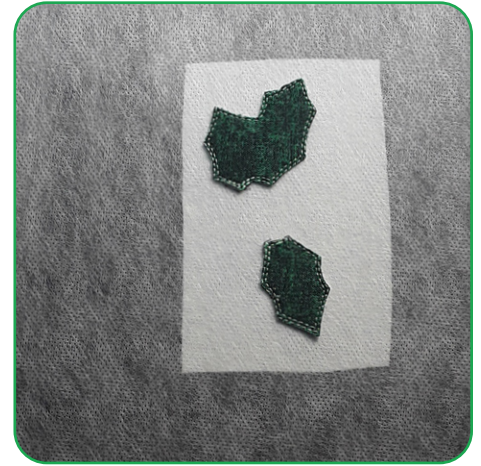

STEP 8

- Turn the hoop over and repeat step 7 on the back applique.



STEP 9

- Return the hoop to the machine and stitch the remaining machine steps according to the thread chart.
- Remember to match the bobbin thread to the upper thread colors.



ACCENT PIECES



STEP 10

- When design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.



ASSEMBLY



STEP 1

- Rinse each piece in warm running water until the design is only slightly sticky.
- Lay face down on a non-stick surface to dry. Parchment paper or a cooling rack work well. This prevents the piece from curling.



STEP 2

- Press each piece, right side down, on a Perfect Embroidery Press Cloth.



STEP 3

- Before assembly, take a utility knife and cut through all the layers of the 18 ribbon entry points on the 3 FSA handle pieces. Take care to not cut the satin stitching.
- Refer to the Cutting Tool Guides on page 23 for cutting guidelines.



ASSEMBLY




STEP 4

- Use the 3mm attachment, punch holes in the eyelets on both Basket Side 2 FSA pieces.
- Refer to the Cutting Tool Guides on page 23 for cutting guidelines.




STEP 5

- Lay the basket pieces out as shown with the sides face up and the floor face down. Make sure matching sides are opposite of each other.
- Load the sewing machine with matching thread in the top and bobbin. An open toe or edge stitch foot is helpful.
- Stitch together using a multi-step zigzag stitch or a zigzag stitch. Back stitch at the beginning and end to secure. Trim thread tails.

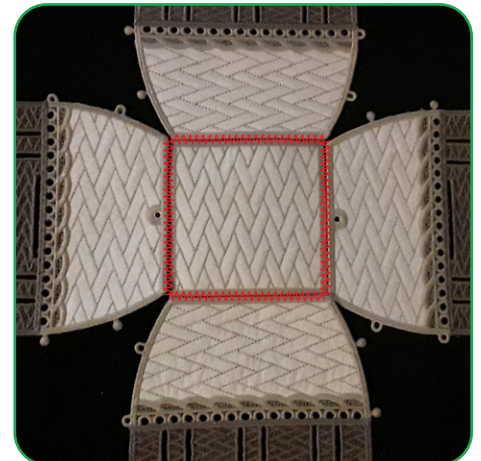

STEP 6

- Match the 12 eyelets and buttonettes as shown. Pull each buttonette through the corresponding eyelet, using button clips to temporarily hold them in place, as needed.
- The right side of the basket side pieces should show on the outside of the assembled basket.

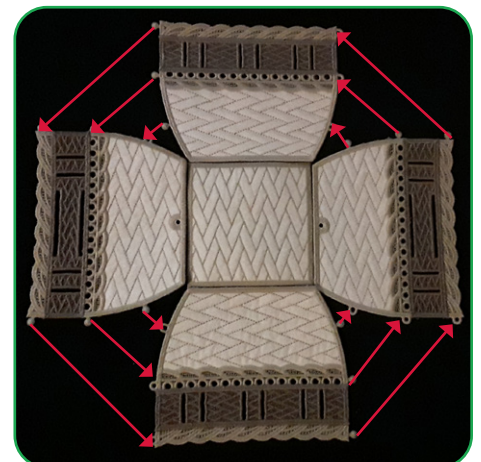


STEP 7

- To assemble the handle, arrange the 3 handle pieces face up as shown with the 2 buttonettes on the ends.
- Zig-zag together as shown using a tighter zig-zag stitch, 3.5mm width and 1.25mm length.



STEP 8

- After stitching the 3 handle pieces together, weave the 20" ribbon through the handle openings as shown.
- Tip: Cut the ends of the ribbon with pinking shears to reduce fraying.

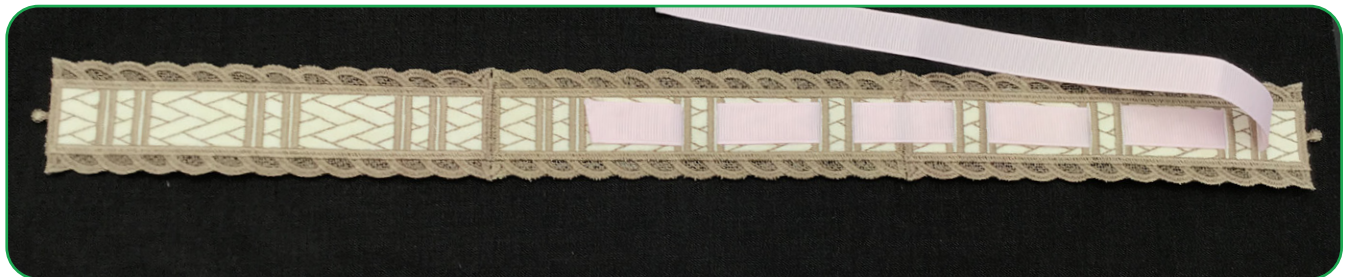

STEP 9

- Weave the 24" ribbon through the vertical openings along the basket brim, trim as shown in picture. Ribbon ends will be hidden by the handle in a later step.



ASSEMBLY



STEP 10

- With the right side facing outwards, weave the handle through the 2 horizontal openings on one of the basket sides with an eyelet.
- Connect the button and curl the handle over and repeat on the other side. Your ribbon ends should now be hidden under the handle.



STEP 12


- Each freestanding accent piece in the collection has 2 buttonettes.
- To attach these accent pieces, use tweezers or alligator clamps and pull one of the buttonettes through the inside of the basket as shown. Repeat this process for the other buttonette.




CUTTING TOOL GUIDES




12871-02

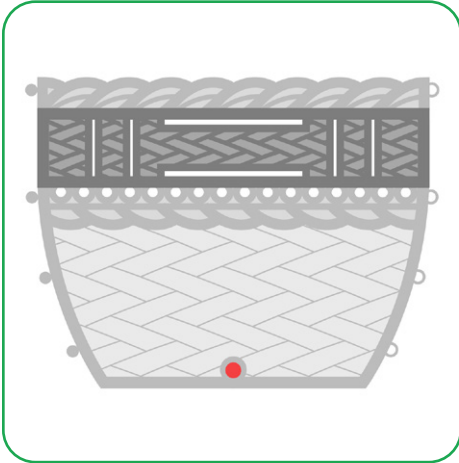

12871-04

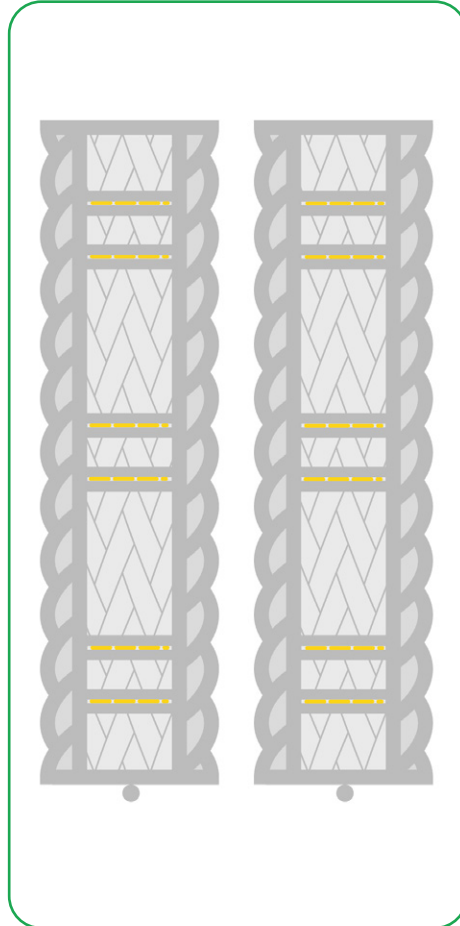

12871-05

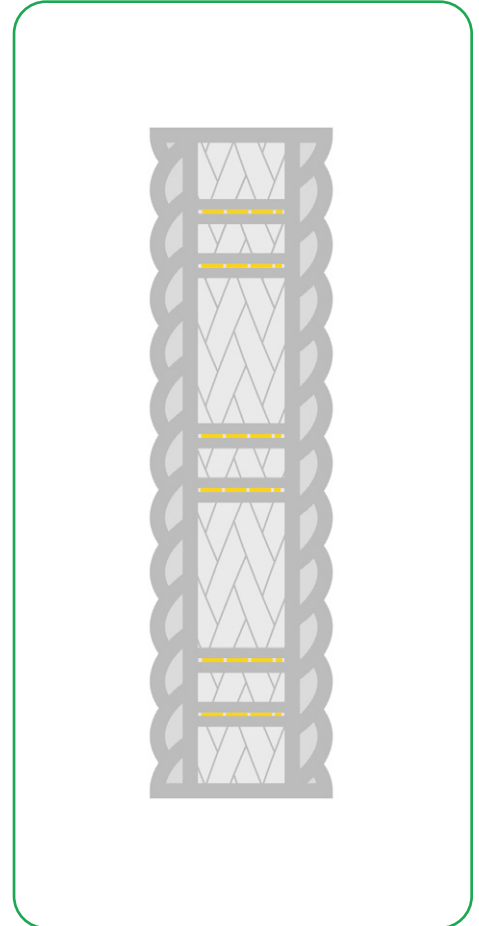

● = 2 MM

● = 3 MM

● = 4 MM

CRAFT KNIFE



General Freestanding Lace Guide



Stabilizer

- OESD AquaMesh
- OESD BadgeMaster

Notions/Tools

- 80/12 Embroidery Ballpoint Titanium needle for extended needle life
- OESD Alligator Clamps
- OESD Button Clips
- OESD Perfect Point and Press Tool (Optional)

Isacord Thread Colors

- All OESD designs are digitized with Isacord 40 wt. polyester thread as the top thread and in the bobbin.
- Refer to the thread chart for color specifications.
- Match bobbin thread color to the top thread.

Instructions

Step 1 - Hoop

For FSL structures, hoop one layer of OESD AquaMesh and one layer of OESD BadgeMaster. BadgeMaster contains more starch so, combined with the AquaMesh, the lace is more rigid. For other FSL, where a softer lace is desired, hoop two layers of AquaMesh.

Step 2 - Embroider

Stitch the design per the thread chart with matching thread in the bobbin at each color change. When complete, remove from the hoop and trim away excess stabilizer about 1/4"-1/2" from the stitching.

Step 3 - Rinse

Rinse remaining stabilizer out in warm running water. For stiffer lace and FSL structures, DO NOT rinse away all of the stabilizer. The lace should be just slightly tacky. For softer lace, rinse until all traces of the stabilizer is removed.

Step 4 - Dry

Lay right side down flat on a non-stick surface, such as a cookie rack, parchment paper or Teflon sheet. This minimizes the tendency for the lace to curl. Let the pieces dry completely before proceeding with any assembly.

Step 5 - Press

Once completely dry, press right side down on a OESD Perfect Embroidery Press Cloth.

Step 6 - Assemble Structure

Note: Specific assembly instructions for a design/collection may be found in the thread chart pdf following the individual design color charts.

Lace must be COMPLETELY DRY before assembly. Wetting the buttonettes or eyelets to assemble is not recommended and may result in them stretching and coming "unbuttoned" when dry.

Use a pair of OESD Alligator Clamps to insert the buttonettes into the eyelets. Insert the tip of the OESD Alligator Clamps into the eyelet, grasp the buttonette and pull through the eyelet. Alternatively, use a stiletto or tweezers to push the buttonette through the eyelet.

Helpful Tips

Limp Lace

If the design is not stiff enough, press the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction. Or easily re-stiffen by diluting some stabilizer scraps in water (or use liquid starch) and dipping the item in the solution. Lay flat to dry.

Eyelets Too Small

If any of the eyelets appear closed or too small to penetrate with Alligator Clamps, they may be stretched by inserting the small end of the OESD Perfect Point and Press Tool into the eyelet opening and stretching it open wide enough to accommodate the OESD Alligator Clamps.

Button Clips

During the assembly process, some structures pull on buttonettes that have already been inserted and could pull them out altogether. Putting a Button Clip on the assembled buttonette will keep it in position during the assembly process. Remove the Button Clips when the assembly is complete.


Alternative Construction Option

In some cases, the buttonettes may be pulled to the inside of a project, instead of being visible on the outside. Insert the OESD Alligator Clamps through the eyelet from the wrong, or inside, of the lace and grasp the corresponding buttonette. Pull the buttonette to the wrong side of the lace.

Pulling the buttonettes to the inside may cause stress on the ones already done. Button clips may be placed on the completed buttonette(s) to prevent them from pulling out of the eyelet.


ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

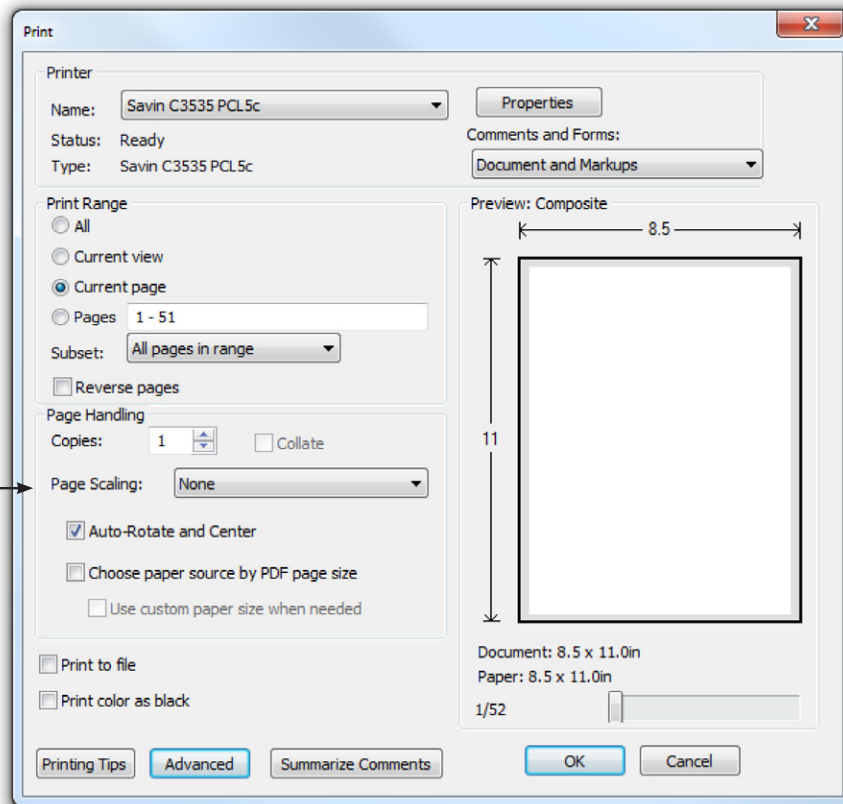

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

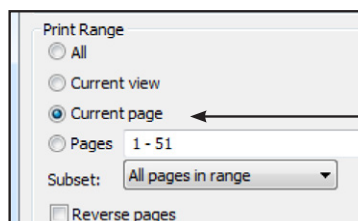


APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

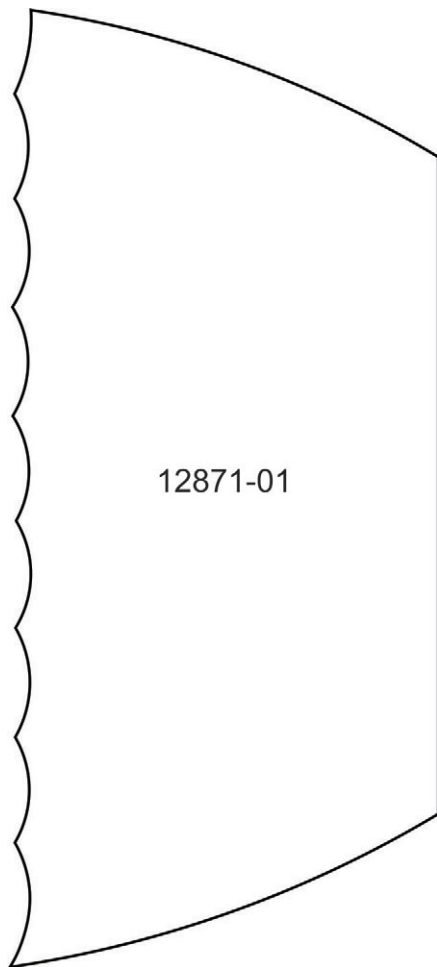

12871-01

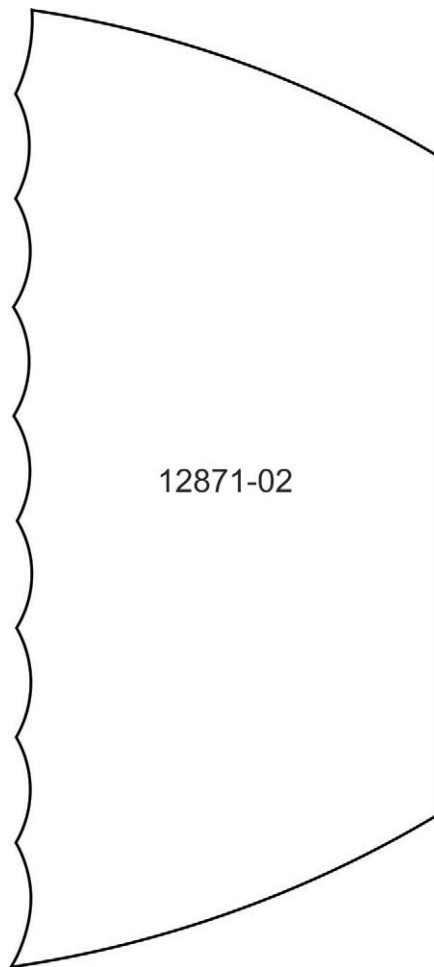

12871-02

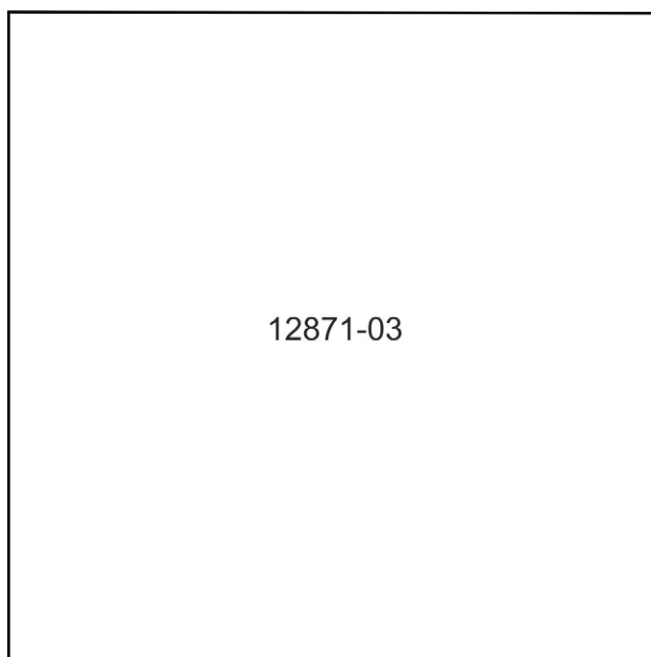

12871-03

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12871-04







12871-04

12871-05


APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

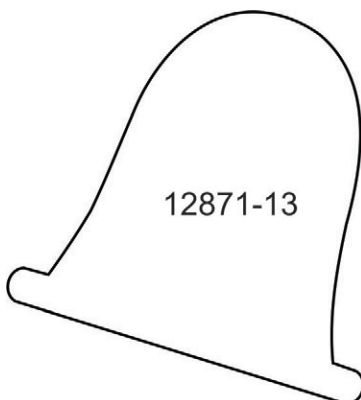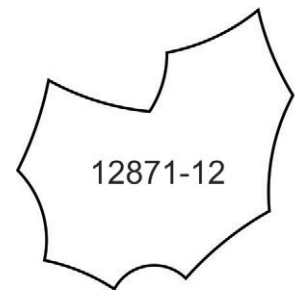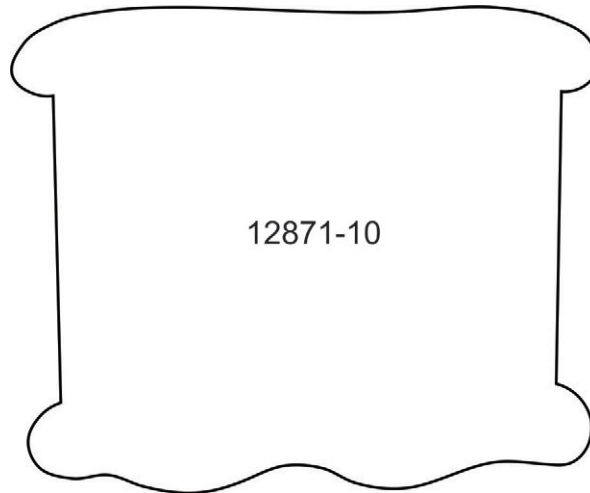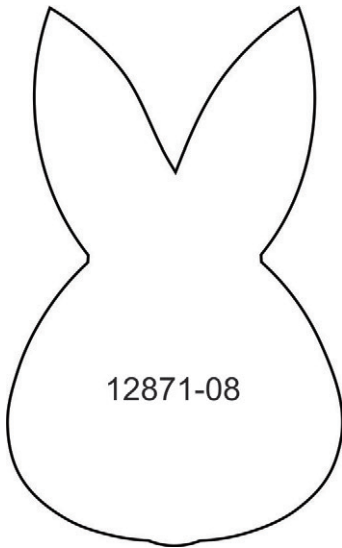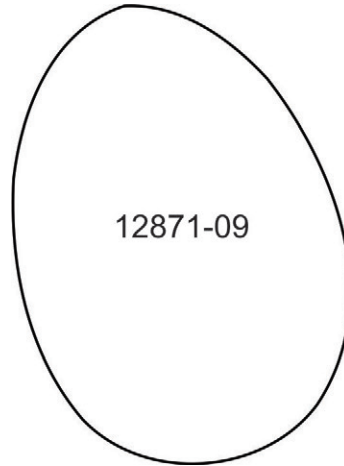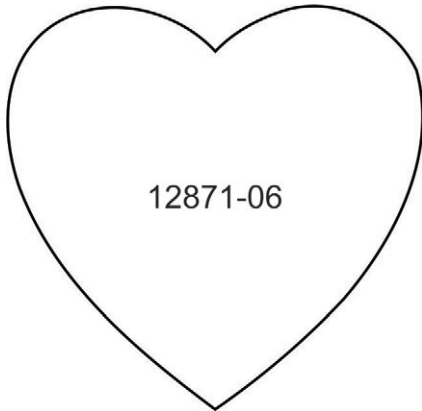

MIRRORED PATTERNS

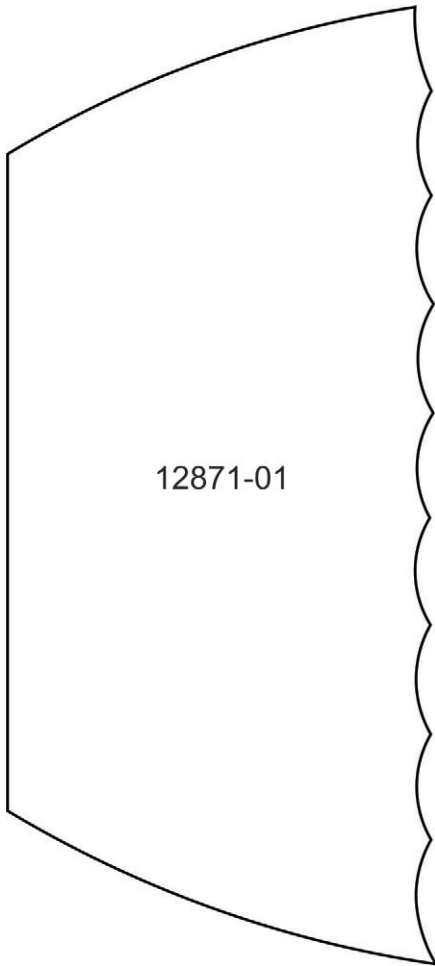


12871-01

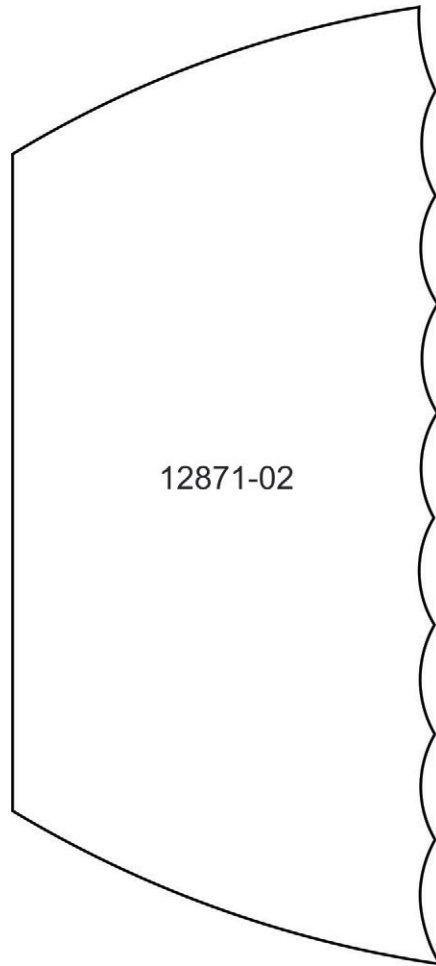

12871-02

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



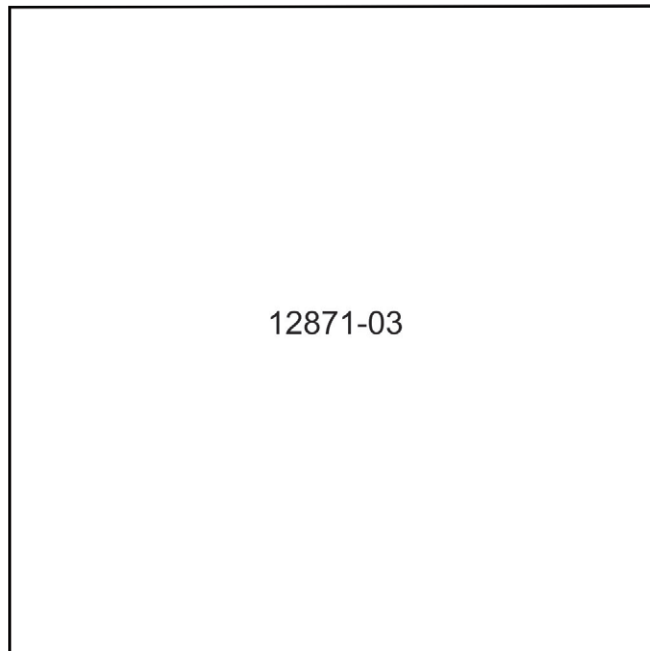


12871-03

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

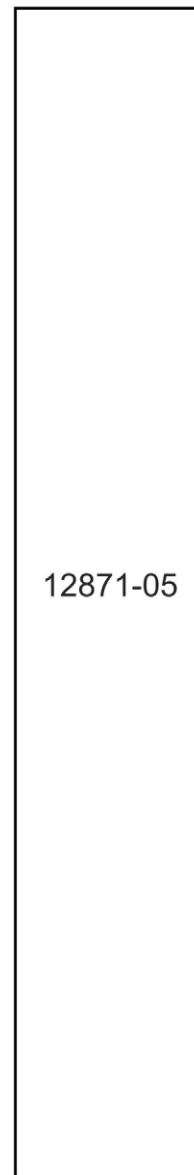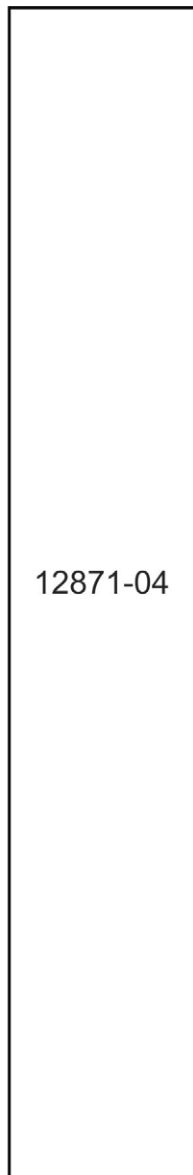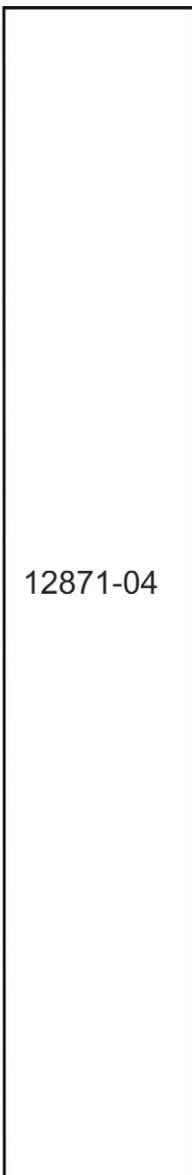

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

