

# FREESTANDING COWBOY BOOTS



2

Designs

Fits hoop sizes 8" x 12" and larger

# THREAD LIST



## Isacord Thread Colors


0010 Silky White  
0842 Toffee  
1055 Bark  
1252 Dark Tan  
4430 Island Waters

**\*Project instructions included after design list**

## DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

### \*Fabric Required

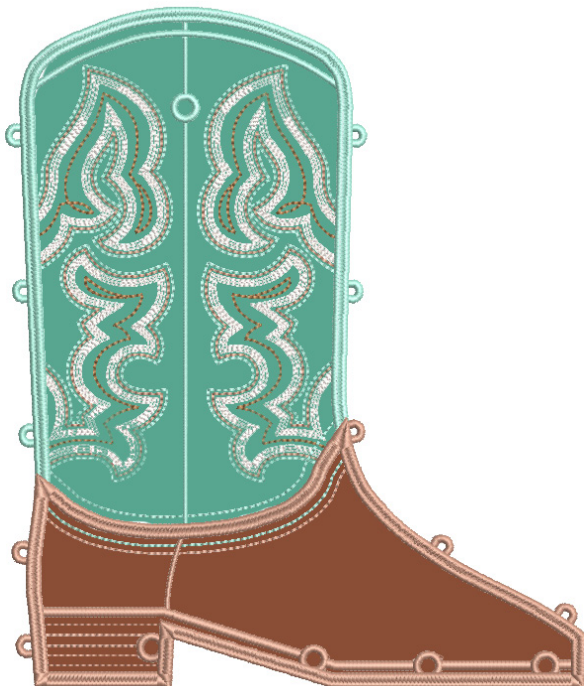

### 12875-01 Fancy Boot Side 1 FSA


Size Inches:                      Size mm:                      Stitch Count:  
**8.04 X 6.86 in.    204.2 X 174.2 mm    27515 St.**

- 1.Front Blue/Back Brown Fabric Placement Stitch ..... 0010
- 2.Cut Line and Tackdown ..... 0010
- 3.Front and Back Brown Fabric Placement Stitch ..... 0010
- 4.Cut Line and Tackdown ..... 0010
- 5.White Inner Detail ..... 0010
- 6.Dark Brown Inner Detail..... 1055
- 7.Light Brown Inner Detail ..... 1252
- 8.Blue Cover Stitch and Lace ..... 4430
- 9.Light Brown Cover Stitch and Lace ..... 1252

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

### 12875-02 Fancy Boot Side 2 FSA

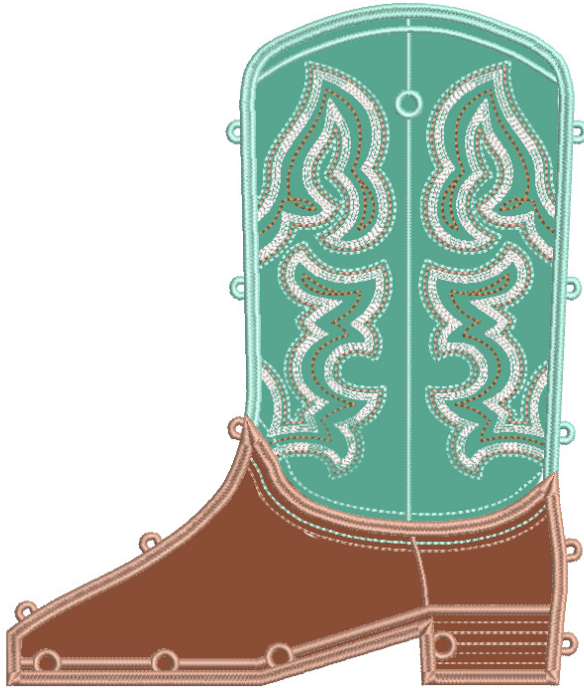


Size Inches:                      Size mm:                      Stitch Count:  
**8.04 X 6.86 in.    204.2 X 174.2 mm    27499 St.**

- 1.Front Blue/Back Brown Fabric Placement Stitch ..... 0010
- 2.Cut Line and Tackdown ..... 0010
- 3.Front and Back Brown Fabric Placement Stitch ..... 0010
- 4.Cut Line and Tackdown ..... 0010
- 5.White Inner Detail ..... 0010
- 6.Dark Brown Inner Detail..... 1055
- 7.Light Brown Inner Detail ..... 1252
- 8.Blue Cover Stitch and Lace ..... 4430
- 9.Light Brown Cover Stitch and Lace ..... 1252

**\*Fabric Required**

### 12875-03 Fancy Boot Front FSA

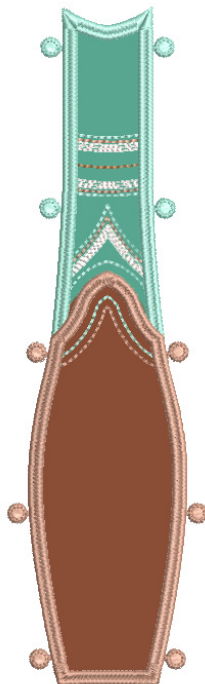


Size Inches:                      Size mm:                      Stitch Count:  
**7.77 X 2.30 in.    197.4 X 58.3 mm    9313 St.**

- 1.Front Blue/Back Brown Fabric Placement Stitch ..... 0010
- 2.Cut Line and Tackdown ..... 0010
- 3.Front and Back Brown Fabric Placement Stitch ..... 0010
- 4.Cut Line and Tackdown ..... 0010
- 5.White Inner Detail ..... 0010
- 6.Dark Brown Inner Detail..... 1055
- 7.Light Brown Inner Detail ..... 1252
- 8.Blue Cover Stitch and Lace ..... 4430
- 9.Light Brown Cover Stitch and Lace ..... 1252

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

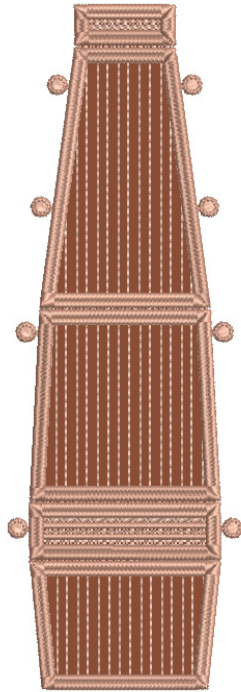


### 12875-04 Fancy Boot Sole FSA

Size Inches:                      Size mm:                      Stitch Count:  
**7.72 X 2.66 in.    196.0 X 67.4 mm    14633 St.**

- 1.Front and Back Brown Fabric Placement Stitch ..... 1252
- 2.Cut Line and Tackdown ..... 1252
- 3.Cover Stitch and Lace ..... 1252

**\*Fabric Required**

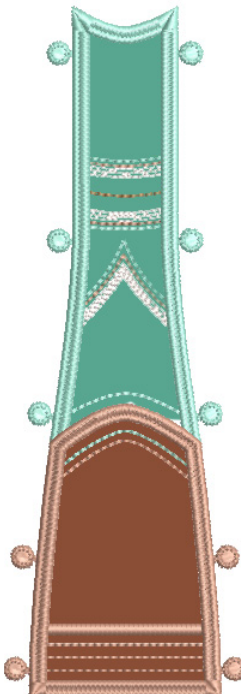


### 12875-05 Fancy Boot Back FSA

Size Inches:                      Size mm:                      Stitch Count:  
**6.76 X 2.38 in.    171.8 X 60.3 mm    9168 St.**

- 1.Front Blue/Back Brown Fabric Placement Stitch ..... 0010
- 2.Cut Line and Tackdown ..... 0010
- 3.Front and Back Brown Fabric Placement Stitch ..... 0010
- 4.Cut Line and Tackdown ..... 0010
- 5.White Inner Detail ..... 0010
- 6.Dark Brown Inner Detail..... 1055
- 7.Light Brown Inner Detail ..... 1252
- 8.Blue Cover Stitch and Lace ..... 4430
- 9.Light Brown Cover Stitch and Lace ..... 1252

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

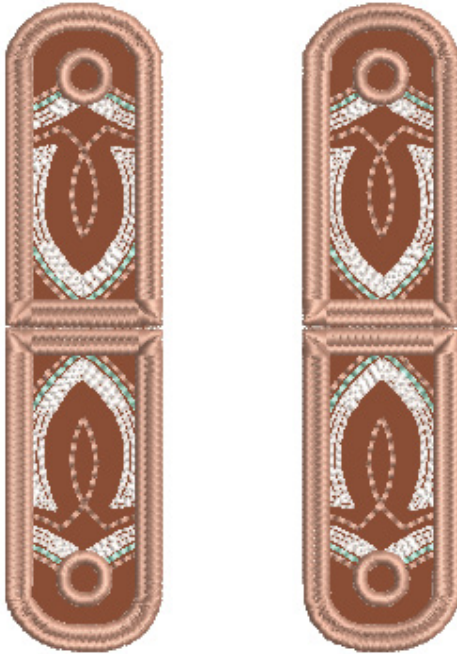


### 12875-06 Fancy Boot Straps FSA

Size Inches:                      Size mm:                      Stitch Count:  
**4.04 X 2.83 in.**    **102.6 X 71.8 mm**    **10910 St.**

- 1. Front and Back Brown Fabric Placement Stitch ..... 0010
- 2. Cut Line and Tackdown ..... 0010
- 3. White Inner Detail ..... 0010
- 4. Blue Inner Detail ..... 4430
- 5. Light Brown Cover Stitch and Lace ..... 1252

**\*Fabric Required**

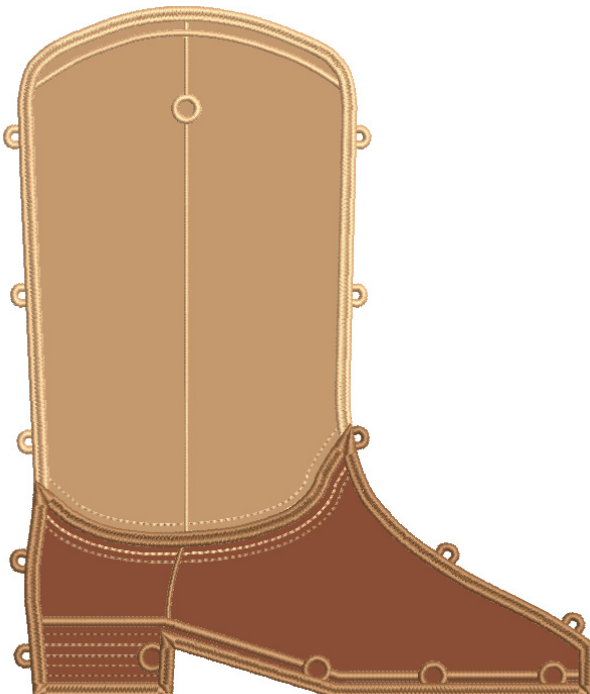

### 12875-07 Boot Side 1 FSA


Size Inches:                      Size mm:                      Stitch Count:  
**8.04 X 6.86 in.**    **204.2 X 174.2 mm**    **17330 St.**

- 1. Front Gold/Back Brown Fabric Placement Stitch..... 0842
- 2. Cut Line and Tackdown ..... 0842
- 3. Front and Back Brown Fabric Placement Stitch ..... 0842
- 4. Cut Line and Tackdown ..... 0842
- 5. Gold Cover Stitch and Lace ..... 0842
- 6. Brown Cover Stitch and Lace ..... 1055

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

**12875-08 Boot Side 2 FSA**

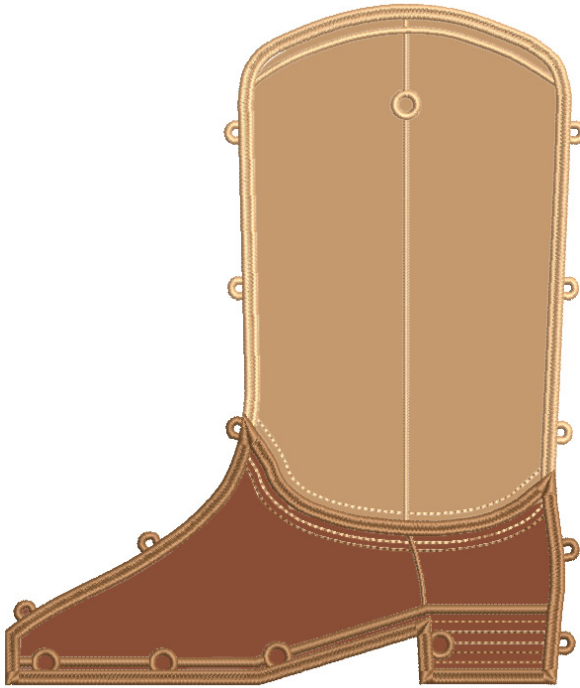


Size Inches:                      Size mm:                      Stitch Count:  
**8.04 X 6.86 in.    204.2 X 174.2 mm    17332 St.**

- 1.Front Gold/Back Brown Fabric Placement Stitch..... 0842
- 2.Cut Line and Tackdown ..... 0842
- 3.Front and Back Brown Fabric Placement Stitch ..... 0842
- 4.Cut Line and Tackdown ..... 0842
- 5.Gold Cover Stitch and Lace..... 0842
- 6.Brown Cover Stitch and Lace ..... 1055

**\*Fabric Required**

**12875-09 Boot Front FSA**

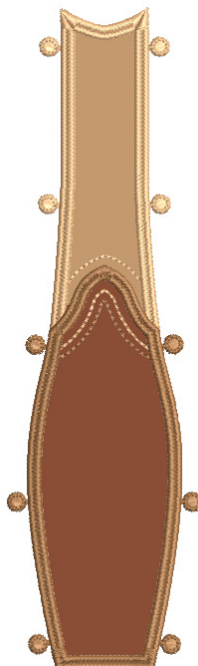


Size Inches:                      Size mm:                      Stitch Count:  
**7.77 X 2.30 in.    197.4 X 58.3 mm    8512 St.**

- 1.Front Gold/Back Brown Fabric Placement Stitch..... 0842
- 2.Cut Line and Tackdown ..... 0842
- 3.Front and Back Brown Fabric Placement Stitch ..... 0842
- 4.Cut Line and Tackdown ..... 0842
- 5.Gold Cover Stitch and Lace..... 0842
- 6.Brown Cover Stitch and Lace ..... 1055

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

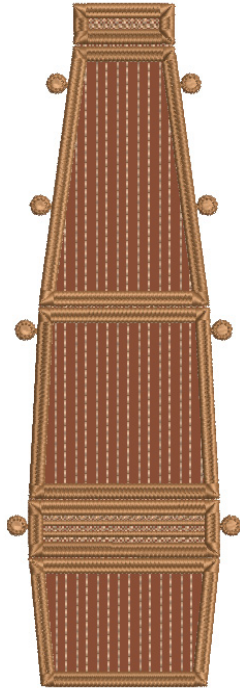

**12875-10 Boot Sole FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**7.72 X 2.66 in.    196.0 X 67.4 mm    14633 St.**

- 1.Front and Back Brown Fabric Placement Stitch ..... 1055
- 2.Cut Line and Tackdown ..... 1055
- 3.Cover Stitch and Lace ..... 1055

**\*Fabric Required**




**12875-11 Boot Back FSA**

Size Inches:                      Size mm:                      Stitch Count:  
**6.76 X 2.38 in.    171.8 X 60.3 mm    8341 St.**

- 1.Front Gold/Back Brown Fabric Placement Stitch..... 0842
- 2.Cut Line and Tackdown ..... 0842
- 3.Front and Back Brown Fabric Placement Stitch ..... 0842
- 4.Cut Line and Tackdown ..... 0842
- 5.Gold Cover Stitch and Lace..... 0842
- 6.Brown Cover Stitch and Lace ..... 1055

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

**\*Fabric Required**

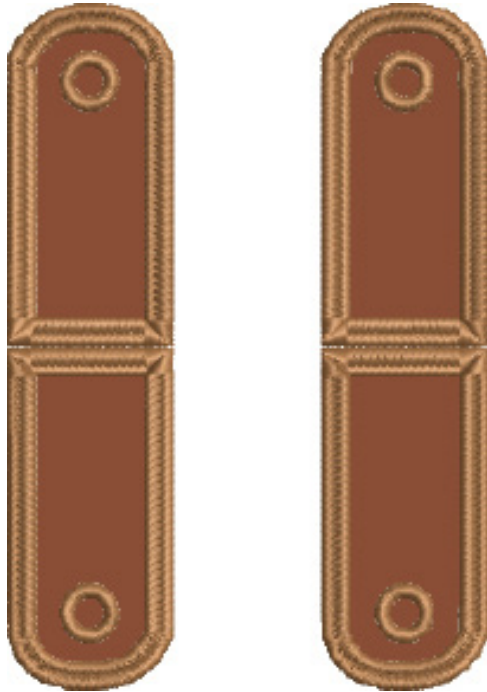

### 12875-12 Boot Straps FSA

Size Inches:	Size mm:	Stitch Count:
<b>4.04 X 2.83 in.</b>	<b>102.6 X 71.8 mm</b>	<b>8114 St.</b>

- 1.Front and Back Brown Fabric Placement Stitch ..... 1055
- 2.Cut Line and Tackdown ..... 1055
- 3.Brown Cover Stitch and Lace ..... 1055



# COLLECTION SUPPLIES



## Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway

## Notions & Tools

- OESD Alligator Clamps
- OESD Button Clips
- Expert Embroidery Tape TearAway
- Expert Embroidery Tape WashAway
- OESD Perfect Punch Tool
- OESD Perfect Embroidery Press Cloth
- 2 brass or colored brads (8 x 20 mm)
- Embroidery Needle Sharp 75/11

## Isacord Thread Colors

- Per thread chart
- Match bobbin thread to top thread

## Fabrics/Textiles

- Fabrics below include both outer and lining fabrics. Lining fabric is brown for the Fancy and Plain Boot.


### Fancy Boot

- Completed Size:  
8 ¼" H x 6 ¾" W x 2 ½" D
- Blue Fabric:  
Boot sides (2) 5 ½" x 7"  
Boot front (1) 3" x 5"  
Boot back (1) 3" x 5 ½"

#### Brown Fabric:


- Boot Sides  
(4) 8" x 4"  
(2) 5 ½" x 7"
- Boot Front  
(2) 3" x 6"  
(1) 3" x 5"
- Boot Sole  
(2) 3" x 8 ½"
- Boot Back  
(2) 3" x 4"  
(1) 3" x 5 ½"
- Bootstraps  
(4) 2" x 5"

12875-01

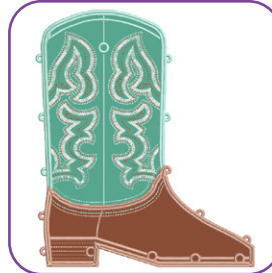


Requires 1 Design

12875-02

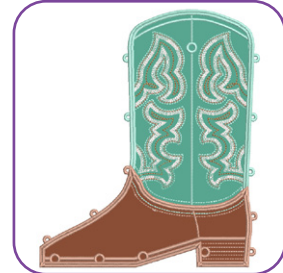


Requires 1 Design

12875-03

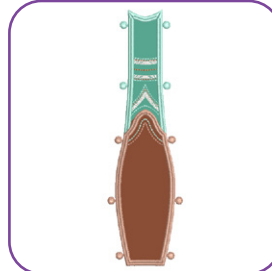


Requires 1 Design

12875-04

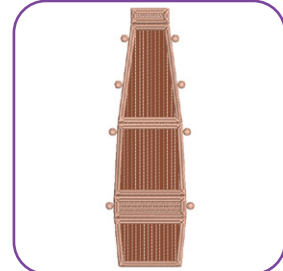


Requires 1 Design

12875-05

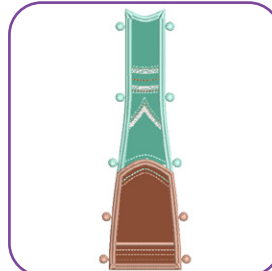

Requires 1 Design

12875-06

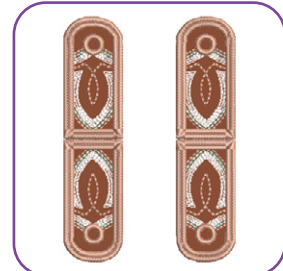







Requires 1 Design

## Fabrics/Textiles

- Fabrics below include both outer and lining fabrics. Lining fabric is brown for the Fancy and Plain Boot.

**Plain Boot**

- Completed Size:  
8 ¼" H x 6 ¾" W x 2 ½" D
- Gold Fabric:  
Boot sides (2) 5 ½" x 7"  
Boot front (1) 3" x 5"  
Boot back (1) 3" x 5 ½"
- Brown Fabric:
  - Boot Sides  
(4) 8" x 4"  
(2) 5 ½" x 7"
  - Boot Front  
(2) 3" x 6"  
(1) 3" x 5"
  - Boot Sole  
(2) 3" x 8 ½"
  - Boot Back  
(2) 3" x 4"  
(1) 3" x 5 ½"
  - Bootstraps  
(4) 2" x 5"

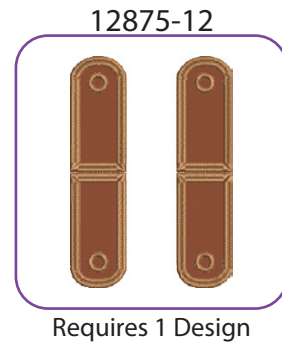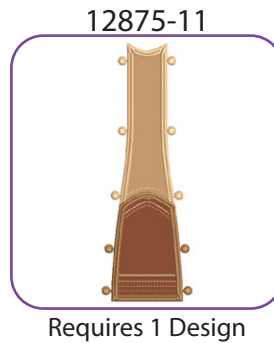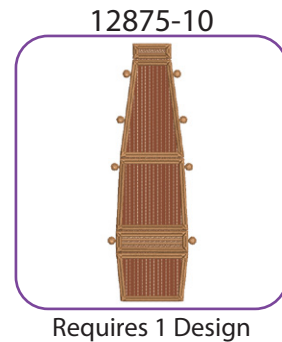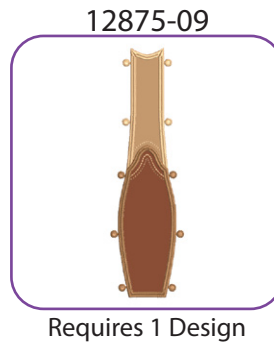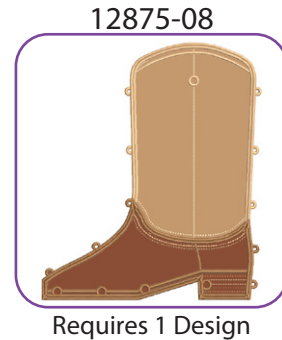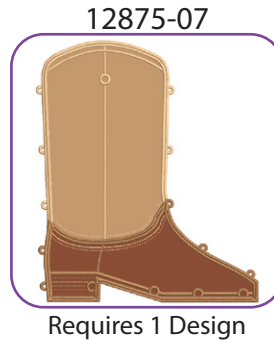

## NOTE

- The instructions included in the design pack are general instructions for the collection. For demonstration purposes, a sample design that best represents the entire collection is shown. Example design is 12875-01. Fabric and thread requirements will vary by design, but the general technique will be the same.
- All designs are stitched with matching thread in the top and bobbin.
- Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

## STEP 1

- Hoop one layer of AquaMesh and one layer of BadgeMaster for all designs.




# EMBROIDERY



## STEP 2

- Adhere one layer of StabilStick CutAway to the wrong side of all fabrics as shown. This provides stiffness to the finished structure.

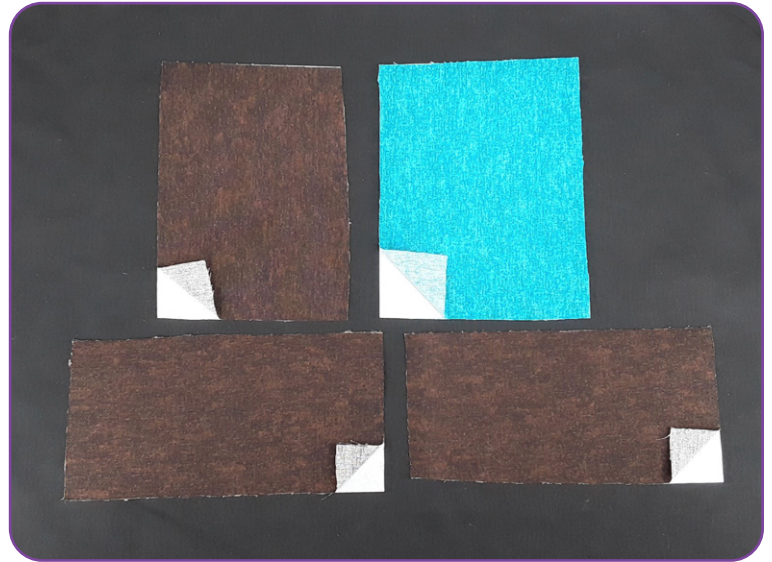

## STEP 3

- Load selected design into the machine.
- Design in the example is 12875-01.
- Thread the machine per the thread chart, matching bobbin thread to the top thread throughout.
- Stitch Machine Step 1, Front Blue/Back Brown Fabric Placement Stitch




# EMBROIDERY



## STEP 4

- Remove the hoop from the machine, but NOT the project from the hoop. Lay the hoop on a flat surface.
- Cover the placement line completely with the prepared blue 5 ½" x 7" fabric.
- Tape in place to secure.

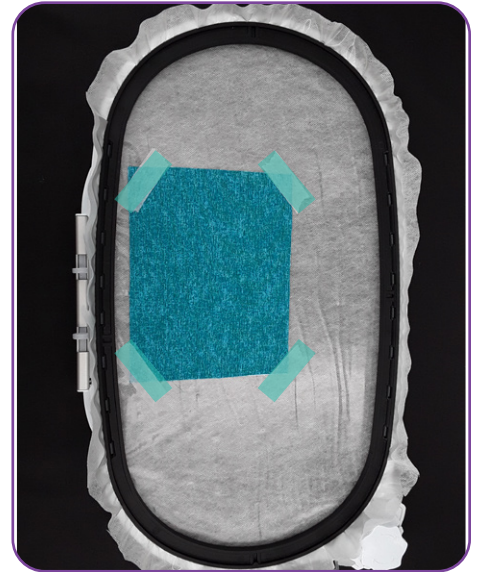


## STEP 5

- Turn the hoop over and place the prepared brown 5 ½" x 7" lining fabric right side up covering the placement stitch.
- Carefully tape to secure. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.




## STEP 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

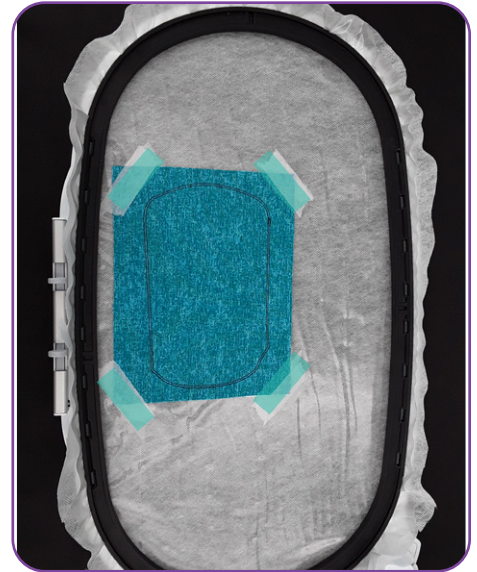

## STEP 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line stitching as possible. If the outermost stitches are cut, the inner stitches will still hold the applique in place.
- Tip: If the AquaMesh is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway or Aqua Mesh Plus as a patch.

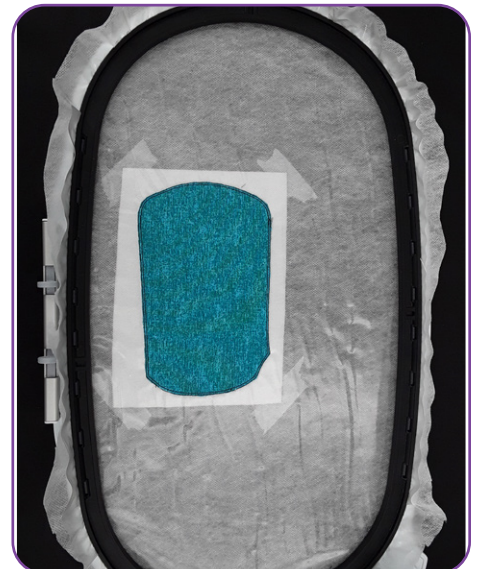


## STEP 8

- Turn the hoop over and trim the excess fabric as close to the cut line stitching as possible.



## STEP 9


- Return the hoop to the machine.
- Stitch Machine Step 3, Front and Back Brown Fabric Placement Stitch.

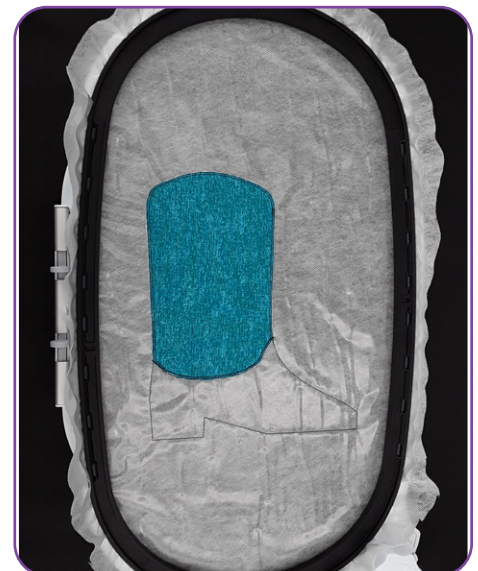



## STEP 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay the hoop on a flat surface.
- Cover the placement line completely with the prepared brown 8" x 4" fabric.
- Tape in place to secure.

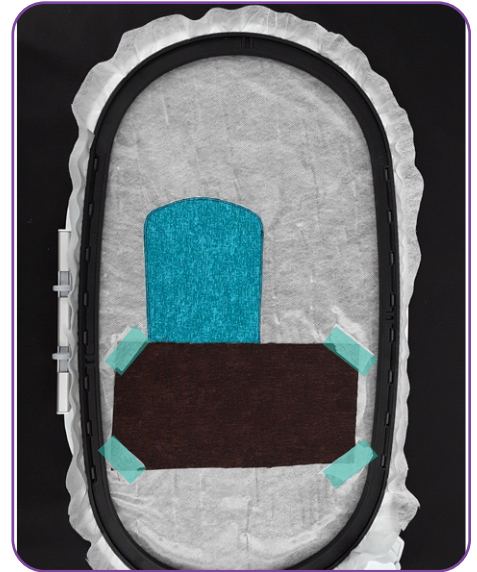

## STEP 11

- Turn the hoop over and place the prepared 8" x 4" brown lining fabric right side up covering the placement stitch.
- Carefully tape to secure. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.




# EMBROIDERY



## STEP 12

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

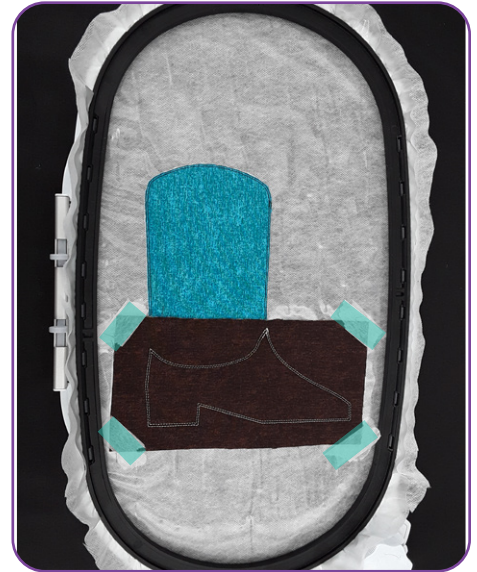

## STEP 13

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line stitching as possible.



## STEP 14

- Turn the hoop over and trim the excess fabric as close to the cut line stitching as possible.



## STEP 15

- Return the hoop to the machine and stitch the remaining colors according to the thread chart.
- Match the bobbin thread to the upper thread colors.



# EMBROIDERY



## STEP 16

- When design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.




# ASSEMBLY




## STEP 1

- Rinse each piece in warm running water until the design is only slightly sticky.
- Lay face down on a non-stick surface to dry.
- Tip: Parchment paper or a cooling rack work well. This prevents the piece from curling.

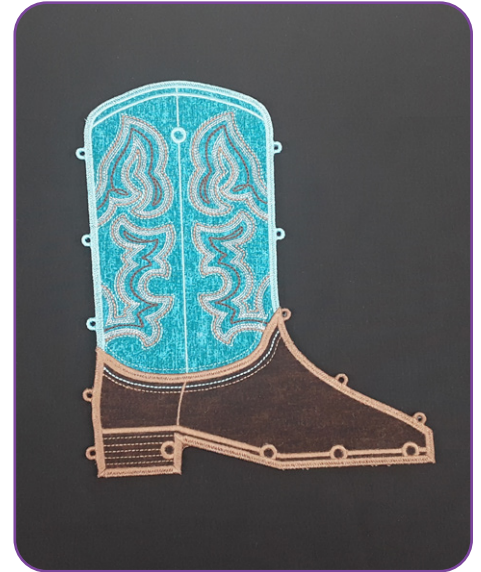

## STEP 2

- Press each piece, right side down, on a Perfect Embroidery Press Cloth.

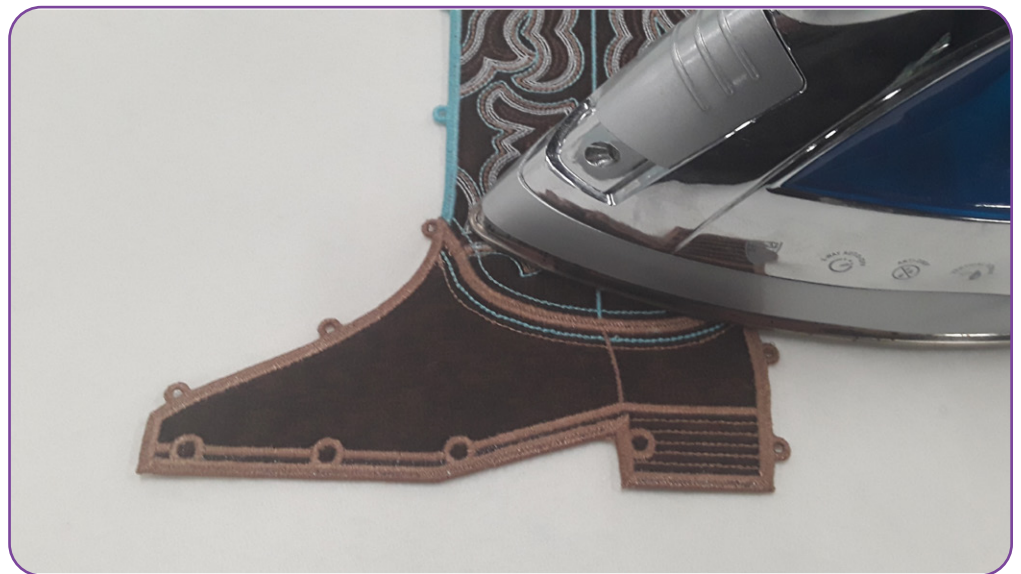


# ASSEMBLY




## STEP 3

- Insert the 3mm attachment into the Expert Punch Tool, punch holes in the eyelets on both boot sides. Refer to the punch tool guides on page 26 for hole placement.

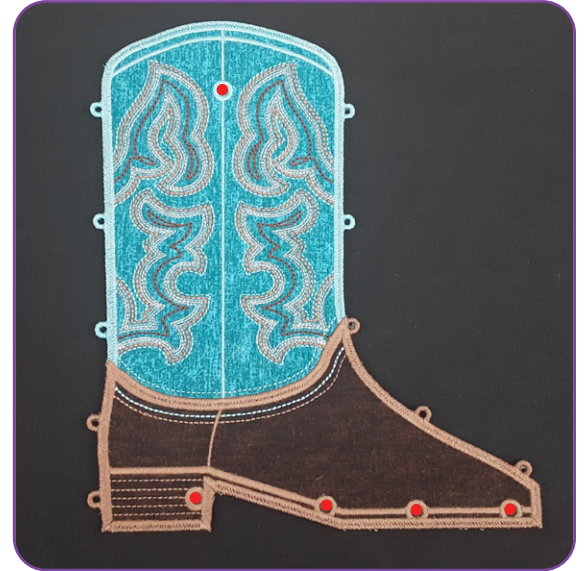

## STEP 4

- With right side up, line up the Back (12875-05), Sole (12875-04) and Front (12875-03) pieces to connect.
- Thread the sewing machine with matching thread in the top and bobbin.
- Using an open toe or edge stitch foot, stitch together using a multi-step zigzag stitch (also known as a serpentine stitch).
- Back stitch at the beginning and end to secure.
- Trim thread tails.

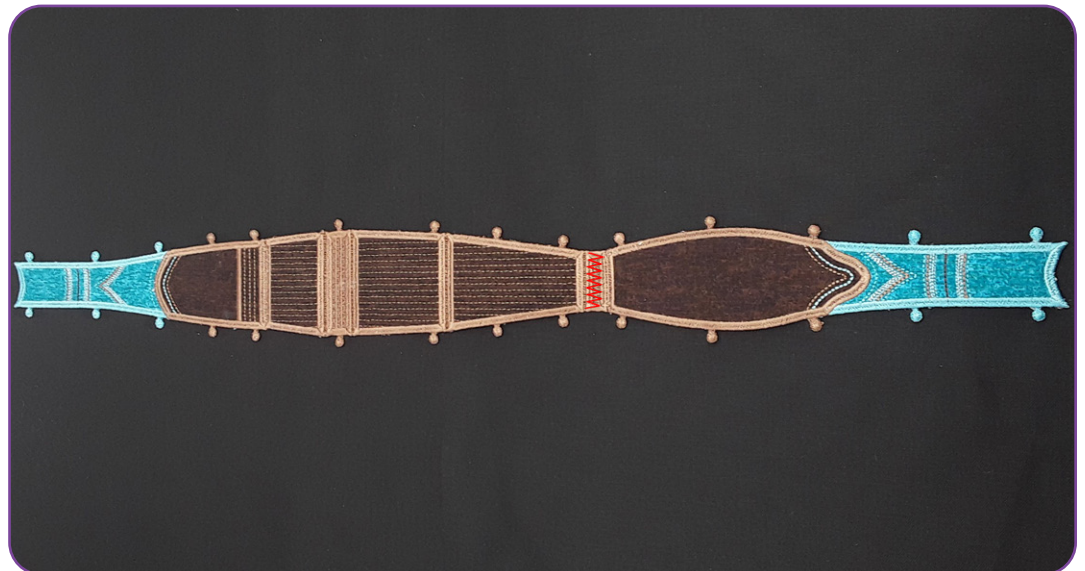


# ASSEMBLY




## STEP 5

- Match the eyelets on the boot sides (12875-01 & 12875-02) to the corresponding buttonettes on the boot back (12875-05) as shown.
- Pull each buttonette through the corresponding eyelet, using button clips to temporarily hold them in place, as needed.

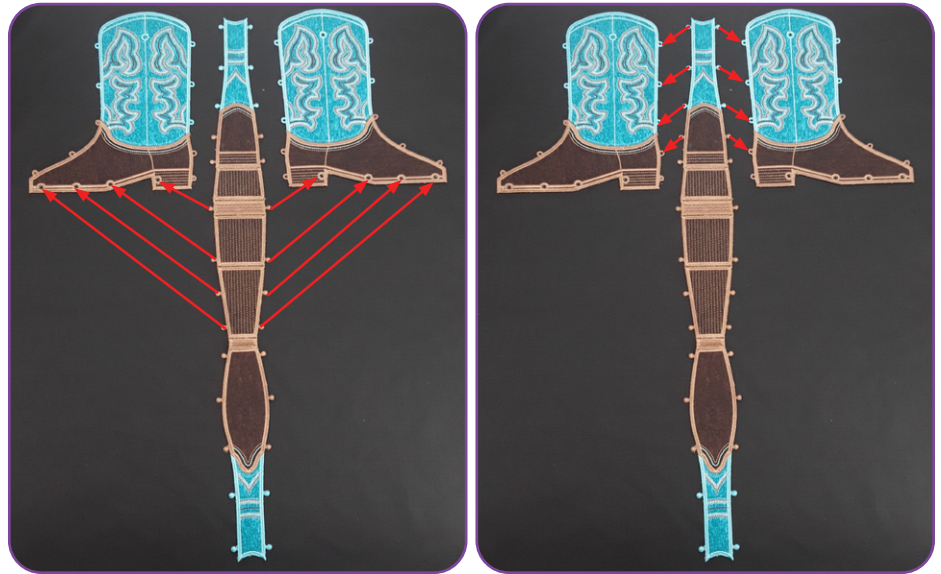

## STEP 6

- Match the eyelets on the boot sides to the corresponding buttonettes on the boot front as shown.

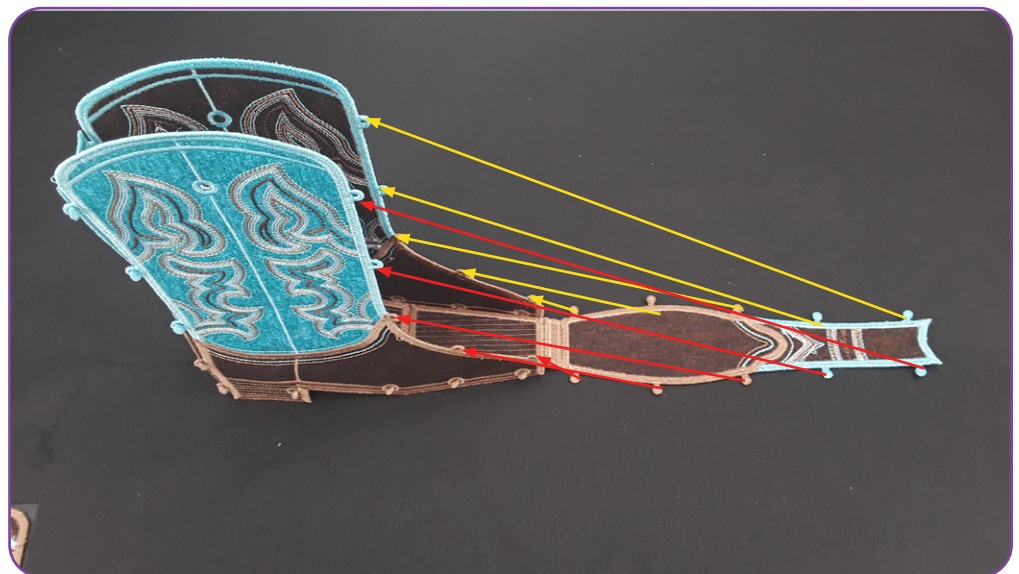

# ASSEMBLY




## STEP 7

- Fold the two boot straps at the hinge, wrong sides together.



## STEP 8

- Place one end of the strap on the outside of the boot and the other on the inside.
- Insert a brad through all three layers.
- Fold the brad apart to secure the strap in place.

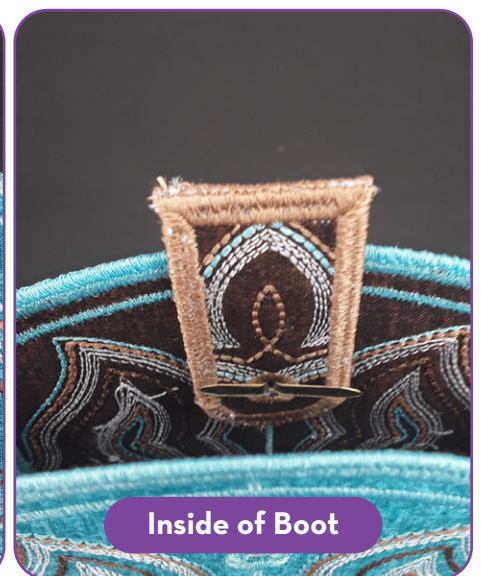



# General Freestanding Lace Guide



## Stabilizer

- OESD AquaMesh
- OESD BadgeMaster

## Notions/Tools

- 80/12 Embroidery Ballpoint Titanium needle for extended needle life
- OESD Alligator Clamps
- OESD Button Clips
- OESD Perfect Point and Press Tool

## Isacord Thread Colors

- All OESD designs are digitized with Isacord 40 wt. polyester thread as the top thread and in the bobbin.
- Refer to the thread chart for color specifications.
- Match bobbin thread color to the top thread.

## Instructions

### Step 1 - Hoop

For FSL structures, hoop one layer of OESD AquaMesh and one layer of OESD BadgeMaster. BadgeMaster contains more starch so, combined with the AquaMesh, the lace is more rigid. For other FSL, where a softer lace is desired, hoop two layers of AquaMesh.

### Step 2 - Embroider

Stitch the design per the thread chart with matching thread in the bobbin at each color change. When complete, remove from the hoop and trim away excess stabilizer about 1/4"-1/2" from the stitching.

### Step 3 - Rinse

Rinse remaining stabilizer out in warm running water. For stiffer lace and FSL structures, DO NOT rinse away all of the stabilizer. The lace should be just slightly tacky. For softer lace, rinse until all traces of the stabilizer are removed.

### Step 4 - Dry

Lay right side down flat on a non-stick surface, such as a cooling rack, parchment paper or Teflon sheet. This minimizes the tendency for the lace to curl. Let the pieces dry completely before proceeding with any assembly.

### Step 5 - Press

Once completely dry, press right side down on a OESD Perfect Embroidery Press Cloth.

### Step 6 - Assemble Structure

Note: Specific assembly instructions for a design/collection may be found in the thread chart pdf following the individual design color charts.

Lace must be COMPLETELY DRY before assembly. Wetting the buttonettes or eyelets to assemble is not recommended and may result in them stretching and coming "unbuttoned" when dry.

Use a pair of OESD Alligator Clamps to insert the buttonettes into the eyelets. Insert the tip of the OESD Alligator Clamps into the eyelet, grasp the buttonette and pull through the eyelet. Alternatively, use a stiletto or tweezers to push the buttonette through the eyelet.

## Helpful Tips

### Limp Lace

If the design is not stiff enough, press the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction. Or easily re-stiffen by diluting some stabilizer scraps in water (or use liquid starch) and dipping the item in the solution. Lay flat to dry.

### Eyelets Too Small

If any of the eyelets appear closed or too small to penetrate with Alligator Clamps, they may be stretched by inserting the small end of the OESD Perfect Point and Press Tool into the eyelet opening and stretching it open wide enough to accommodate the OESD Alligator Clamps.

### Button Clips

During the assembly process, some structures pull on buttonettes that have already been inserted and could pull them out altogether. Putting a Button Clip on the assembled buttonette will keep it in position during the assembly process. Remove the Button Clips when the assembly is complete.

### Alternative Construction Option

In some cases, the buttonettes may be pulled to the inside of a project, instead of being visible on the outside. Insert the OESD Alligator Clamps through the eyelet from the wrong, or inside, of the lace and grasp the corresponding buttonette. Pull the buttonette to the wrong side of the lace.

Pulling the buttonettes to the inside may cause stress on the ones already done. Button clips may be placed on the completed buttonette(s) to prevent them from pulling out of the eyelet during construction.


# PUNCH TOOL GUIDES




12875-01




12875-02

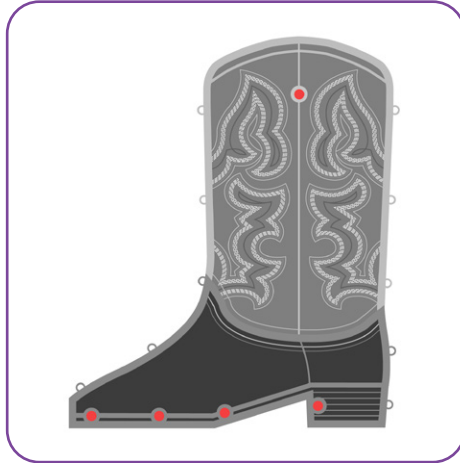


12875-06

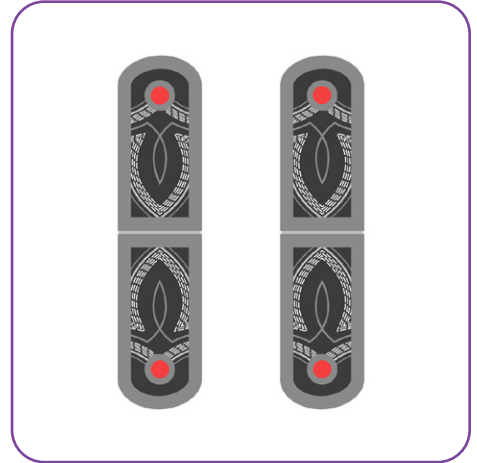


12875-07

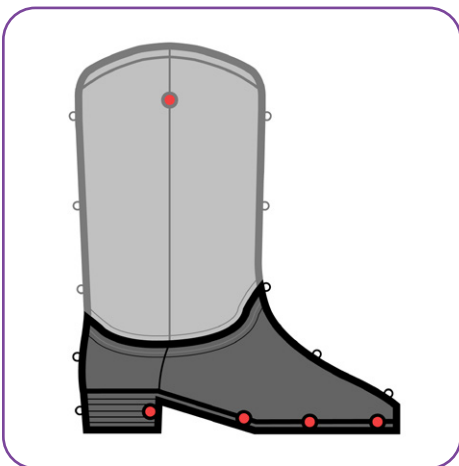

12875-08

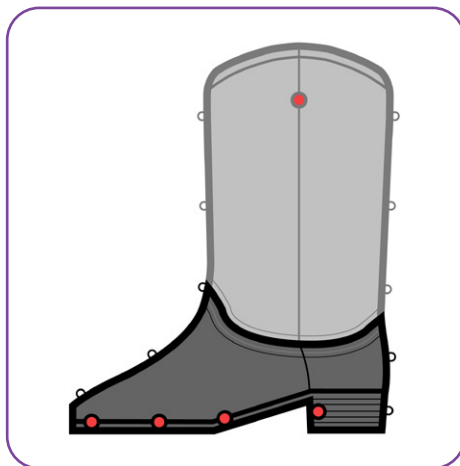


12875-12

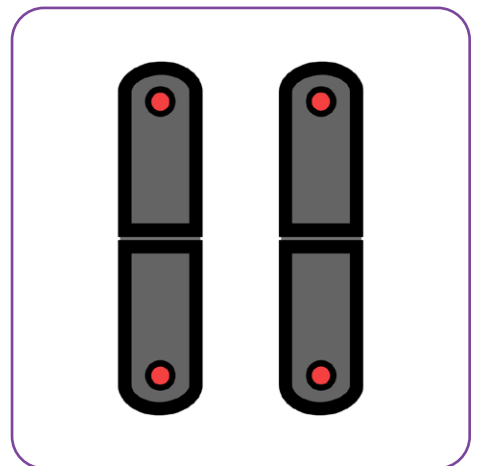

-  = 2 MM
-  = 3 MM
-  = 4 MM


## ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

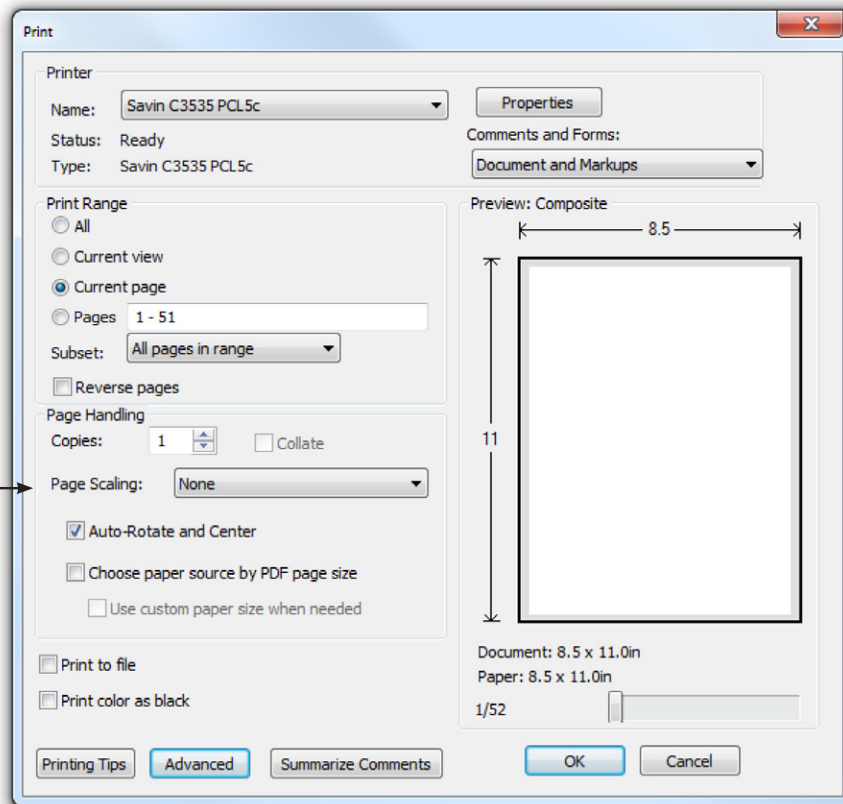

## TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

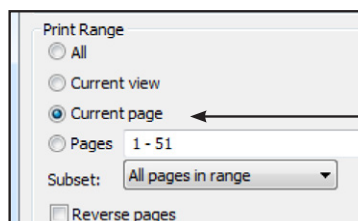


# APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

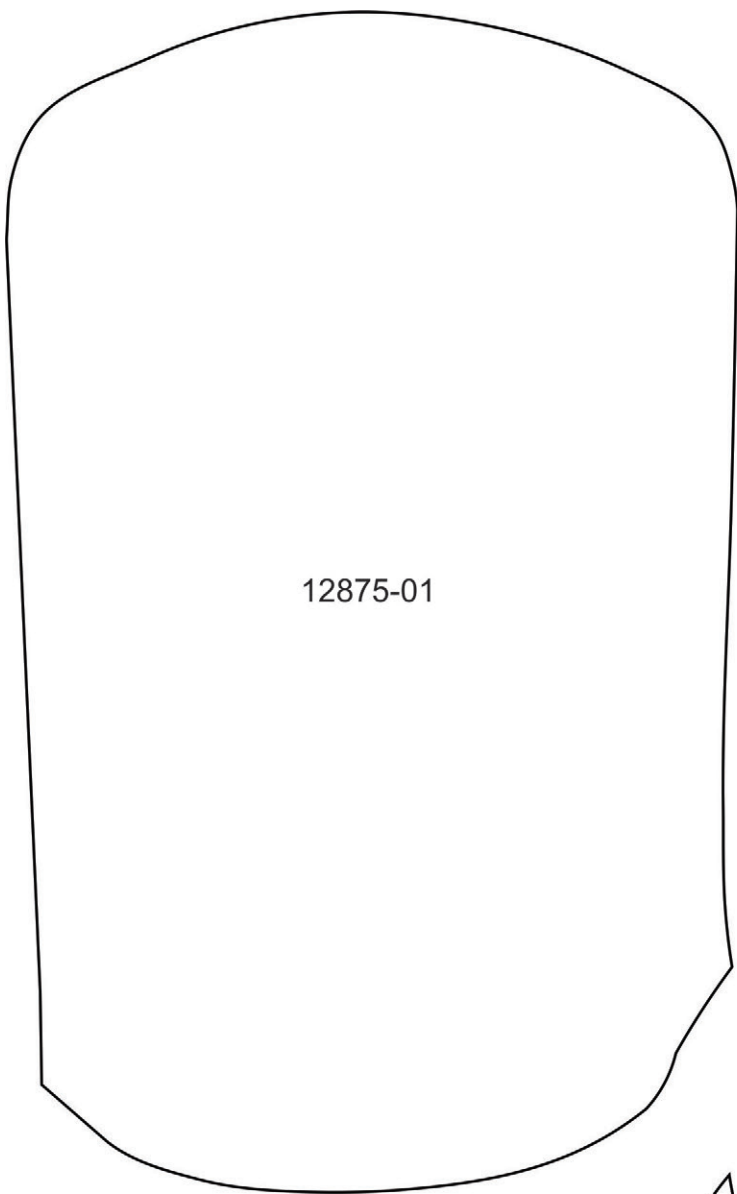

12875-01


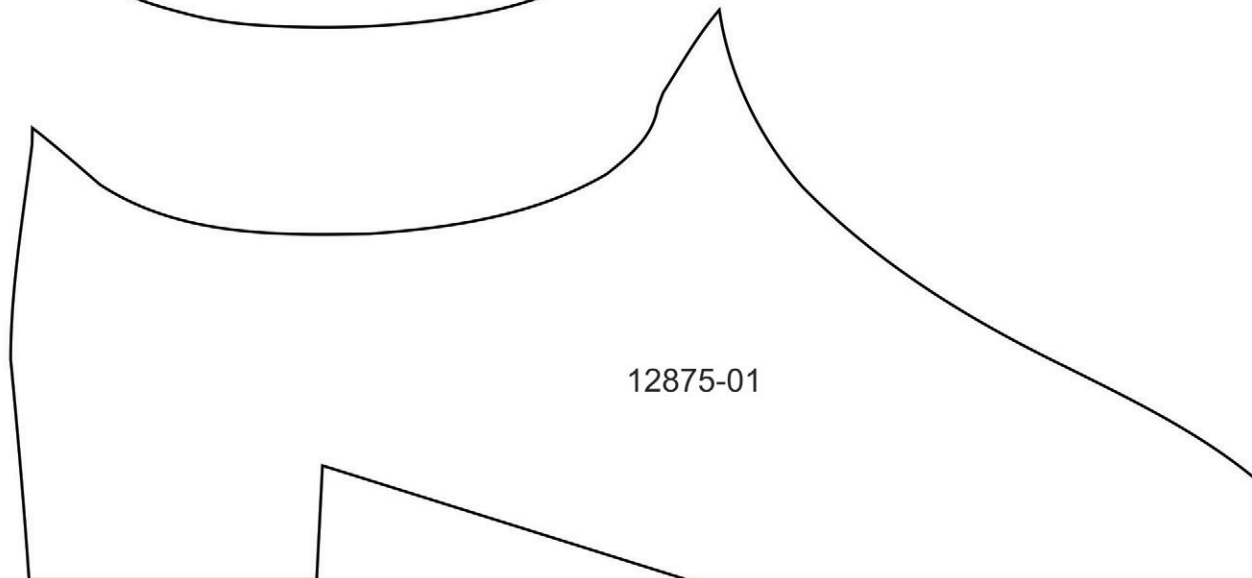


12875-01

# APPLIQUE PATTERNS










Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

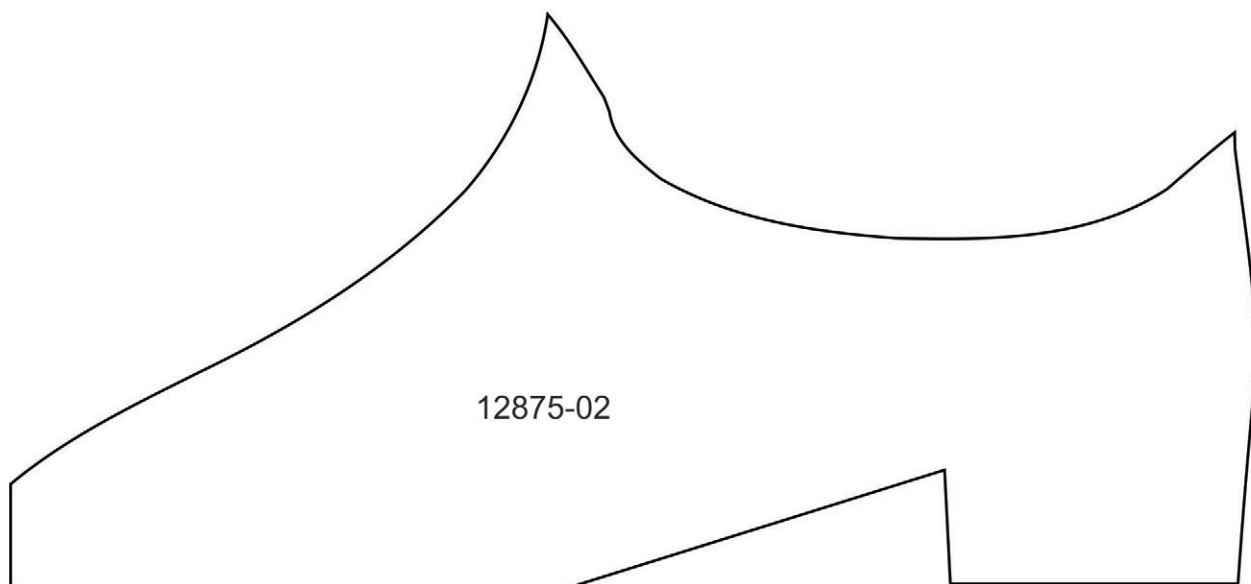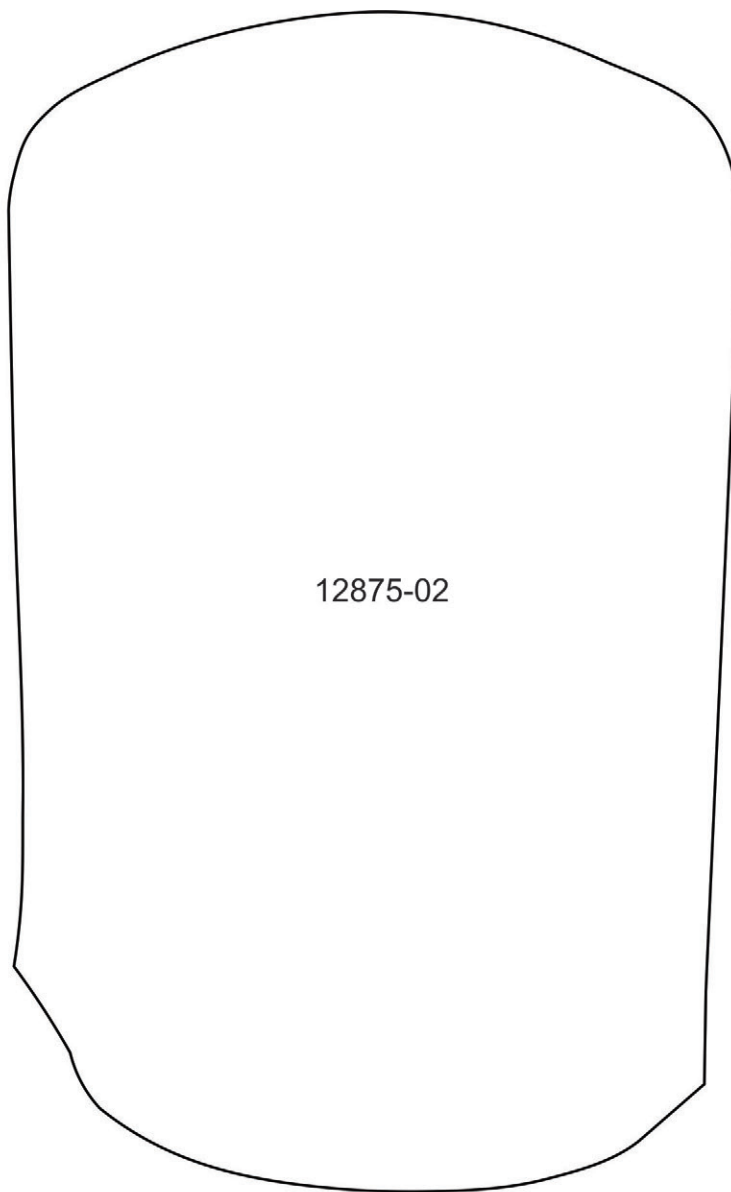

# APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

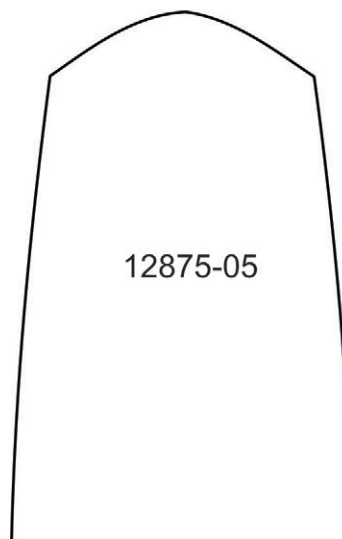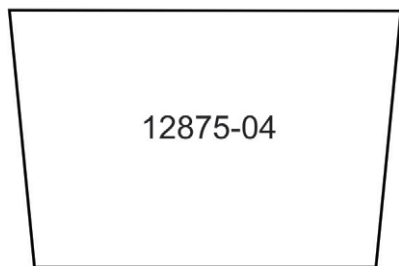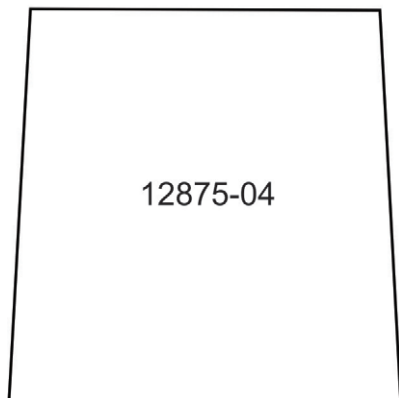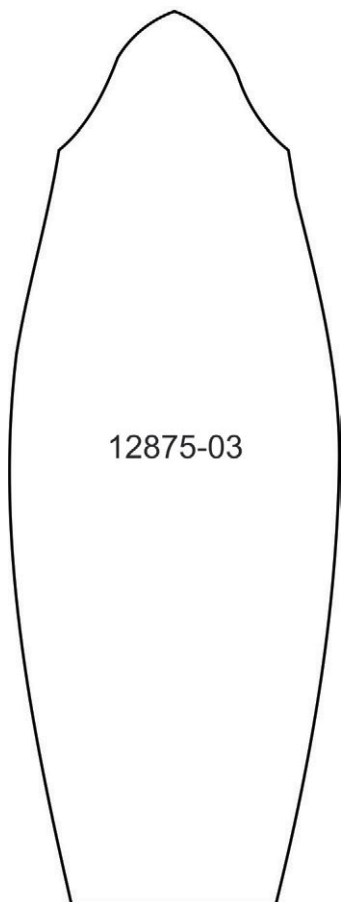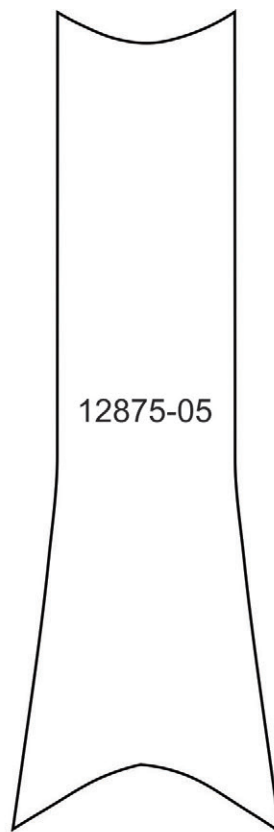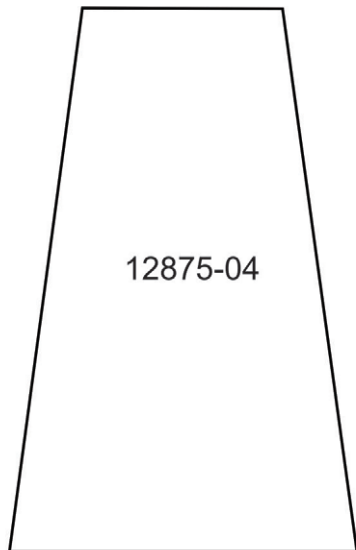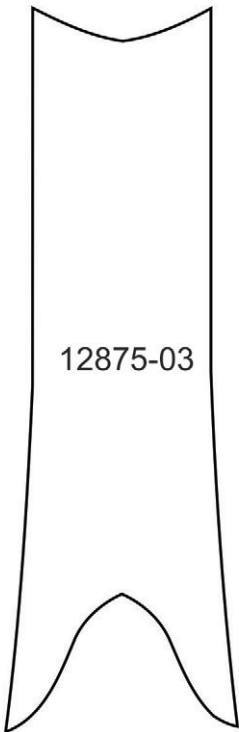

# APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

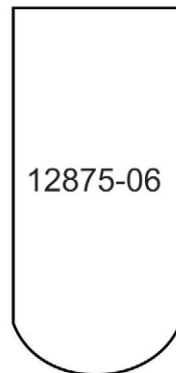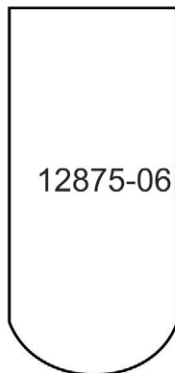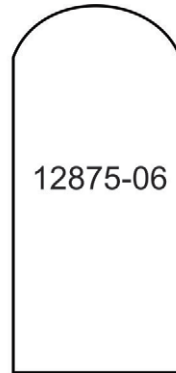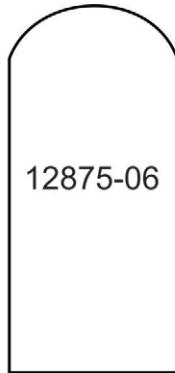


# APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

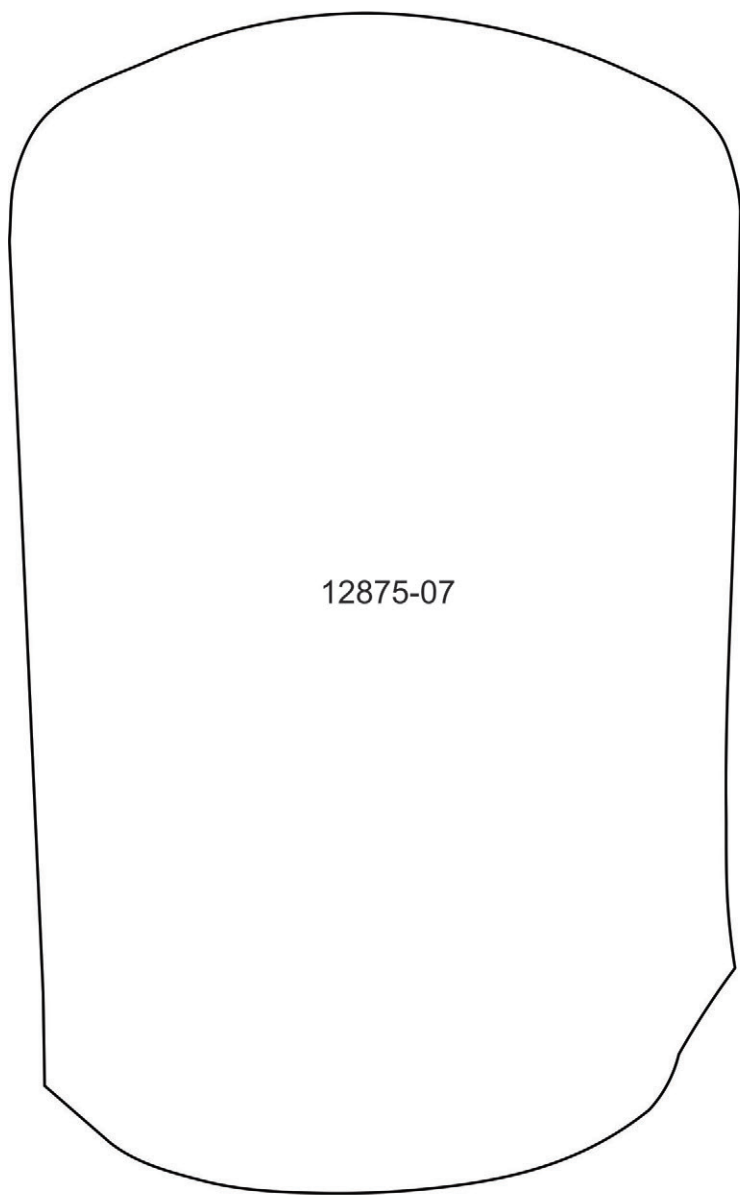

12875-07

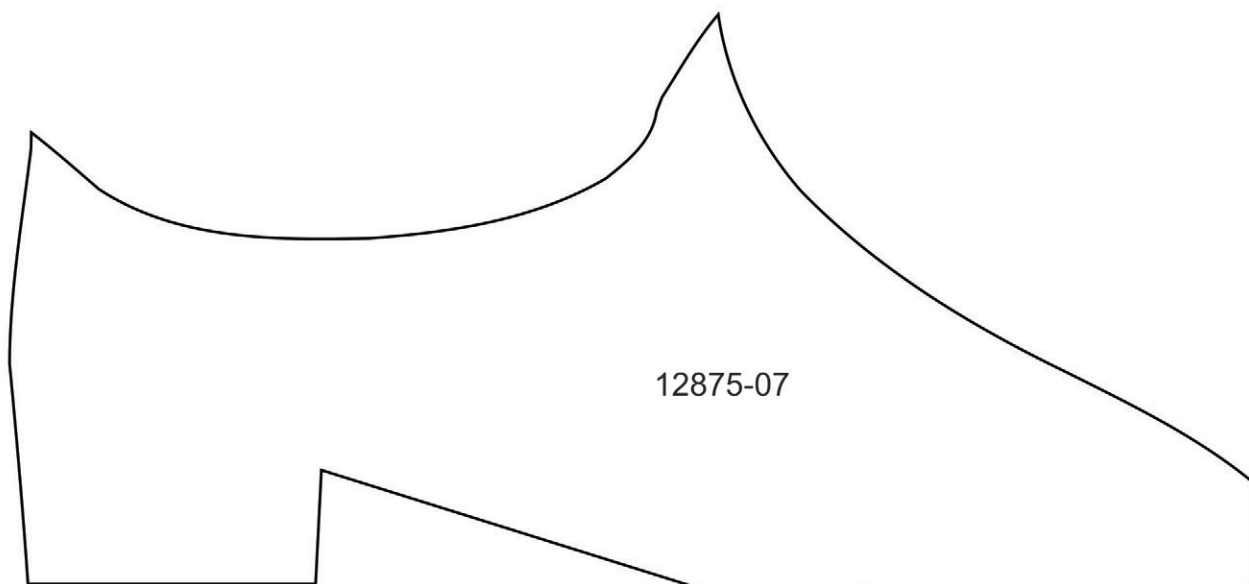



12875-07



# APPLIQUE PATTERNS










Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

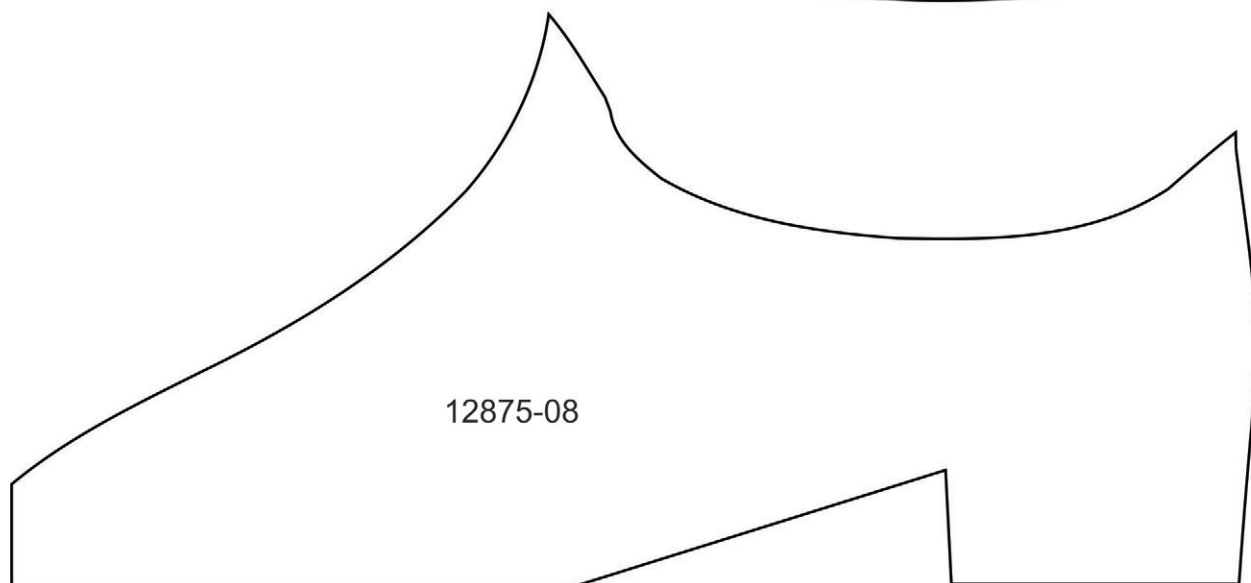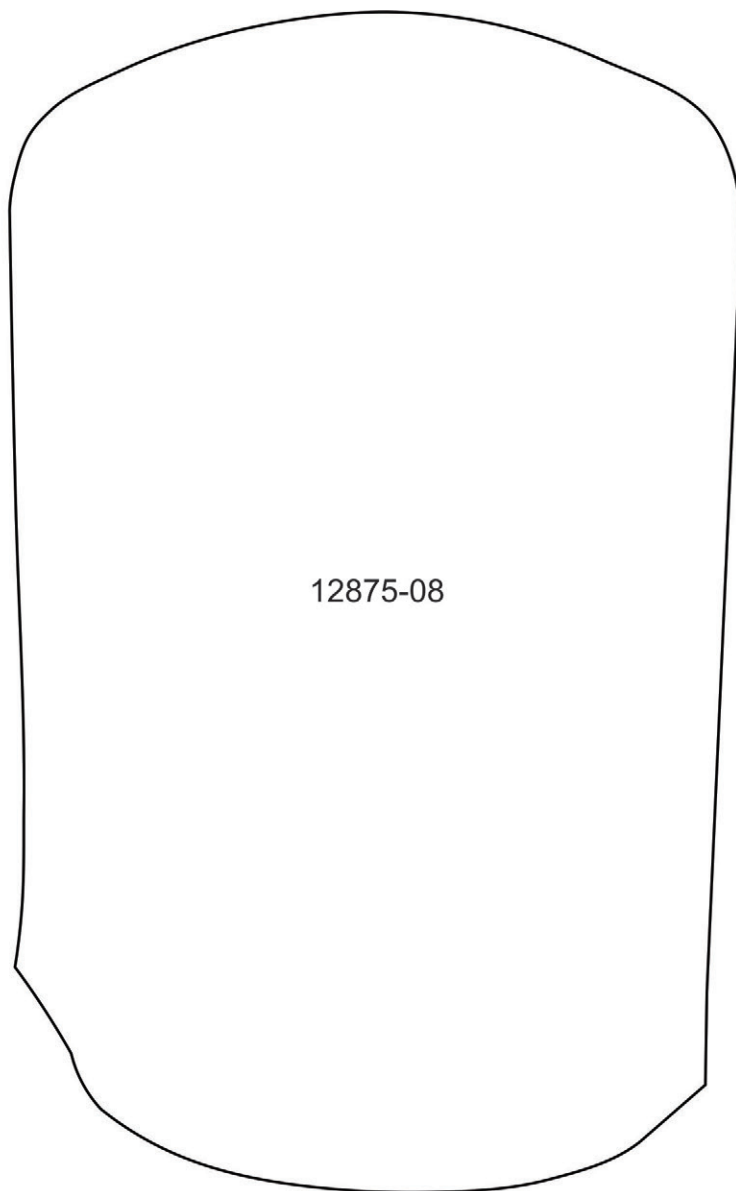

# APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

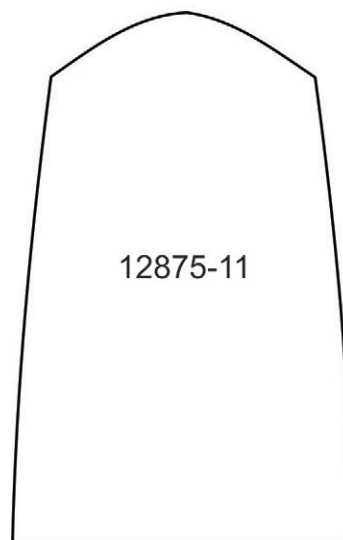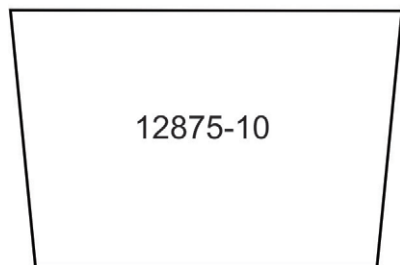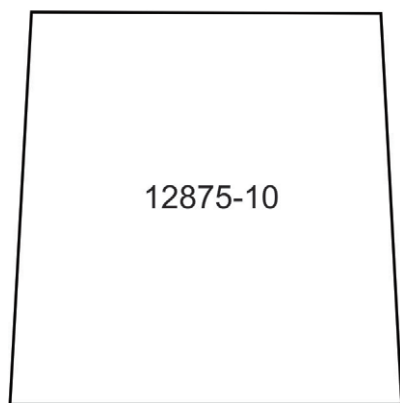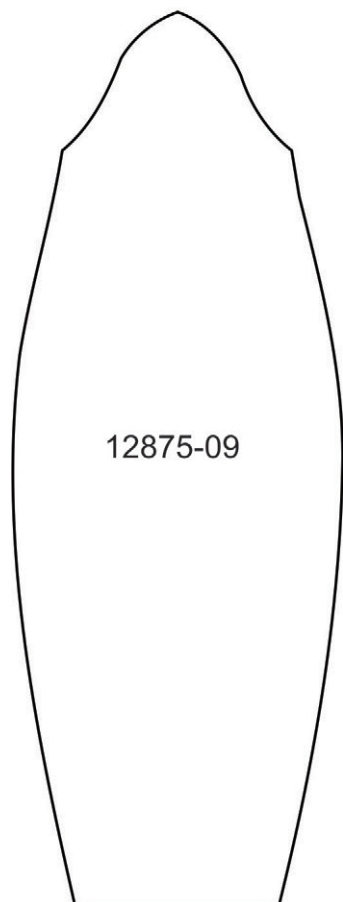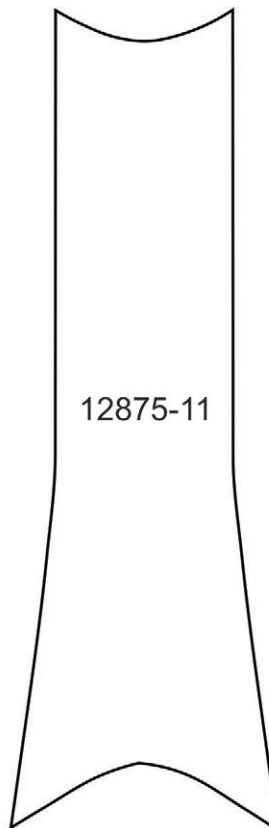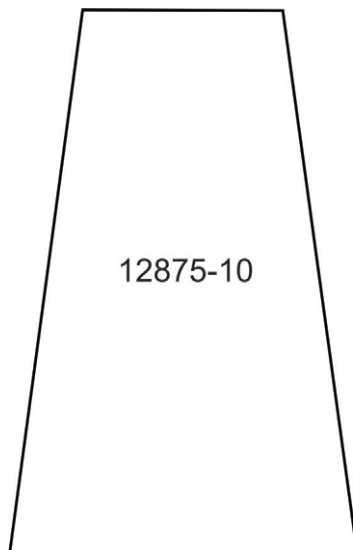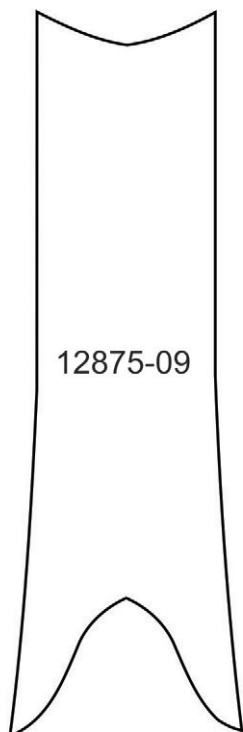

# APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

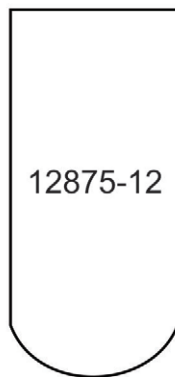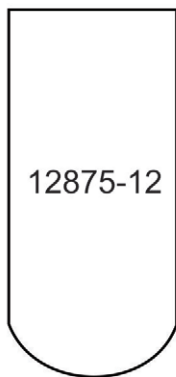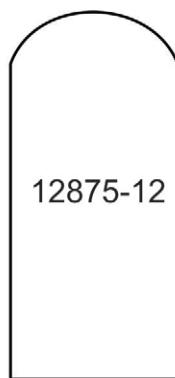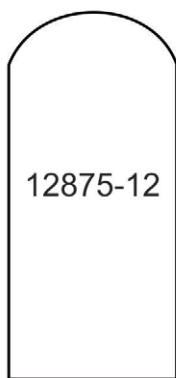


# MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

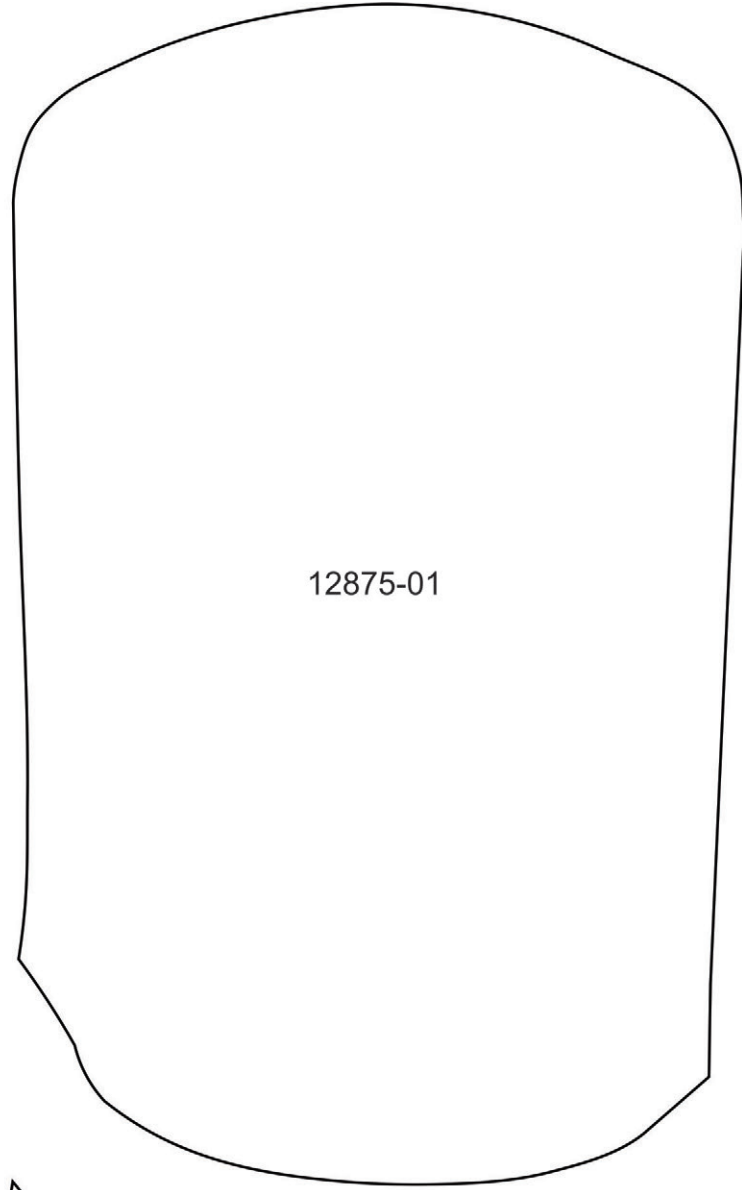

12875-01

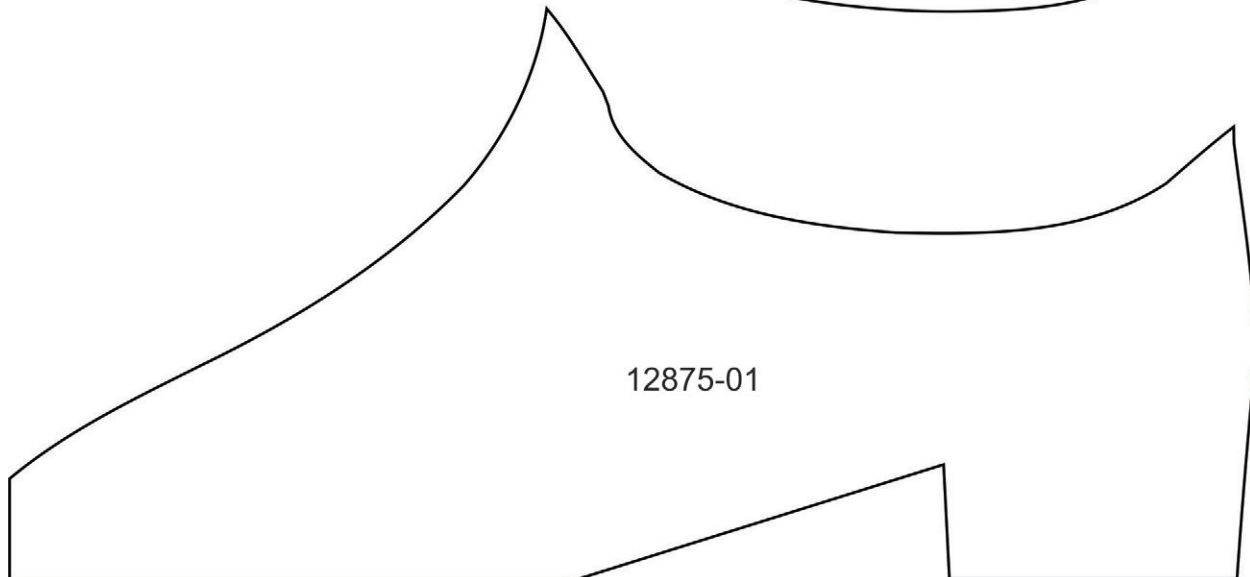

12875-01

# MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.








12875-02

12875-02

# MIRRORED PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

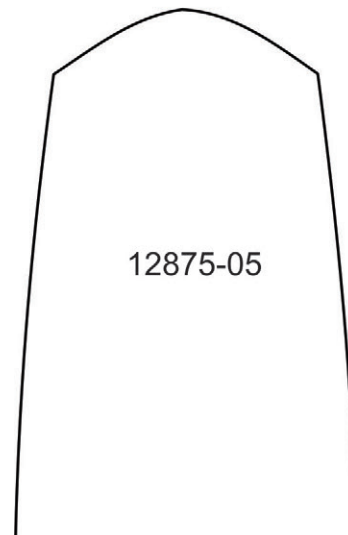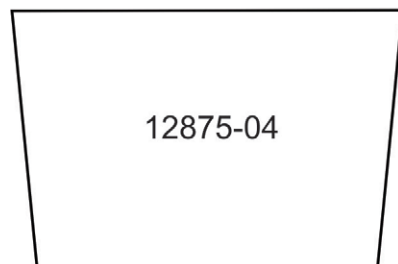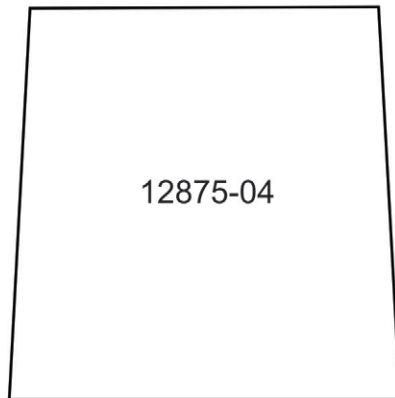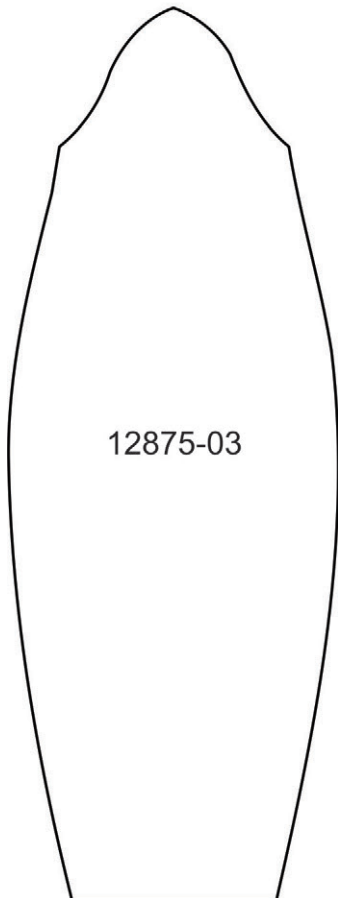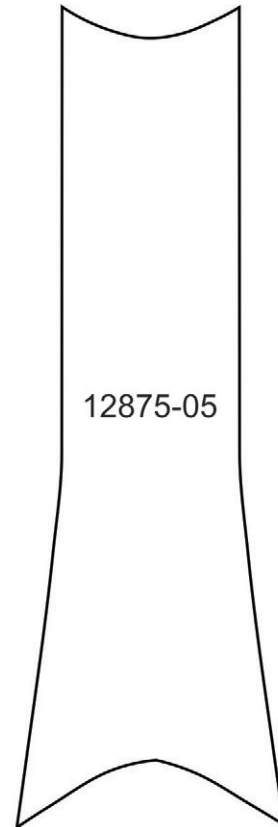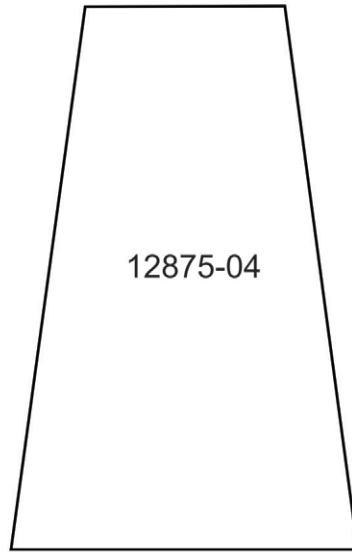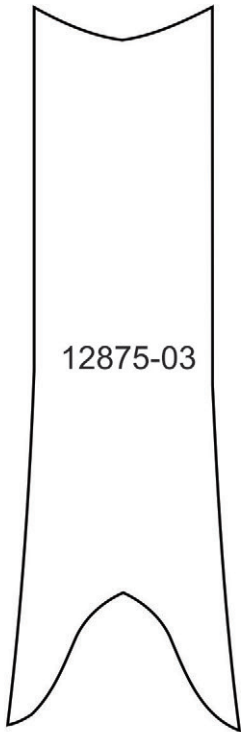

# MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

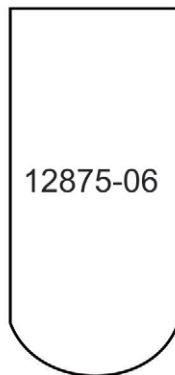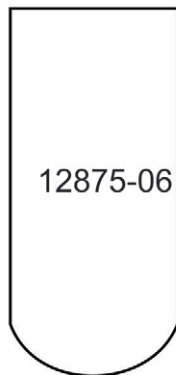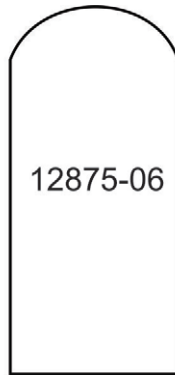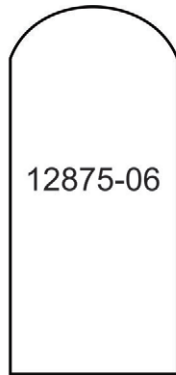

# MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12875-07


12875-07




# MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

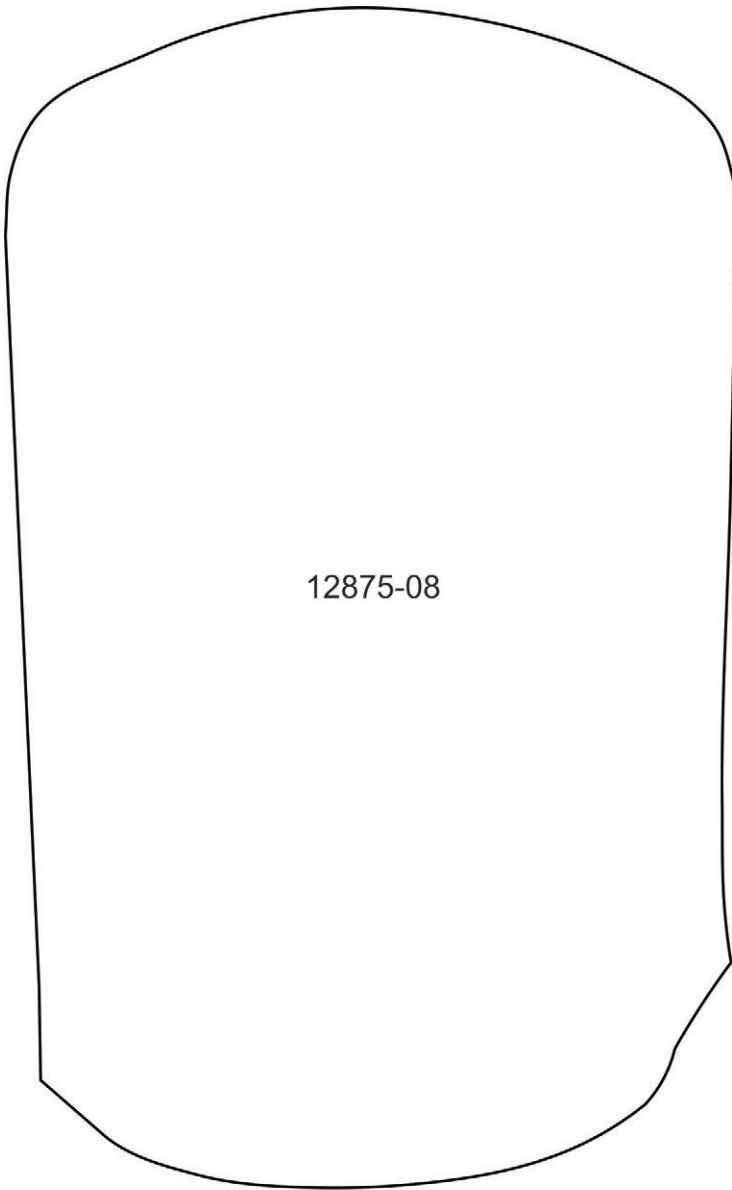

12875-08







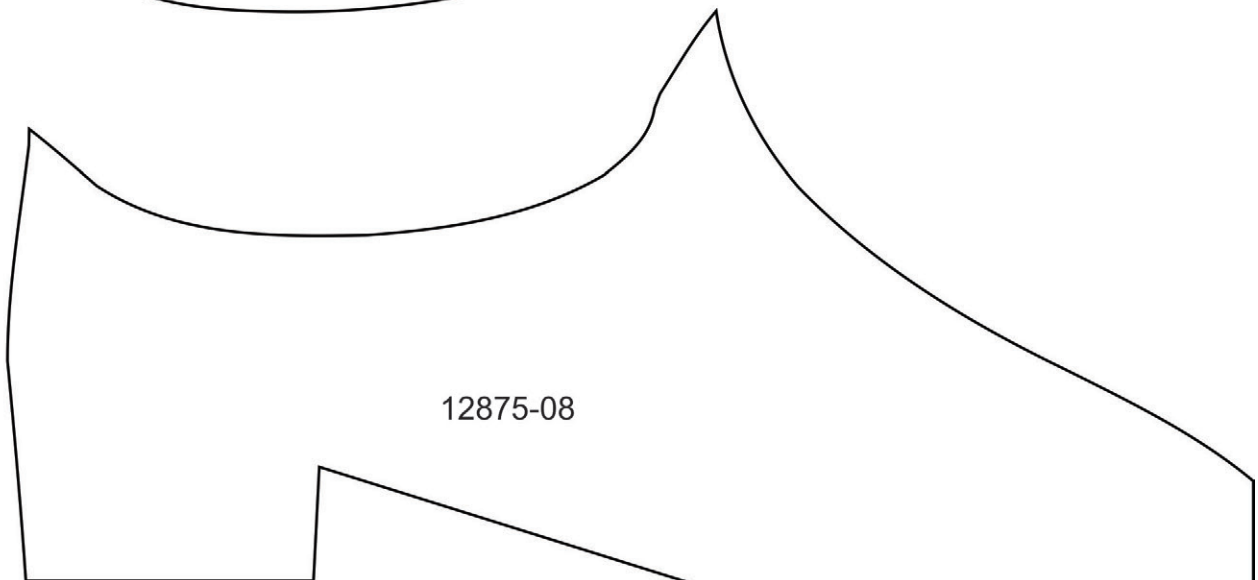


12875-08

# MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

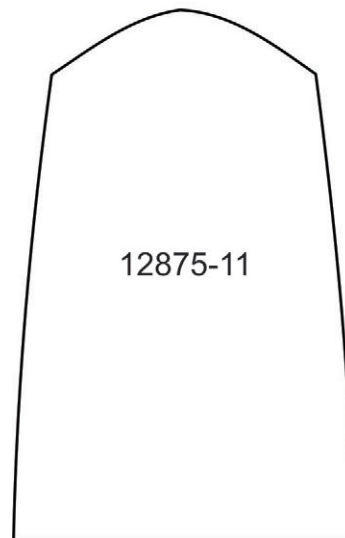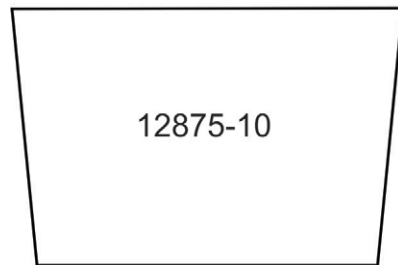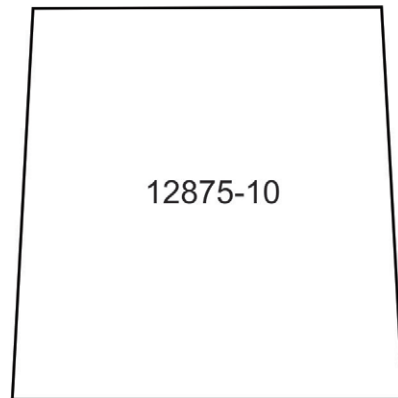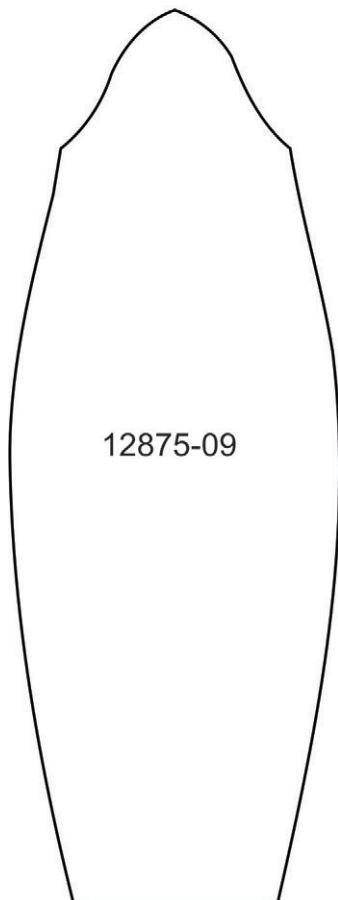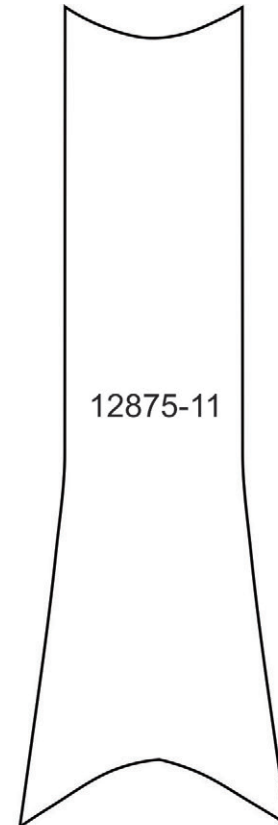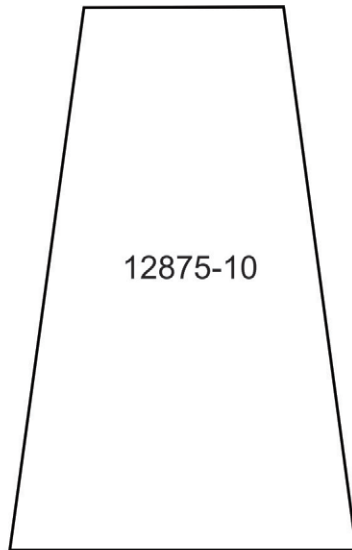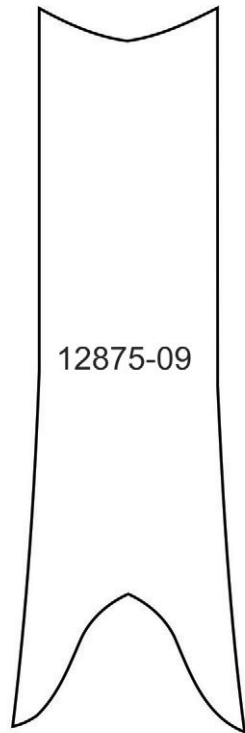

# MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

