

TAPESTRY CORK WALLETS



6

Designs

Fits hoop sizes 5" x 7" and larger

THREAD LIST



Isacord Thread Colors

0010 Silky White	1102 Pumpkin	2953 Concord Fog
0134 Smoky	1305 Fox Fire	3510 Electric Blue
0142 Sterling	1800 Wildfire	3644 Royal Navy
0152 Dolphin	1902 Poinsettia	3920 Chicory
0600 Citrus	2508 Hot Pink	5722 Green Grass
0670 Cream	2655 Aura	5912 Erin Green
0713 Lemon	2912 Sugar Plum	

***Project instructions included after design list**

DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

*Fabric Required

12884-01 Flat Wallet 1

Size Inches: Size mm: Stitch Count:
4.94 X 3.38 in. 125.5 X 85.9 mm 8093 St.




<input type="checkbox"/>	1. Cork Placement Stitch.....	0670
<input type="checkbox"/>	2. Cork Tackdown.....	0670
<input type="checkbox"/>	3. Cream Detail	0670
<input type="checkbox"/>	4. Orange Detail	1102
<input type="checkbox"/>	5. Green Detail	5722
<input type="checkbox"/>	6. Yellow Detail.....	0713
<input type="checkbox"/>	7. Red Detail.....	1800
<input type="checkbox"/>	8. Light Purple Detail	2912
<input type="checkbox"/>	9. Pink Detail	2508
<input type="checkbox"/>	10. Panel Tackdown	0670
<input type="checkbox"/>	11. Top Pocket Tackdown.....	0670
<input type="checkbox"/>	12. Seam.....	0670







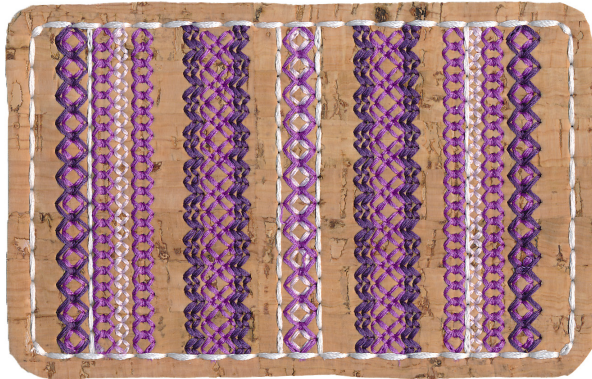


Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12884-02 Flat Wallet 2

Size Inches: Size mm: Stitch Count:
4.94 X 3.38 in. 125.5 X 85.9 mm 9595 St.











	1. Cork Placement Stitch.....	2655
	2. Cork Tackdown	2655
	3. Pale Purple Detail.....	2655
	4. Light Purple Detail	2912
	5. Dark Purple Detail	2953
	6. White Detail	0010
	7. Panel Tackdown	0010
	8. Top Pocket Tackdown.....	0010
	9. Seam	0010

***Fabric Required**

12884-03 Flat Wallet 3

Size Inches: Size mm: Stitch Count:
4.94 X 3.38 in. 125.5 X 85.9 mm 7712 St.




	1. Cork Placement Stitch.....	5722
	2. Cork Tackdown	5722
	3. Medium Green Detail	5722
	4. Light Green Detail	5912
	5. White Detail	0010
	6. Panel Tackdown	0010
	7. Top Pocket Tackdown.....	0010
	8. Seam	0010







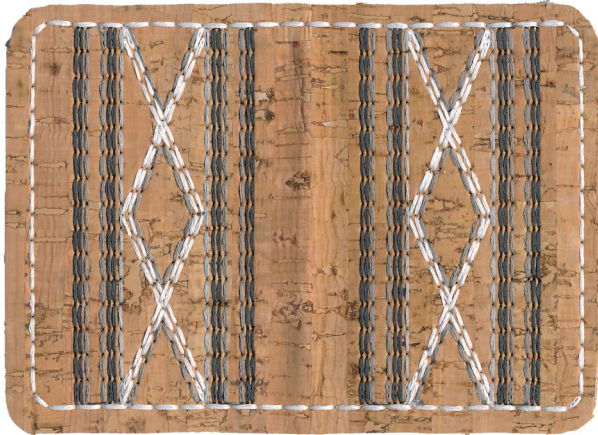

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12884-04 Folding Wallet 1

Size Inches: Size mm: Stitch Count:
5.80 X 4.30 in. 147.2 X 109.1 mm 6403 St.










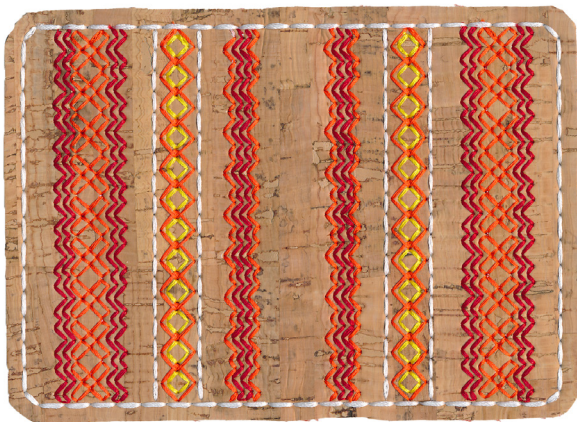

	1. Cork Placement Stitch.....	0152
	2. Cork Tackdown	0152
	3. Medium Gray Detail.....	0152
	4. Dark Gray Detail.....	0134
	5. Light Gray Detail.....	0142
	6. White Detail	0010
	7. Panel Tackdown	0010
	8. Seam.....	0010

***Fabric Required**

12884-05 Folding Wallet 2

Size Inches: Size mm: Stitch Count:
5.80 X 4.30 in. 147.2 X 109.1 mm 9892 St.



	1. Cork Placement Stitch.....	0600
	2. Cork Tackdown	0600
	3. Yellow Detail	0600
	4. Red Detail.....	1902
	5. White Detail	0010
	6. Orange Detail	1305
	7. Panel Tackdown	0010
	8. Seam.....	0010

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12884-06 Folding Wallet 3

Size Inches: Size mm: Stitch Count:
5.80 X 4.30 in. 147.2 X 109.1 mm 9636 St.



<input type="checkbox"/>	1. Cork Placement Stitch.....	0010
<input type="checkbox"/>	2. Cork Tackdown	0010
<input type="checkbox"/>	3. White Detail	0010
<input type="checkbox"/>	4. Dark Blue Detail	3644
<input type="checkbox"/>	5. Medium Blue Detail	3510
<input type="checkbox"/>	6. Light Blue Detail	3920
<input type="checkbox"/>	7. Panel Tackdown	0010
<input type="checkbox"/>	8. Seam.....	0010

Stabilizers

- OESD Medium Weight TearAway
- OESD StabilStick Template Sheets

Note: Always test OESD StabilStick Template Sheets on a piece of scrap cork before use in the project. For best results, follow the instructions included in the package instructions.

Fabrics/Textiles

Wallet Type	Cork	Fabric
Folding	(1) 6 ¼" x 4 ¾" (2) 4 ¾" x 3"	(1) 6 ½" x 5"
Flat	(2) 5 ½" x 4" (1) 4" x 4" (1) 4 ¼" x 4"	

Notions & Tools

- Expert Embroidery Tape TearAway
- Embroidery Needle Sharp 80/12

Isacord Thread Colors


- Per thread chart

FOLDING EMBROIDERY




STEP 1

- Hoop one layer of OESD Medium Weight TearAway.

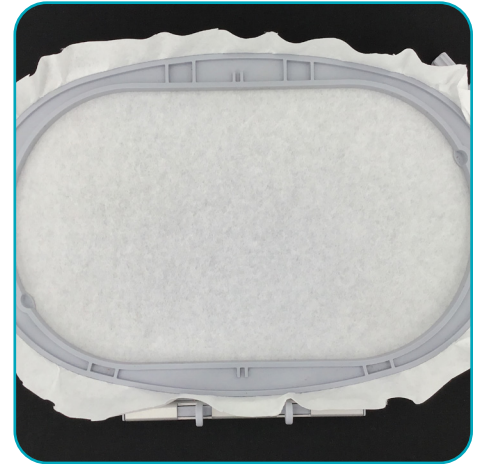

STEP 2

- Print the unmirrored version of the templates onto OESD StabilStick Template Sheets. (100% or 1:1 ratio)
- Roughly cut around the printed applique templates.

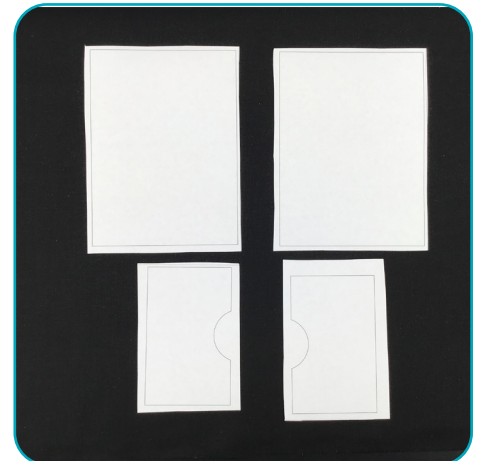

STEP 3

- Peel the backing from the templates and adhere the template to the right side of the precut cork and fabric pieces.

Tip: Apply the Template Sheet to a cotton fabric surface or toweling and remove it before applying to cork; this will remove excess adhesive and reduce the likelihood of adhesive residue.




FOLDING EMBROIDERY




STEP 4

- Cut the appliques out on the outer edge of the black outline.
- Remove the templates and set aside.
- Tip: The templates are reusable by placing them back on the shiny side of the backing paper.

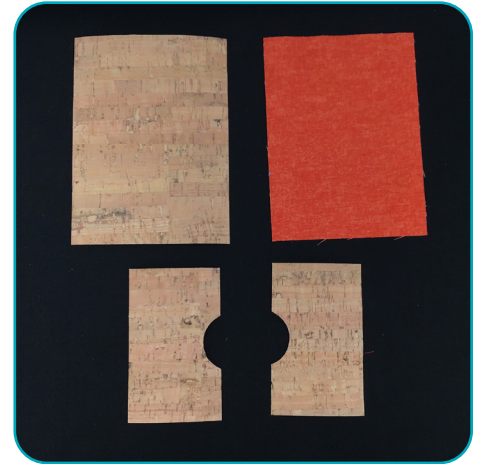


STEP 5

- Load selected design into the machine.
- Example design is 12884-05.
- Thread the machine per the thread chart.
- Place hoop on the machine.
- Stitch Machine Step 1, Cork Placement Stitch.

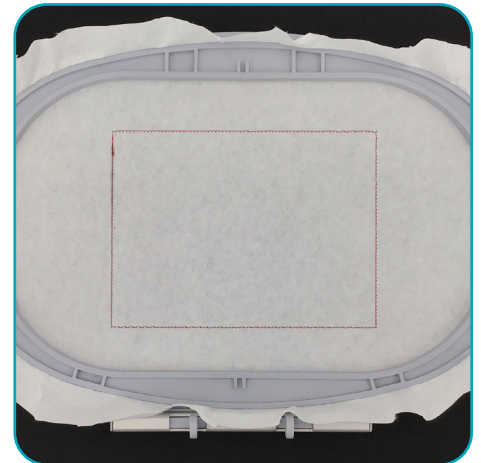

STEP 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Align the cork edges with the placement stitch.
- Tape in place to secure.

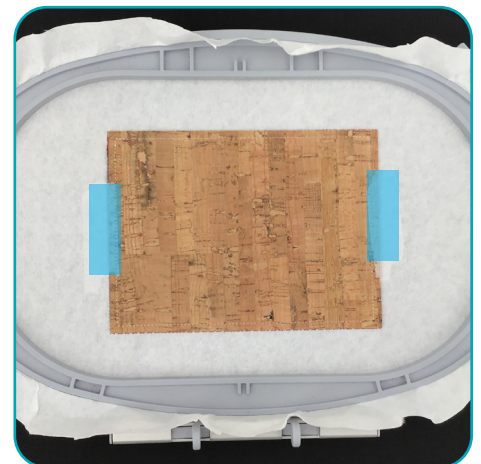

FOLDING EMBROIDERY



STEP 7

- Return the hoop to the machine.
- Stitch Machine Step 2, Cork Tackdown.



STEP 8

- Stitch the remaining design details, **STOPPING BEFORE** Machine Step 7, Panel Tackdown.



STEP 9

- Remove the hoop from the machine, but **NOT** the project from the hoop.
- Turn the hoop over and align the fabric panel edges with the placement stitch, right side of the fabric facing up.
- Tape in place to secure.



FOLDING EMBROIDERY



STEP 10

- Return the hoop to the machine.
- Stitch Machine Step 7, Panel Tackdown.



STEP 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place each cork pocket on opposite ends of the fabric panel, aligning the cork edges with the fabric edges.
- Tape in place to secure.



FOLDING EMBROIDERY



STEP 12

- Return the hoop to the machine.
- Stitch Machine Step 8, Seam.



STEP 13

- When design is complete, remove the project from the hoop and trim the stabilizer 1/4" outside the design, rounding the corners if desired.




FLAT EMBROIDERY




STEP 1

- Hoop one layer of OESD Medium Weight TearAway.

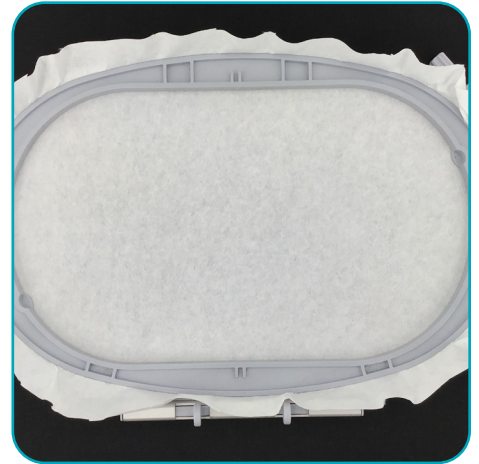

STEP 2

- Print the unmirrored version of the templates onto StabilStick Template Sheets. (100% or 1:1 ratio)
- Roughly cut around the printed applique templates.

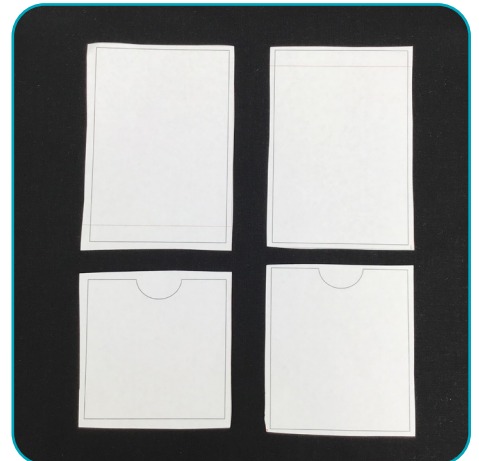

STEP 3

- Cut the prepared applique fabrics 1/4"-1/2" larger than the templates.
- Remove the paper backing and adhere the template to the precut cork pieces.



FLAT EMBROIDERY



STEP 4

- Cut the appliques out on the outer edge of the black outline, remove the templates, and set aside.




STEP 5

- Load selected design into the machine.
- Example design is 12884-01.
- Thread the machine per the thread chart.
- Place hoop on the machine.
- Stitch Machine Step 1, Cork Placement Stitch.



STEP 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Align the cork edges with the placement stitch, right side up.
- Tape in place to secure.

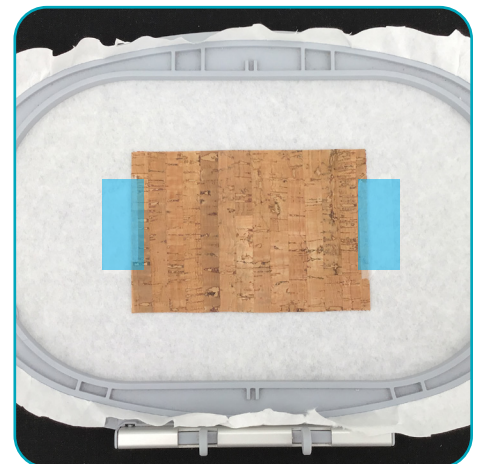

FLAT EMBROIDERY



STEP 7

- Return the hoop to the machine.
- Stitch Machine Step 2, Cork Tackdown.



STEP 8

- Stitch the remaining design details, **STOPPING BEFORE** Machine Step 10, Panel Tackdown.



STEP 9

- Remove the hoop from the machine, but **NOT** the project from the hoop.
- Turn the hoop over and align the back cork panel edges with the placement stitch, right sides up.
- Tape in place to secure.



FLAT EMBROIDERY



STEP 10

- Return the hoop to the machine.
- Stitch Machine Step 10, Panel Tackdown.



STEP 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the long pocket, right side up, at the bottom of the sleeve aligning the edges to the back panel.
- Tape in place to secure.



STEP 12

- Return the hoop to the machine.
- Stitch Machine Step 11, Top Pocket Tackdown.



FLAT EMBROIDERY



STEP 13

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the short pocket at the bottom of the sleeve aligning the edges to the back panel.
- Tape in place to secure.



STEP 14

- Return the hoop to the machine.
- Stitch Machine Step 12, Seam.




STEP 15

- When design is complete, remove the project from the hoop and trim the stabilizer 1/4" outside the design, rounding edges if desired.




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

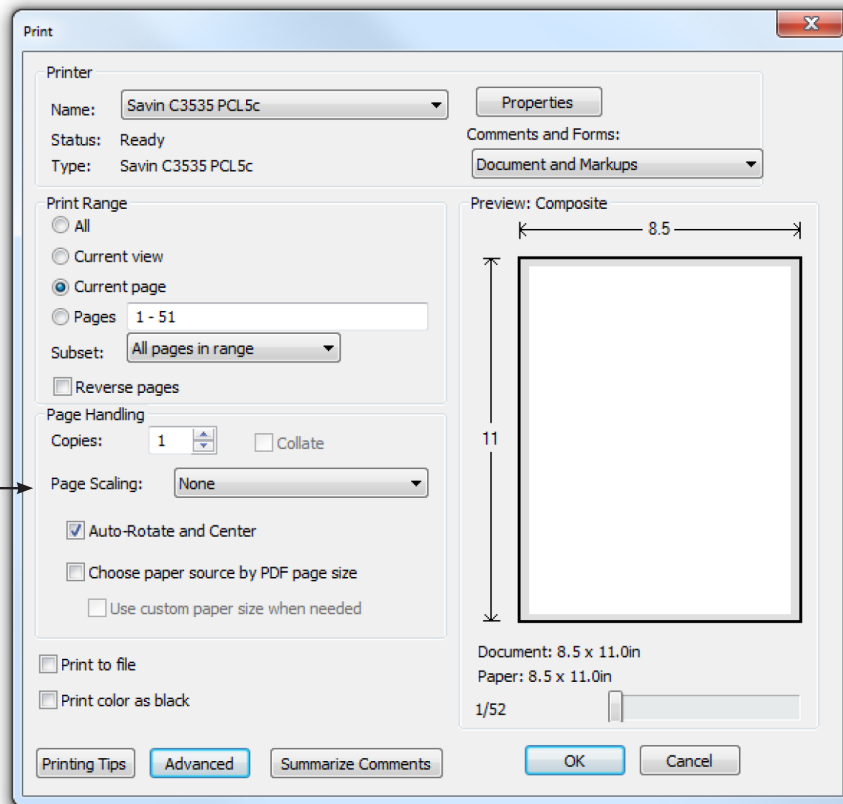

TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

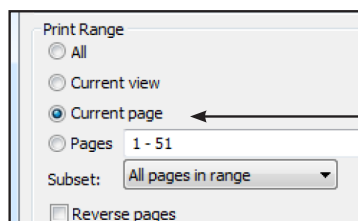

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12884-01

12884-01

12884-01

12884-01

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12884-02

12884-02

12884-02

12884-02

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12884-03

12884-03



12884-03

12884-03

APPLIQUE PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

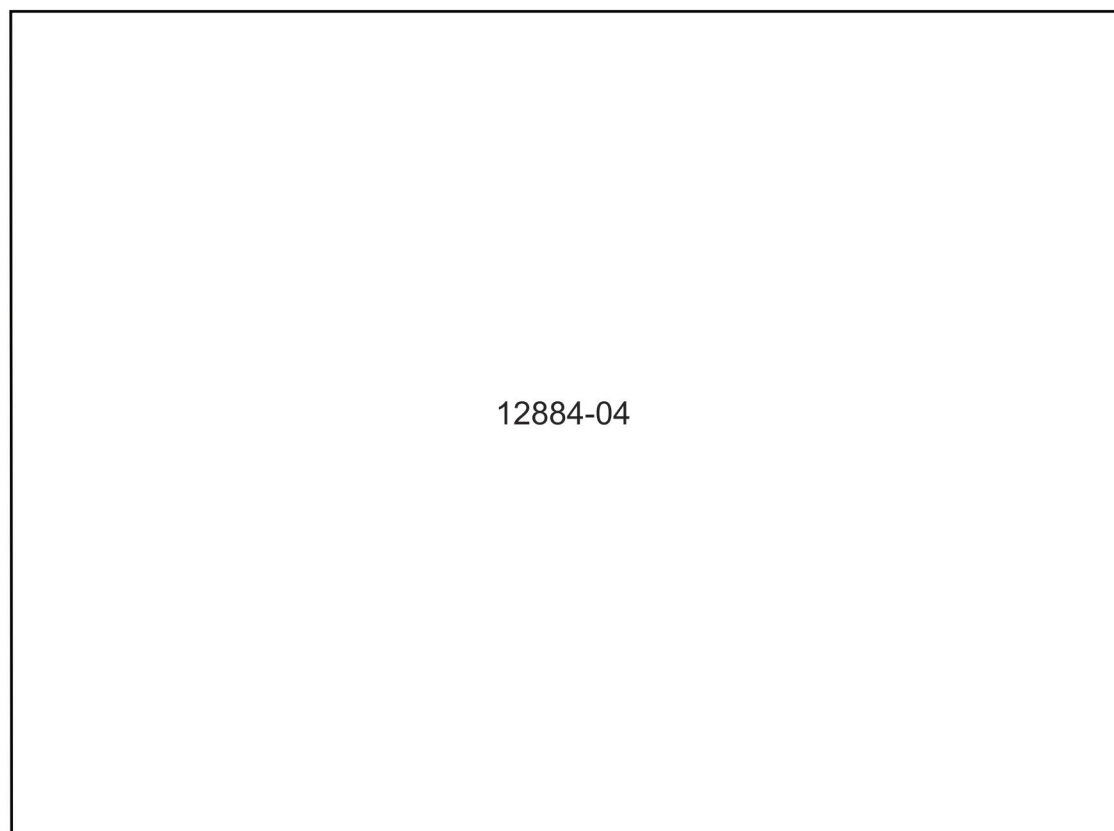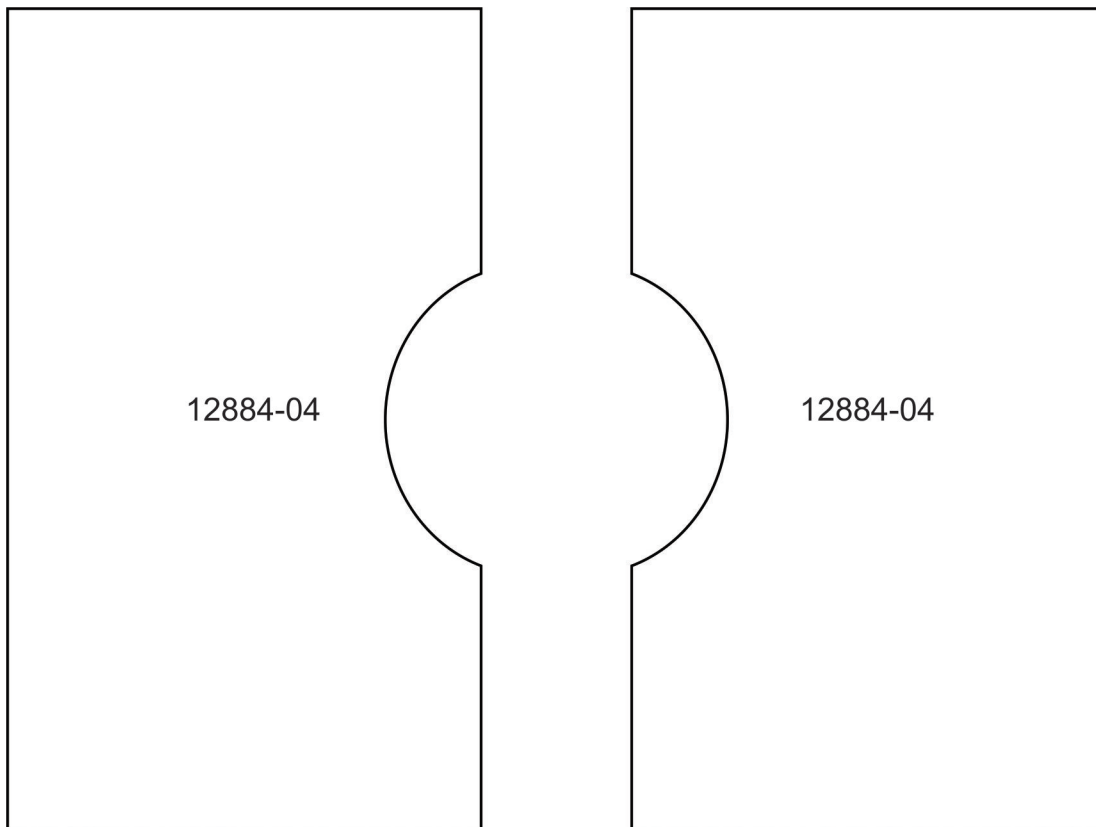

APPLIQUE PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

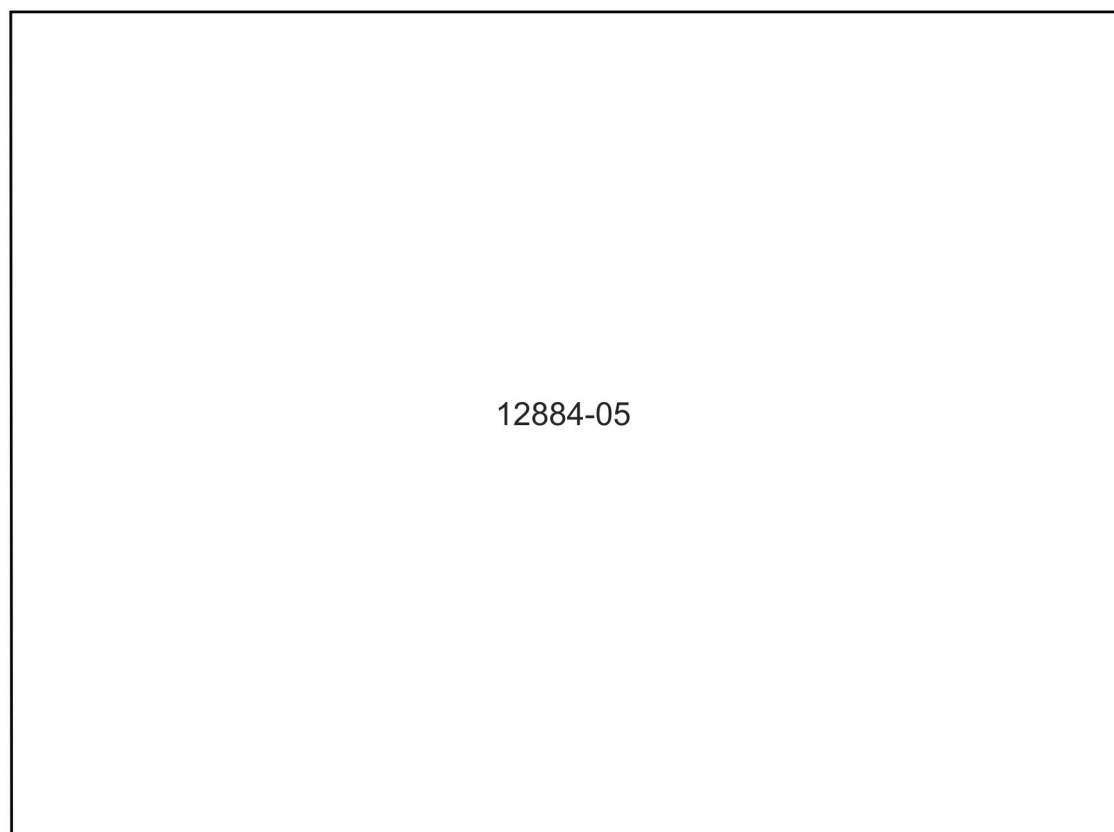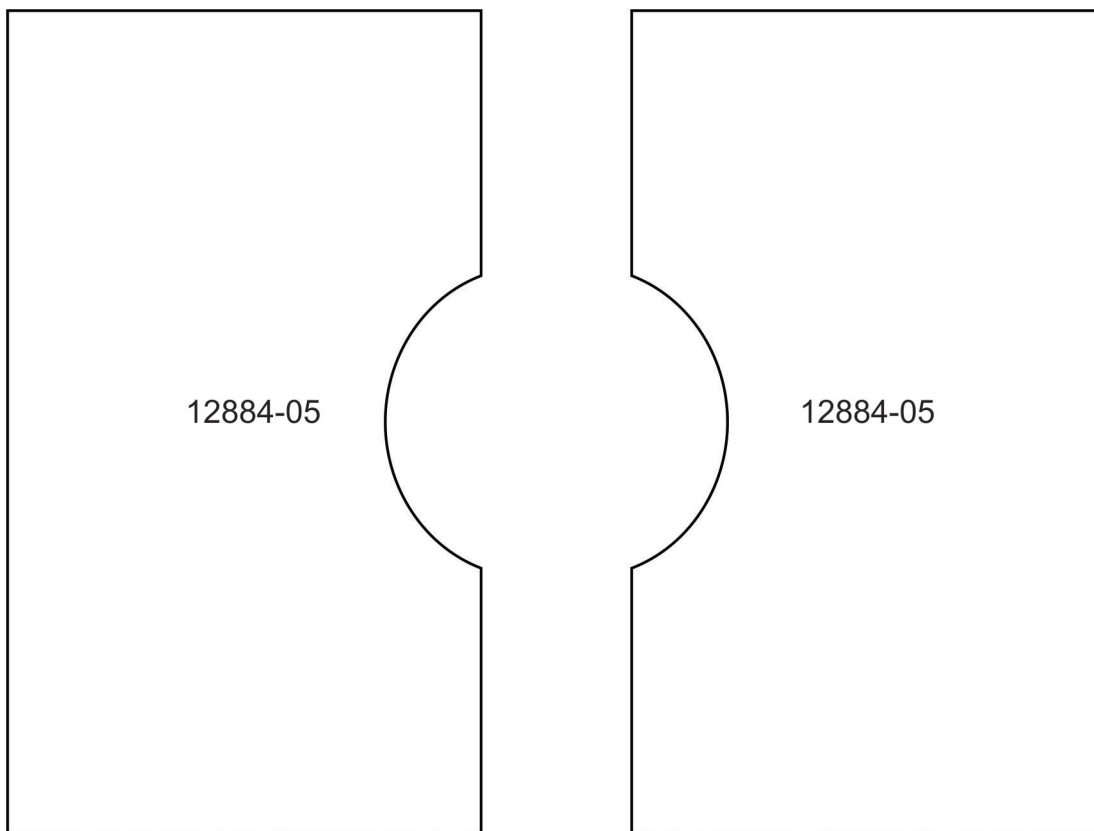





APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

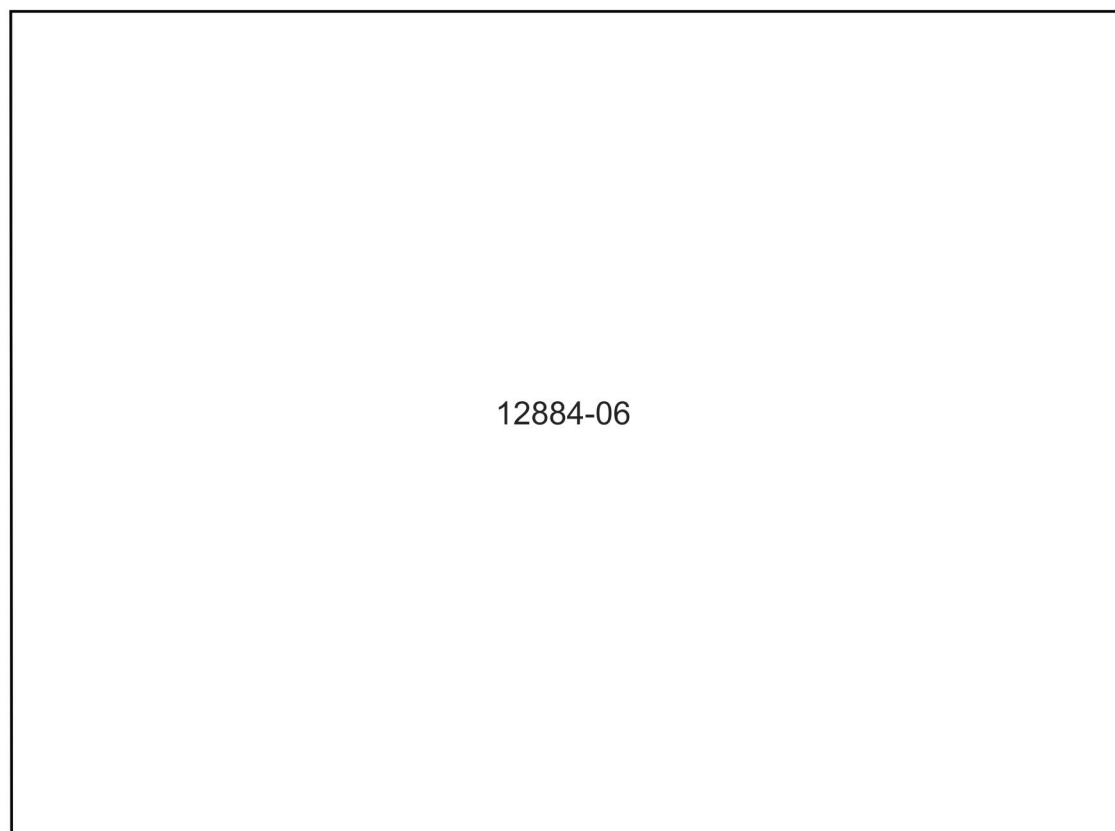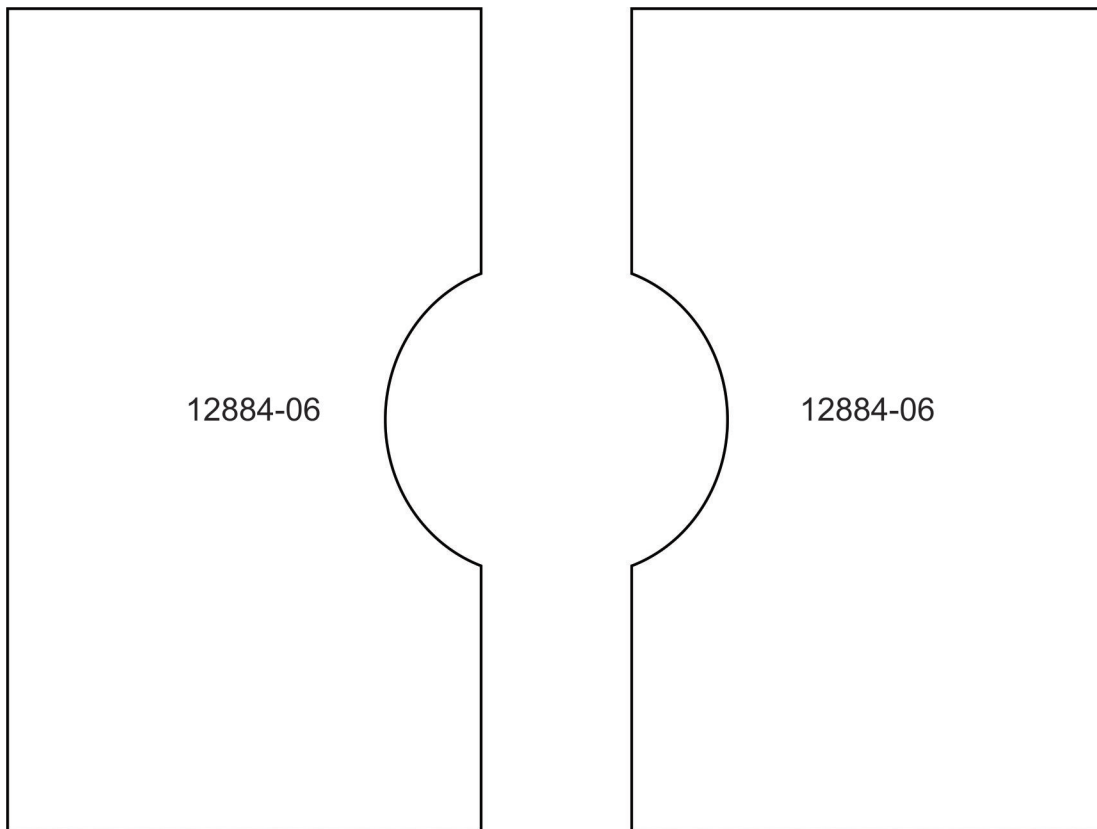

MIRRORED PATTERNS

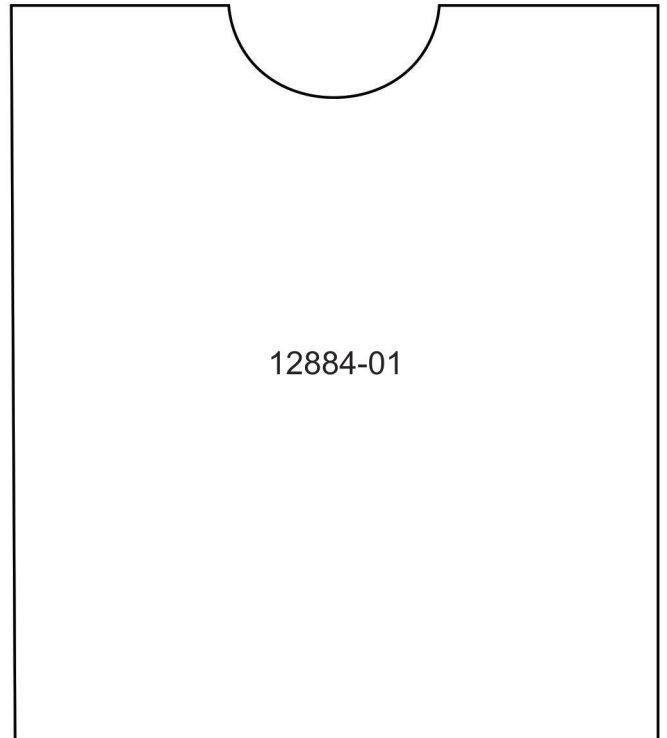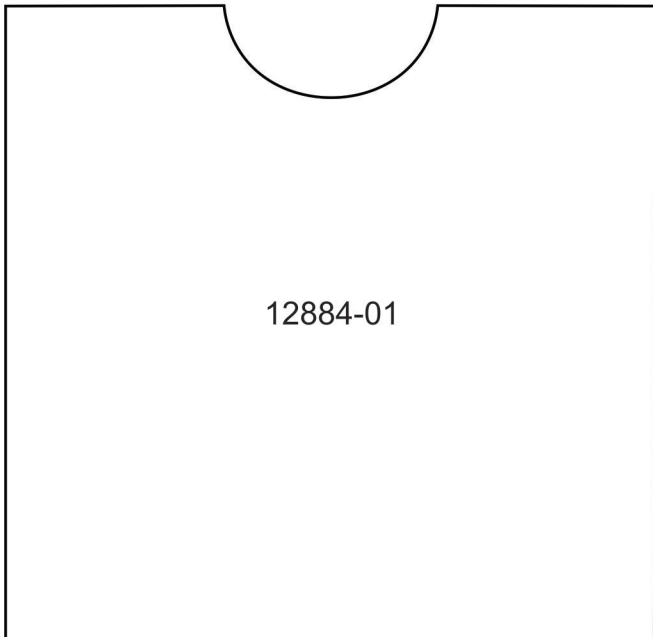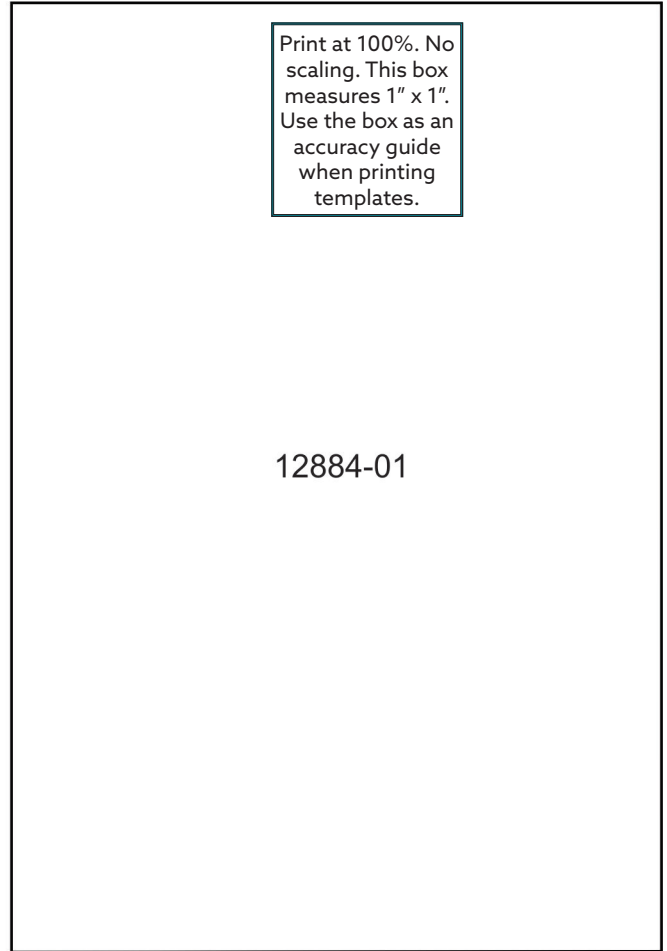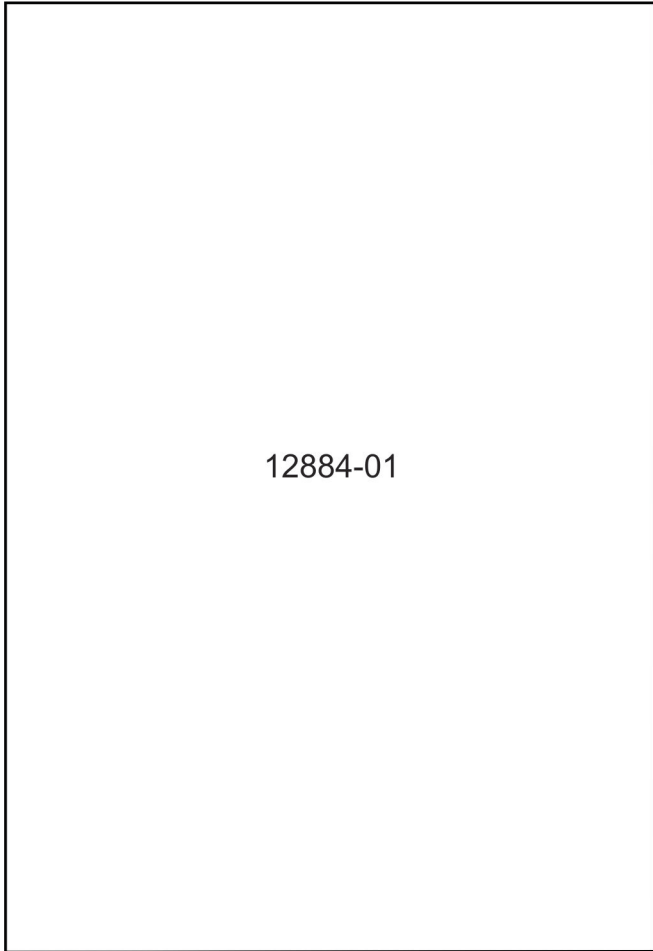

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12884-02

12884-02

12884-02

12884-02

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

12884-03

12884-03



12884-03

12884-03

MIRRORED PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

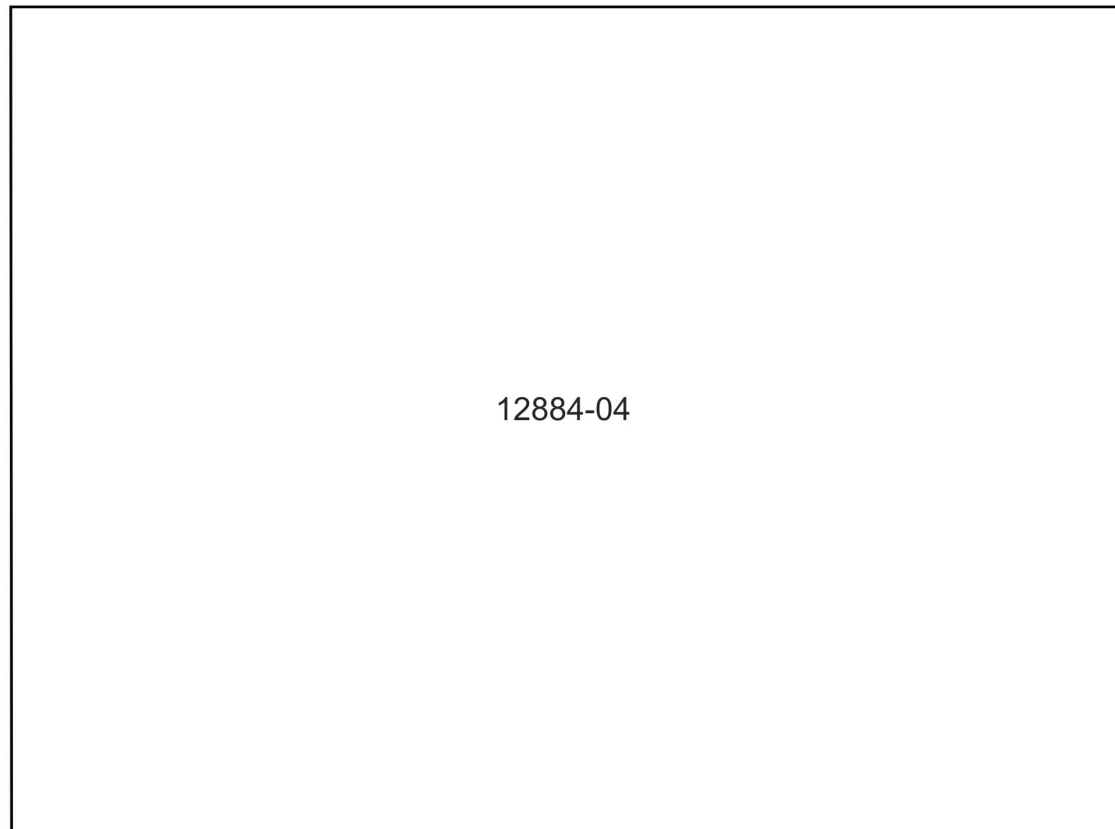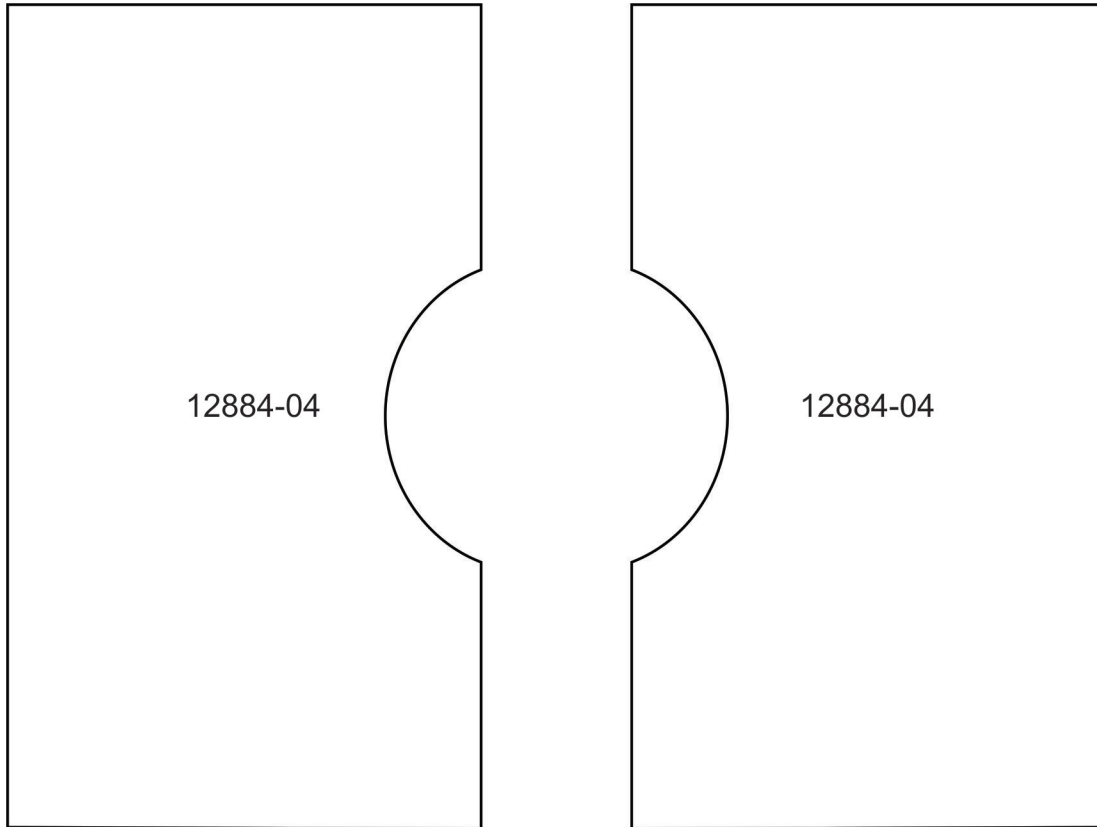

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

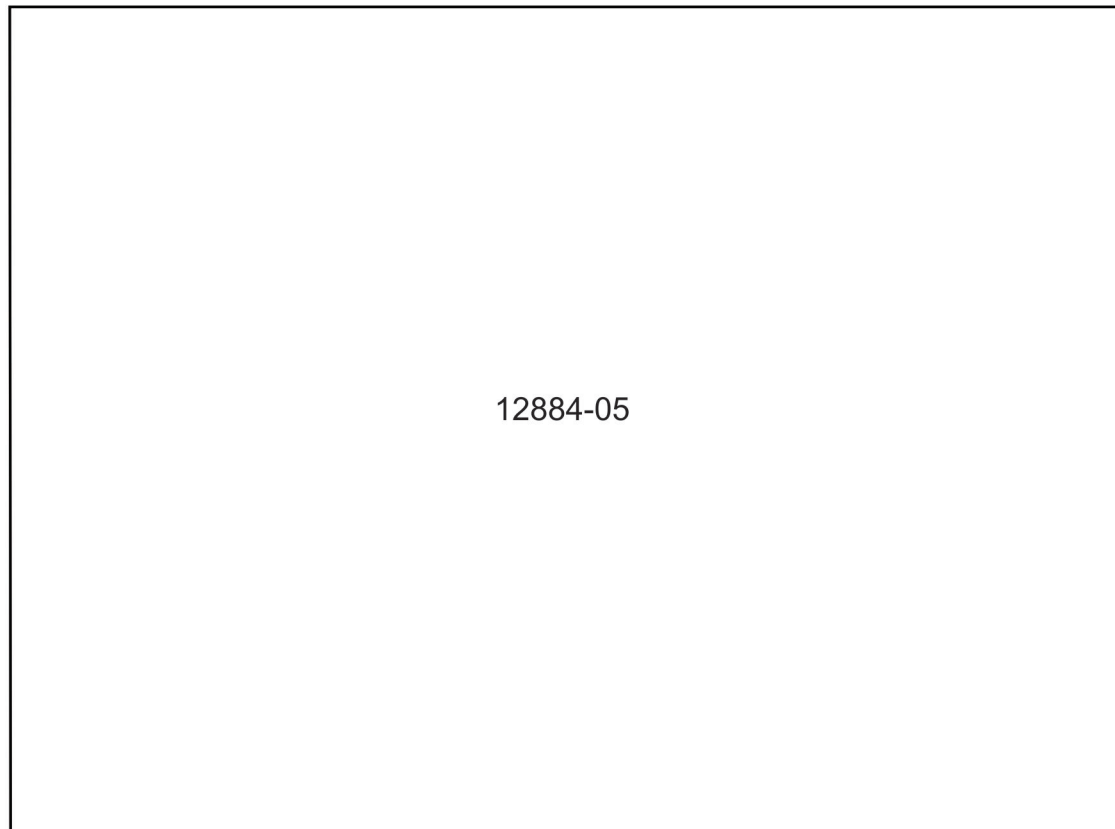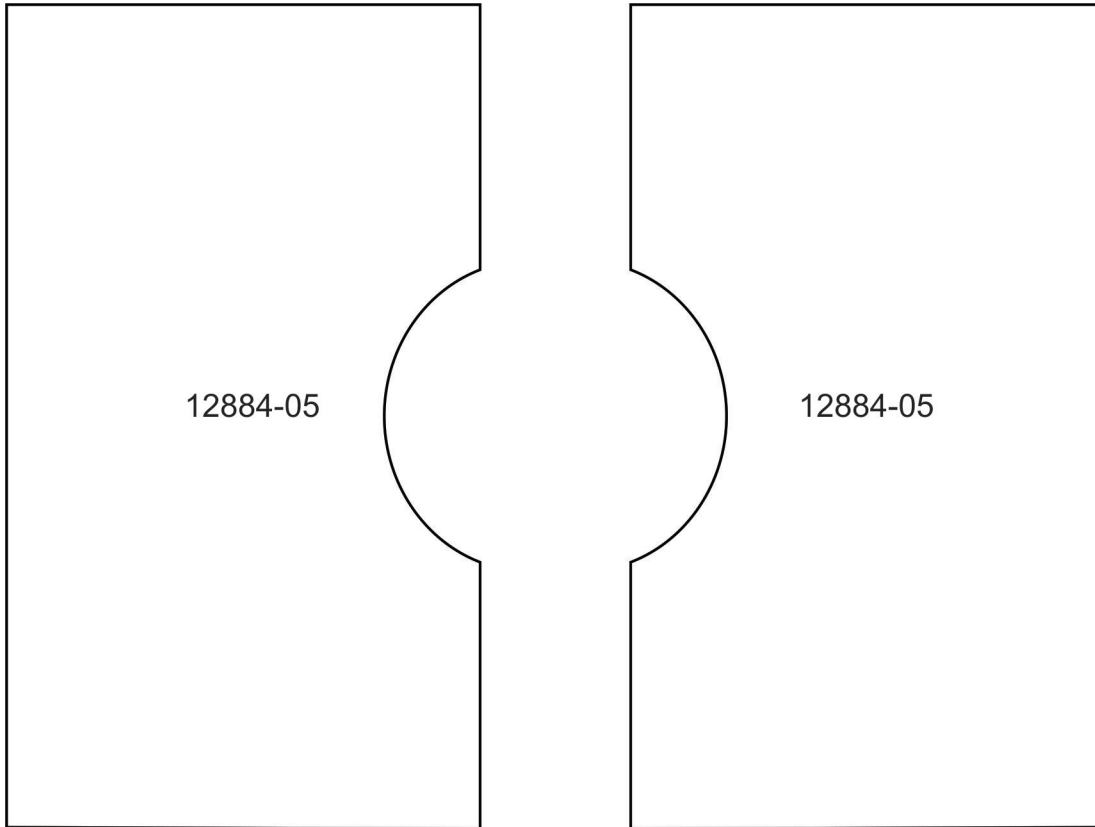

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

