

TOO HOT TO HANDLE



4

Designs

THREAD LIST



Isacord Thread Colors

0010 Silky White

*** Project instructions included after design list.**

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

TABLE OF CONTENTS

Interactive Menu

Click to navigate to section.

Designs.....	3
Collection Supplies.....	7
Summary	8
Embroidery	12

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**



12918-01 Hot Handle Wrap 1 Back

Size Inches: Size mm: Stitch Count:
8.64 X 4.61 in. 219.6 X 117.2 mm 2854 St.

- 1. Insul-Bright and Fabric Placement Stitch 0010
- 2. Tackdown 0010
- 3. Details 0010
- 4. Fold Stitch 0010

***Fabric Required**




12918-02 Hot Handle Wrap 1 Front

Size Inches: Size mm: Stitch Count:
8.46 X 4.25 in. 214.9 X 107.9 mm 4841 St.

- 1. Insul-Bright Placement Stitch 0010
- 2. Cut Line and Tackdown 0010
- 3. Fabric 1 Placement Stitch 0010
- 4. Fabric 1 Cut Line and Tackdown 0010
- 5. Fabric 2 Placement Stitch 0010
- 6. Fabric 2 Fold Stitch 0010
- 7. Fabric 3 Placement Stitch 0010
- 8. Fabric 3 Fold Stitch 0010
- 9. Tackdown/Detail and Lining Placement Guide..... 0010
- 10. Back Tackdown 0010
- 11. Seam Stitch Match Fabric 0010

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

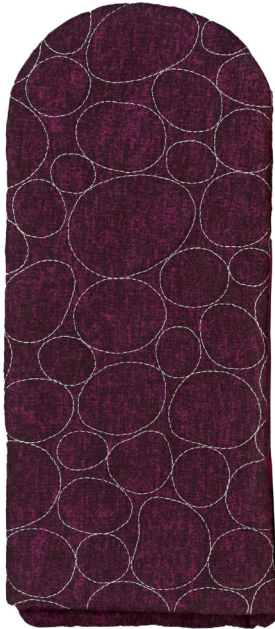

12918-03 Hot Handle Wrap 2 Back

Size Inches: Size mm: Stitch Count:
8.64 X 4.61 in. 219.6 X 117.2 mm 2854 St.

- 1. Insul-Bright and Fabric Placement Stitch 0010
- 2. Tackdown 0010
- 3. Details 0010
- 4. Fold Stitch 0010

***Fabric Required**



12918-04 Hot Handle Wrap 2 Front

Size Inches: Size mm: Stitch Count:
8.34 X 4.38 in. 211.9 X 111.3 mm 4827 St.

- 1. Insul-Bright Placement Stitch 0010
- 2. Cut Line and Tackdown 0010
- 3. Fabric 1 Placement Stitch 0010
- 4. Fabric 1 Cut Line and Tackdown 0010
- 5. Fabric 2 Placement Stitch 0010
- 6. Fabric 2 Fold Stitch 0010
- 7. Fabric 3 Placement Stitch 0010
- 8. Fabric 3 Fold Stitch 0010
- 9. Fabric 4 Placement Stitch 0010
- 10. Fabric 4 Fold Stitch 0010
- 11. Tackdown/Detail and Lining Placement Guide..... 0010
- 12. Back Tackdown 0010
- 13. Seam Stitch Match Fabric 0010

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**



12918-05 Hot Handle Wrap 3 Back

Size Inches: Size mm: Stitch Count:
8.64 X 4.61 in. 219.6 X 117.2 mm 2854 St.

- 1. Insul-Bright and Fabric Placement Stitch 0010
- 2. Tackdown 0010
- 3. Details 0010
- 4. Fold Stitch 0010

***Fabric Required**



12918-06 Hot Handle Wrap 3 Front

Size Inches: Size mm: Stitch Count:
8.34 X 4.25 in. 211.9 X 108.1 mm 4565 St.

- 1. Insul-Bright Placement Stitch 0010
- 2. Cut Line and Tackdown 0010
- 3. Fabric 1 Placement Stitch 0010
- 4. Fabric 1 Cut Line and Tackdown 0010
- 5. Fabric 2 Placement Stitch 0010
- 6. Fabric 2 Fold Stitch 0010
- 7. Fabric 3 Placement Stitch 0010
- 8. Fabric 3 Fold Stitch 0010
- 9. Tackdown/Detail and Lining Placement Guide..... 0010
- 10. Back Tackdown 0010
- 11. Seam Stitch Match Fabric 0010

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

***Fabric Required**

12918-07 Hot Handle Wrap 4 Back

Size Inches: Size mm: Stitch Count:
8.64 X 4.61 in. 219.6 X 117.2 mm 2854 St.



- 1. Insul-Bright and Fabric Placement Stitch 0010
- 2. Tackdown 0010
- 3. Details 0010
- 4. Fold Stitch 0010

***Fabric Required**

12918-08 Hot Handle Wrap 4 Front

Size Inches: Size mm: Stitch Count:
8.36 X 4.25 in. 212.4 X 107.9 mm 4930 St.



- 1. Insul-Bright Placement Stitch 0010
- 2. Cut Line and Tackdown 0010
- 3. Fabric 1 Placement Stitch 0010
- 4. Fabric 1 Cut Line and Tackdown 0010
- 5. Fabric 2 Placement Stitch 0010
- 6. Fabric 2 Fold Stitch 0010
- 7. Tackdown/Detail and Lining Placement Guide..... 0010
- 8. Back Tackdown 0010
- 9. Seam Stitch Match Fabric 0010

COLLECTION SUPPLIES



Stabilizers

- OESD Fuse and Fleece
- OESD Fuse and Seal - 3"x 1 ½" strip

Fabrics/Textiles

- See Summary

Notions & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- Scissors
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per Thread Chart

SUMMARY



Requires 1 Design



Requires 1 Design

Completed Size: 8.55" x 4.61"

12918-01 BACK

- (2) 5" x 10" quilter's cotton fabric for lining and outer fabric
- (1) 5" x 9" Insul-Bright

12918-02 FRONT

- (1) 3" x 10" middle fabric
- (1) 3" x 7" top fabric
- (1) 4" x 7" bottom fabric
- (1) 5" x 10" lining
- (1) 4 1/2" x 9" Insul-Bright

SUMMARY



Requires 1 Design



Requires 1 Design

Completed Size: 8.55" x 4.61"

12918-03 BACK

- (2) 5" x 10" quilter's cotton fabric for lining and outer fabric
- (1) 5" x 9" Insul-Bright

12918-04 FRONT

- (1) 3 1/2" x 4 1/2" top fabric
- (1) 4" x 7 1/2" middle left fabric
- (1) 4 1/2" x 7 1/2" middle right fabric
- (1) 3" x 5" bottom fabric
- (1) 5" x 10" lining
- (1) 4 1/2" x 9" Insul-Bright

SUMMARY



Requires 1 Design



Requires 1 Design

Completed Size: 8.55" x 4.61"

12918-05 BACK

- (2) 5" x 10" quilter's cotton fabric for lining and outer fabric
- (1) 5" x 9" Insul-Bright

12918-06 FRONT

- (1) 4" x 5" top fabric
- (1) 3 1/2" x 5" middle fabric
- (1) 4" x 5" bottom fabric
- (1) 5" x 10" lining
- (1) 4 1/2" x 9" Insul-Bright

SUMMARY



Requires 1 Design



Requires 1 Design

Completed Size: 8.55" x 4.61"

12918-07 BACK

- (2) 5" x 10 quilter's cotton fabric for lining and outer fabric
- (1) 5" x 9" Insul-Bright

12918-08 FRONT

- (1) 5" x 7 1/2" top fabric
- (1) 3" x 5" bottom fabric
- (1) 5" x 10" lining
- (1) 4 1/2" x 9" Insul-Bright

Notes

The Hot Handle Wrap instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown.

Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with matching thread, top and bobbin.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

STEP 1

- Load Hot Handle Wrap Back 2, 12918-03, onto the machine.
- Note: Two design files, back and front.
- The back design file is stitched first.




STEP 2

- Hoop one layer of Fuse and Fleece with the shiny (fusible) side down.
- Place hoop on the machine.




STEP 3

- Stitch Machine Step 1, Insul-Bright and Fabric Placement Stitch.

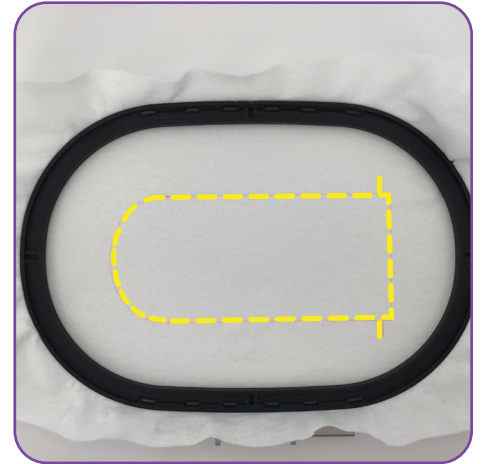

STEP 4

- Lay one piece of Insul-Bright over the placement stitch, line up one short edge with the two small placement stitches.
- Place one piece of quilter's cotton, right side up, over the Insul-Bright, covering all stitching, including the bottom stitched line.
- Tip: Place quilter's cotton at least an inch past the Insul-Bright Placement Stitch.
- Tape in place to secure.

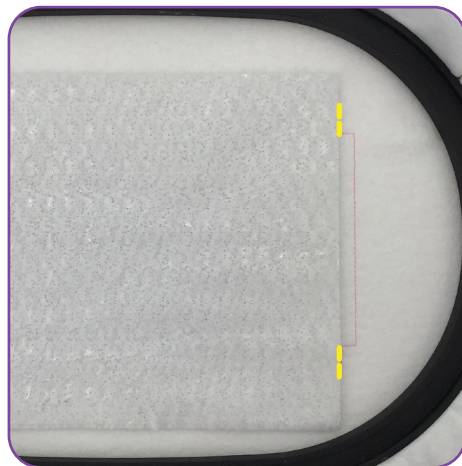

STEP 5

- Stitch Machine Step 2, Tackdown.
- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay hoop on a flat surface.
- Trim the excess Insul-Bright and fabric close to the stitching.
- Return the hoop to the machine.



STEP 6

- Stitch Machine Step 3, Details.



EMBROIDERY



STEP 7

- Place (1) 10" x 5" lining right side down, covering the stitching completely.
- Tape in place to secure.



STEP 8

- Stitch Machine Step 3, Fold Stitch.



STEP 9

- Remove the hoop from the machine and the project from the hoop.
- Trim excess Fusible Fleece following the cut edge of the lining fabric.
- Note: Do not trim the lining fabric.



STEP 10

- Fold the lining fabric away from the quilted piece.
- Turn the lining fabric to the back of the project.



STEP 11

- Press the lining to the project.
- Trim near the outside edges of the design.
- Set aside.
- Note: The fusible on the stabilizer will adhere the lining to the Handle Wrap.



STEP 12

- Load design, Hot Handle Wrap 2 Front, (12918-04), onto the machine.




STEP 13

- Hoop one layer of Fuse and Fleece with the shiny (fusible) side down.
- Place hoop on the machine.




STEP 14

- Stitch Machine Step 1, Insul-Bright Placement Stitch.

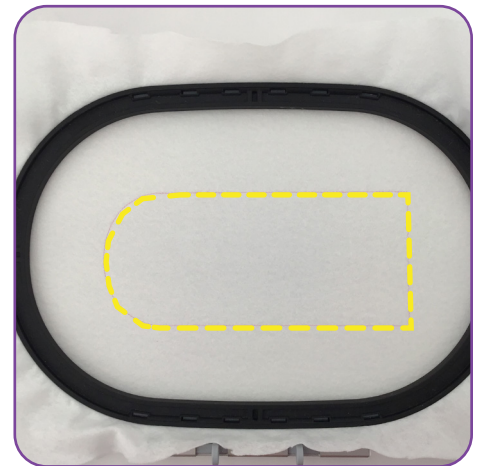



STEP 15

- Place Insul-Bright over the placement stitch, covering completely.
- Tape in place to secure.

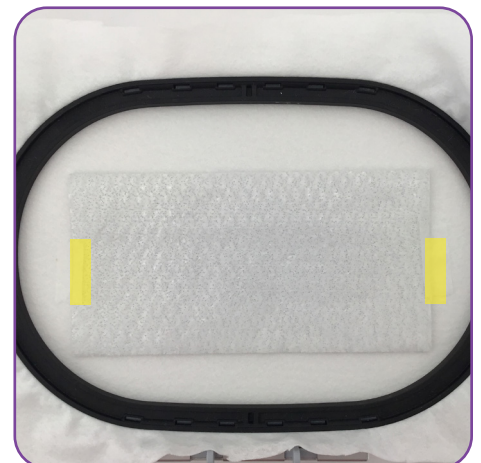


STEP 16

- Stitch Machine Step 2, Cut Line and Tackdown.
- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay on a flat surface.
- Trim Insul-Bright close to the stitching.
- Return the hoop to the machine.

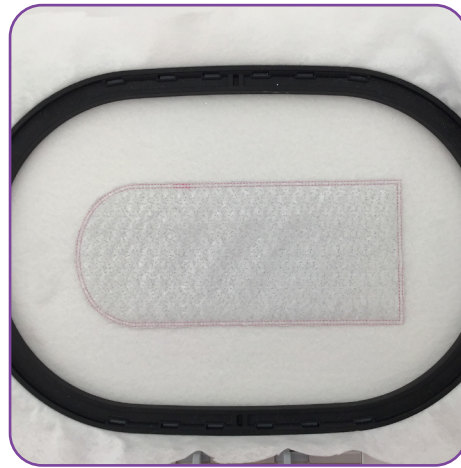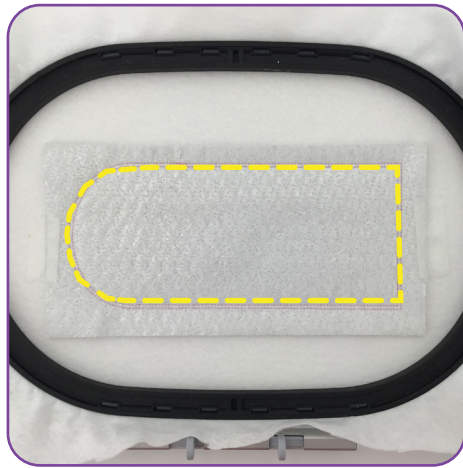


STEP 17

- Stitch Machine Step 3, Fabric 1 Placement Stitch.

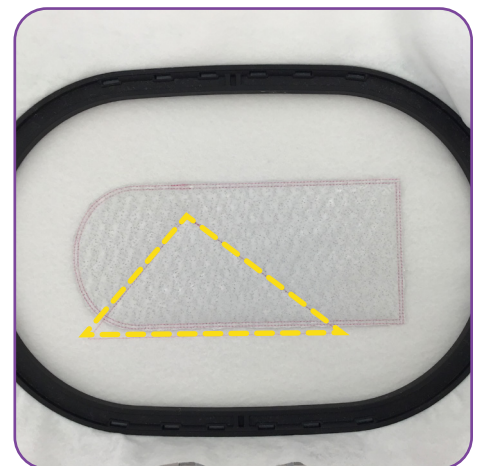


STEP 18

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place one piece of 4" x 7.5" cotton fabric, right side up, over the placement stitch.
- Tape in place to secure.
- Return hoop to the machine.

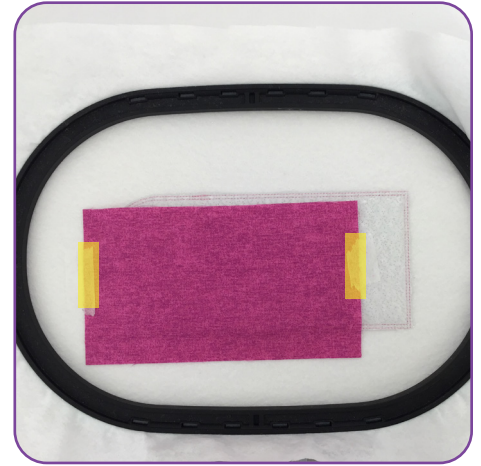


STEP 19

- Stitch Machine Step 4, Fabric 1 Cut Line and Tackdown.

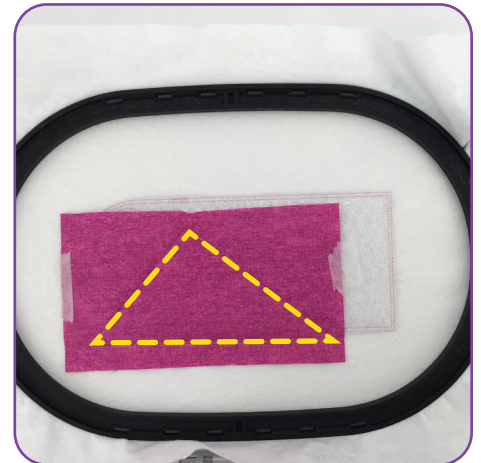



STEP 20

- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay on a flat surface.
- Trim approximately 1/2" from the stitching line.
- Return the hoop to the machine.

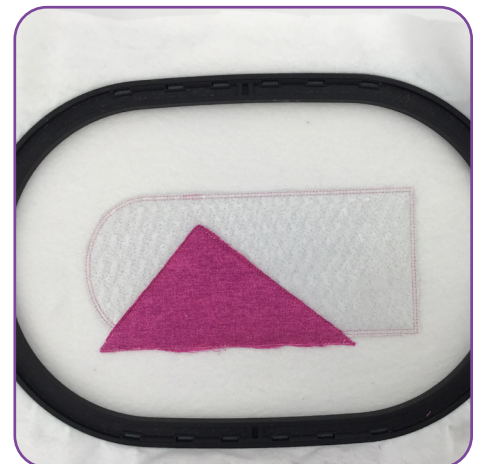



STEP 21

- Stitch Machine Step 5, Fabric 2 Placement Stitch.
- Remove the hoop from the machine, but NOT the project from the hoop.
- Place one 3.5" x 4.5" cotton fabric, right side down, onto the first piece, lining up one edge with the cut edge of the first piece as shown.
- Tape in place to secure.

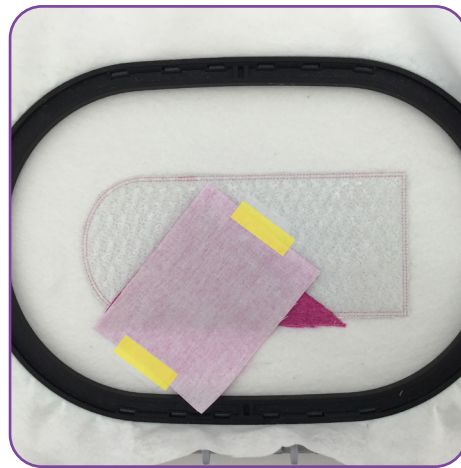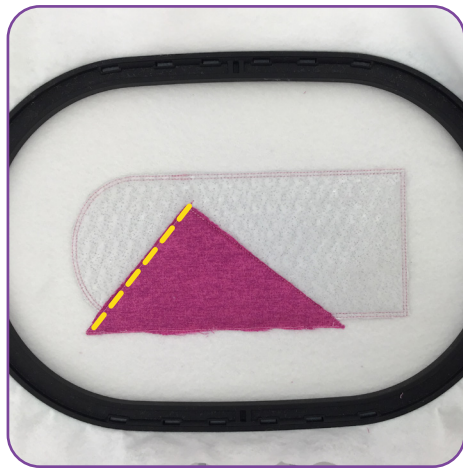



STEP 22

- Return hoop to machine.
- Stitch Machine Step 6, Fabric 2 Fold Stitch.
- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay hoop on a flat surface.
- Flip fabric towards the top of the design and finger press in place.
- Tape in place to secure.

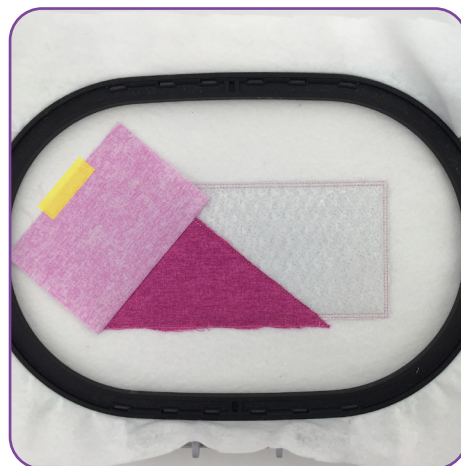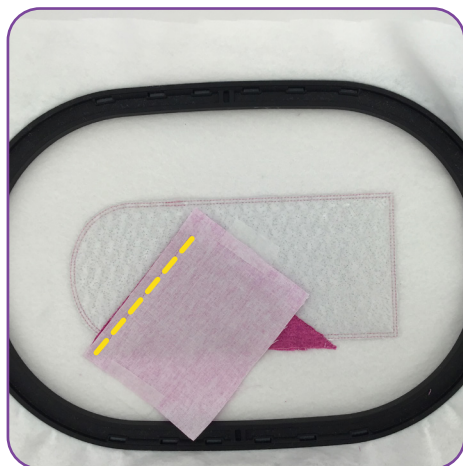


STEP 23

- Return hoop to machine.
- Stitch Machine Step 7, Fabric 3 Placement Stitch.
- Remove hoop from the machine.
- Place one 4.5" x 7.5" cotton fabric, right side down, onto the first piece, lining up one edge with the cut edge of the first piece as shown.
- Tape in place to secure.

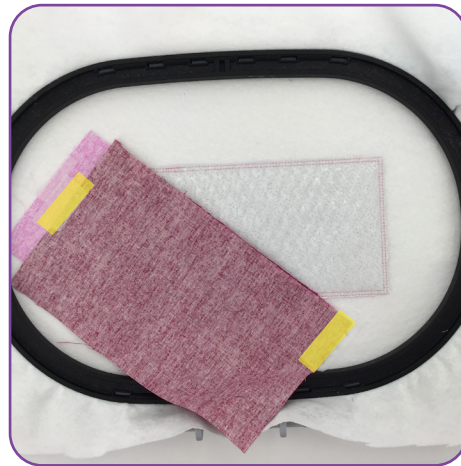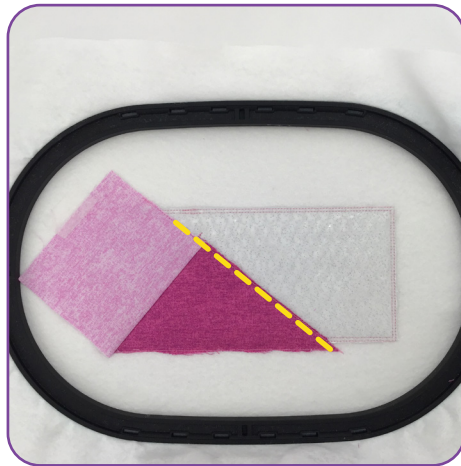



STEP 24

- Return hoop to the machine.
- Stitch Machine Step 8, Fold Stitch.
- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay hoop on a flat surface.
- Flip fabric away from the design and finger press in place.
- Tape in place to secure.

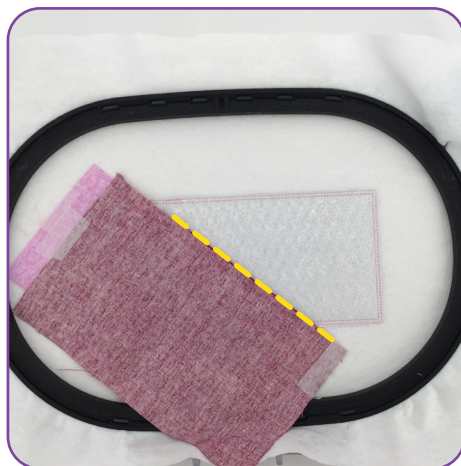


STEP 25

- Return hoop to machine.
- Stitch Machine Step 9, Fabric 4 Placement Stitch.
- Trim excess fabric
- Place (1) 3" x 5" cotton fabric, right side down, lining up one edge with the cut edge of the previous piece as shown.
- Tape in place to secure.

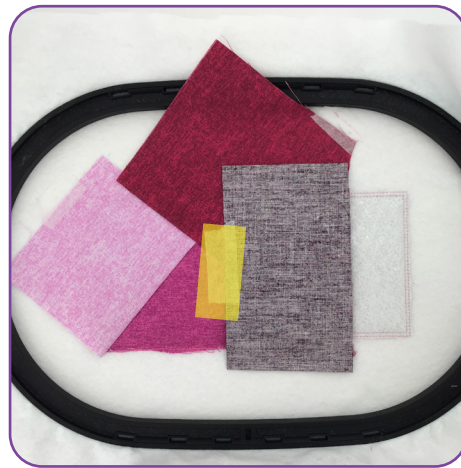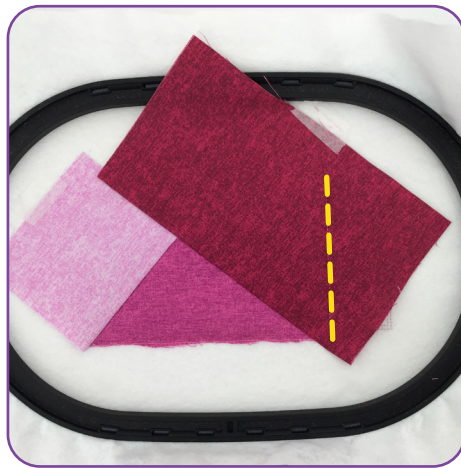

STEP 26

- Return hoop to machine.
- Stitch Machine Step 10, Fabric 4 Fold Stitch.
- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay hoop on a flat surface.
- Flip fabric towards the bottom of the design and finger press in place.
- Tape in place to secure.

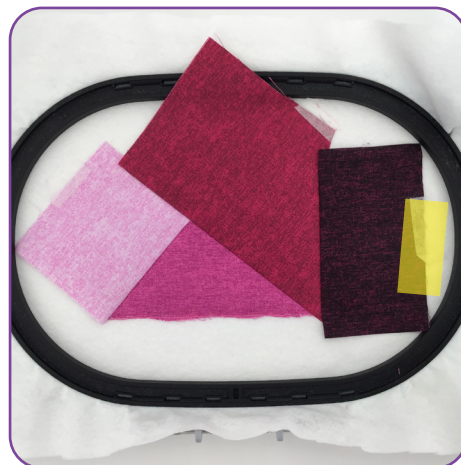

EMBROIDERY



STEP 27

- Return hoop to the machine.
- Stitch Machine Step 11, Tackdown/Detail and Lining Placement Guide.




STEP 28

- Place the Hot Handle Wrap Back 2 (12918-03), right side down centering over the stitching, lining up the folded edge with the two small placement lines.
- Tape in place to secure.
- Note: The Wrap Back (12918-03) is slightly larger than the Wrap Front (12918-04). This is to ensure accuracy when placing the two pieces together.



STEP 29

- Return hoop to machine.
- Stitch Machine Step 12, Back Tackdown.

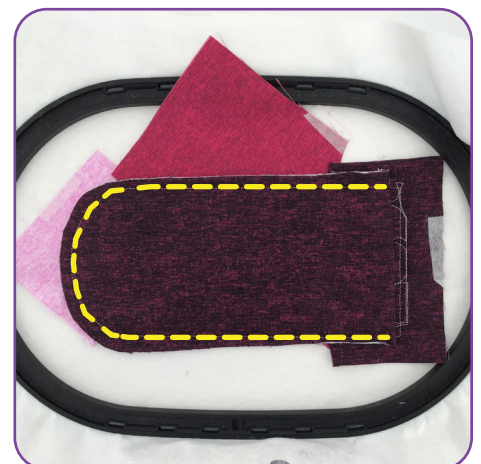


STEP 30

- Remove the hoop from the machine, but NOT the project from the hoop.
- Lay hoop on a flat surface.
- Place the lining right side down, over the entire project.
- Tape in place to secure.



STEP 31

- Return hoop to machine.
- Stitch Machine Step 13, Seam Stitch Match Fabric.

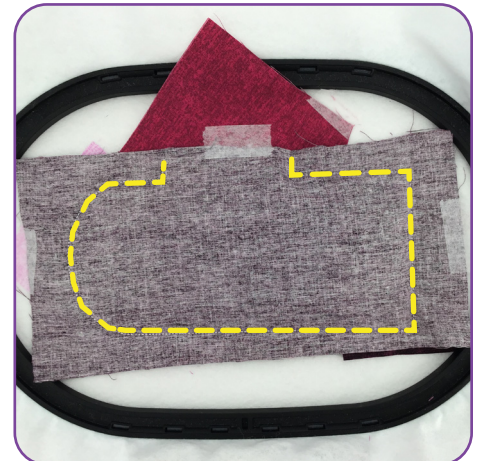

STEP 32

- Remove the hoop from the machine and the project from the hoop.
- Trim the seams approximately 1/4" from the seam line.
- Clip into, but not through the inside corners.
- Trim the outer corners at a 45 degree angle.
- Note: Be sure to leave the seam allowance in the "neck" area.



STEP 33

- Separate the lining fabric from the rest of the project.
- Turn right side out through the side opening.
- Use a Point and Press Tool to push out the edges.
- Note: this will create a finished seam at the bottom of the Hot Handle Wrap.



STEP 34

- Inside the neck, remove the bulk by trimming the Insul-Bright to the tackdown line.
- Note: Do not trim away the fabric.



EMBROIDERY



STEP 35

- Press the seam allowance into the opening.
- Place a small piece of Fuse and Seal inside and press to seal the opening, following the manufacturer's instructions.
- Press the complete lining to fuse.



STEP 36

- Turn Handle Wrap right side out and press.



STEP 37

- The project is complete. Enjoy.

