



MATERIALS



#### **Isacord Thread Colors**

0352 Marsh 1055 Bark 1755 Hyacinth

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

# MATERIALS



#### **Stabilizers**

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD SoftWeb
- OESD Fiber Form
- OESD Applique Fuse and Fix
- Note: To reduce the bulk of the design, we have chosen SoftWeb for the cotton applique pieces.

#### Fabrics/Textiles

· Green Quilter's Cotton

1/4 yard

• Brown Quilter's Cotton

5" x 5"

· Light Pink Quilter's Cotton

1/4 yard

· Medium Pink Quilter's Cotton

1/8 yard or a fat eighth

Dark Pink Quilter's Cotton

1/8 yard or a fat eighth

Maroon Quilter's Cotton

1/4 yard

Note: Fabric amounts are estimates and may result in overages.

# MATERIALS



#### **Notion & Tools**

- **OESD Grippy Grid**
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- **OESD Perfect Scoring Tool**
- **OESD Perfect Punch Tool**
- **OESD MiniMat**
- **OESD Alligator Clamps**
- **OESD Button Clips**
- Embroidery Needle Sharp 75/11

#### **Isacord Thread Colors**

Per thread chart

# SUMMARY





13006-01



Design Size: 7.67 X 6.11 in. Requires 1

13006-02



Design Size: 7.05 X 5.94 in. Requires 2

13006-03



Design Size: 7.40 X 6.08 in. Requires 1

13006-04



Design Size: 3.31 X 3.18 in. Requires 1

13006-05



Design Size: 6.60 X 4.51 in. Requires 3

13006-06



Design Size: 4.01 X 4.03 in. Requires 1



#### General Instructions

The freestanding applique (FSA) instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Designs 13006-05 and 13006-02 are shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with matching thread, top and bottom.

For best results, trim jump stitches after each machine step.

NOTE: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

#### Single Sided Applique Technique applies to these designs:

Vase Soil FSA 13006-04 Vase Sides FSA 13006-05 Vase Floor FSA 13006-06

#### Step 1

- Print the mirrored version of the Fiber Form applique
  patterns (at 100% scale or 1:1 ratio) onto the paper side of
  Applique Fuse and Fix. The applique patterns are included
  at the end of the instructions.
- Cut approximately 1/4" 1/2" outside the printed applique patterns.






- Cut the Fiber Form 1/4" 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10-15 seconds for a secure fuse.






- Trim the Fiber Form on the outer edges of the black outline.
- Set aside.

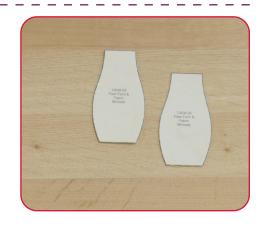



- Cut the applique fabrics 1/4" 1/2" larger than the applique patterns.
- Fuse one layer of SoftWeb to the wrong side of all applique fabrics to provide some body to the fabric.

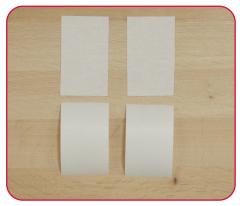



### Step 5

• Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.






- Load the selected design into the machine.
- Example design is 13006-05.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Light Pink Fabric Placement Stitch.



- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.
- Tip: Applique Fuse and Fix is repositionable.

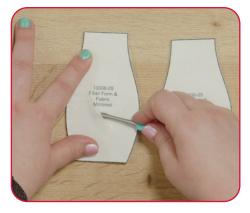





- Remove the paper backing off the SoftWeb.
- Completely cover the Fiber Form with the prepared light pink applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



#### Step 9

- · Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.





• Stitch Machine Step 3, Maroon Fabric Placement Stitch.



#### Step 12

- · Remove the paper backing off the SoftWeb.
- Completely cover the placement stitch with the prepared maroon applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



#### Step 15

- Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.



- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.





#### Single Sided Applique Technique applies to these designs:

Bouquet Section 1 FSA 13006-01 Bouquet Section 2 FSA 13006-02 Bouquet Section 3 FSA 13006-03

### Step 17


- Print the mirrored version of the Fiber Form applique patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix. The applique patterns are included at the end of the instructions.
- Cut approximately 1/4" 1/2" outside the printed applique patterns.



#### Step 18

- Cut the Fiber Form 1/4" 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10–15 seconds for a secure fuse.



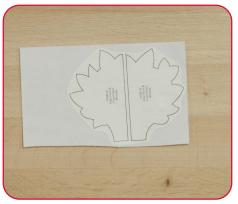




- Trim the Fiber Form on the outer edges of the black outline.
- · Set aside.



### Step 20


- Cut the applique fabrics 1/4" 1/2" larger than the applique patterns.
- Fuse one layer of SoftWeb to the wrong side of all applique fabrics to provide some body to the fabric.

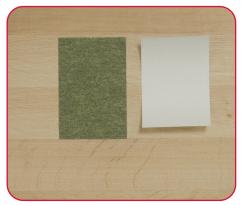





Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

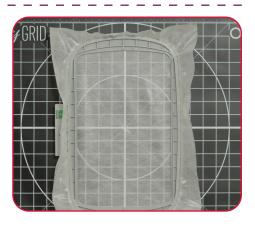

- Load the selected design into the machine.
- Example design is 13006-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Front and Back Green Fabric Placement Stitch.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- · Place the Fiber Form within the placement stitching.
- Finger press to secure.
- Tip: Applique Fuse and Fix is repositionable.





#### \_\_\_ Step 24

- · Remove the paper backing of the SoftWeb.
- Completely cover the Fiber Form with the prepared green applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.





- Turn the hoop over and place the prepared green applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



#### Step 26

- · Return the hoop to the machine.
- · Stitch Machine Step 2, Cut Line and Tackdown.



- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.





• Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



#### Step 29

- · Return the hoop to the machine.
- Stitch Machine Step 3, Fiber Form/Front and Back Green Fabric Placement Stitch.



- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, score and remove the paper backing.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.





- · Remove the paper backing of the SoftWeb.
- Completely cover the Fiber Form with the prepared green applique fabric.
- Tape in place to secure.



#### Step 32

- Turn the hoop over and place the prepared green applique fabric, right side up, completely covering the placement stitch.
- · Carefully tape to secure.



#### Step 33

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



#### Step 35

• Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



- · Return the hoop to the machine.
- Stitch Machine Step 5, Front/Back Medium Pink Fabric Placement Stitch.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing of the SoftWeb.
- Completely cover the placement stitch with the prepared medium pink applique fabric.
- Tape in place to secure.



#### Step 38

- Turn the hoop over and place the prepared medium pink applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.



- Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



#### Step 41

Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



- Return the hoop to the machine.
- Repeat Steps 36 41 for Machine Steps 7 10.







- Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.





#### Step 44

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.





#### Step 45

- · Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.
- Use steam to make the vase sides more malleable and shape them into a gentle "S" curve.





#### Step 46

- Before assembly, use the OESD MiniMAT and the OESD Perfect Punch Tool with the 3mm attachment to create the eyelets indicated in the diagram.
- Reference the Punch Tool Guide on page ???.
- · Tip: Take care to not cut the satin stitching.





### Step 47

 Layer a Bouquet Section 2 FSA (13006-02), right side up, a Bouquet Section 3 FSA (13006-03), right side up, and a Bouquet Section 2 FSA, right side down.



#### Step 48

- Slide Bouquet Section 1 FSA (13006-01) onto the middle of the stack of Bouquet Sections from the prior step.
- Spread the sections out so there is equal space between them.







#### Step 49


- Match the buttonettes of the Bouquet Sections to the corresponding eyelets of the Vase Soil FSA (13006-04)
- Using OESD Alligator Clamps, pull each buttonette through the corresponding eyelet.





#### Step 50

- Match the buttonettes of the Vase Soil with the eyelets at the top of the Vase Sides (13006-05).
- Pull each buttonette through the corresponding eyelet.
- Tip: Use OESD Button Clips to hold the buttonettes in place while assembling.

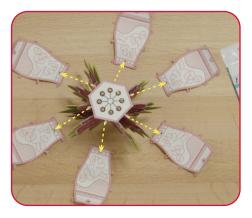





### Step 51


- Match the buttonettes of the Vase Sides to the eyelets of the Vase Sides.
- Pull each buttonette through the corresponding eyelet.






#### Step 52

- Match the buttonettes of the Vase Floor FSA to the eyelets at the bottom of the Vase Sides.
- Pull each buttonette through the corresponding eyelet.

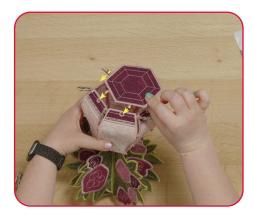

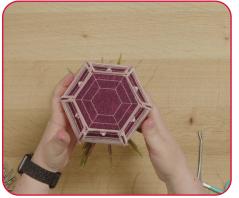




### Step 53

• The project is complete. Enjoy!



#### 13006-04

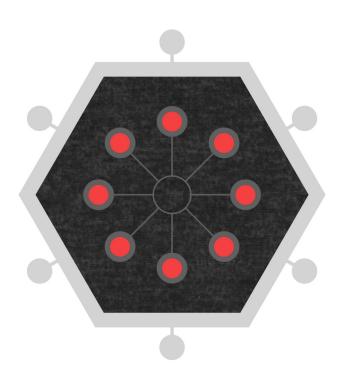

= 2 MM

= 3 MM

= 4 MM

**CRAFT KNIFE** 

#### 13006-05





= 2 MM


= 3 MM

= 4 MM

**CRAFT KNIFE** 


#### **ATTENTION**

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

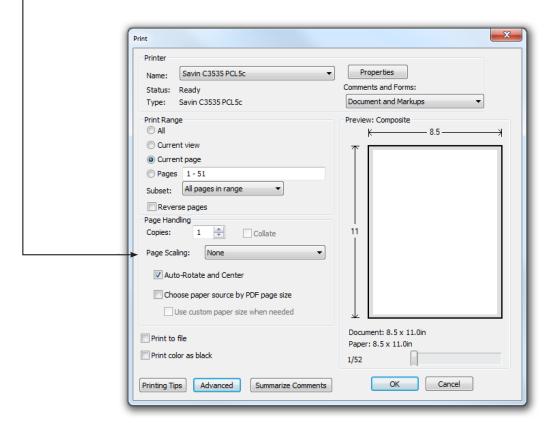

#### **TO SAVE PAPER**

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

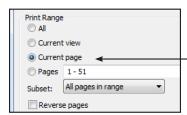

## APPLIQUE PATTERNS O




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-01 Fiber Form & Front Fabric

## APPLIQUE PATTERNS O



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-01 Back Fabric



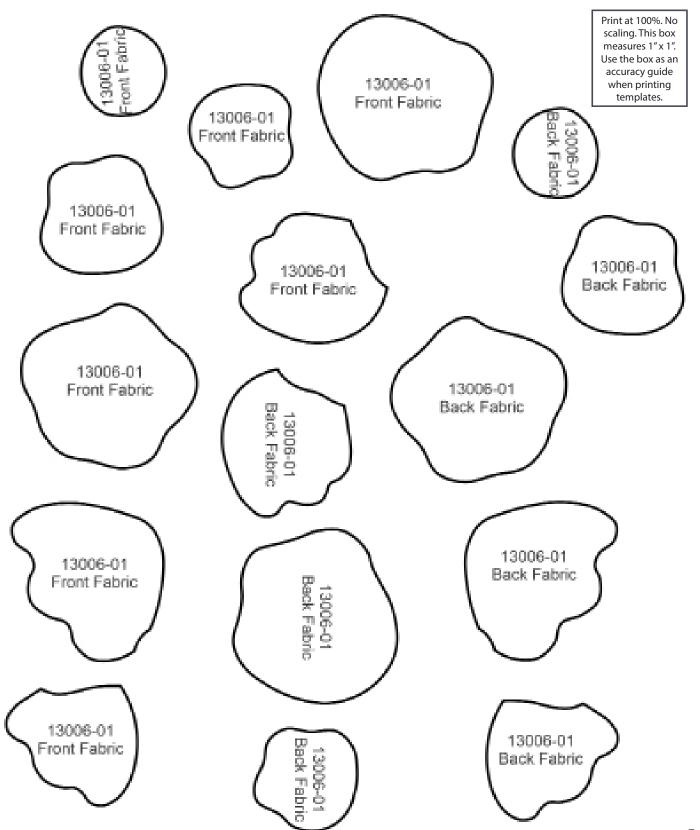

# APPLIQUE PATTERNS O SD PREMIER COLLECTION




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-02 Fiber Form & Front Fabric 13006-02 Fiber Form & Front Fabric

# APPLIQUE PATTERNS OSSI




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

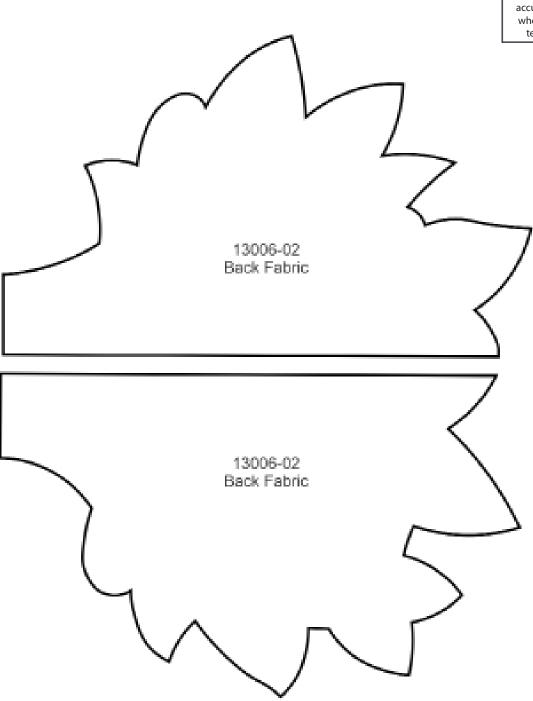

#### APPLIQUE PATTERNS



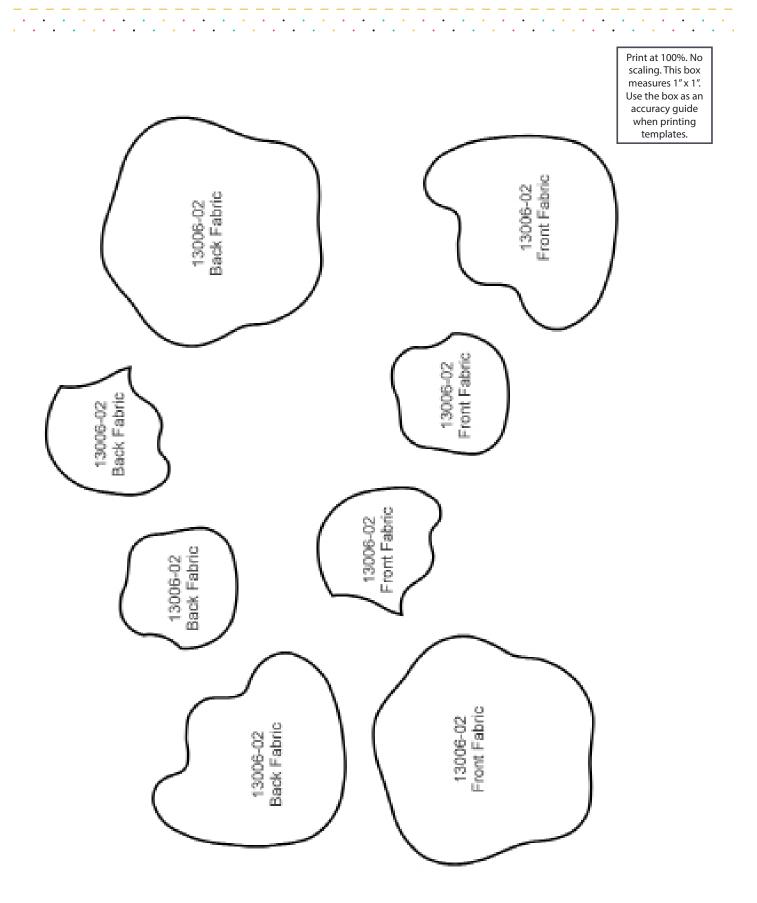

#### APPLIQUE PATTERNS OS



Print at 100%. No


scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-03 Fiber Form & Front Fabric

#### APPLIQUE PATTERNS O SD PREMIER COLLECTION


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-03 Back Fabric

#### APPLIQUE PATTERNS O SD PREMIER



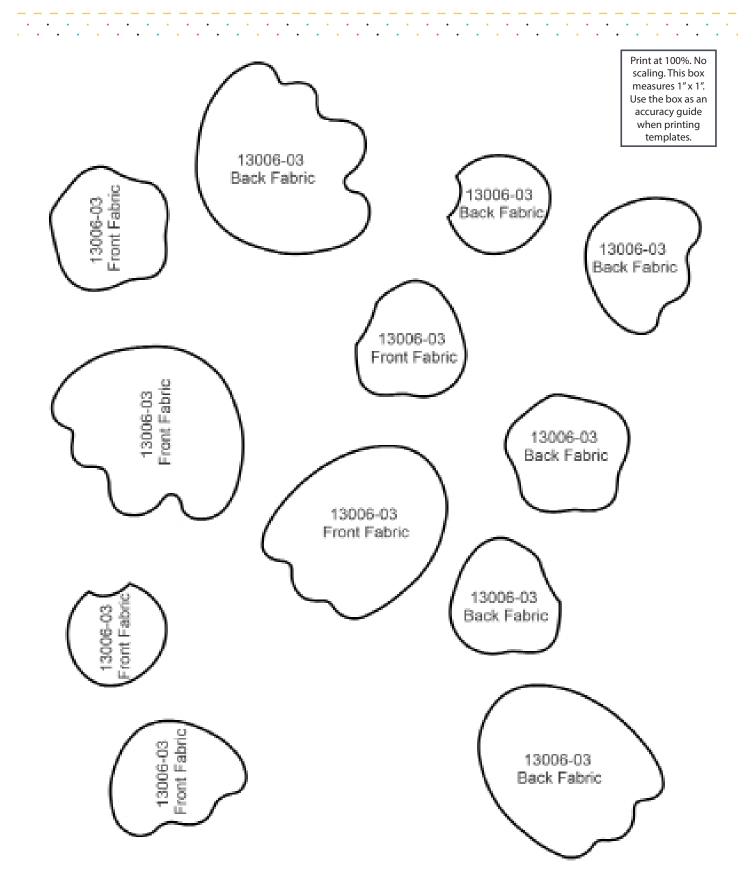


#### APPLIQUE PATTERNS O SD PREMIER COLLECTION

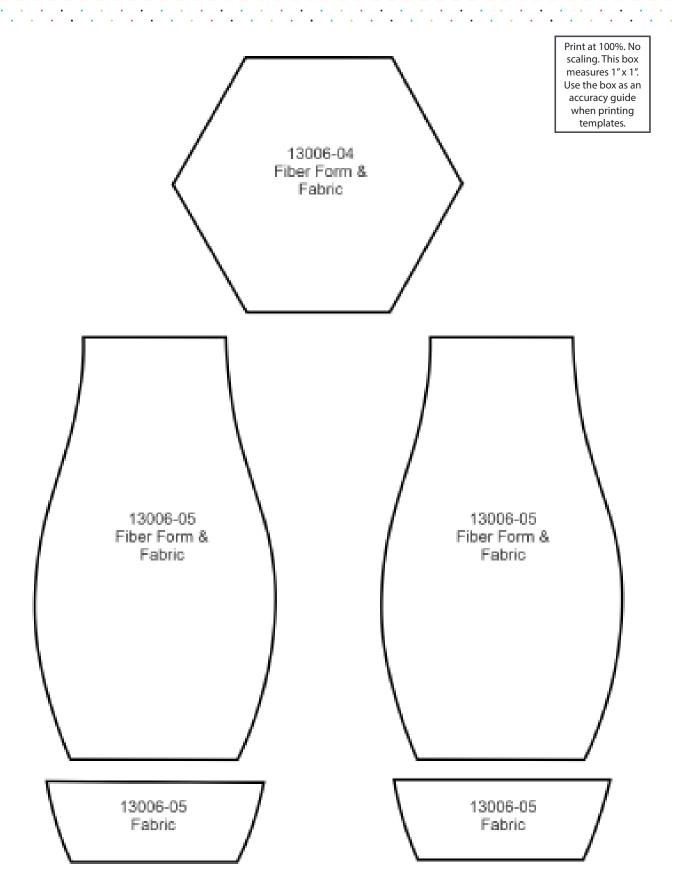


#### APPLIQUE PATTERNS O SD PREMIER COLLECTION

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

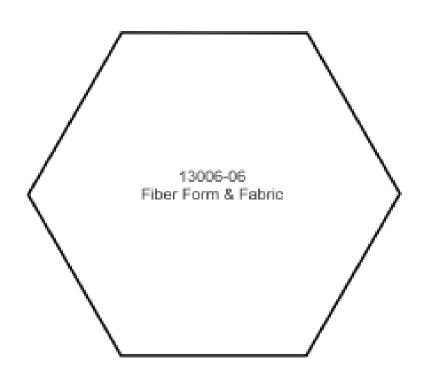



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-01 Fiber Form & Front Fabric Mirrored

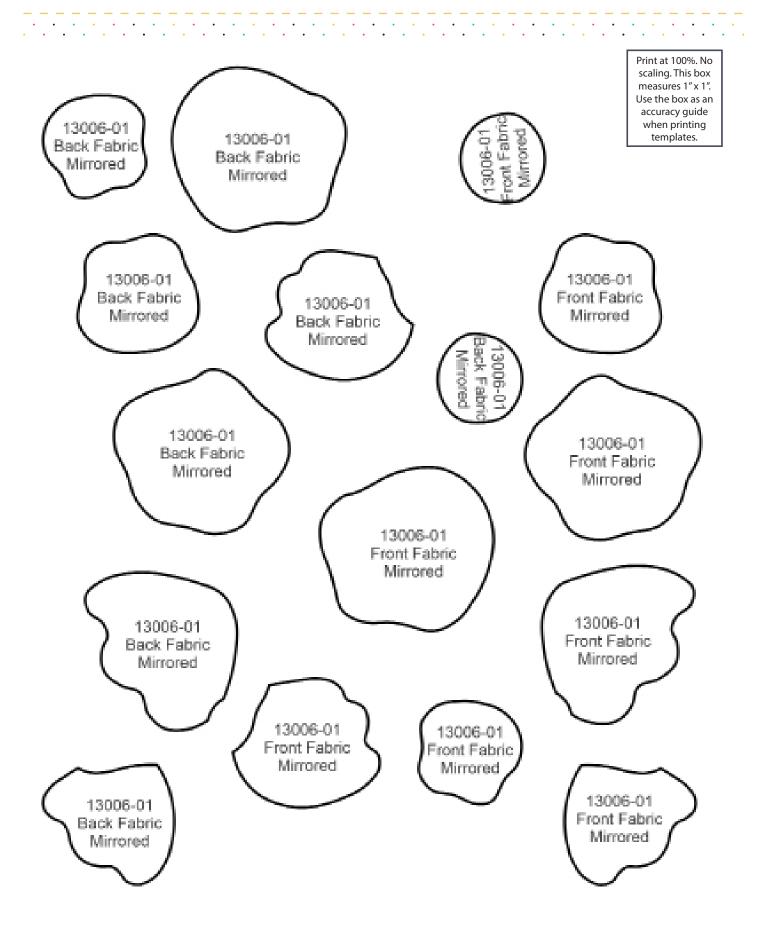


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-01 Back Fabric Mirrored

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

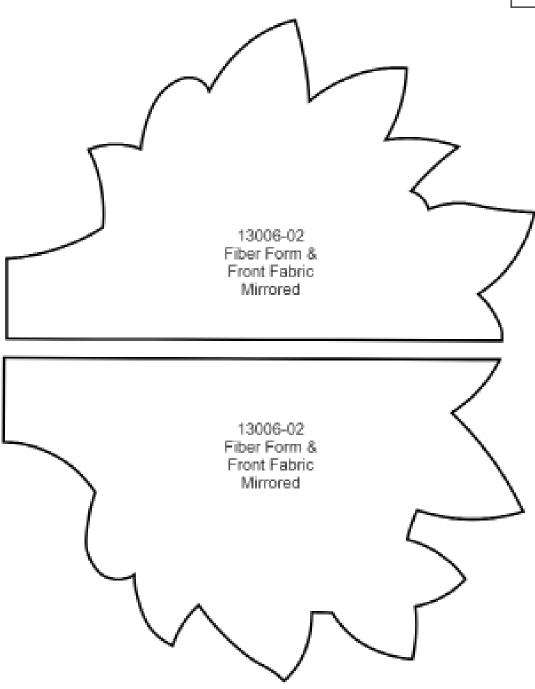

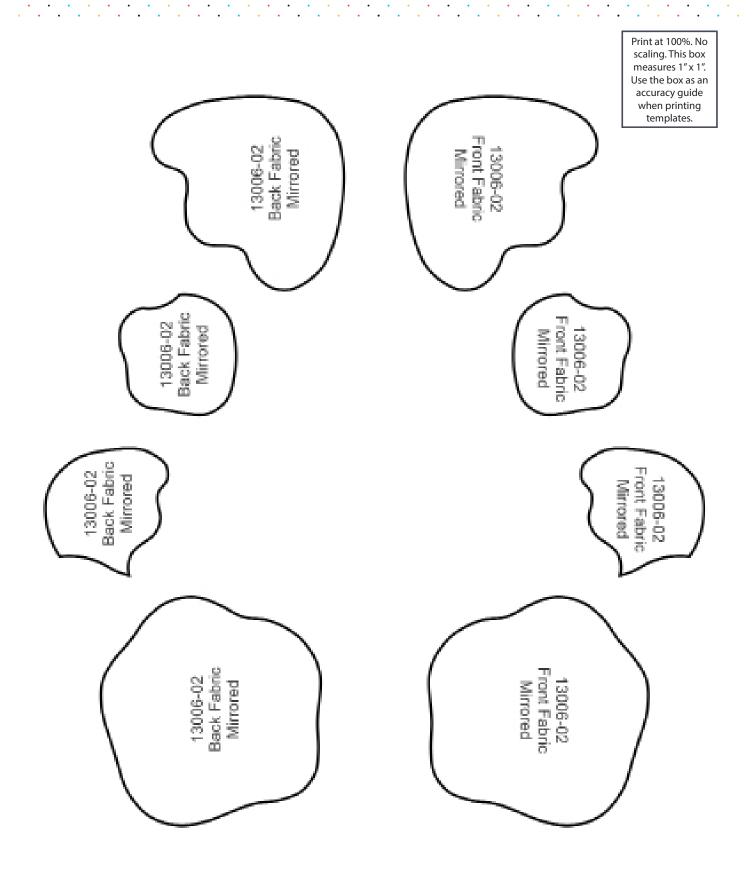

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

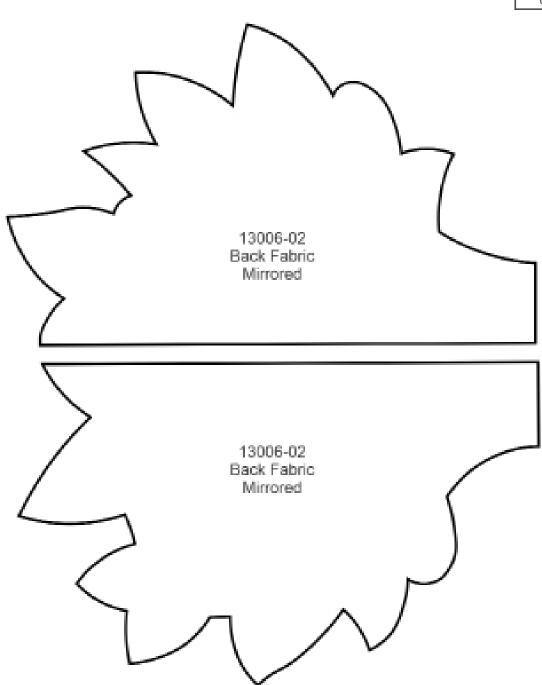



Print at 100%. No

scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates. 13006-03 Fiber Form & Front Fabric Mirrored



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

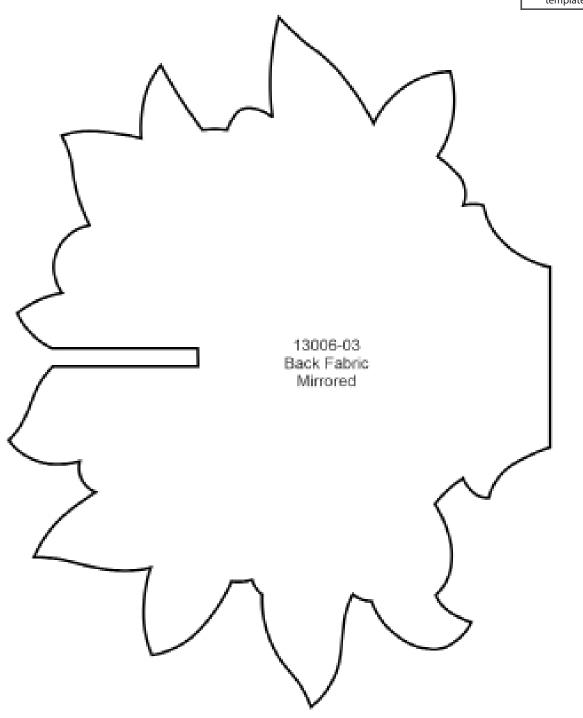

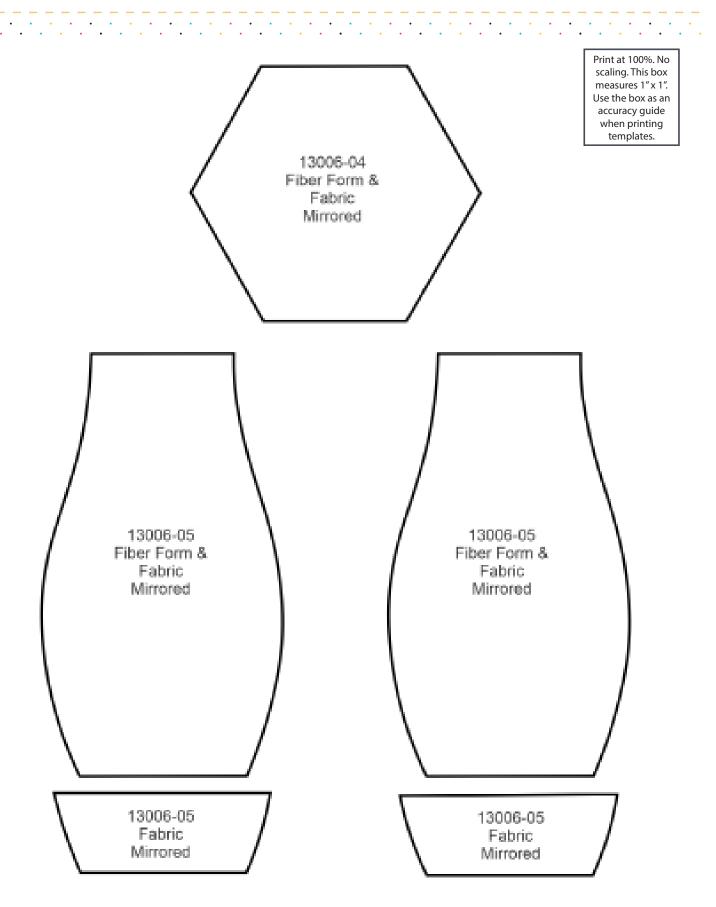



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

