



Freestanding Daisy Tabletop Bouquet



Collection No. 13031
1 Design/6 Files

MATERIALS



Isacord Thread Colors

- 0010 Silky White
- 0504 Mimosa
- 1030 Passion Fruit
- 1252 Dark Tan
- 3820 Celestial
- 3951 Azure Blue
- 4952 Mystic Ocean
- 5822 Kiwi

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD SoftWeb
- OESD Fiber Form
- OESD Applique Fuse and Fix
- OESD StabilStick CutAway (Optional: See Step 4)

Fabrics/Textiles

- OESD Favorite Felt, Aqua
- OESD Favorite Felt, Blue Grey
- OESD Favorite Felt, Blue
- Green Quilter's Cotton
 - 1/2 yard
- Orange Quilter's Cotton
 - 1/4 yard
- Yellow Quilter's Cotton
 - 1/4 yard
- Brown Quilter's Cotton
 - 5" x 5"

 **Note: Fabric amounts are estimates and may result in overages.**

Notions & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Perfect Scoring Tool
- OESD Perfect Punch Tool
- OESD MiniMat
- OESD Alligator Clamps
- OESD Button Clips
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per thread chart



SUMMARY



Completed Project Size: 6" L x 6" W x 10" H

13031-01



Design Size:
6.17 X 6.01 in.
Requires 1

13031-02




Design Size:
6.19 X 6.03 in.
Requires 2

13031-03




Design Size:
6.18 X 6.05 in.
Requires 1

13031-04

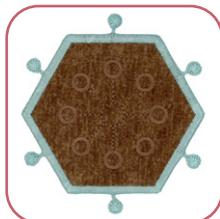


Design Size:
3.44 X 3.18 in.
Requires 1

13031-05

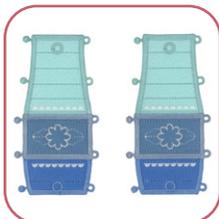

Design Size:
4.68 X 5.80 in.
Requires 3

13031-06

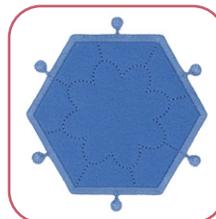

Design Size:
3.88 X 3.70 in.
Requires 1



General Instructions

The freestanding applique (FSA) instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Designs 13031-05 and 13031-02 are shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique techniques shown are pre-cut (Fiber Form) and cut in place (felt & fabric). Pre-cut applique patterns are included at the end of the instructions.

All designs are stitched with matching bobbin thread, top and bottom
For best results, trim jump stitches after each machine step.

 **Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.**

Designs - Single Sided Applique

Daisy Vase Soil FSA	13031-04
Daisy Vase Sides FSA	13031-05
Daisy Vase Floor FSA	13031-06

Step 1

- Print the mirrored version of the Fiber Form applique patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix. The applique patterns are included at the end of the instructions.
- Cut approximately 1/4" - 1/2" outside the printed applique patterns.



Step 2

- Cut the Fiber Form 1/4" - 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10-15 seconds for a secure fuse.



Step 3


- Trim the Fiber Form on the outer edges of the black outline.
- Set aside.



□ Step 4


- Cut the applique felts 1/4" - 1/2" larger than the applique patterns.

⊕ **Optional: OESD Favorite Felt does not require extra stabilization. However, if using other felt, adhere one layer of StabilStick CutAway to the wrong side of all applique felts to provide some body to the felt.**

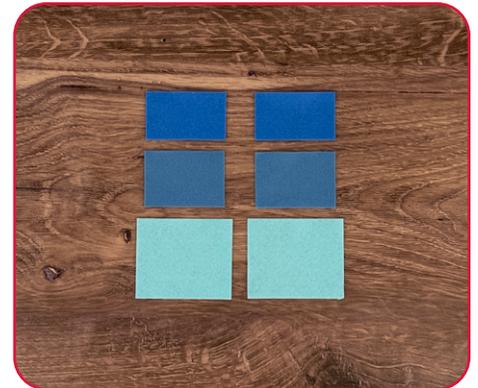


□ Step 5

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

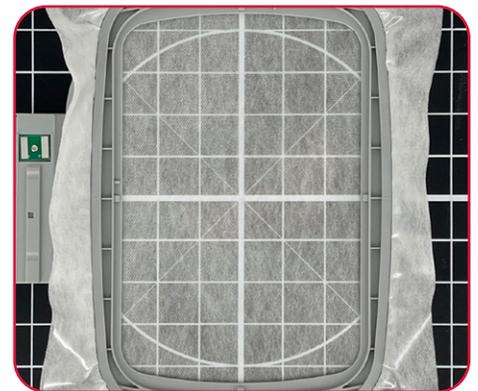

□ Step 6

- Load the selected design into the machine.
- Example design is 13031-05.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form Placement Stitch.

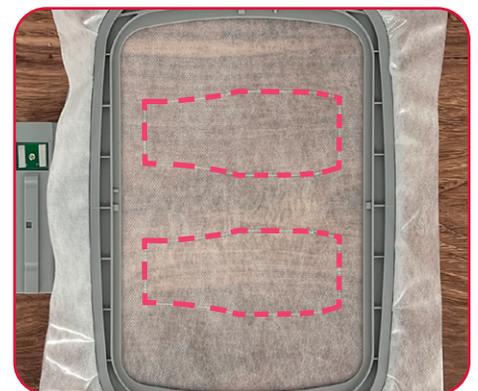

Step 7


- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.

 **Tip: Applique Fuse and Fix is repositionable.**



Step 8

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.
- Stitch Machine Step 3, Aqua Felt Placement Stitch.

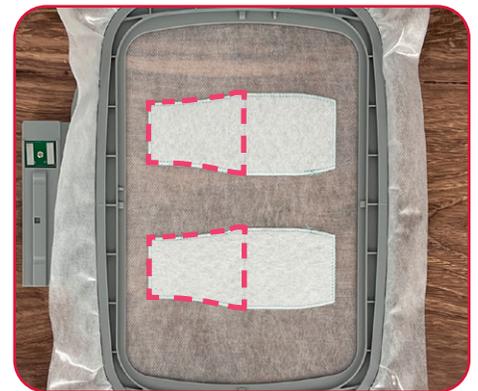


□ Step 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the aqua applique felt.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.




□ Step 10

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

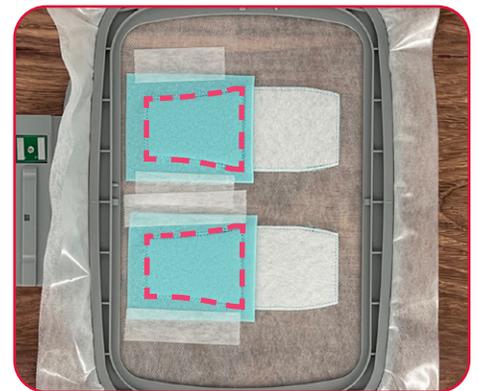

□ Step 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess felt as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

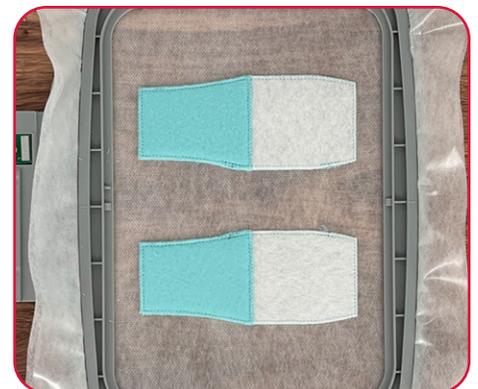


 **Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.**




Step 12

- Return the hoop to the machine.
- Stitch Machine Step 5, Blue Grey Felt Placement Stitch.

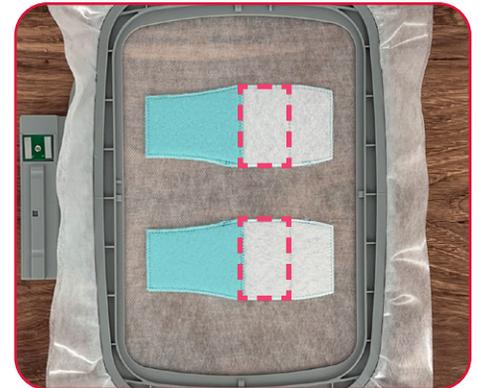


Step 13

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the blue grey applique felt.
- Tape in place to secure.

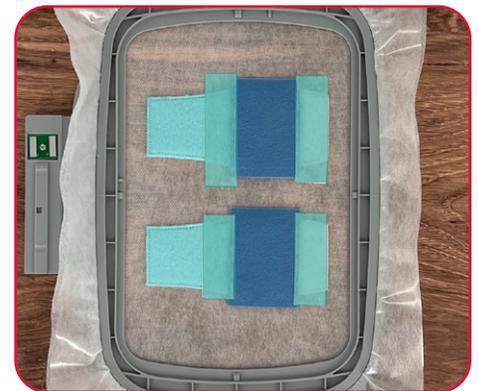

Step 14

- Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.

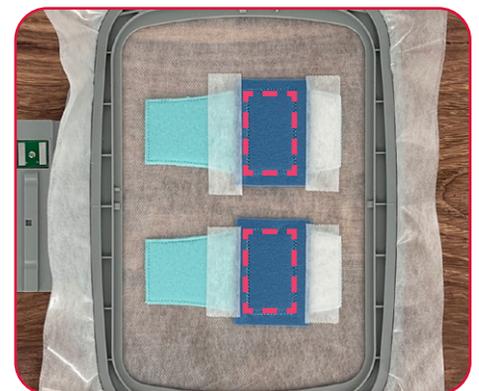

□ Step 15

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess felt as close to the cut line as possible.




□ Step 16

- Return the hoop to the machine.
- Stitch Machine Step 7, Blue Felt Placement Stitch.



□ Step 17

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the blue applique felt.
- Tape in place to secure.

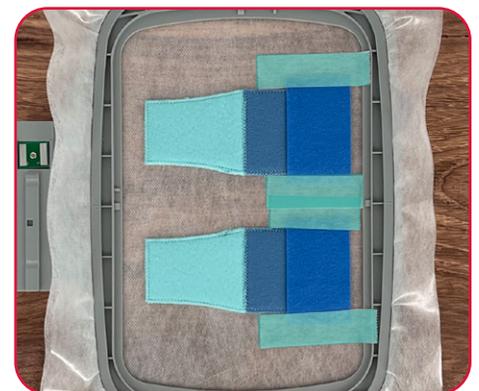

□ Step 18

- Return the hoop to the machine.
- Stitch Machine Step 8, Cut Line and Tackdown.



□ Step 19

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess felt as close to the cut line as possible.



□ Step 20

- Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart **with matching bobbin thread.**



EMBROIDERY - SINGLE SIDED APPLIQUE



□ Step 21

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.




Designs - Double Sided Applique

- Daisy Bouquet Section 1 FSA 13031-01
- Daisy Bouquet Section 2 FSA 13031-02
- Daisy Bouquet Section 3 FSA 13031-03

Step 22

- Print the mirrored version of the Fiber Form applique patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix. The applique patterns are included at the end of the instructions.
- Cut approximately 1/4" - 1/2" outside the printed applique patterns.

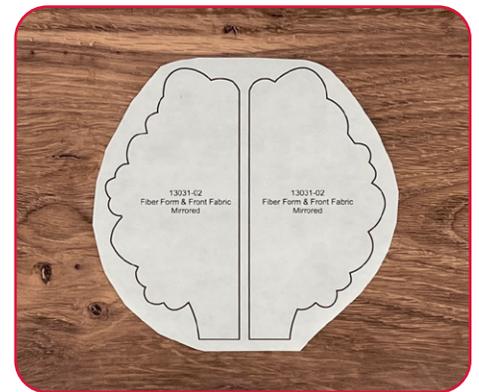

Step 23

- Cut the Fiber Form 1/4" - 1/2" larger than the applique patterns.
- Fuse the trimmed patterns to the back of the Fiber Form with the paper side of the printed patterns up. Hold the iron on the pattern for 10-15 seconds for a secure fuse.



Step 24

- Trim the Fiber Form on the outer edges of the black outline.
- Set aside.



Step 25

- Cut the applique fabrics 1/4" - 1/2" larger than the applique patterns.
- Fuse one layer of SoftWeb to the wrong side of all applique fabrics to provide some body to the fabric.



Step 26

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.



Step 27

- Load the selected design into the machine.
- Example design is 13031-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Front and Back Green Fabric Placement Stitch.



Step 28

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.

Tip: Applique Fuse and Fix is repositionable.



Step 29

- Remove the paper backing off the Softweb on the green applique fabric.
- Completely cover the Fiber Form with the prepared green applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



Step 30


- Turn the hoop over and place the prepared green applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.

Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 31

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

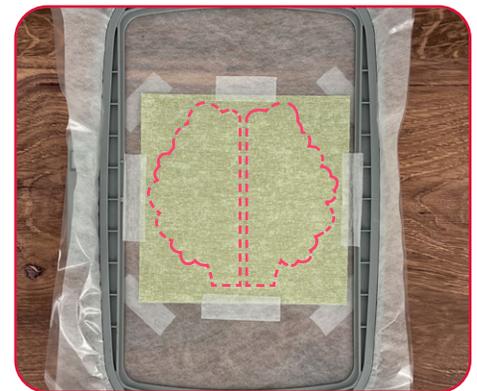

Step 32

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



Step 33

- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



Step 34

- Return the hoop to the machine.
- Stitch Machine Step 3, Front/Back Orange Fabric Placement Stitch.



Step 35

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the Softweb on the orange applique fabric.
- Completely cover the placement stitch with the prepared orange applique fabric.
- Tape in place to secure.



Step 36


- Turn the hoop over and place the prepared orange applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.

Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 37

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

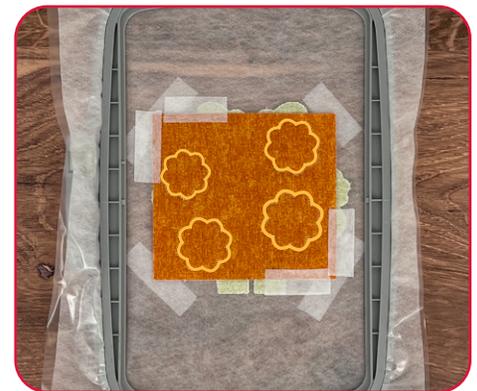

Step 38

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



□ Step 39

- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



□ Step 40

- Return the hoop to the machine.
- Stitch Machine Step 5, Front/Back Yellow Fabric Placement Stitch.



□ Step 41

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the Softweb on the yellow applique fabric.
- Completely cover the placement stitch with the prepared yellow applique fabric.
- Tape in place to secure.



□ Step 42

- Turn the hoop over and place the prepared yellow applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.

Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



□ Step 43

- Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.



□ Step 44

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



□ Step 45

- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



□ Step 46

- Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart **with matching bobbin thread.**



□ Step 47

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.



ASSEMBLY



□ Step 48

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.




✓ **Note: Using the Perfect Embroidery Press Cloth when pressing your design helps prevent the stitches from becoming crushed and absorbs steam for a perfectly pressed finish.**

□ Step 49

- Before assembly, use the OESD MiniMAT and the OESD Perfect Punch Tool with the 3mm attachment to create the eyelets indicated in the diagram.
- Reference the Punch Tool Guide on page 29.

🔔 **Tip: Take care to not cut the satin stitching.**

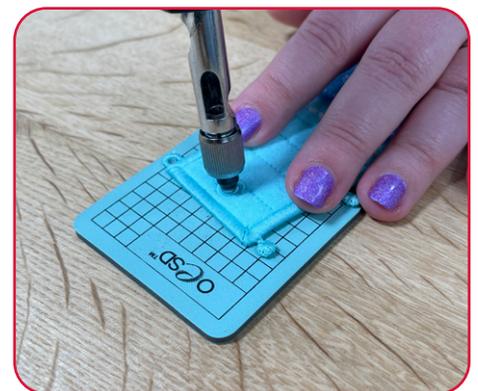

ASSEMBLY

□ Step 50

- Layer a Daisy Bouquet Section 2 FSA (13031-02), right side up, a Daisy Bouquet Section 3 FSA (13031-03), right side up, and a Daisy Bouquet Section 2 FSA, right side down.



□ Step 51

- Slide Daisy Bouquet Section 1 FSA (13031-01) onto the middle of the stack of Daisy Bouquet Sections from the prior step.
- Spread the sections out so there is equal space between them.



ASSEMBLY

Step 52


- Match the buttonettes of the Daisy Bouquet Sections to the corresponding eyelets of the Daisy Vase Soil FSA (13031-04).
- Using OESD Alligator Clamps, pull each buttonette through the corresponding eyelet.



Step 53

- Match the buttonettes of the Daisy Vase Soil with the eyelets at the top of the Daisy Vase Sides FSA (13031-05).
- Pull each buttonette through the corresponding eyelet.


Tip: Use OESD Button Clips to hold the buttonettes in place while assembling.

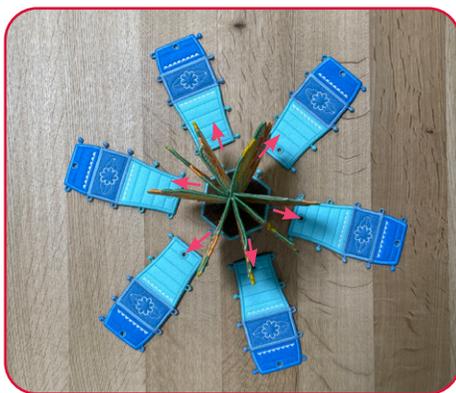

ASSEMBLY



□ Step 54

- Match the buttonettes of one Daisy Vase Side to the eyelets of the next Daisy Vase Side.
- Pull each buttonette through the corresponding eyelet.
- Repeat for all Vase Sides.

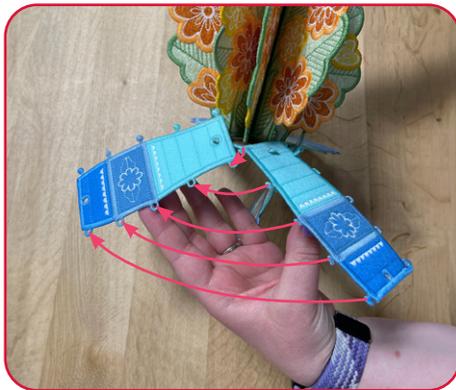

□ Step 55

- Match the buttonettes of the Daisy Vase Floor FSA (13031-06) to the eyelets at the bottom of the Daisy Vase Sides.
- Pull each buttonette through the corresponding eyelet.

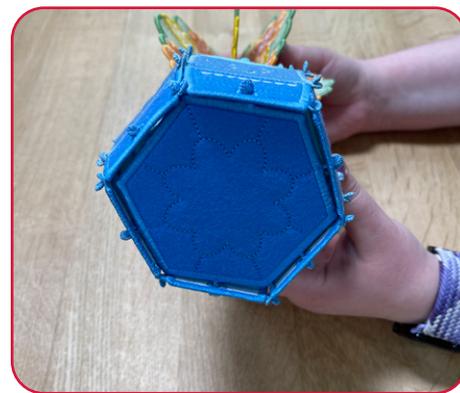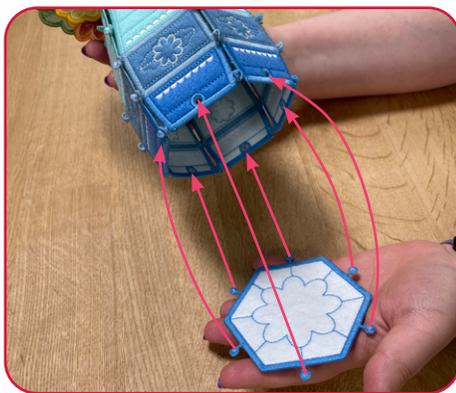

ASSEMBLY



Step 56


- The project is complete. Enjoy!



PUNCH TOOL GUIDES



13031-04

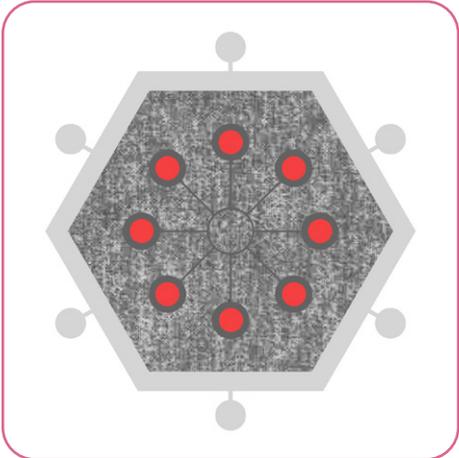

13031-05



● = 2 MM

● = 3 MM

● = 4 MM

CRAFT KNIFE




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

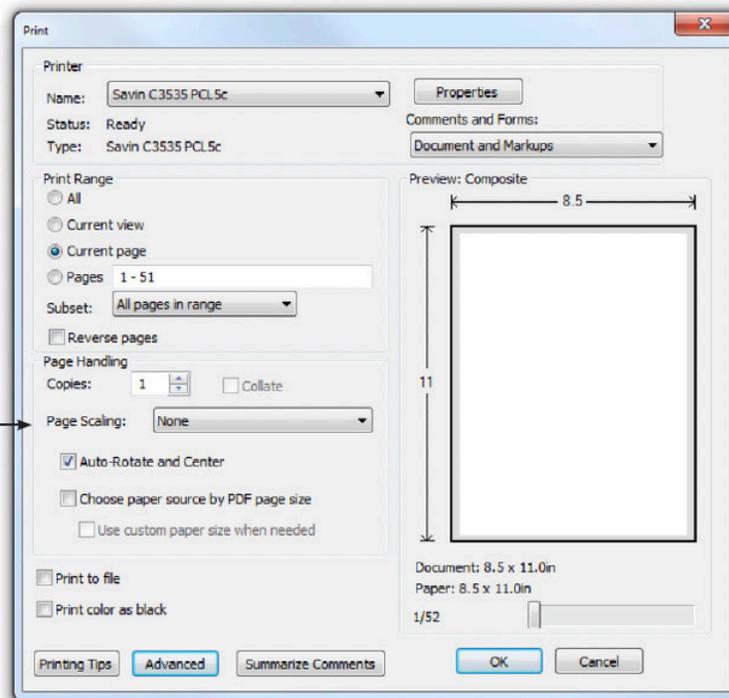

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

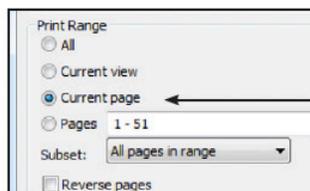

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

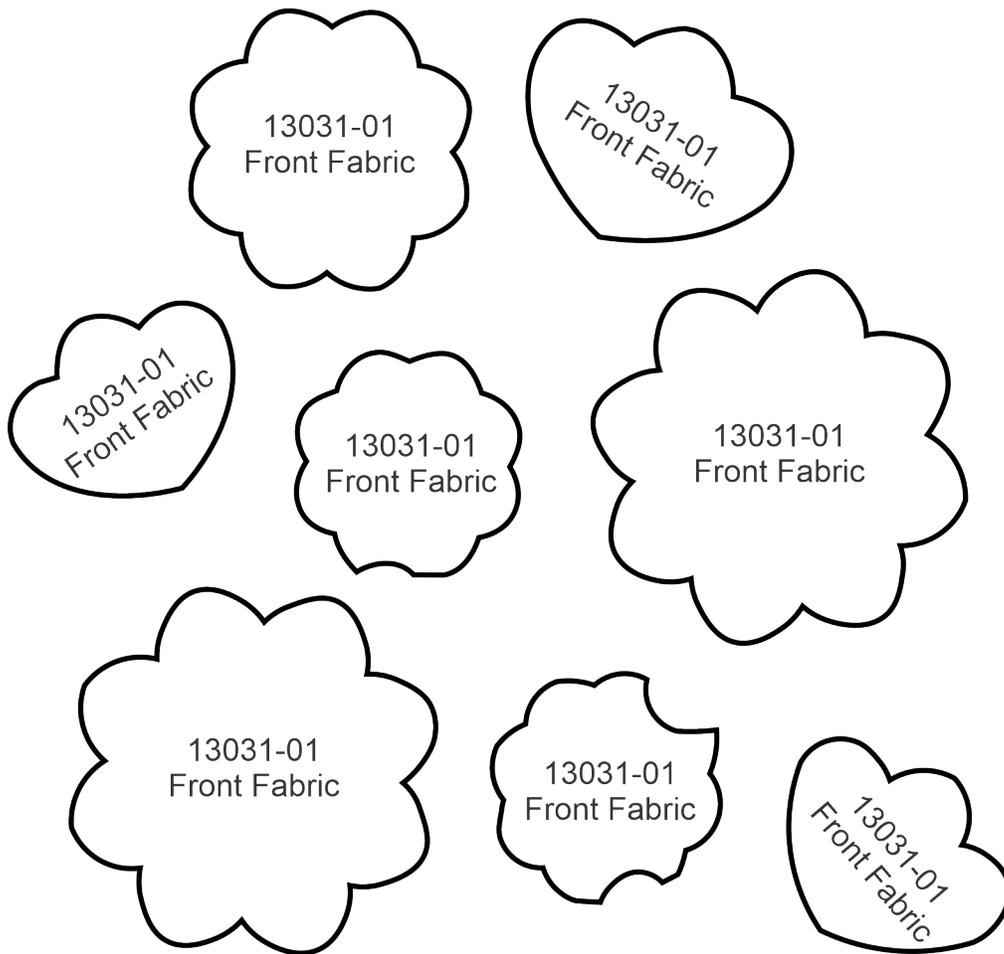

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

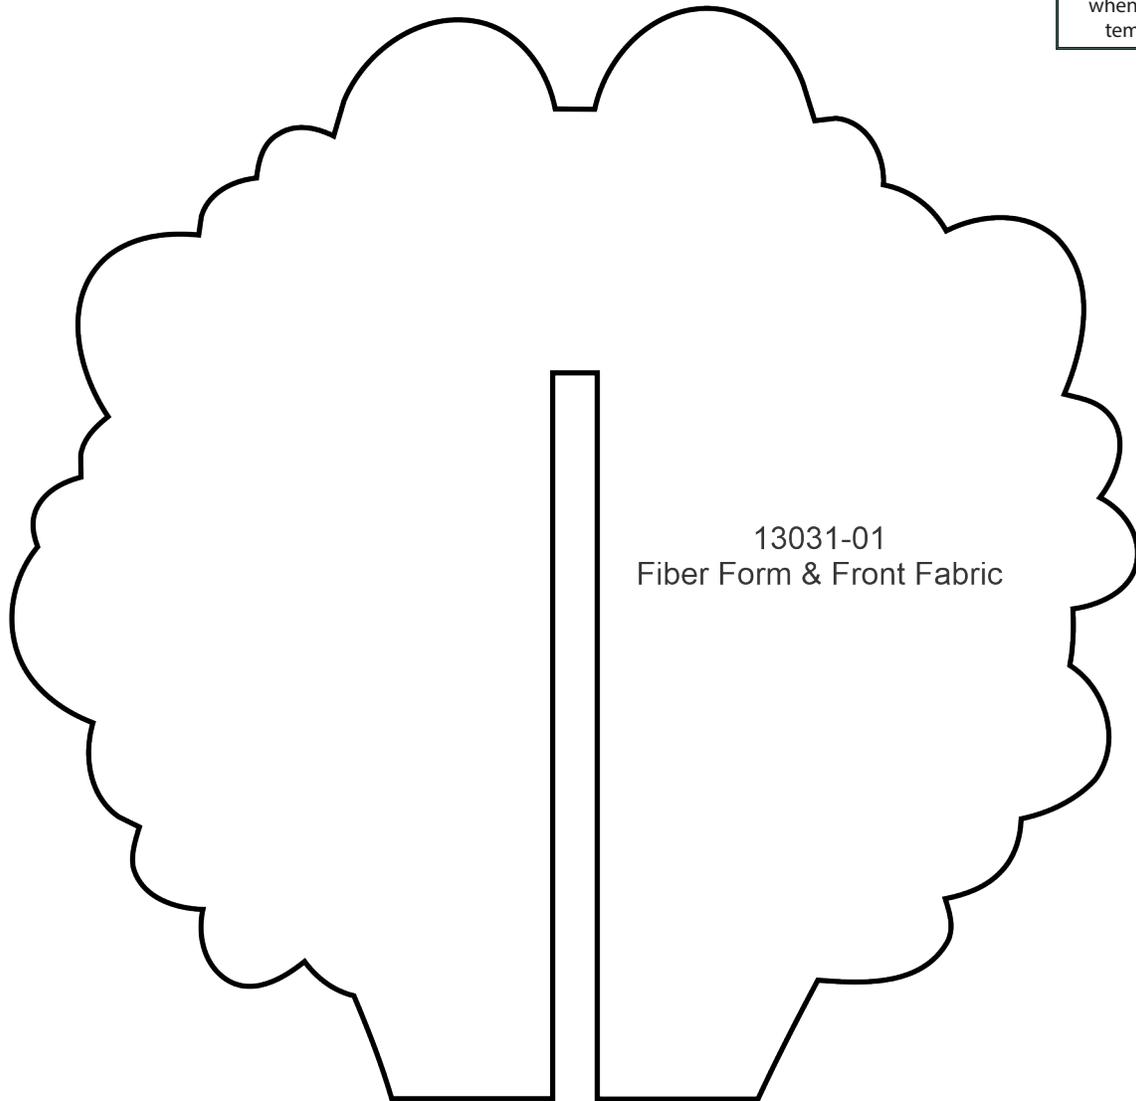


13031-01
Fiber Form & Front Fabric

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

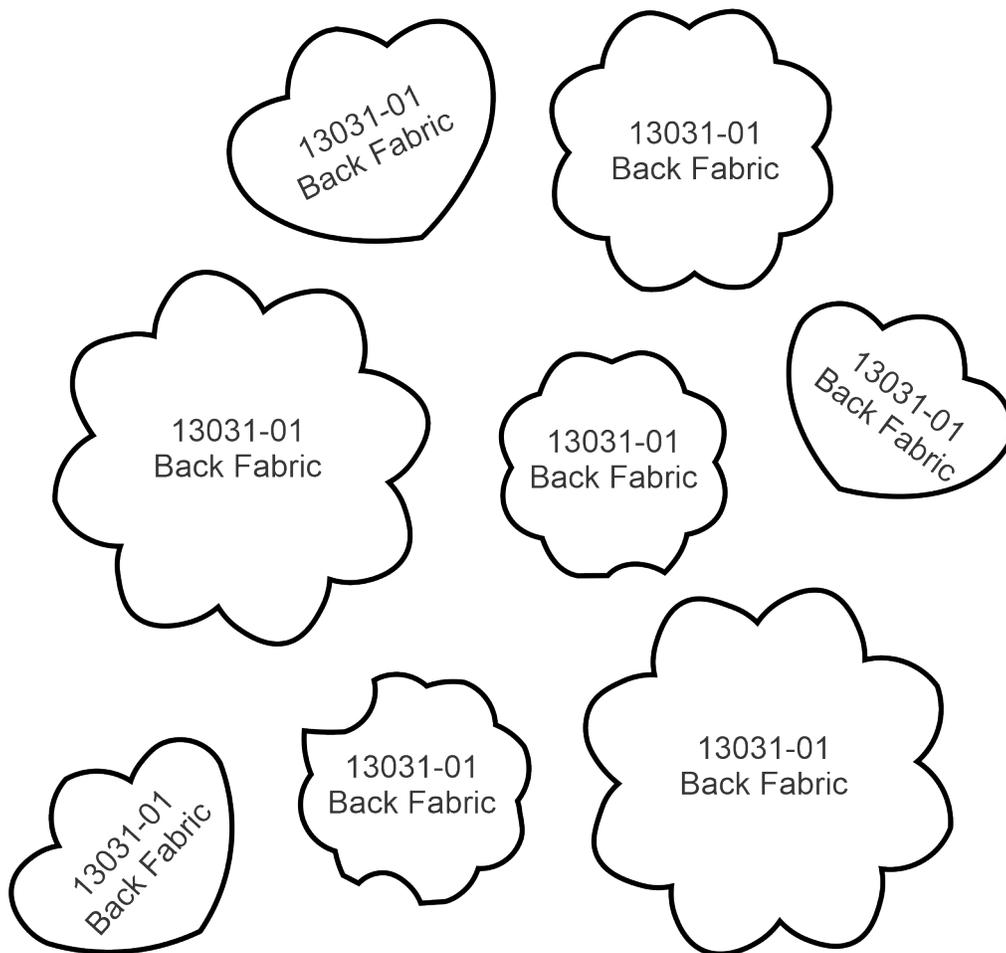

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

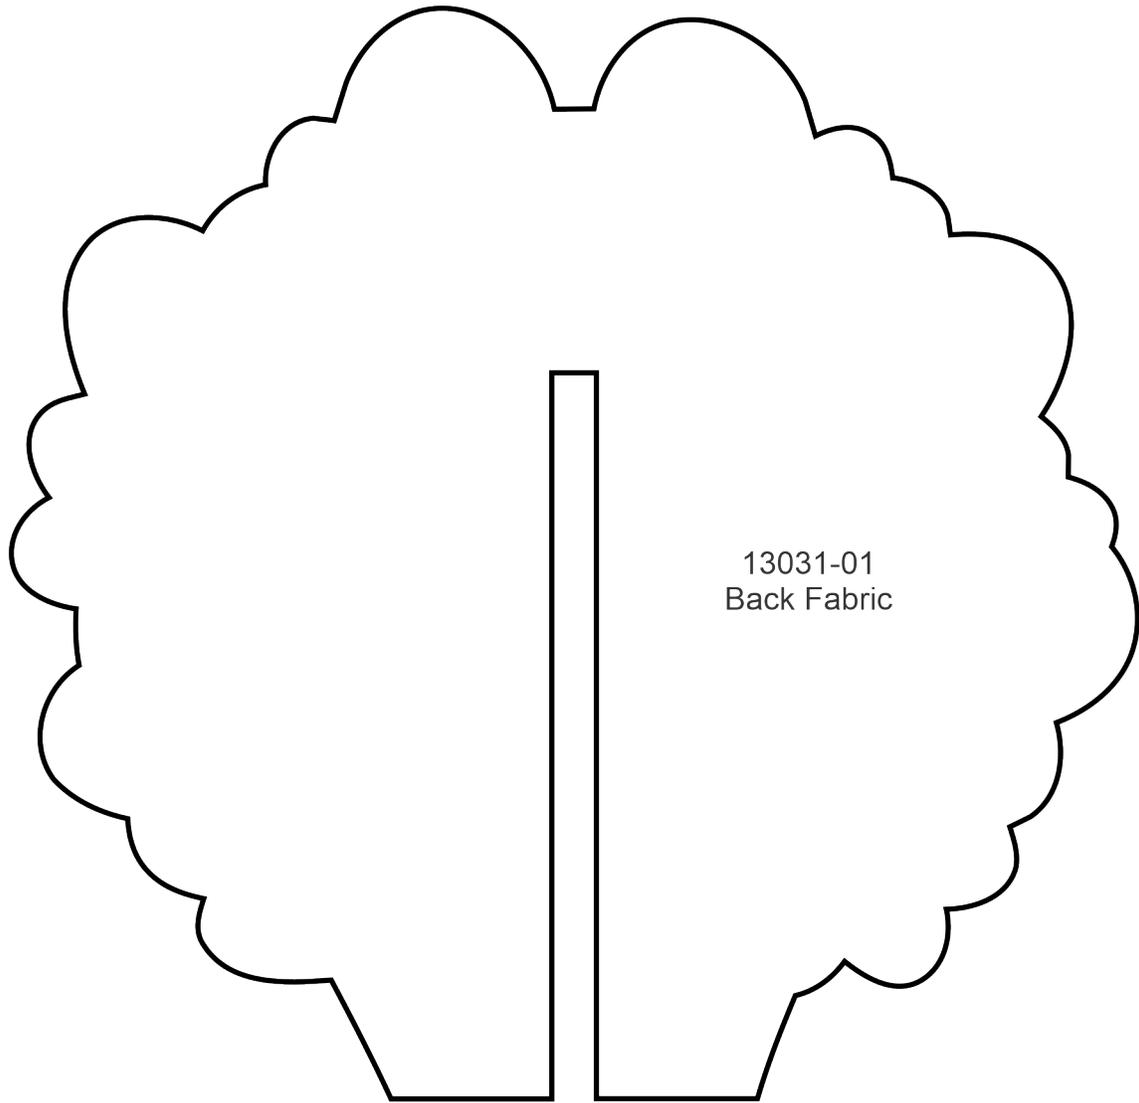


13031-01
Back Fabric

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

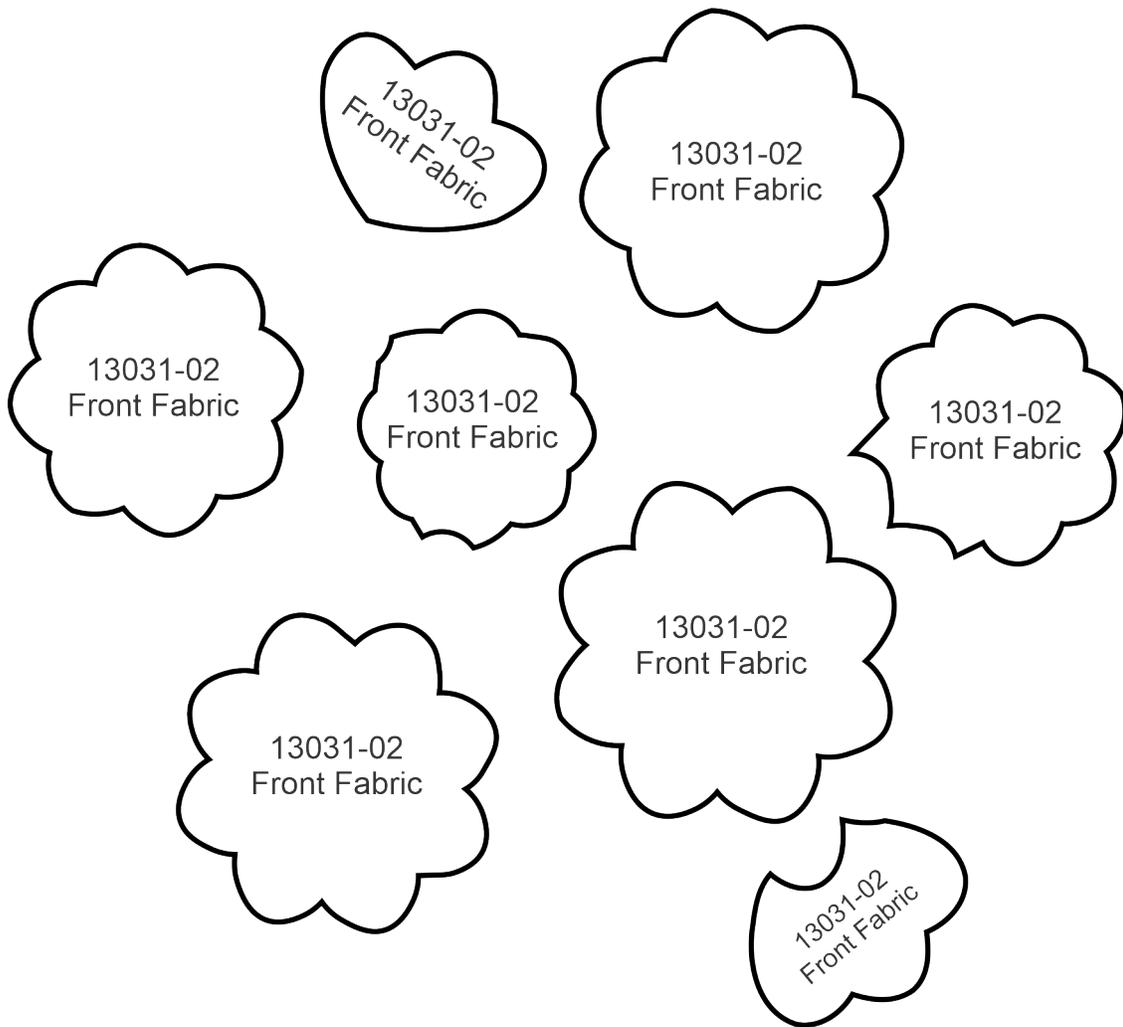

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

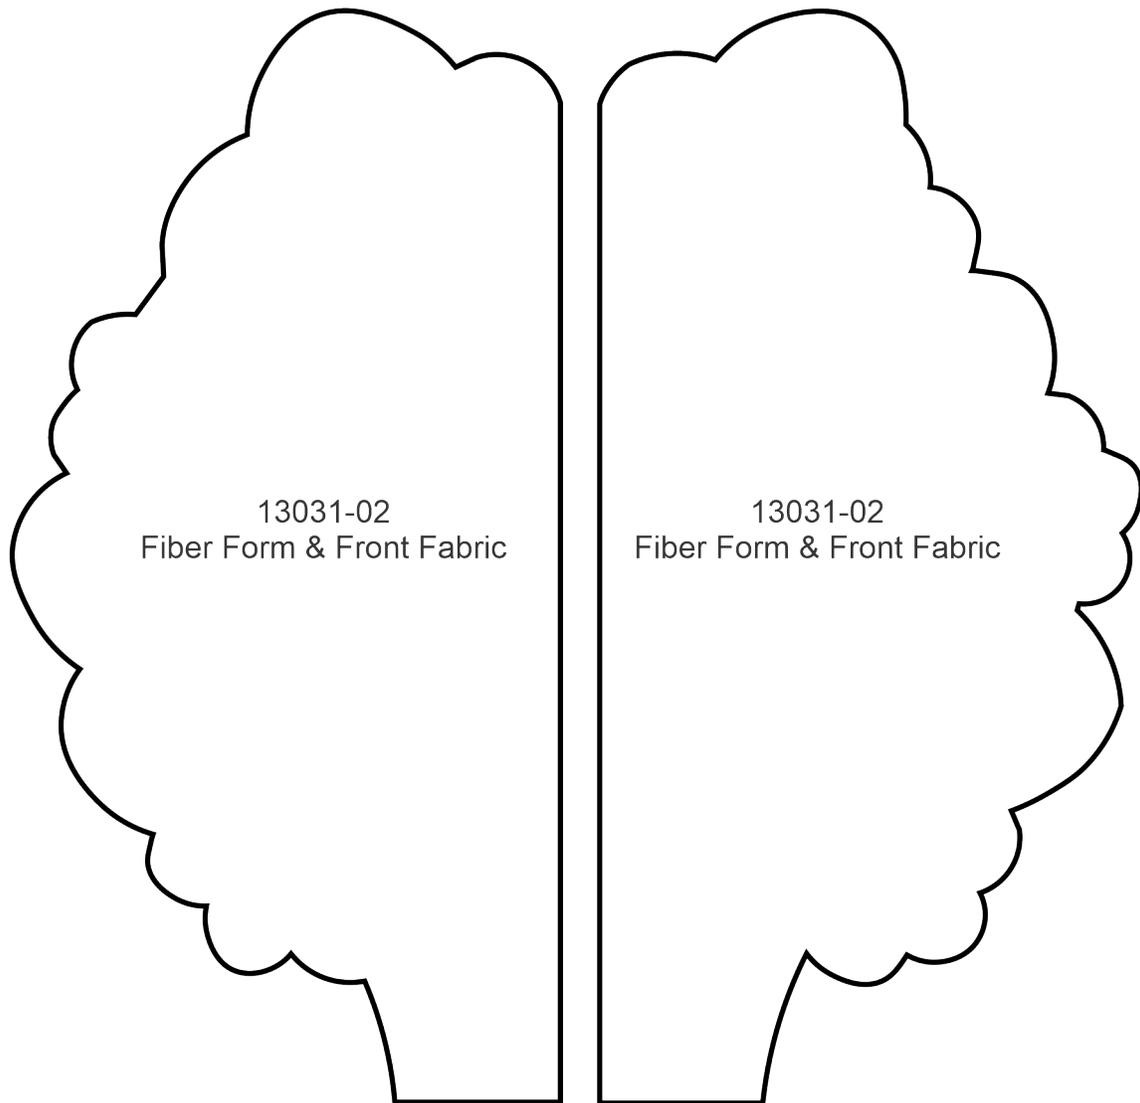

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

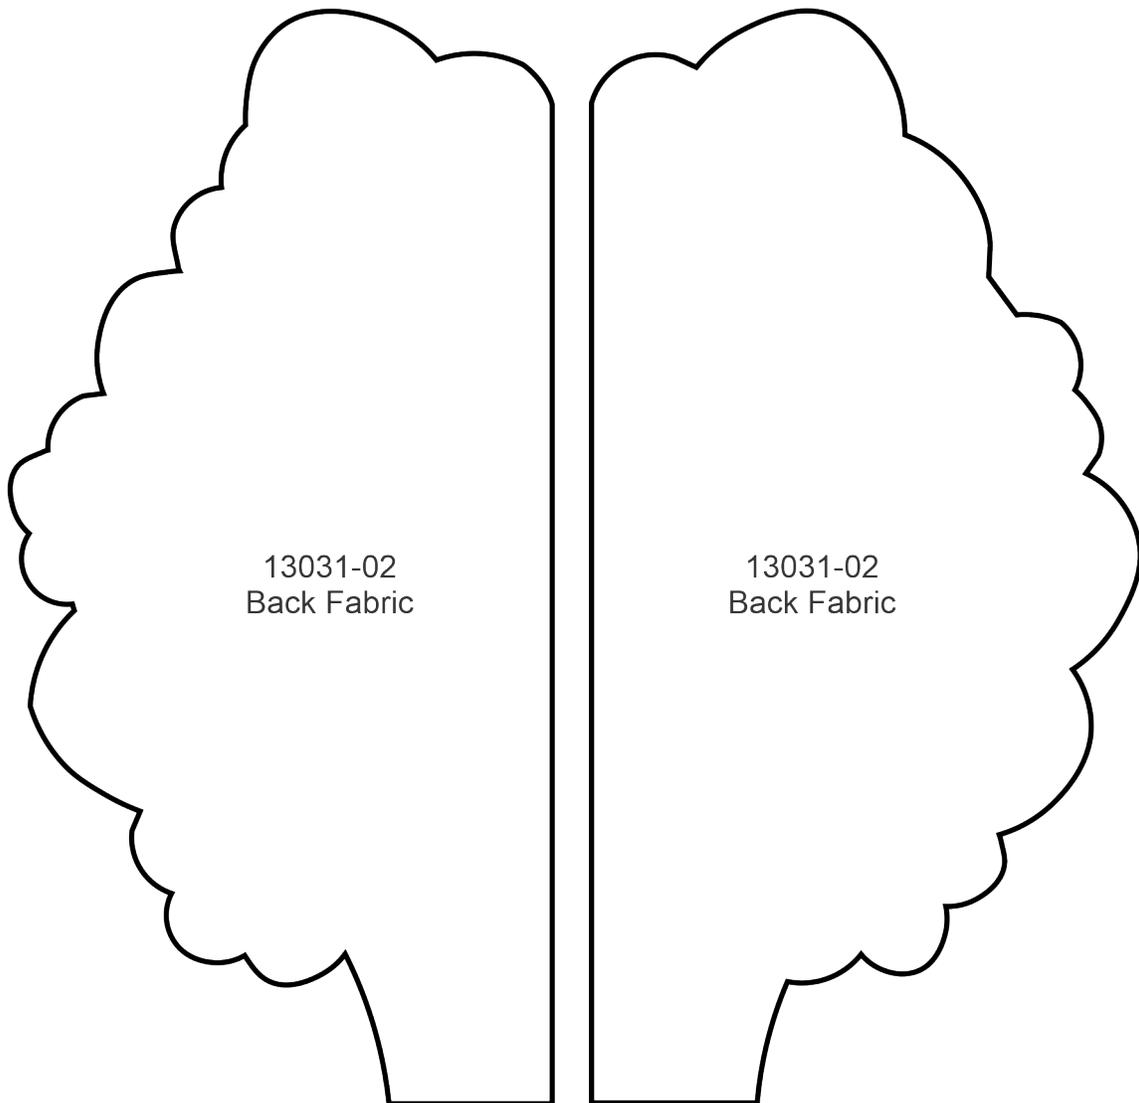

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

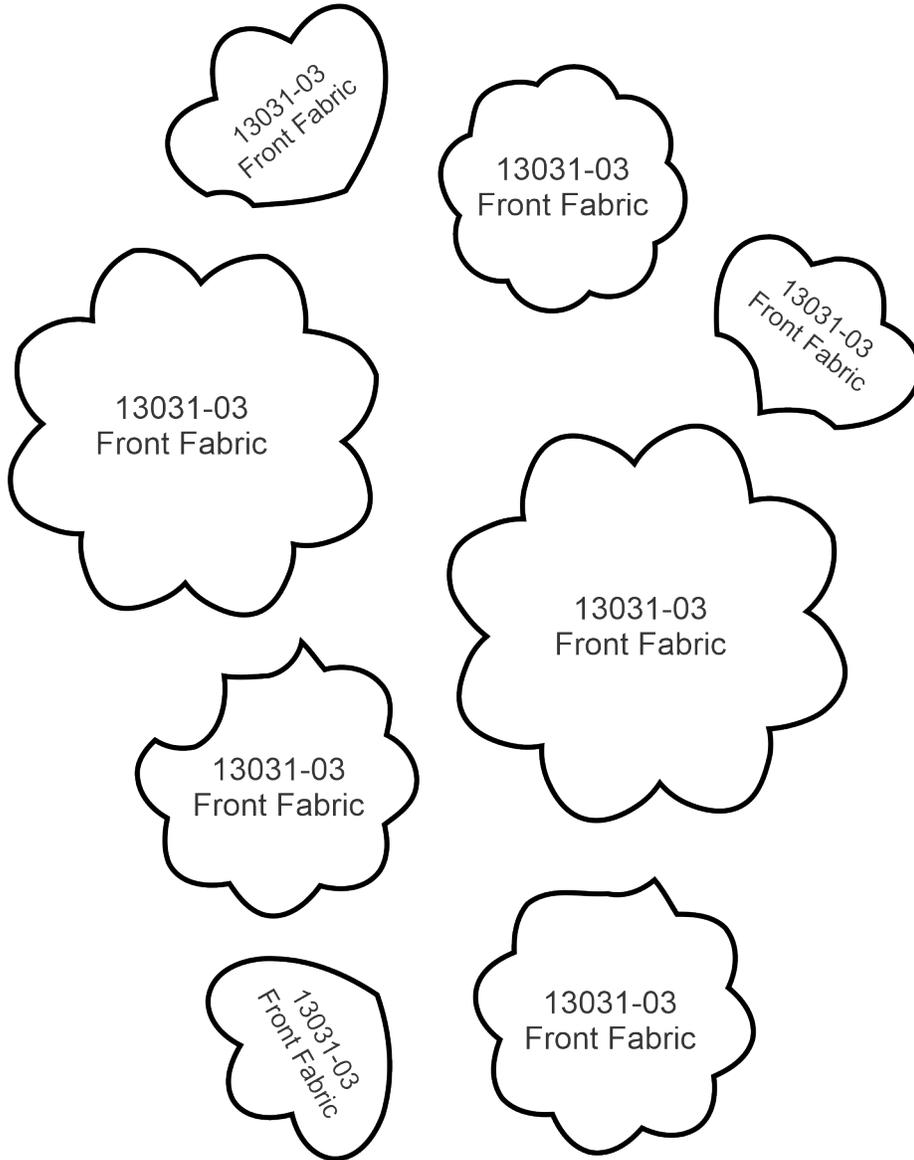

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

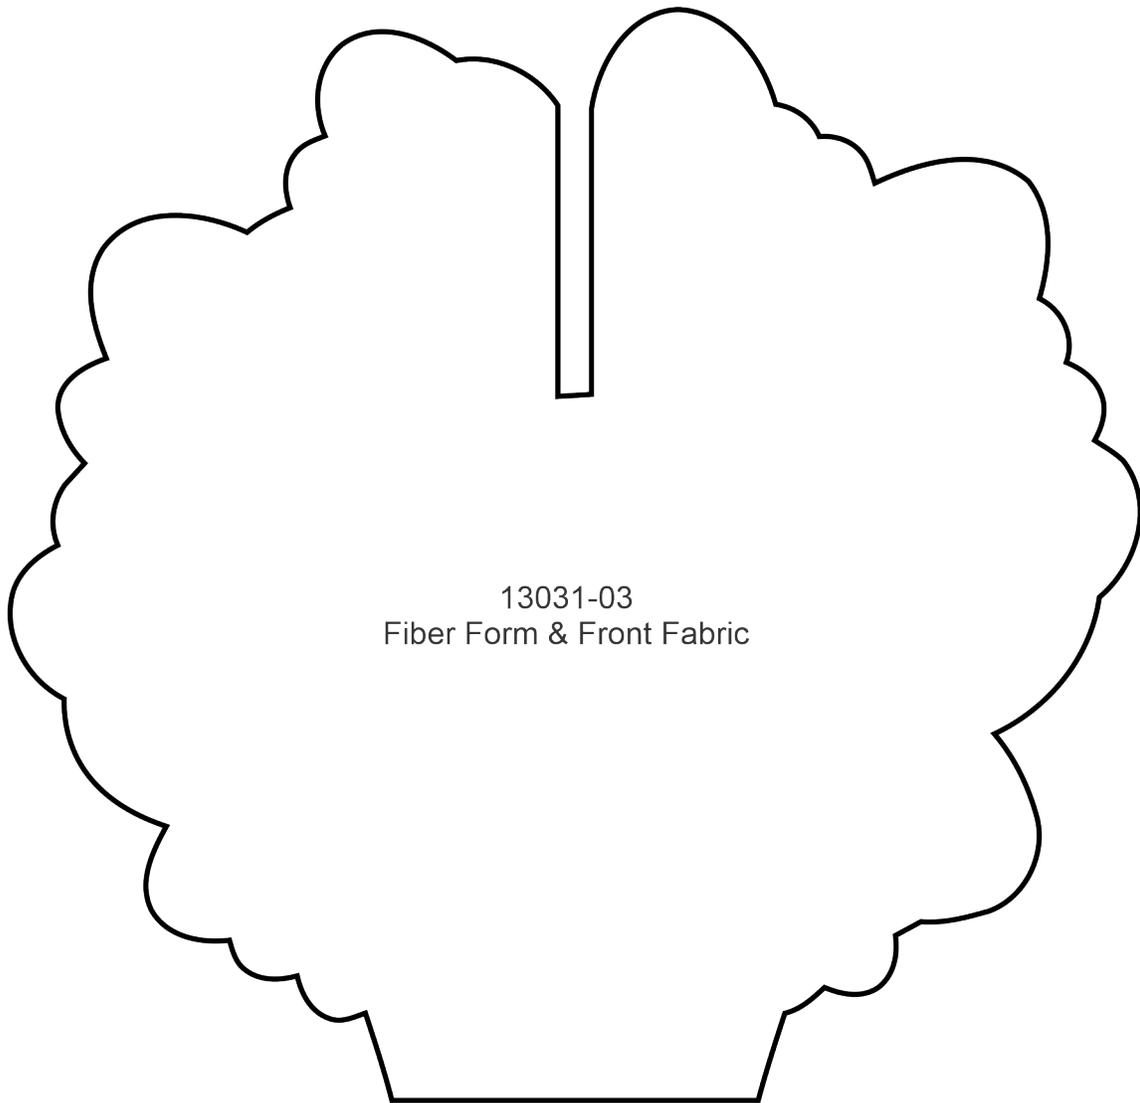


13031-03
Fiber Form & Front Fabric

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

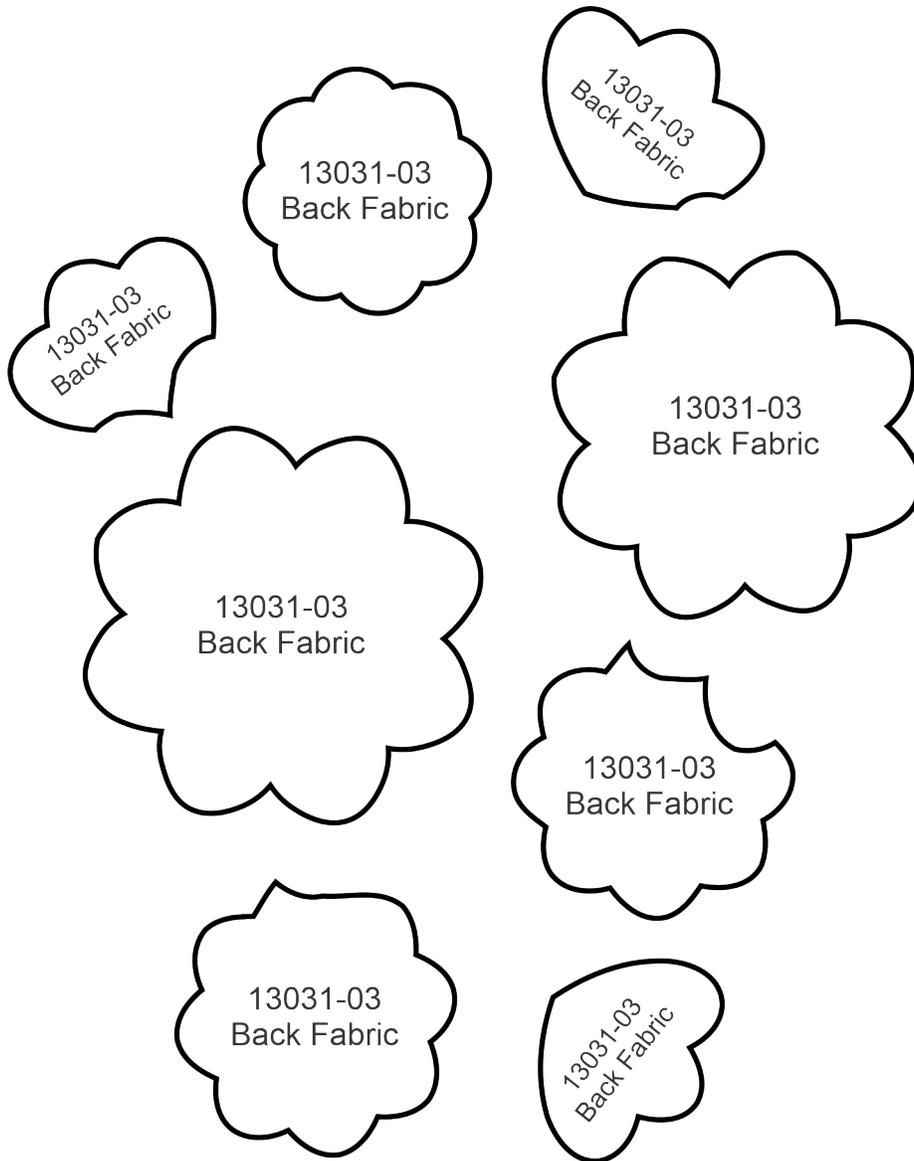

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



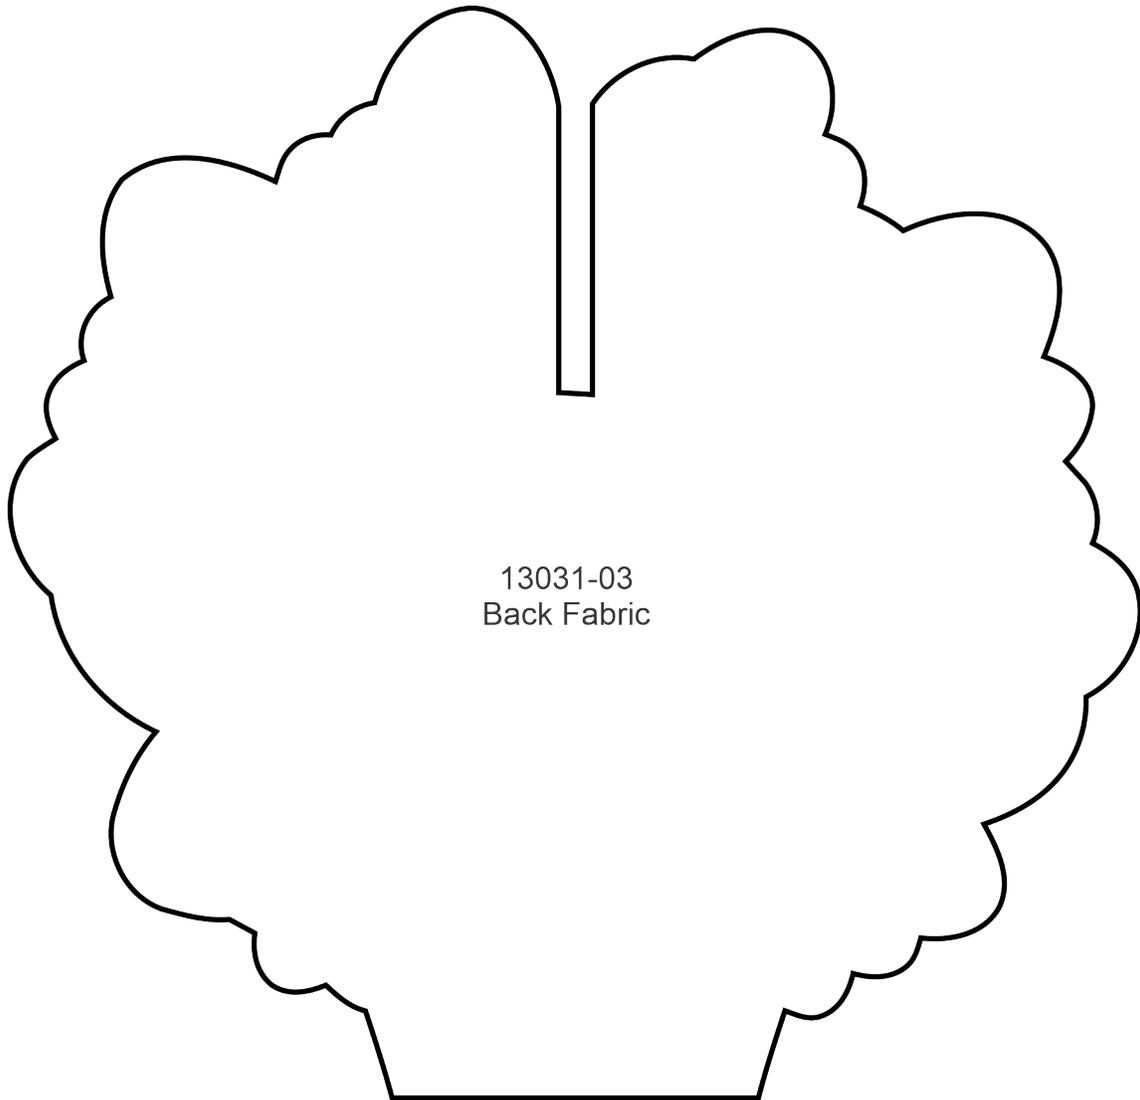


13031-03
Back Fabric

APPLIQUE PATTERNS






Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

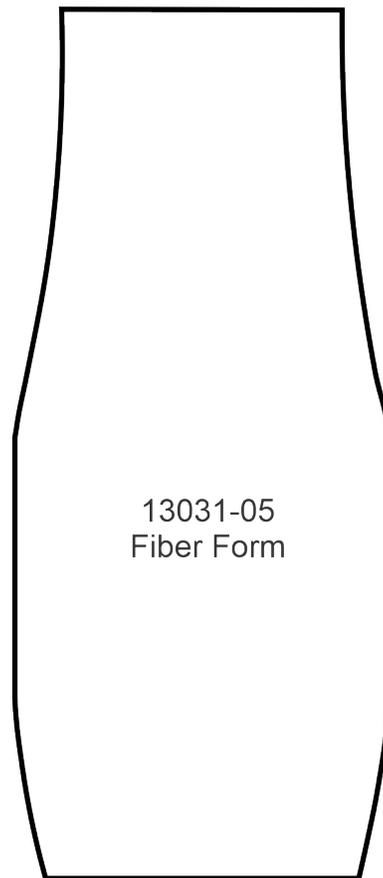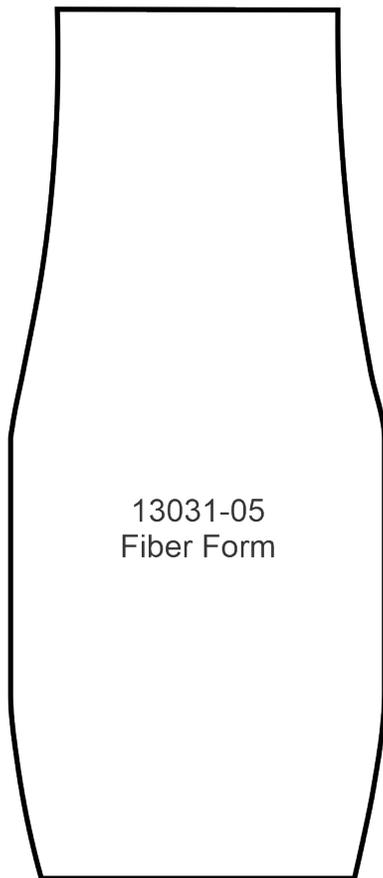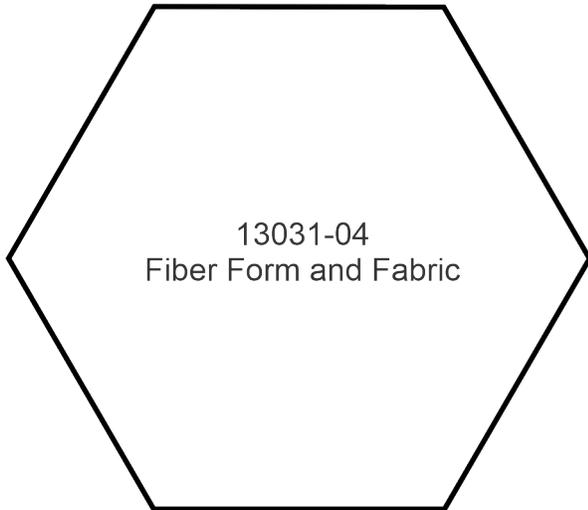

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

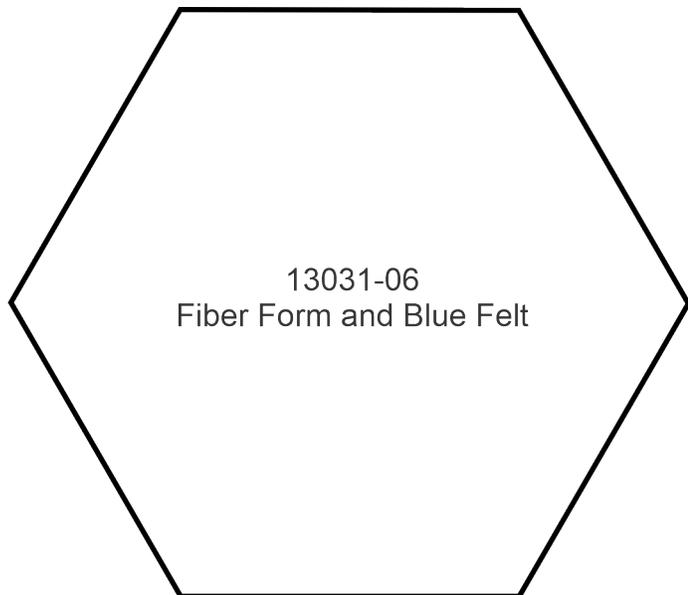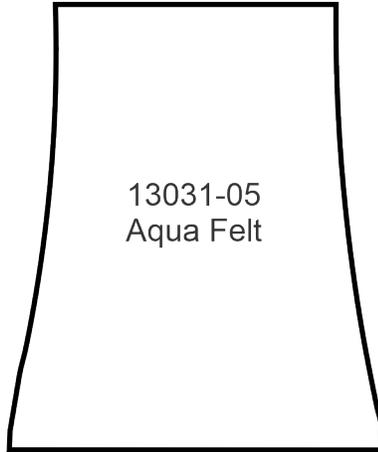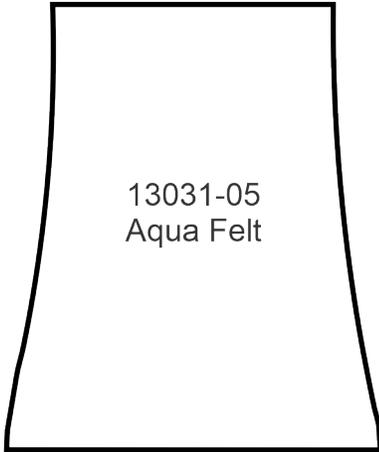

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

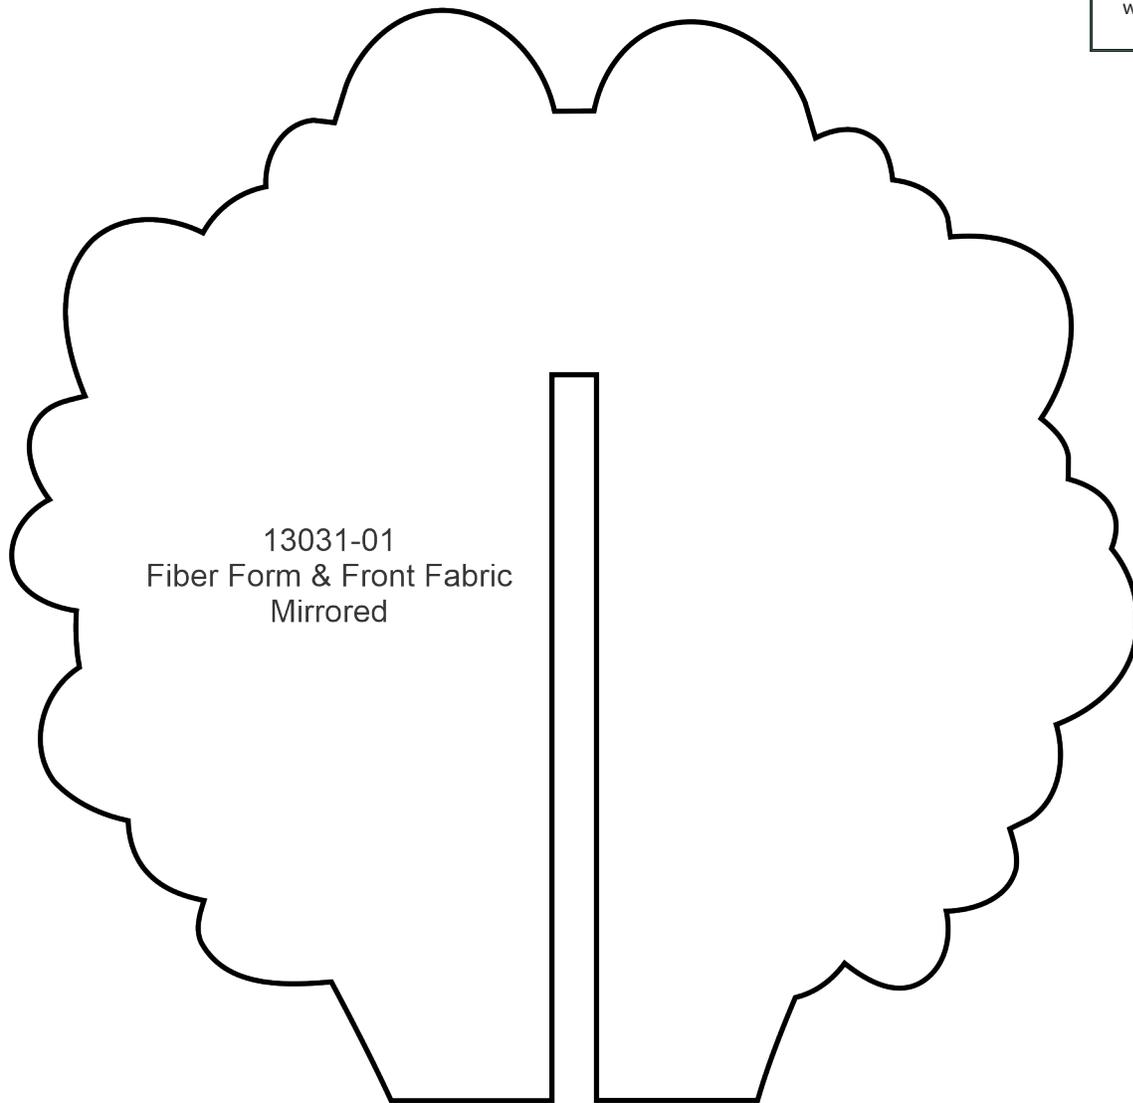

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

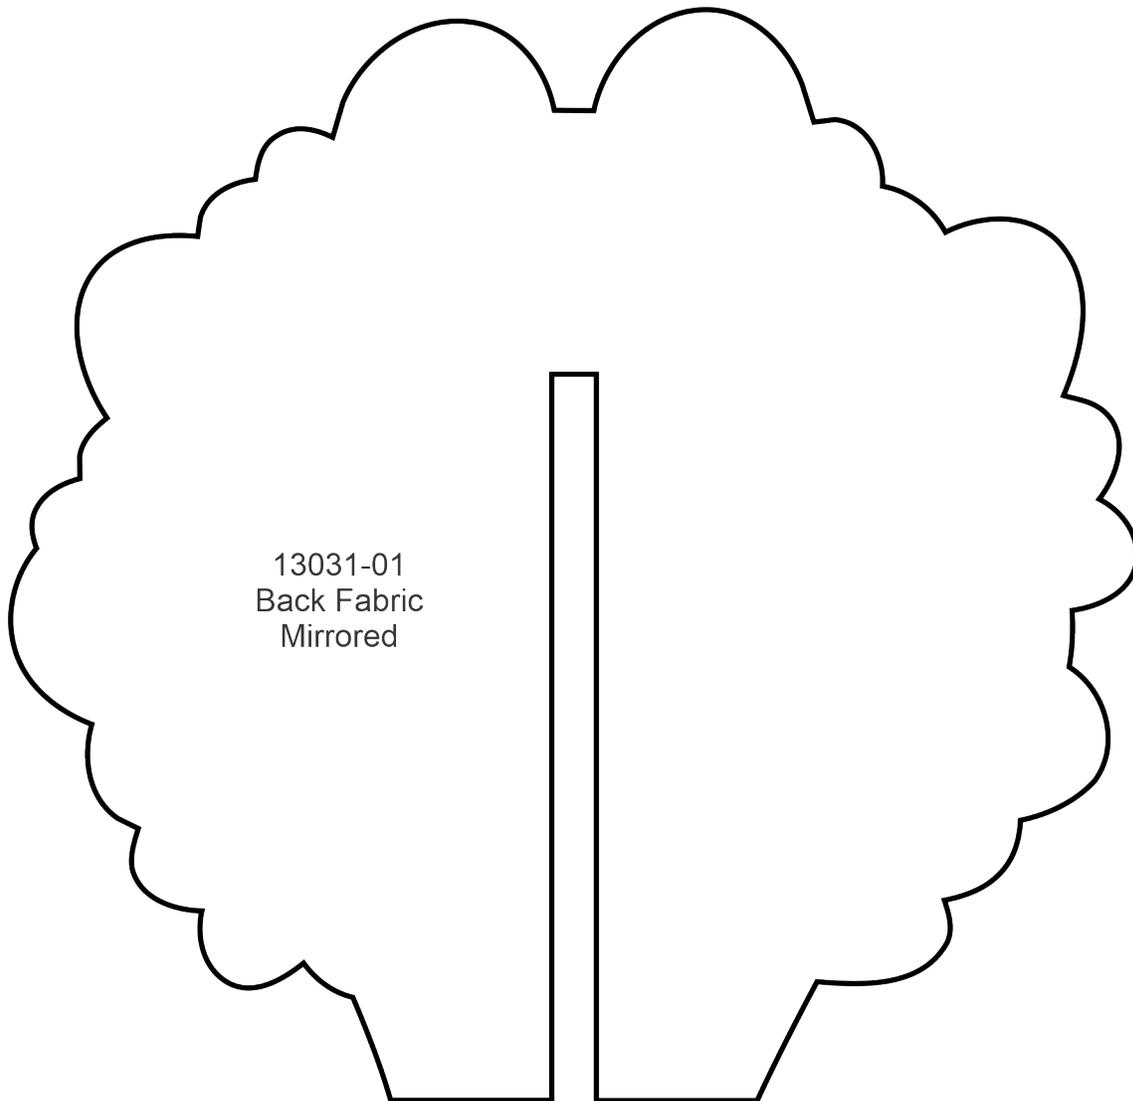


13031-01
Back Fabric
Mirrored

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

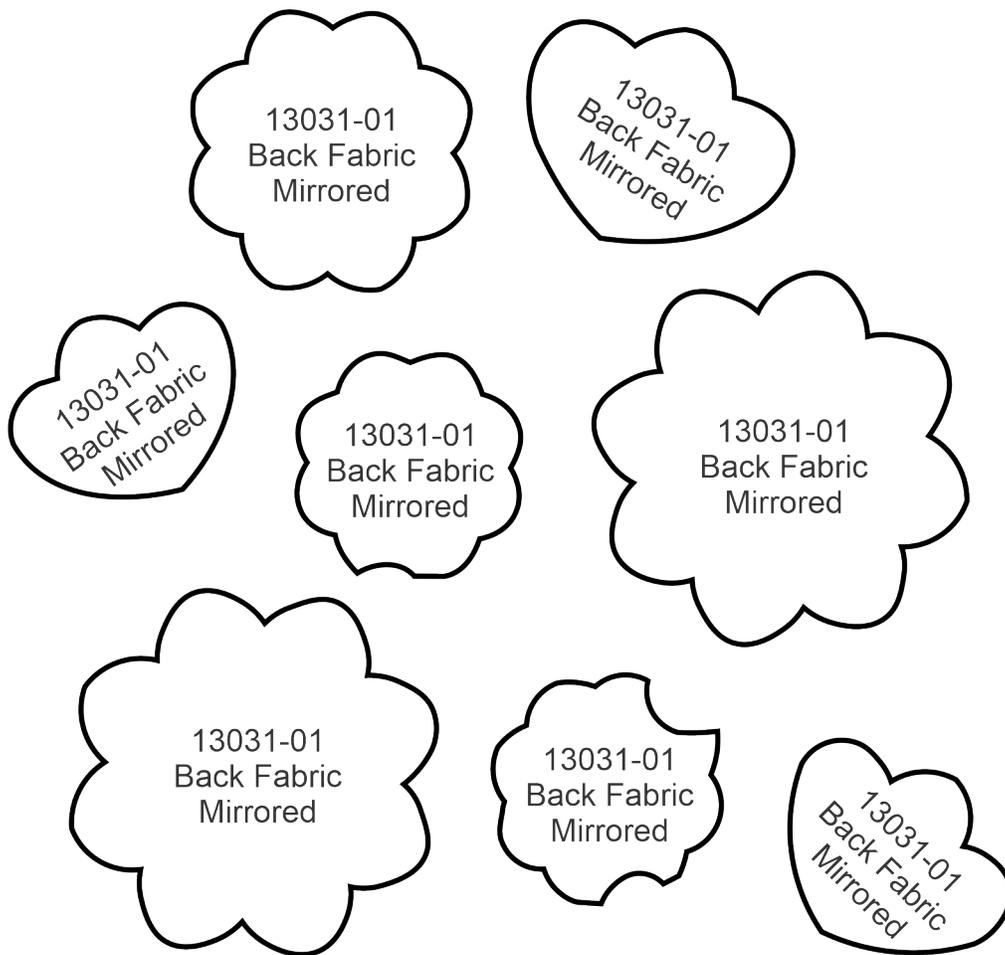

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

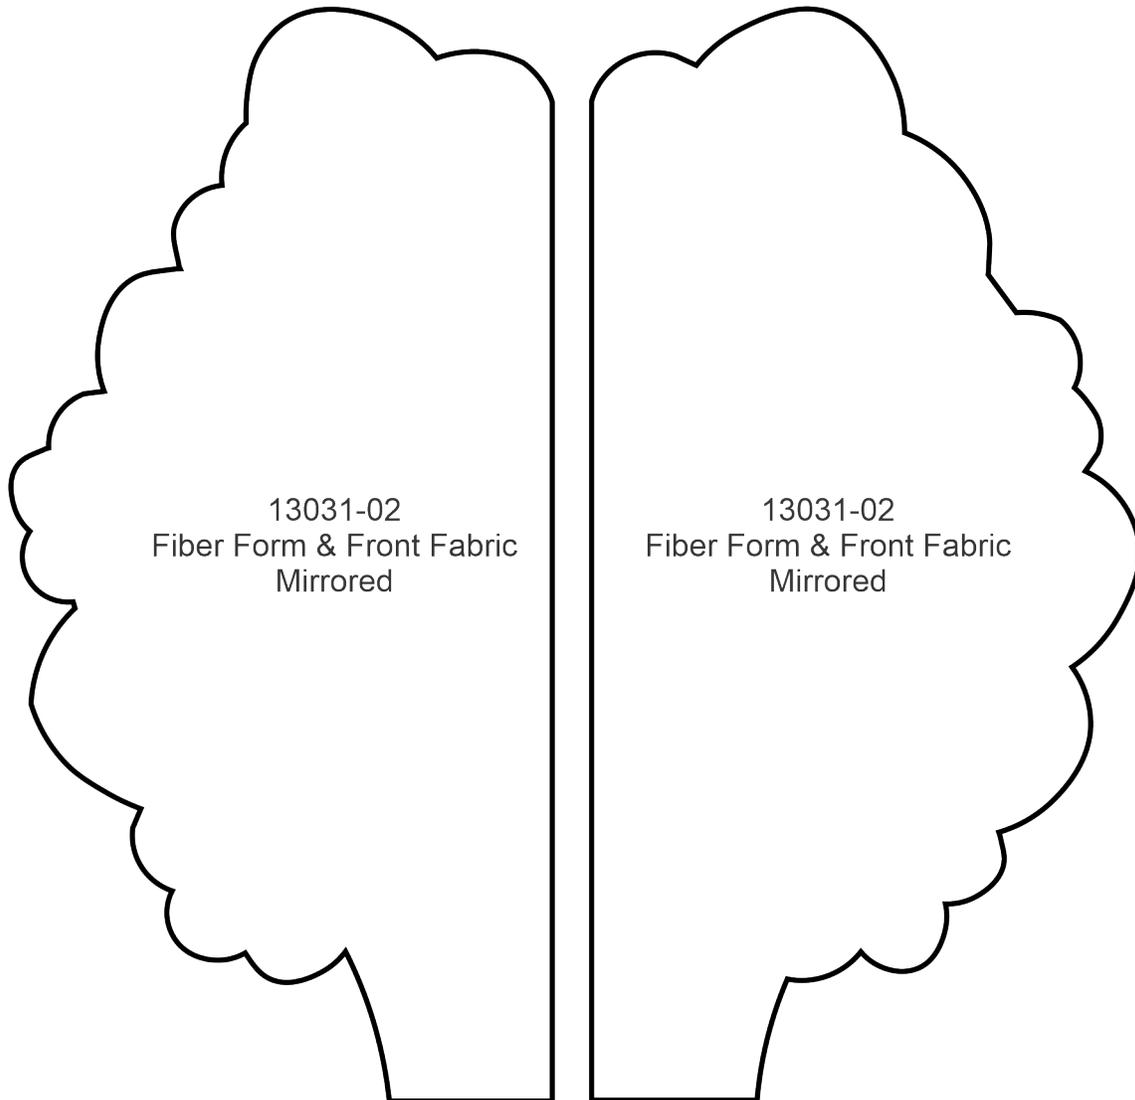

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

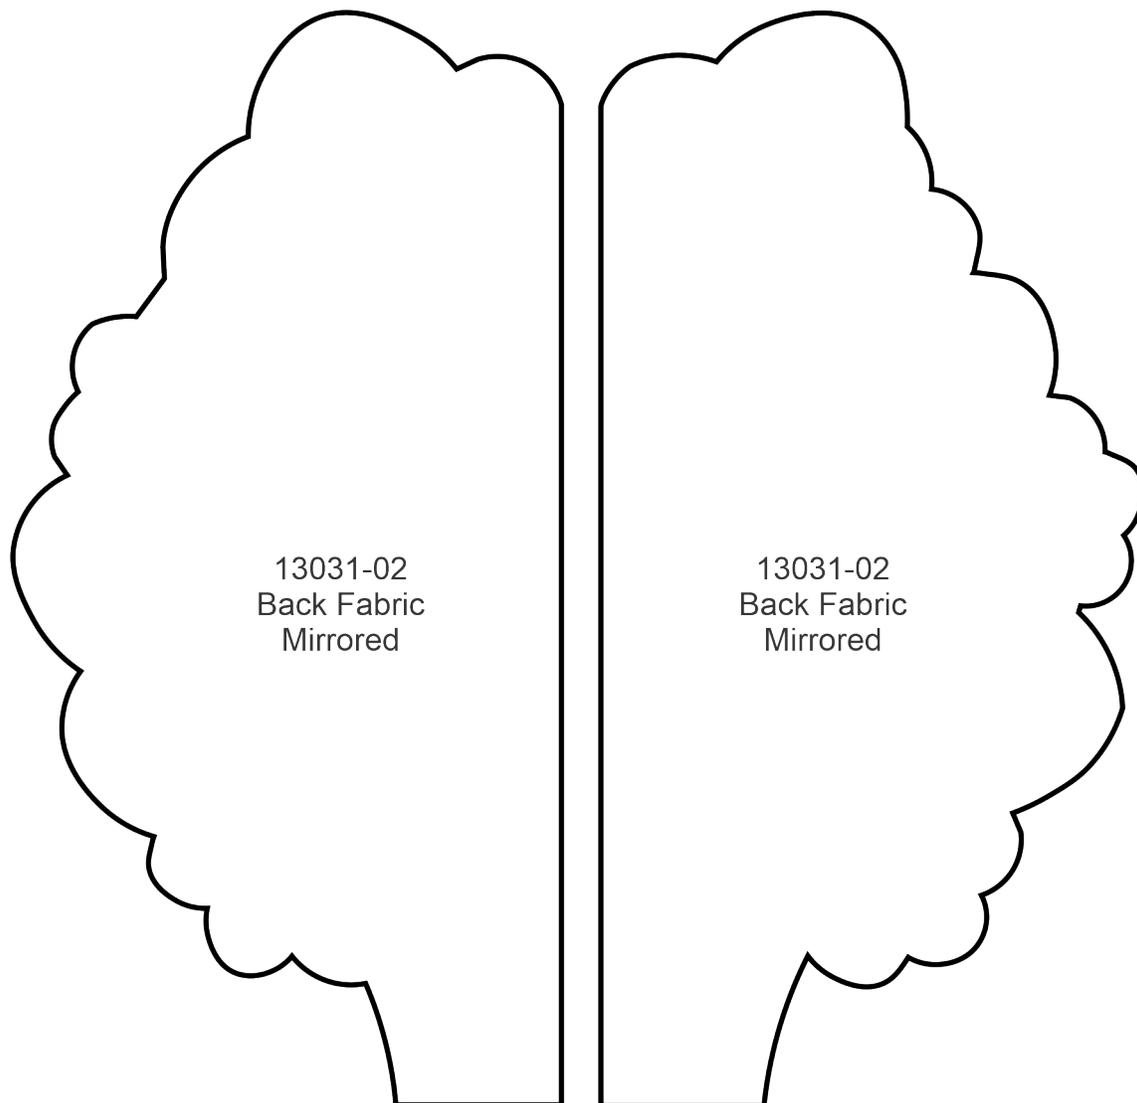


13031-02
Back Fabric
Mirrored

13031-02
Back Fabric
Mirrored

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

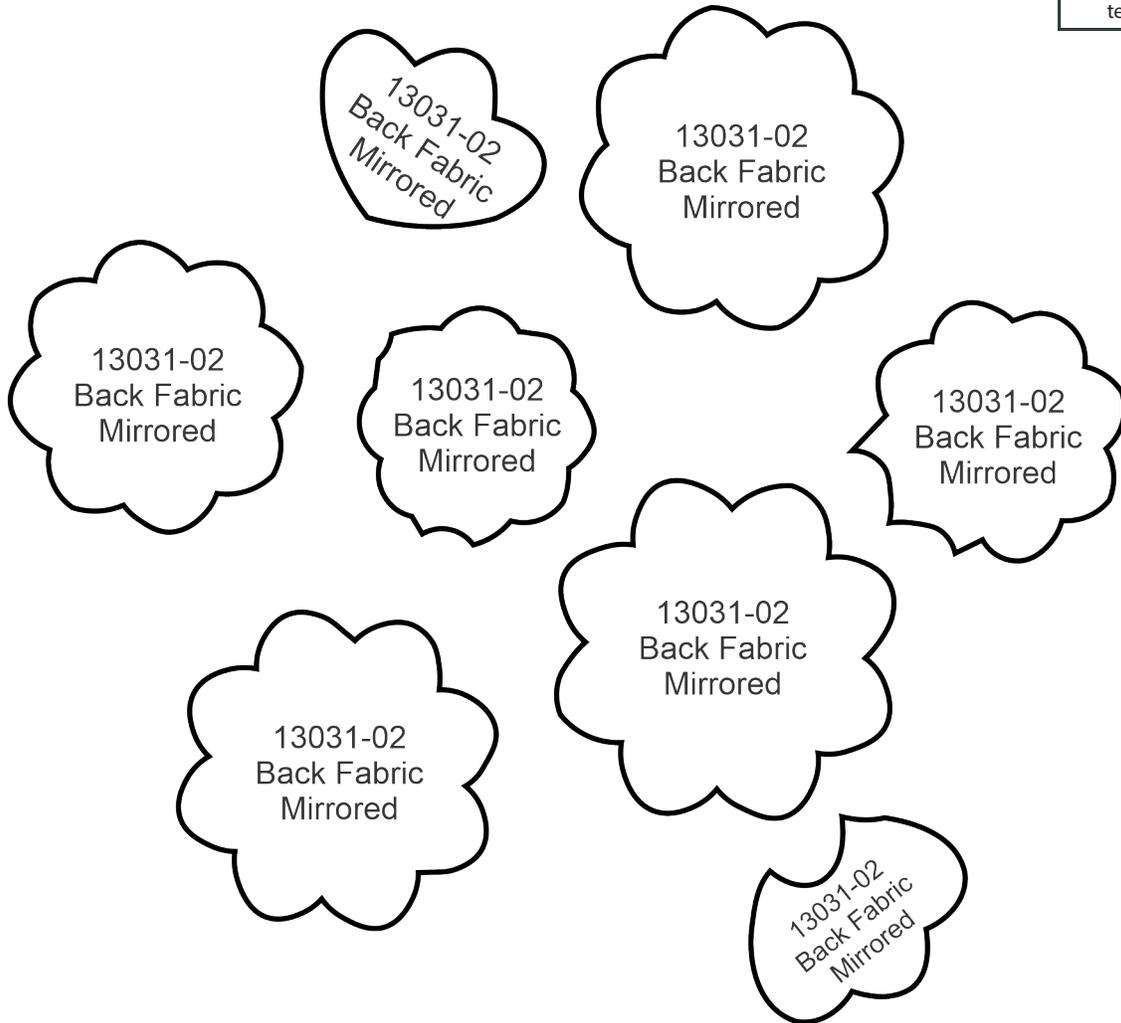

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.




13031-03
Fiber Form & Front Fabric
Mirrored

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

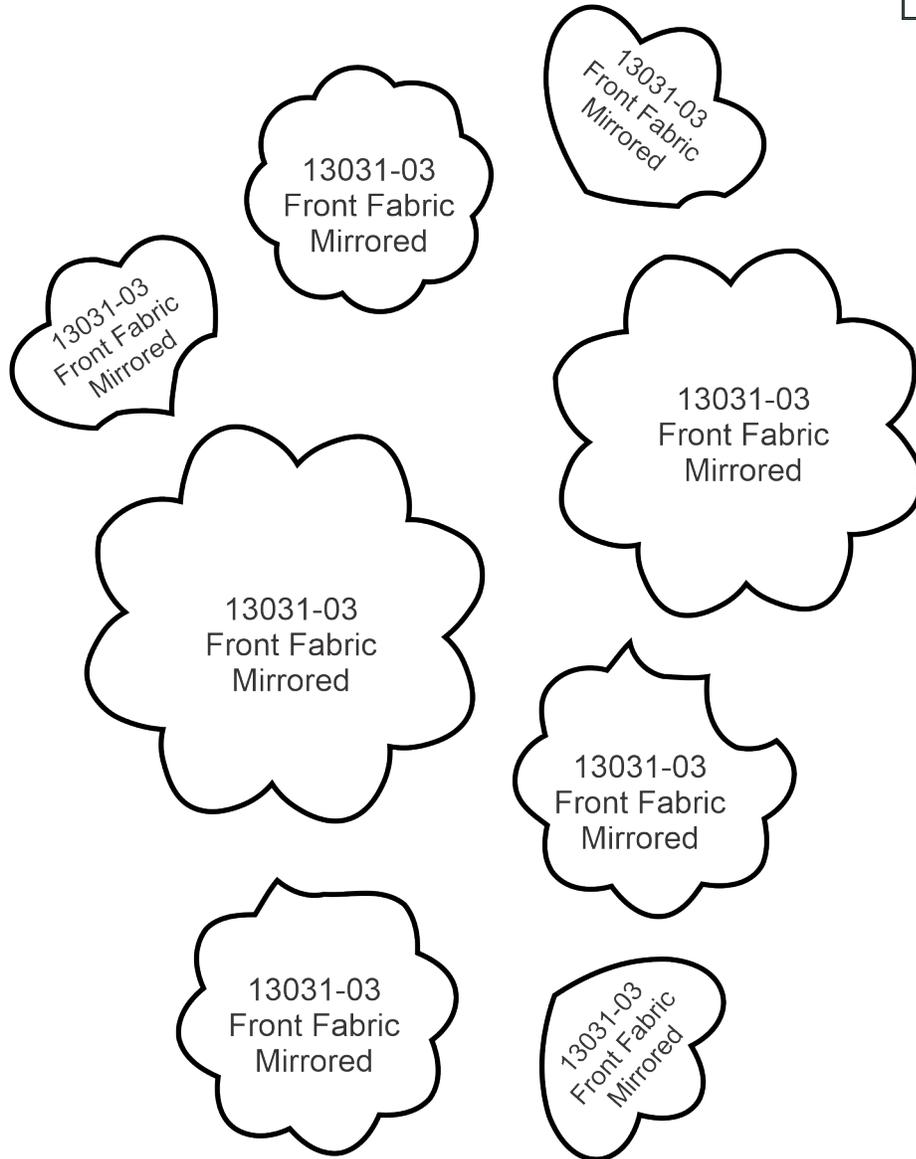

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

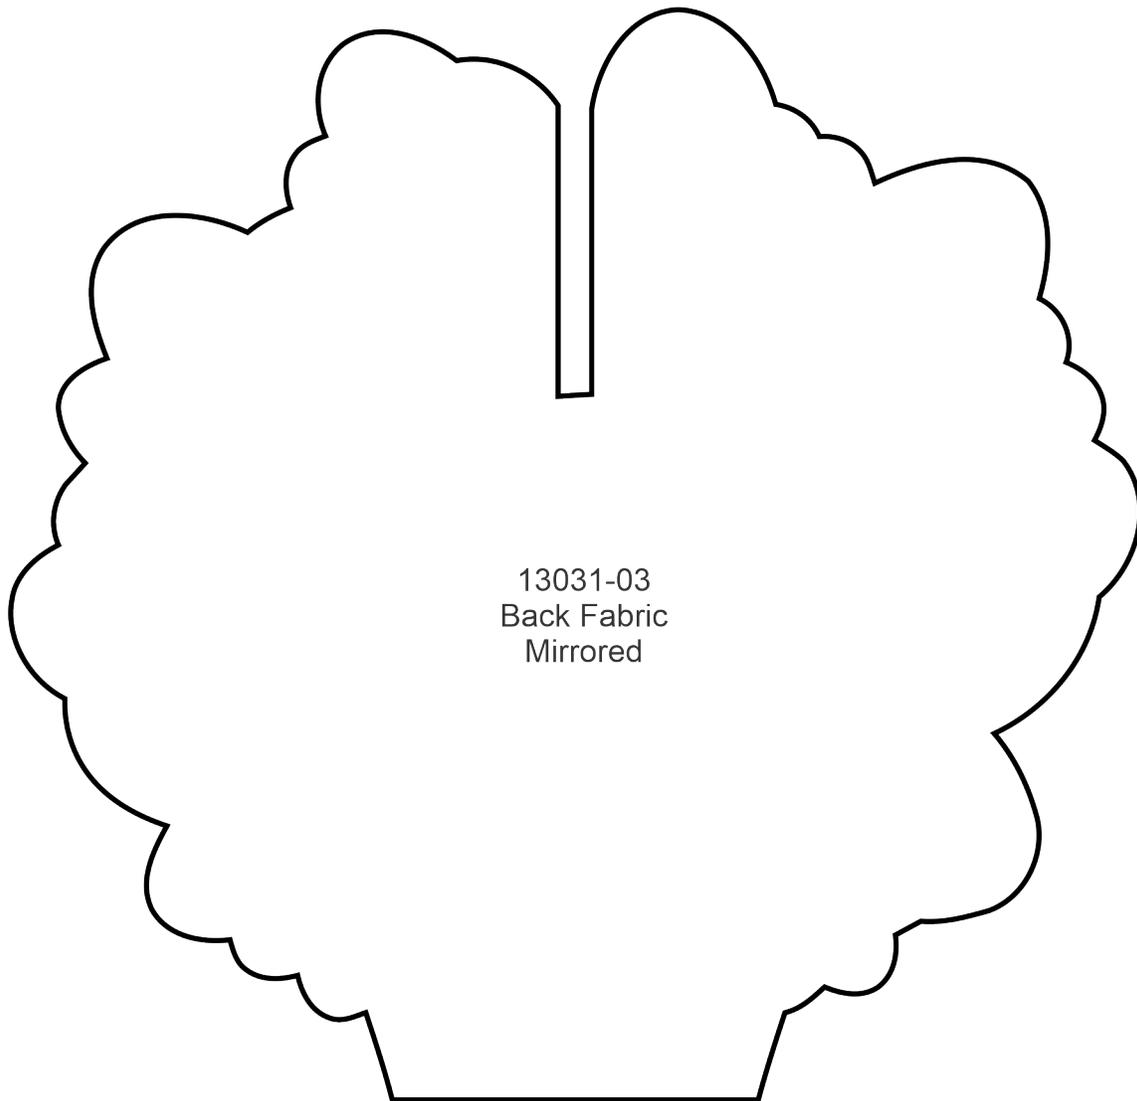


13031-03
Back Fabric
Mirrored

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

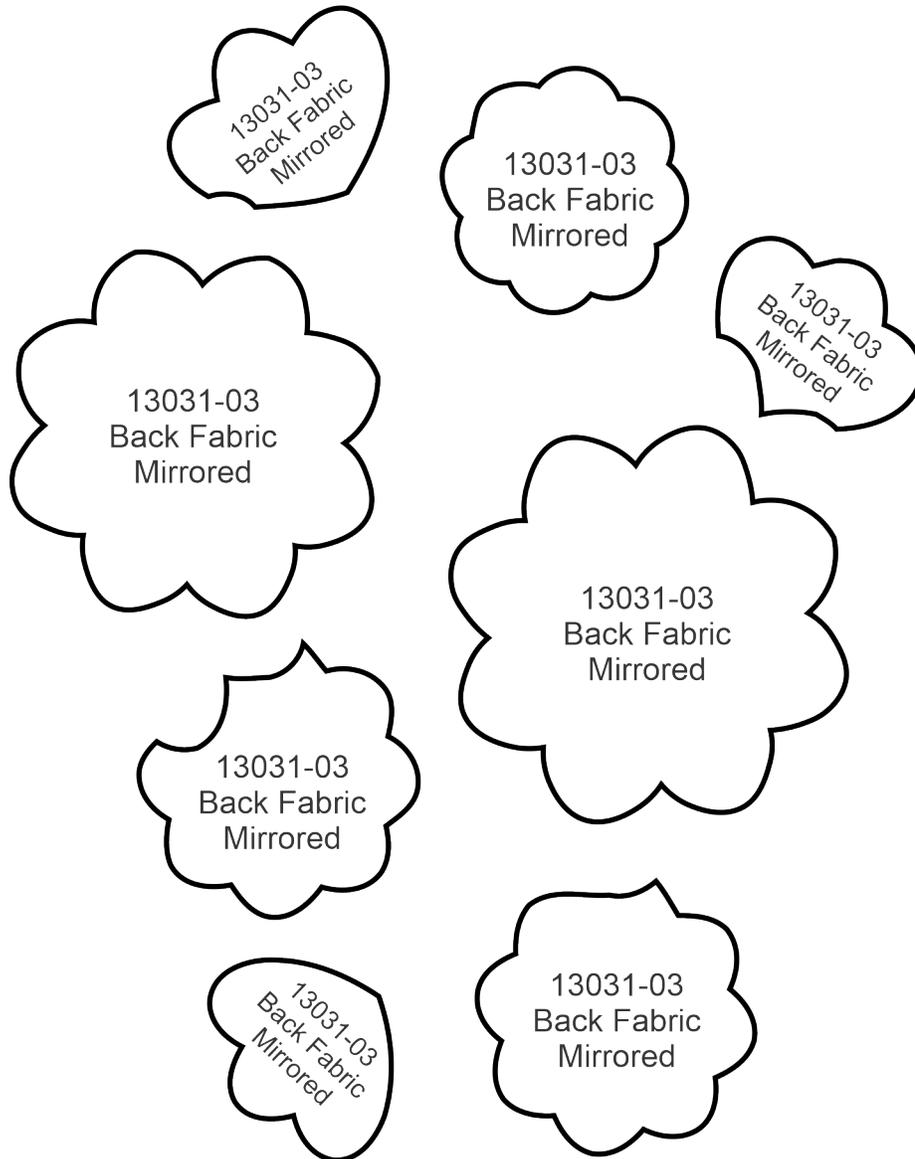

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

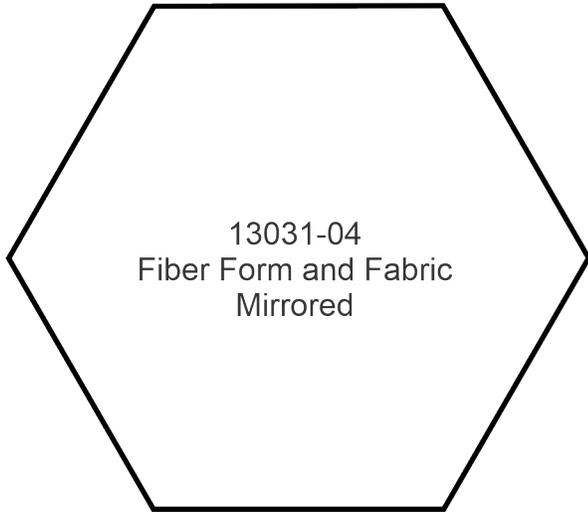

13031-04
Fiber Form and Fabric
Mirrored



13031-05
Fiber Form
Mirrored

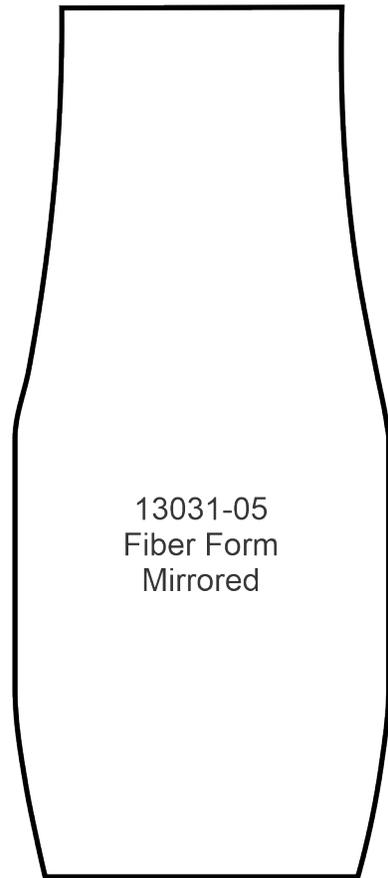

13031-05
Fiber Form
Mirrored

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

