

Floral Garment Cutwork



Collection No. 13044
7 Designs

Isacord Thread Colors

0010 Silky White
0622 Star Gold
0660 Vanilla
3971 Silver

 **Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**

Stabilizers

- AquaMesh Plus WashAway

Fabrics/Textiles

- Woven Fabric
- Shown Here:
Start Here by OESD Table Runner

Notion & Tools

- OESD Grippy Grid
- OESD Perfect Scoring Tool
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11
- DIME Target Stickers (Optional)

Thread Colors

- Per thread chart



SUMMARY



13044-01



Design Size:
7.42 X 5.25 in.

13044-02



Design Size:
6.92 X 5.56 in.

13044-03



Design Size:
7.80 X 3.92 in.

13044-04




Design Size:
5.16 X 5.03 in.

13044-05




Design Size:
7.14 X 1.93 in.

13044-06

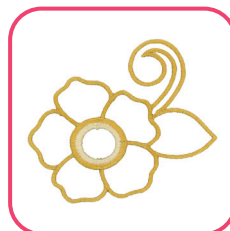

Design Size:
2.38 X 2.65 in.

13044-07

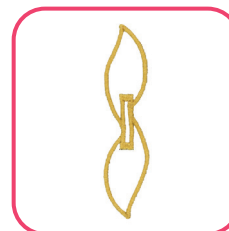

Design Size:
2.59 X 0.58 in.


GENERAL INSTRUCTIONS

The cutwork instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design 13044-05 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

 **Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.**

Step 1


- Using the OESD Grippy Grid, hoop one layer of AquaMesh Plus paper (shiny side up) for all designs.
- Use the OESD Perfect Scoring Tool to score the paper.
- Remove the paper to reveal the adhesive surface.

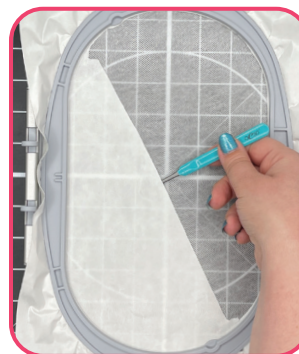

☐ Step 2

- Place the table runner or garment as desired in the hoop.
- Finger press to secure.

 **Note: A Target Sticker and the Grippy Grid is being used to assist with placement.**

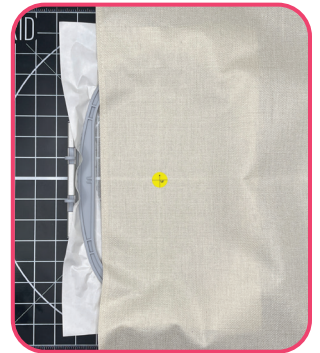

☐ Step 3

- Load the selected design into the machine.
- Example design is 13044-05.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Cut Lines and Secure Stitches.



☐ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Carefully trim the fabric inside the Cut Line stitching.

 **Tip: If the stabilizer is cut or a hole is created while trimming, use Expert Embroidery Tape WashAway as a patch.**



☐ Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cover Stitches/Match Bobbin **with matching bobbin thread.**



☐ Step 6

- Stitch the remaining machine steps.



☐ Step 7

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.
- Embroider any additional designs desired.



FINISHING TOUCHES



☐ Step 8

- Rinse in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.




☐ Step 9

- The project is complete. Enjoy!




CUT TOOL GUIDE


13044-01

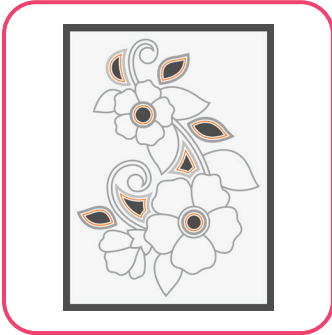


13044-02

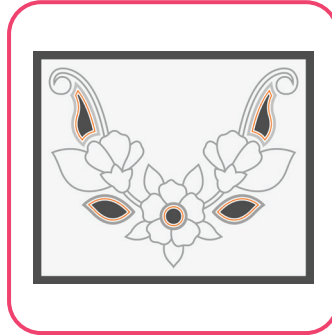


13044-03

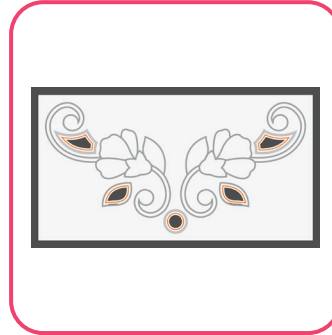


13044-04

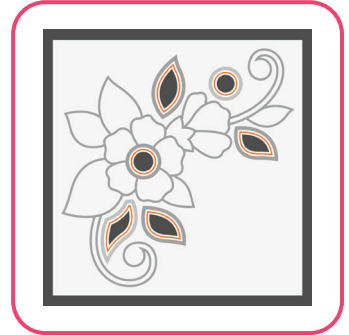


13044-05

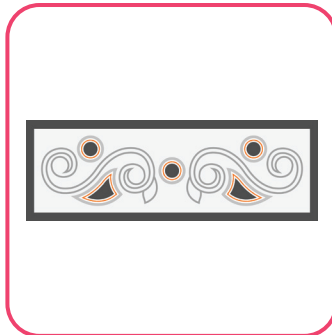

13044-06

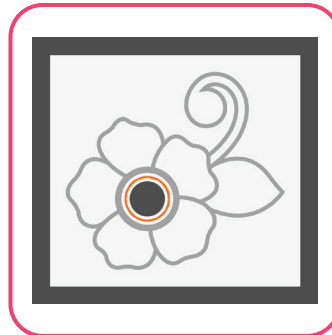

13044-07

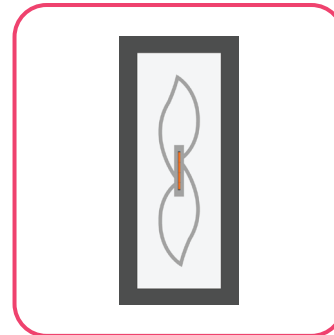

CUT OUT

