

#19999-049



1
DESIGN










Autism Awareness Bracelet

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

19999-049 Autism Awareness Bracelet

Size Inches:	Size mm:	Stitch Count:
5.98 X 1.79 in.	151.89 X 45.47 mm	23,748 St.



	1. Front Fabric Placement Stitch	3910
	2. Front Fabric Cut Line and Tackdown	3910
	3. Light Blue Puzzle Pieces	3910
	4. Dark Blue Puzzle Pieces	3900
	5. Yellow Puzzle Pieces	0310
	6. Red Puzzle Pieces	1902
	7. Puzzle Piece Outlines	4174
	8. Back Fabric Cut Line and Tackdown	4174
	9. Cover Stitch and Details	4174

MATERIALS



Stabilizer

- OESD Fusible Woven CutAway stabilizer
- OESD AquaMesh WashAway stabilizer

Fabric/Notions

- 505 Temporary Adhesive Spray
- 2- 7" x 2.5" fabric

Isacord Thread Colors


0310 Yellow
1902 Poinsettia
3900 Cerulean
3910 Crystal Blue
4174 Charcoal

INSTRUCTIONS



STEP 1

Prep fabric by attaching 1 layer of fusible woven on wrong side of fabric.

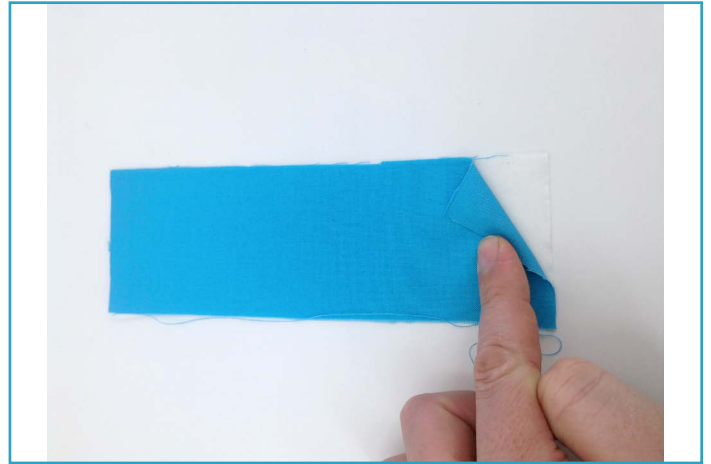


STEP 2

Hoop 2 layers of AquaMesh.



STEP 3

Stitch Color 1, *Front Fabric Placement Stitch*.

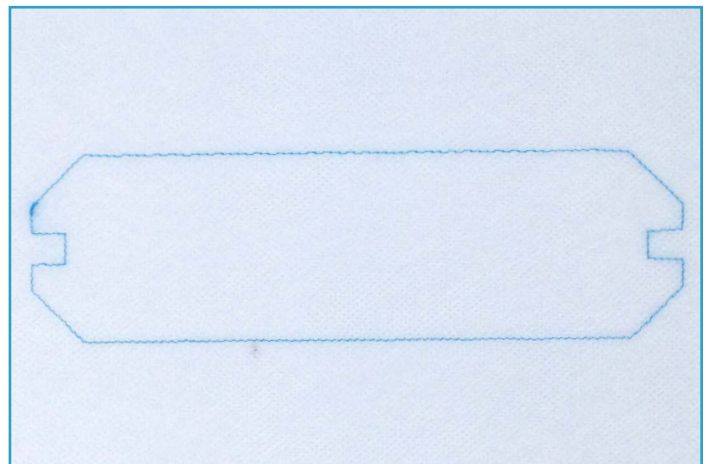


INSTRUCTIONS



STEP 4


Spray wrong side of fabric with temporary adhesive spray. Place fabric, making sure to completely cover placement stitch.

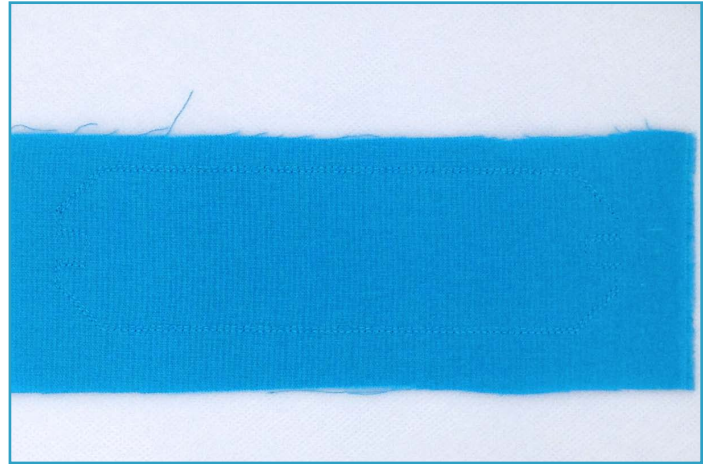

STEP 5

Sew Color 2, *Front Fabric Cut Line and Tackdown*.

Trim fabric outside the *Front Fabric Cut Line & Tackdown*.

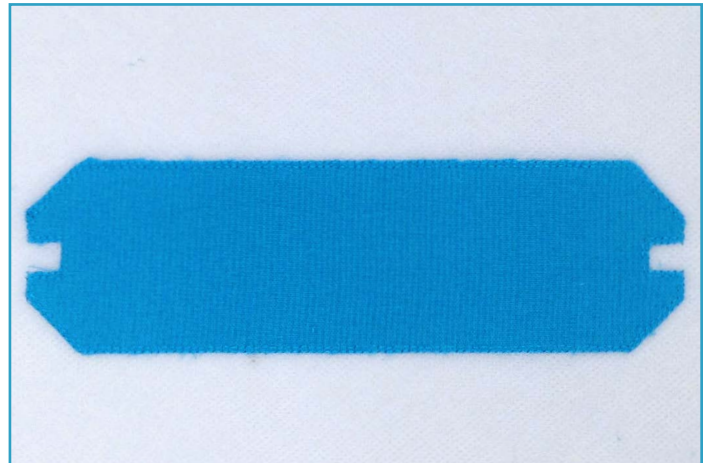

STEP 6

Continue stitching design. Stop **BEFORE** *Back Fabric Cut Line and Tackdown*.

Remove hoop from machine and turn hoop over to back side.

Spray wrong side of fabric with temporary adhesive spray. Place fabric, making sure to completely cover design.




INSTRUCTIONS




STEP 7

Replace hoop onto machine and sew Color 8, *Back Fabric Cut Line and Tackdown*.

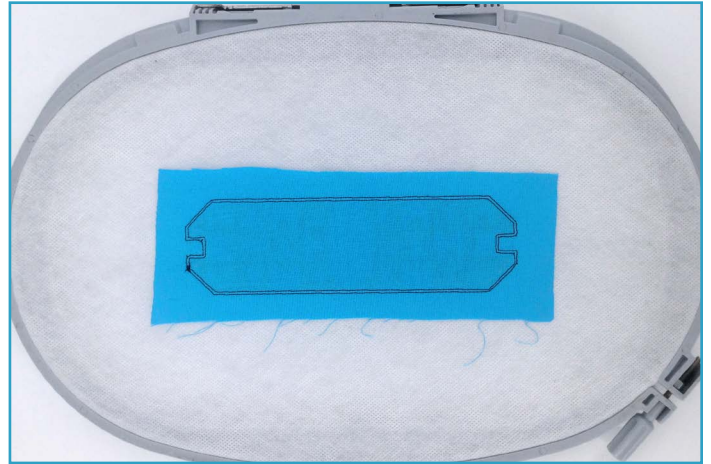

STEP 8

Remove hoop from machine and trim fabric outside the *Back Fabric Cut Line & Tackdown*.

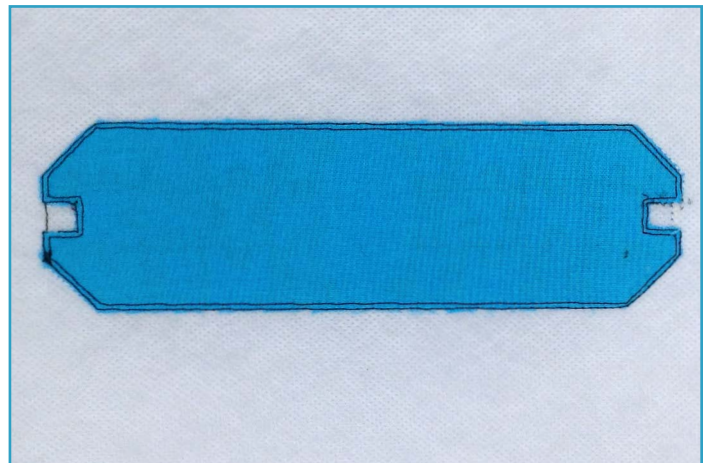

STEP 9

Replace hoop onto machine. Sew Color 9, *Cover Stitch and Details*.

Remove hoop from machine and design from hoop.

Trim excess AquaMesh ¼" from design. Rinse away stabilizer in warm water.

Allow bracelet to dry face down.



INSTRUCTIONS



STEP 10

Add the bracelet closure of your choice. It can be as simple as pulling a piece of leather string through the openings and tying in a small bow.

Another option is to add small rings and a small lobster clasp to hook into place.

Your bracelet is now complete!

