

# Sewing Notions Zipper Pouch Reward

#32170

2 DESIGNS

## MATERIALS



### Isacord Thread Colors

0020 Black  
0630 Buttercup  
0741 Wheat  
0842 Toffee  
1115 Copper  
1252 Dark Tan  
2051 Teaberry  
2170 Chiffon  
2241 Mauve  
4230 Aqua

**\* Project instructions included after design list.**


**Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**

# MATERIALS







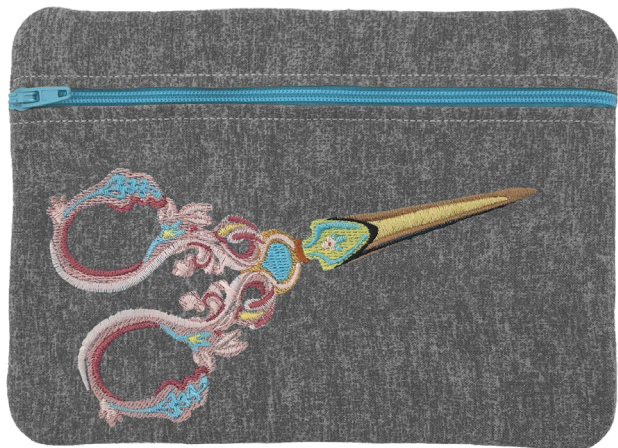



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

## FABRIC REQUIRED




### 32170-01 Sewing Notion Zipper Pouch









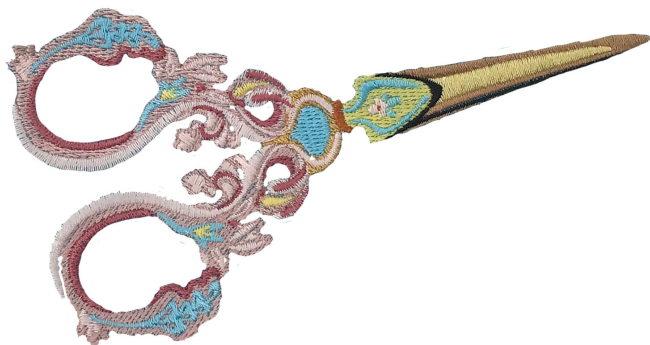


Size Inches: 7.74 X 5.99 in.      Size mm: 196.7 X 152.0 mm      Stitch Count: 18678 St.

	1. Zipper Placement Guide .....	2051
	2. Zipper Tackdown .....	2051
	3. Front Panels Tackdown .....	2051
	4. Pink Detail .....	2051
	5. Tan Detail .....	0842
	6. Light Pink Detail .....	2170
	7. Dark Pink Detail .....	2241
	8. Yellow Detail .....	0630
	9. Light Blue Detail .....	4230
	10. Gold Detail .....	0741
	11. Dark Tan Detail .....	1252
	12. Black Detail .....	0020
	13. Light Pink Flower .....	2170
	14. Copper Detail .....	1115
	15. Inner Panels Tackdown .....	2051
	16. Backing Tackdown .....	2051
	17. Inner Lining Tackdown .....	2051

### 32170-02 Scissors

Size Inches: 3.14 X 6.03 in.      Size mm: 79.9 X 153.2 mm      Stitch Count: 14997 St.



	1. Pink Detail .....	2051
	2. Tan Detail .....	0842
	3. Light Pink Detail .....	2170
	4. Dark Pink Detail .....	2241
	5. Yellow Detail .....	0630
	6. Light Blue Detail .....	4230
	7. Gold Detail .....	0741
	8. Dark Tan Detail .....	1252
	9. Black Detail .....	0020
	10. Light Pink Flower .....	2170
	11. Copper Detail .....	1115

# MATERIALS



## Stabilizers

- OESD Light Weight TearAway
- OESD Fusible Woven

## Fabrics/Textiles

- Gray Quilter's Cotton
- Light Gray Quilter's Cotton
- Note: Fabric sizes are estimates and may result in overage.

	Front Top Panel	Front Bottom Panel	Back Panel
Outer Fabric	• 8.5" x 3.5"	• 8.5" x 10"	• 8.5" x 7"
Lining Fabric	• 8.5" x 3.5"	• 8.5" x 10"	• 8.5" x 7"
Fusible Woven	• 8.5" x 1.75"	• 8.5" x 5"	• 8.5" x 7"

## Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- Polyester or nylon zipper at least 2" larger than opening - NO metal zippers

## Isacord Thread Colors

- Per thread chart

# EMBROIDERY



## □ Step 1

- Press Bottom Front, Top Front, Top Front Lining, and Bottom Front Lining in half wrong sides together, lengthwise.



## □ Step 2

- Apply Fusible Woven to the wrong side of the outer fabrics.
- Note: Fusible Woven is applied only to the outer fabrics, not the lining. Open fabrics and press Fusible Woven to one half of the wrong side of the fabric, lining up the Fusible Woven with the fold of the fabric.



# EMBROIDERY




## □ Step 3

- Re-fold outer fabrics and press.




## □ Step 4

- Hoop one layer of Light Weight TearAway.
- Load selected design into the machine.
- The design in the example is 32170-01.
- Thread the machine per the thread chart.
- Stitch Machine Step 1, Zipper Placement Guide.

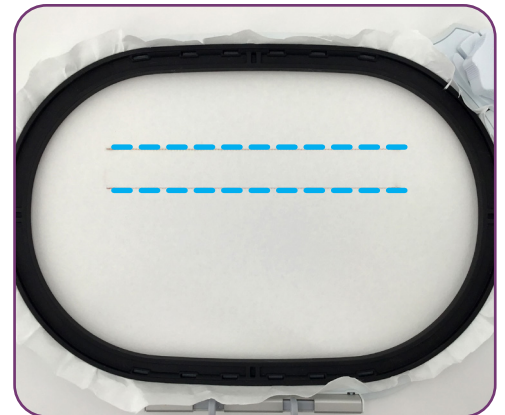

## □ Step 5


- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the zipper, right side up, within the Zipper Placement Guide.
- Tape in place to secure.
- Note: Metal ends must be outside of the stitching area.

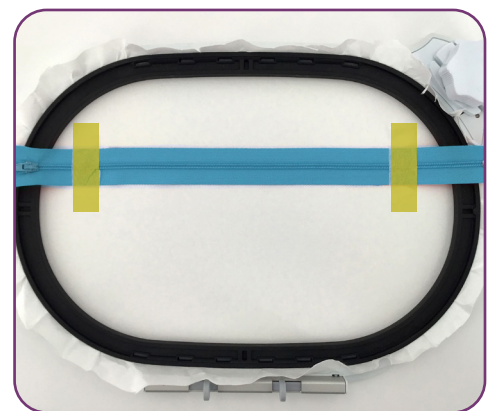

# EMBROIDERY

## □ Step 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Zipper Tackdown.

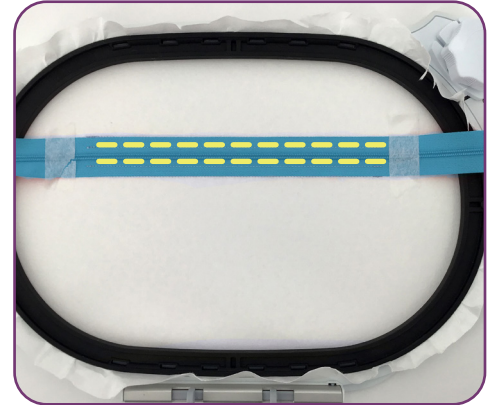

## □ Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the folded edge of the Top and Bottom Front Panels next to the zipper teeth.
- Cover the zipper tackdown line. Do not cover the zipper teeth.
- Tape in place to secure.
- Note: The fabric side with the Fusible Woven attached needs to be on top to better support the embroidery stitches.




# EMBROIDERY



## Step 8

- Return the hoop to the machine.
- Stitch Machine Step 3, Front Panels Tackdown.

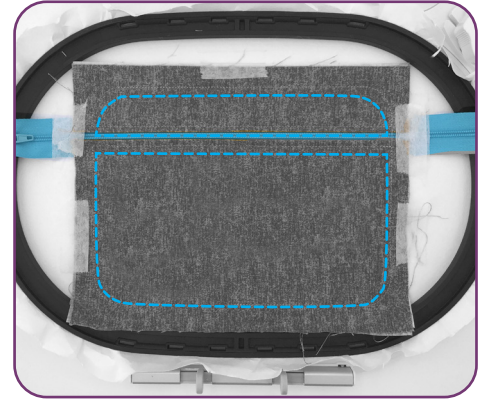

## Step 9

- Follow the thread chart and stitch the remaining embroidery details, machine steps 4 - 10.




# EMBROIDERY




## Step 10

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Turn hoop over and lay face down on a flat surface.
- On the back of the hoop, locate the Zipper Tackdown lines.
- Place the folded edges of the Top and Bottom Lining fabric slightly inside the Zipper Tackdown.
- Tape in place to secure.

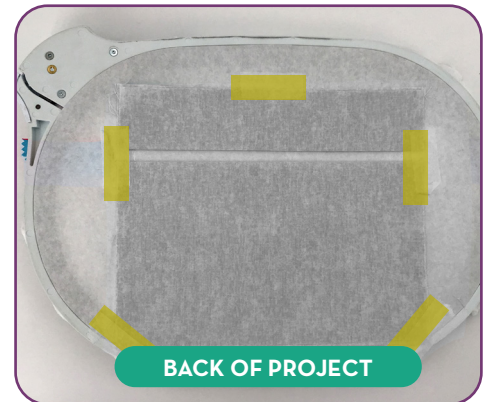

## Step 11

- Return the hoop to the machine.
- Stitch Machine Step 11, Inner Panels Tackdown.

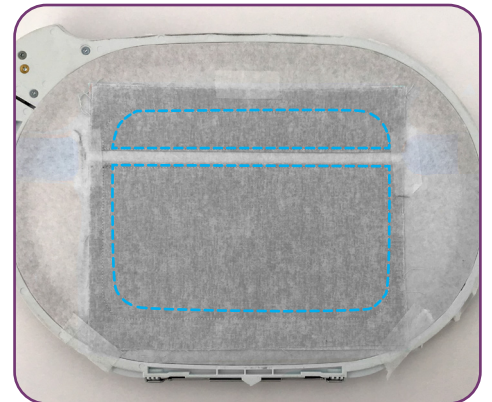



# EMBROIDERY


## □ Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Unzip the zipper **halfway**. Not all the way, just **HALFWAY**.
- Note: This is the most important step in the whole project, be mindful to unzip halfway.



## □ Step 13

- Position the back fabric, right side down over the front of the zipper pouch completely covering the stitched pieces. (Fusible Woven prepped fabric).

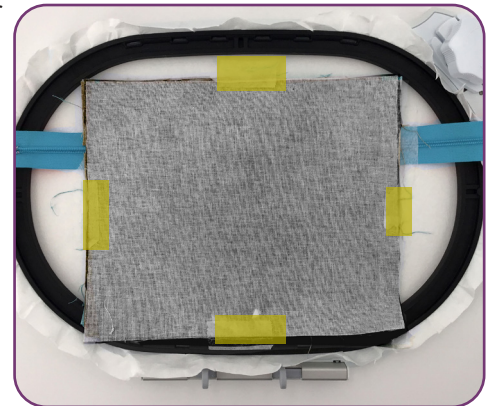


# EMBROIDERY



## Step 14

- Return the hoop to the machine.
- Stitch Machine Step 12, Backing Tackdown.

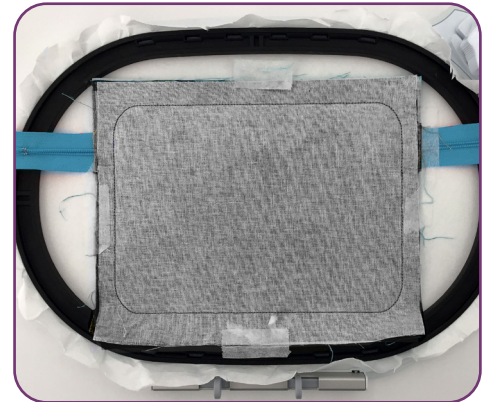

## Step 15

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and position the back lining, right side down on the back of the hoop.
- Tape in place to secure.




# EMBROIDERY



## □ Step 16

- Return the hoop to the machine.
- Stitch Machine Step 13, Inner Lining Tackdown.  
Note: The opening in the top is called the “neck”. This opening is used for turning the back fabric.

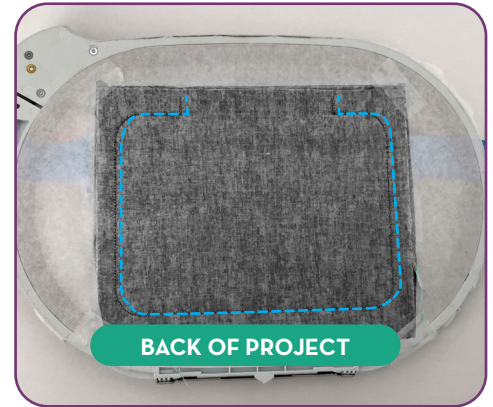

## □ Step 17

- The stitching is complete.
- Remove the project from the hoop and trim approximately 1/4” from the outermost stitching line.
- DO NOT cut the neck opening. Trim across the neck above the vertical lines of stitching.
- Clip each inner corner of the neck to, but not through, the corner stitch.  
Note: Zipper pouches are turned twice, so don’t panic after the first turn!



# EMBROIDERY



## □ Step 18

- Turn the pouch inside out to show the right side of the lining fabric.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.



## □ Step 19

- Remove the stabilizer from the zipper area.
- Unzip the zipper.



# EMBROIDERY



## □ Step 20

- Tuck the neck area to the inside of the bag, press.
- Close the opening by hand stitching.



## □ Step 21

- Turn the pouch right side out through the zipper.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.
- Press right side down on the Perfect Embroidery Press Cloth.
- The project is complete. Enjoy!

