

Floral Garment Cutwork



Collection No. 13044
7 Designs

Isacord Thread Colors

0010 Silky White
0622 Star Gold
0660 Vanilla
3971 Silver

 **Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**

Stabilizers

- AquaMesh Plus WashAway

Fabrics/Textiles

- Woven Fabric
- Shown Here:
Start Here by OESD Table Runner

Notion & Tools

- OESD Grippy Grid
- OESD Perfect Scoring Tool
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11
- DIME Target Stickers (Optional)

Thread Colors

- Per thread chart



SUMMARY



13044-01



Design Size:
7.42 X 5.25 in.

13044-02



Design Size:
6.92 X 5.56 in.

13044-03



Design Size:
7.80 X 3.92 in.

13044-04



Design Size:
5.16 X 5.03 in.

13044-05



Design Size:
7.14 X 1.93 in.

13044-06



Design Size:
2.38 X 2.65 in.

13044-07



Design Size:
2.59 X 0.58 in.

GENERAL INSTRUCTIONS

The cutwork instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design 13044-05 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

 **Note:** Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

Step 1

- Using the OESD Grippy Grid, hoop one layer of AquaMesh Plus paper (shiny side up for all designs).
- Use the OESD Perfect Scoring Tool to score the paper.
- Remove the paper to reveal the adhesive surface.



☐ Step 2

- Place the table runner or garment as desired in the hoop.
- Finger press to secure.

 **Note: A Target Sticker and the Grippy Grid is being used to assist with placement.**



☐ Step 3

- Load the selected design into the machine.
- Example design is 13044-05.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Cut Lines and Secure Stitches.



☐ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Carefully trim the fabric inside the Cut Line stitching.

 **Tip: If the stabilizer is cut or a hole is created while trimming, use Expert Embroidery Tape WashAway as a patch.**



☐ Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cover Stitches/Match Bobbin **with matching bobbin thread.**



☐ Step 6

- Stitch the remaining machine steps.



☐ Step 7

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" - 1/2" outside the design.
- Embroider any additional designs desired.



FINISHING TOUCHES



☐ Step 8

- Rinse in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



☐ Step 9

- The project is complete. Enjoy!



CUT TOOL GUIDE

13044-01



13044-02



13044-03



13044-04



13044-05




13044-06



13044-07



CUT OUT

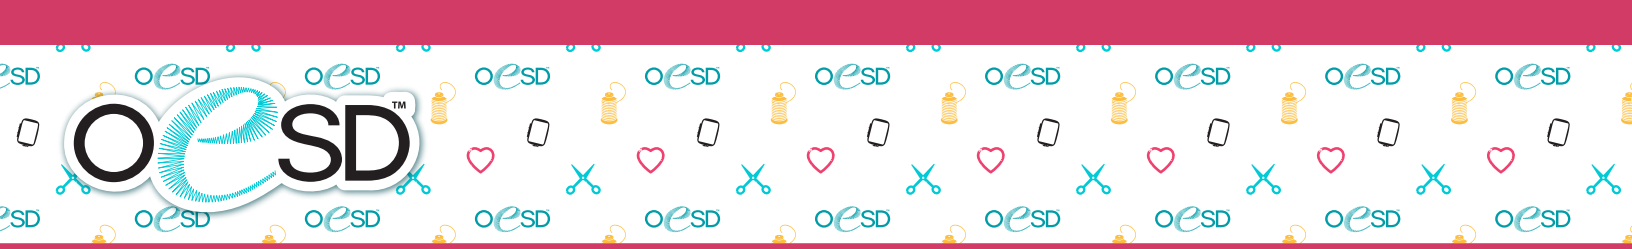

Floral Corner Bookmarks



oeSD
PROJECT+
EDUCATIONAL
CONTENT

Collection No. PK10133
4 Designs

MATERIALS



Isacord Thread Colors

0250 Lemon Frost
0345 Moss
0442 Tarnished Gold
0576 Very Dark Brown
0630 Buttercup
0660 Vanilla
0721 Antique
0741 Wheat
0747 Golden Brown
0800 Golden Rod
0842 Toffee
1355 Fox
1906 Tulip
2152 Heather Pink
2171 Blush
2220 Tropicana
2320 Raspberry
3962 River Mist
6051 Jalapeno

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD Medium Weight TearAway

Fabrics/Textiles

- OESD Favorite Felt, Green
- OESD Favorite Felt, Blue
- OESD Favorite Felt, Purple
- OESD Favorite Felt, Cream
- Start Here OESD Greeting Cards A6 (4.5" x 6.25")
One card will make 2 bookmarks

Notions & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per thread chart



SUMMARY




Finished Project Size: 3 1/2" H x 3 1/2" W

PK10133-01



Design Size:
4.00 X 4.00 in.

PK10133-02

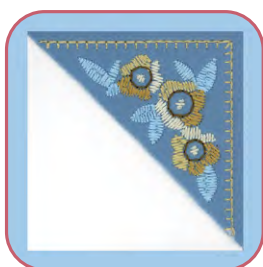

Design Size:
4.00 X 4.00 in.

PK10133-03



Design Size:
4.00 X 4.00 in.

PK10133-04



Design Size:
4.00 X 4.00 in.





The bookmark instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design PK10133-01 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Pre-cut applique patterns are included at the end of the instructions.

 **Note:** Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

- Cut the Greeting Card into (2) 4" squares.
- Cut a 4" square of felt then cut it diagonally to create two triangles.

 **Note:** To make one bookmark, one 4" greeting card square and one 4" felt triangle is required.

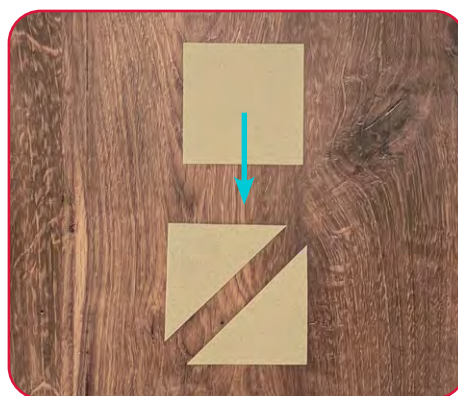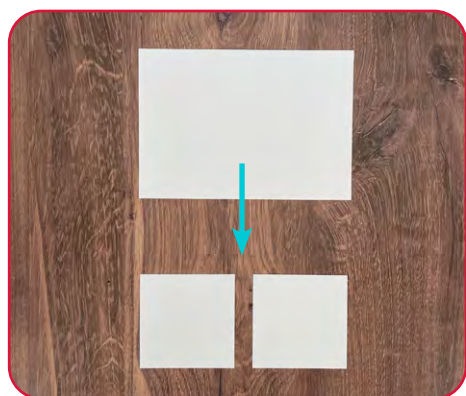


EMBROIDERY




□ Step 2

- Using the OESD Grippy Grid, hoop one layer of Medium Weight TearAway for all designs.

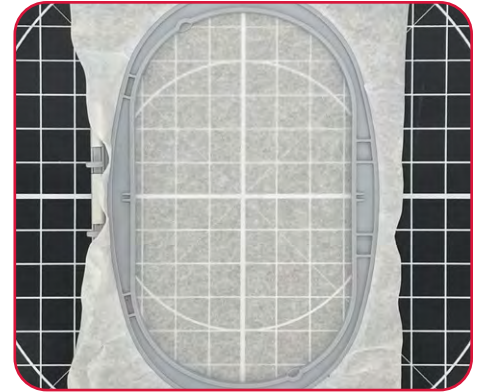


□ Step 3

- Load the selected design into the machine.
- Example design is PK10133-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Felt and Card Placement Guide.

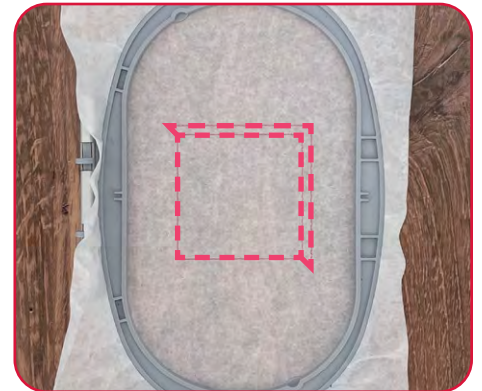

□ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the Felt Triangle within the placement stitching, lining up all edges.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

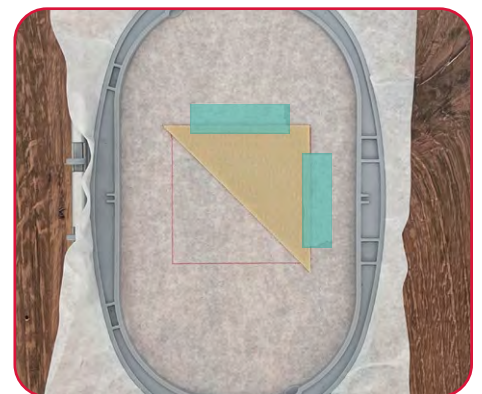

EMBROIDERY



□ Step 5

- Return the hoop to the machine.
- Stitch Machine Steps 2 – 8, **stopping before the last step.**



□ Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Turn the hoop over.
- Trim all excess threads on the back of the design.
- Place the 4" Greeting Card Square, right side down, within the placement guide, lining up the edges with the outer placement lines.
- Carefully tape all four corners to secure.

Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



BACK OF HOOP

EMBROIDERY



Step 9

- Gently tear away the stabilizer.



Step 10

- The bookmark is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

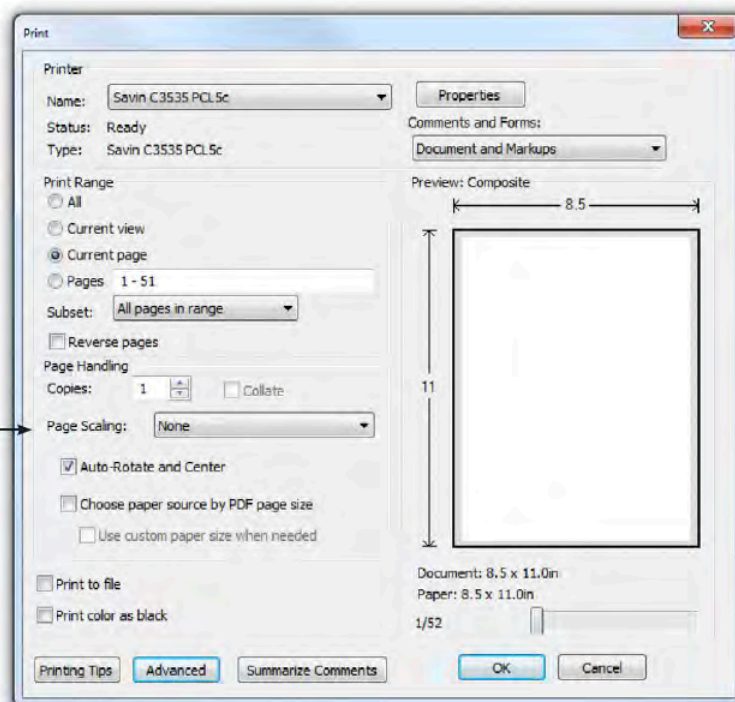

TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

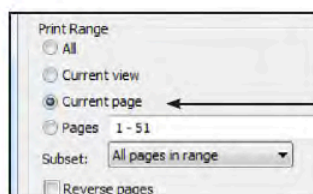

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10133-01
Card

PK10133-01
Felt

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10133-02
Card

PK10133-02
Felt

APPLIQUE PATTERNS



Print at 100%. No
scaling. This box
measures 1" x 1".
Use the box as an
accuracy guide
when printing
templates.

PK10133-03
Card

PK10133-03
Felt

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

PK10133-04
Card

PK10133-04
Felt

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.



PK10133-01
Felt
Mirrored

PK10133-01
Card
Mirrored

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

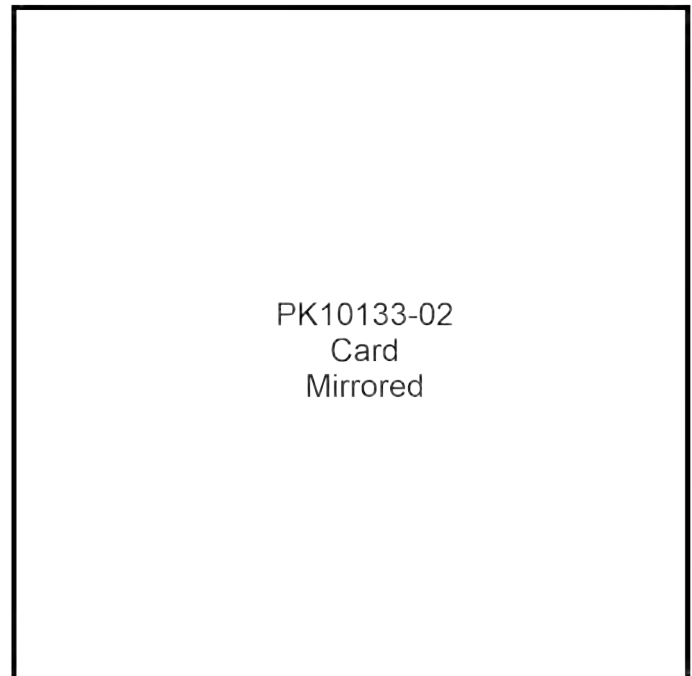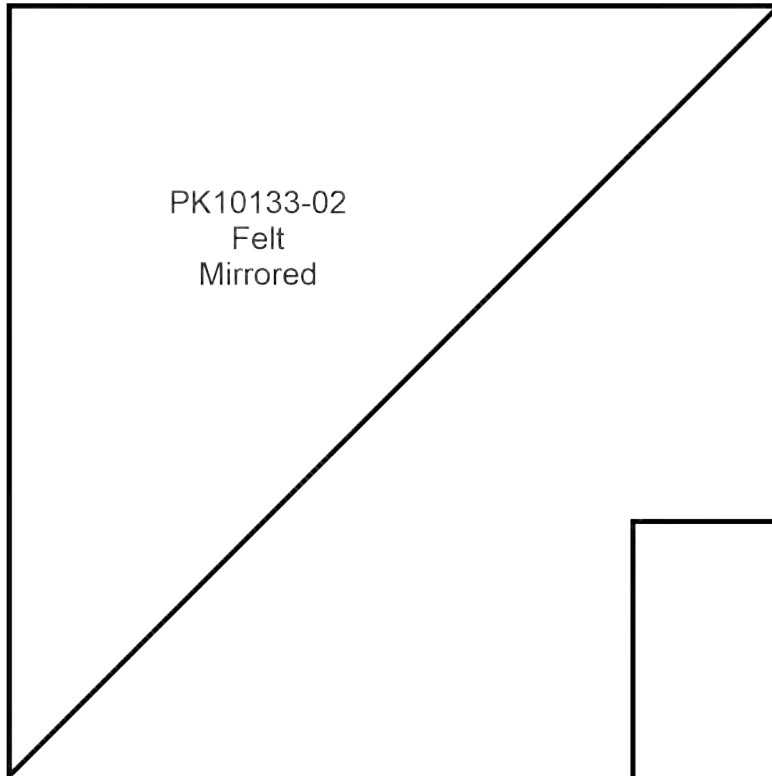

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

PK10133-03
Felt
Mirrored

PK10133-03
Card
Mirrored


MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10133-04
Felt
Mirrored

PK10133-04
Card
Mirrored

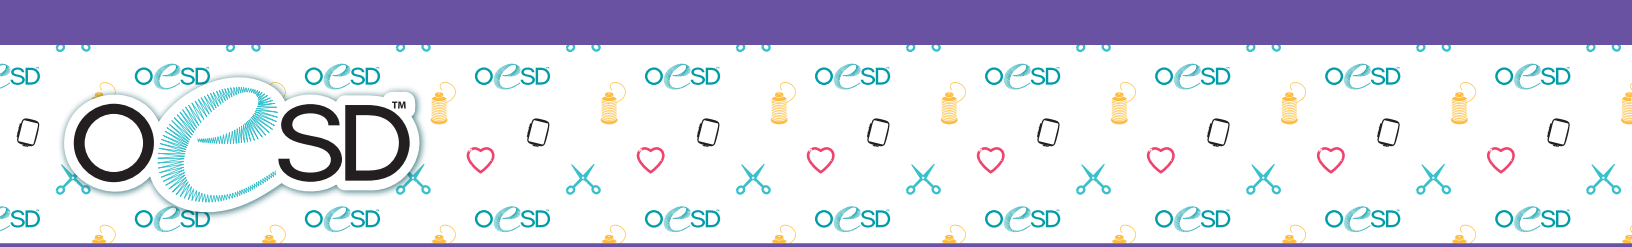

Animal Zipper Pouches



Collection No. PK10145
4 Designs/12 Files

MATERIALS



Isacord Thread Colors

0010 Silky White
0132 Dark Pewter
0150 Mystik Grey
0853 Pecan
0934 Fawn
1055 Bark
1061 Taupe
2550 Soft Pink
2830 Wild Iris
3750 Winter Frost
3853 Ash Blue

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD Lightweight TearAway
- OESD Fusible Woven
- OESD Fuse and Seal
3" x 1/2"
- OESD StabilStick CutAway
- **+Optional: See Step 1**
- OESD BadgeMaster WashAway
- **+Optional: See Step 2**

Fabrics/Textiles

- OESD Favorite Felt, Brown
- OESD Favorite Felt, Blue Grey
- OESD Favorite Felt, Cream
- OESD Favorite Felt, Light Purple
- Pink Quilter's Cotton
1/4 yard
- Gold Quilter's Cotton
1/4 yard
- Light Blue Quilter's Cotton
1/4 yard
- Brown Quilter's Cotton
1/4 yard

 **Note: Fabric amounts are estimates and may result in overage.**

Notions & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape
TearAway
- OESD Expert Embroidery Tape
WashAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle 80/12 Sharp
- Polyester or nylon zipper, 9" or longer
- 3/8" Ribbon: (1) 3"


Isacord Thread Colors

- Per thread chart



SUMMARY


Kitten

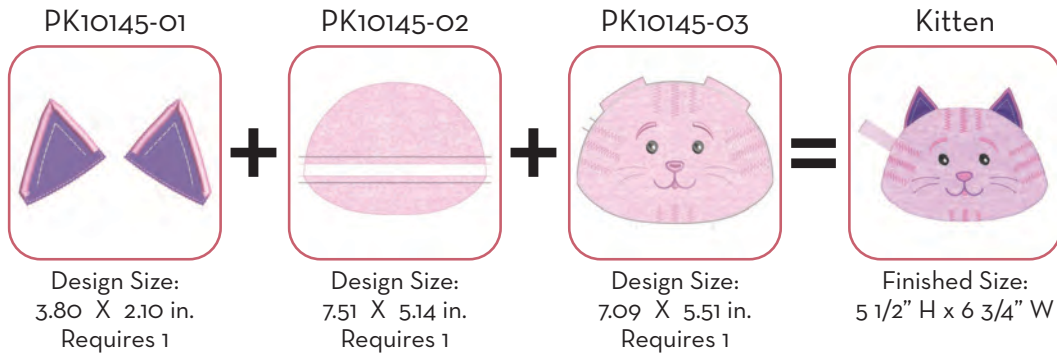

Felt: (2) 5" x 3.5" PK10145-01

	Left Panel PK10145-02	Right Panel PK10145-02	Front Panel PK10145-03
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

Bunny

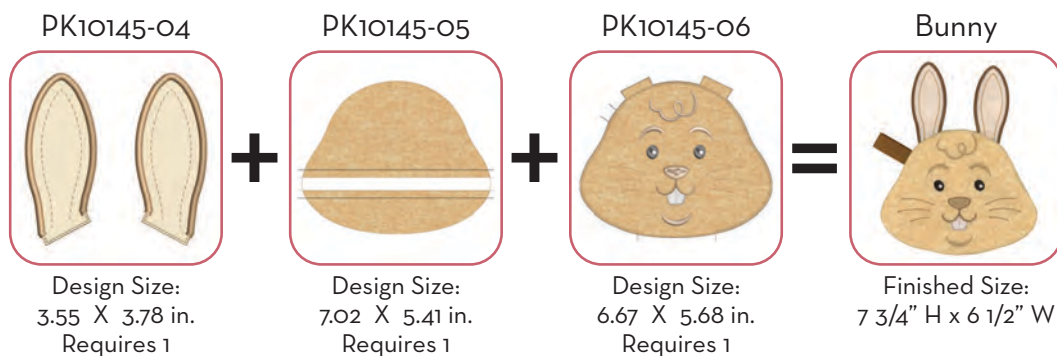


Felt: (2) 5" x 4.5" PK10145-04

	Left Panel PK10145-05	Right Panel PK10145-05	Front Panel PK10145-06
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

SUMMARY


Puppy

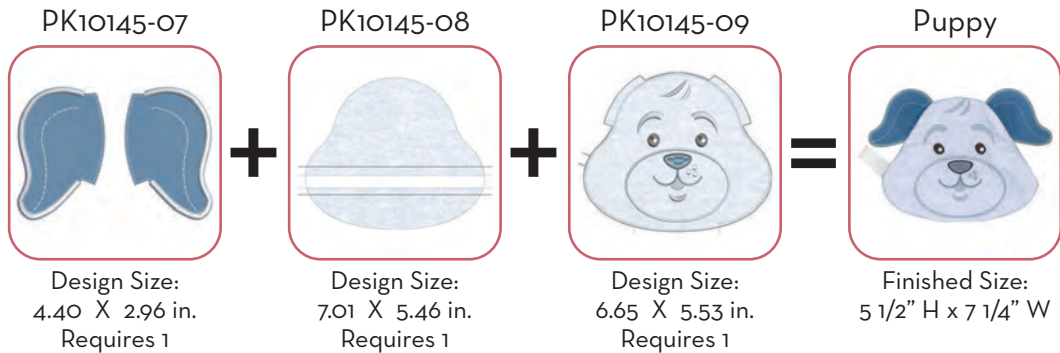

Felt: (2) 5.5" x 4" PK10145-07

	Left Panel PK10145-08	Right Panel PK10145-08	Front Panel PK10145-09
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

Teddy

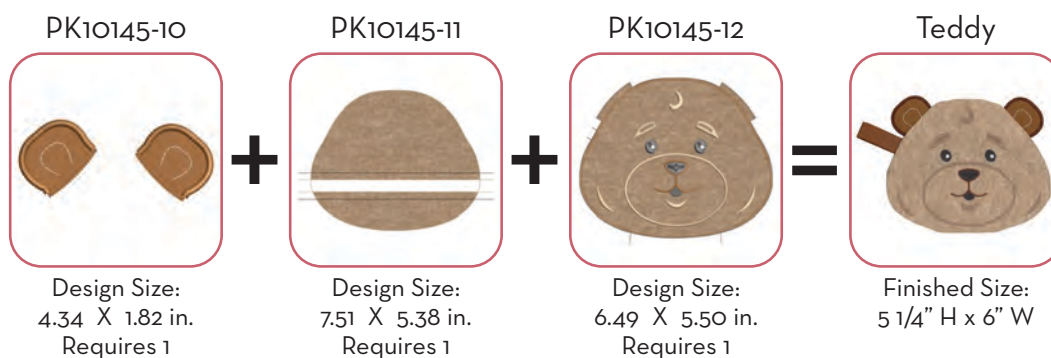

Felt: (2) 5.5" x 3" PK10145-10

	Left Panel PK10145-11	Right Panel PK10145-11	Front Panel PK10145-12
Outer Fabric	8" x 4"	8" x 8"	8" x 8"
Lining Fabric	8" x 4"	8" x 8"	8" x 8"
Fusible Woven	8" x 2"	8" x 4"	8" x 8"

General Instructions

The zipper pouch instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Designs PK10145-07, PK10145-08 and PK10145-09 are shown here.

The Freestanding Applique (FSA) Ears and Pouch Back designs must be embroidered before the Pouch Front design.


Fabric and thread requirements will vary by design, but the general technique is the same. Applique technique shown is cut in place (ears). Pre-cut applique patterns for the ears are included at the end of the instructions.

 **Note: Some thread and fabric colors in the instructions have been changed or digitally enhanced for better visibility.**

Step 1

- Cut the applique felts 1/4" – 1/2" larger than the applique patterns or as indicated in the design supply list on pages 4 & 5. The applique patterns are included at the end of the instructions.

 **Optional: OESD Favorite Felt does not require extra stabilization. However, if using other felt, adhere one layer of StabilStick CutAway to the wrong side of all applique felts to provide some body to the felt.**

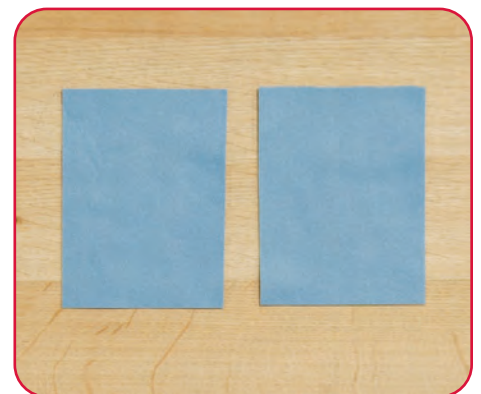

EMBROIDERY- EARS (FREESTANDING APPLIQUE)



□ Step 2

- Using the OESD Grippy Grid, hoop two layers of Aquamesh.


✓ **Note: This will give the ears a soft feel.**

⊕ **Optional: For firmer ears, hoop a layer of Aquamesh and a layer of BadgeMaster.**



□ Step 3

- Load the selected design into the machine.
- Example design is PK10145-07.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Front Blue Felt Placement Stitch.

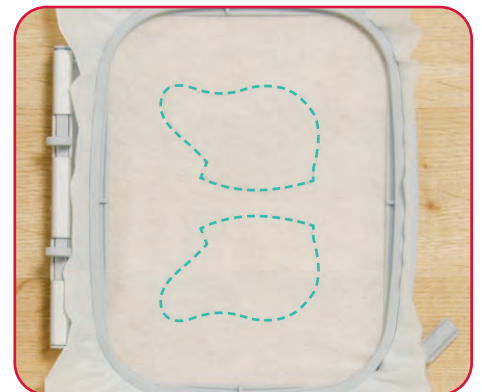

□ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the blue applique felt.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



🔔Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.

EMBROIDERY- EARS (FREESTANDING APPLIQUE)



□ Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Ear Detail.



□ Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the blue applique felt, right side up, completely covering the placement stitch.
- Carefully tape to secure.

 **Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.**



EMBROIDERY- EARS (FREESTANDING APPLIQUE)



Step 9

- Return the hoop to the machine.
- Stitch Machine Step 4, Back Blue Felt Cut Line and Tackdown.



Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



Step 11

- Return the hoop to the machine.
- Stitch Machine Step 5, Cover Stitch **with matching bobbin thread.**




A close-up photograph showing a hand holding a red steam iron. The iron is being pressed against a small, folded blue cloth that is lying on a white, wrinkled fabric surface. The iron's soleplate is in direct contact with the blue cloth. The background is a plain white surface.

EMBROIDERY- EARS (FREESTANDING APPLIQUE)



Step 14

- The Ears for the pouch are complete.


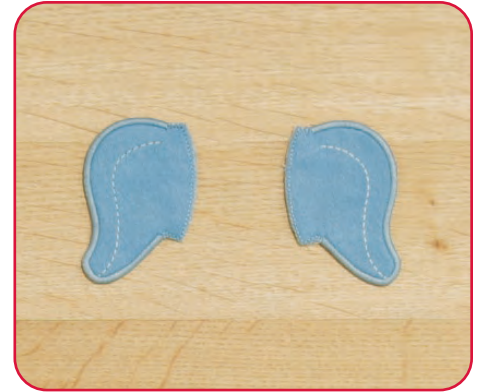


EMBROIDERY- POUCH BACK



Step 15

- Press Right Panel, Left Panel, Lining Right Panel, and Lining Left Panel in half, wrong sides together, lengthwise.

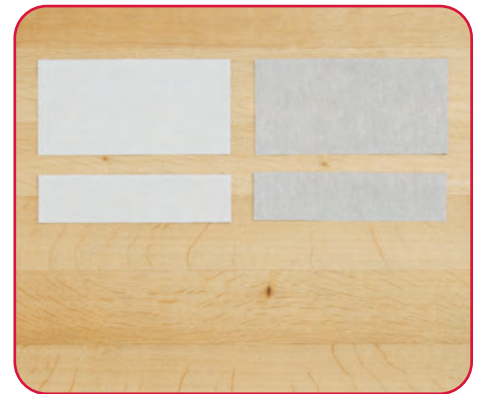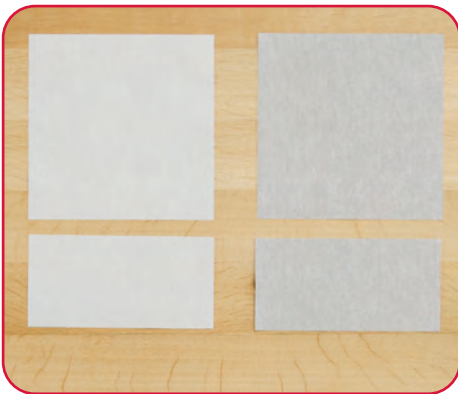

Step 16

- Apply Fusible Woven to the wrong side of the Right and Left Panel outer fabrics.
- Open the folded Right and Left Panels. Line up the Fusible Woven with the fold of the fabric.
- Press to apply the Fusible Woven.

Note: The Fusible Woven is applied only to the outer fabrics, not the lining.




EMBROIDERY- POUCH BACK




Step 17

- Refold the Right and Left Panel outer fabrics and press.

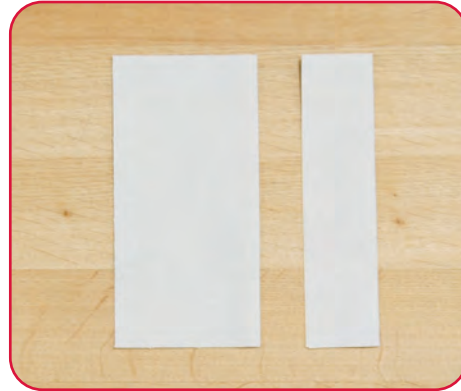

Step 18

- Using the OESD Grippy Grid, hoop one layer of Light Weight TearAway.

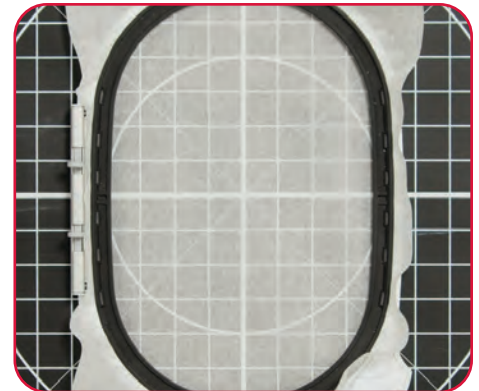


EMBROIDERY- POUCH BACK




□ Step 19

- Load the selected design into the machine.
- Example design is PK10145-08.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Zipper Placement Guide.

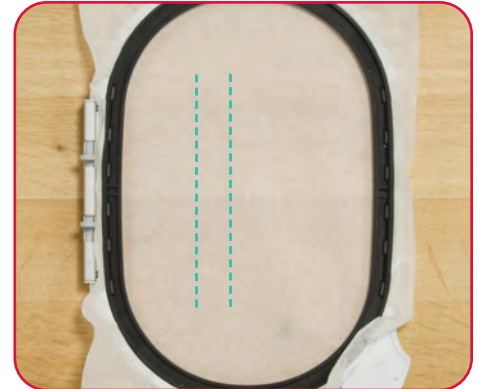

□ Step 20

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the zipper, right side up and centered, within the Zipper Placement Guide. The zipper head will be at the top of the hoop.
- Tape in place with OESD Expert Embroidery Tape WashAway to secure.

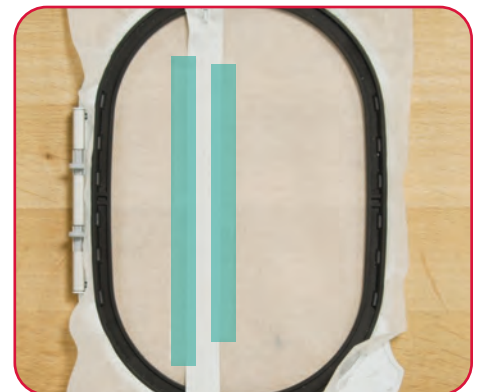

✍ **Note: Metal ends must be outside of the stitching area.**


🔔 **Tip: Use OESD Expert Embroidery Tape WashAway when working with or by the zipper so any remnants of the tape that have been stitched over can be easily removed with a damp cloth. In contrast, OESD Expert Embroidery Tape TearAway can become stuck in the teeth of the zipper.**

EMBROIDERY- POUCH BACK



Step 21

- Return the hoop to the machine.
- Stitch Machine Step 2, Zipper Tackdown.

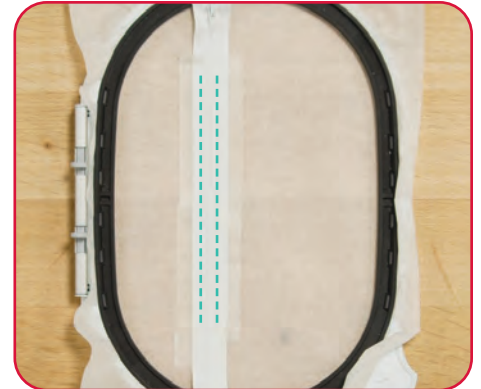

Step 22

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the folded edge of the Right Panel outer fabric to the right of the zipper teeth.
- Place the folded edge of the Left Panel outer fabric to the left of the zipper teeth.
- Cover the zipper tackdown lines. Do not cover the zipper teeth.
- Tape in place to secure.



Note: The fabric side with the Fusible Woven attached needs to be on top to better support the embroidery stitches.

EMBROIDERY- POUCH BACK




Step 23

- Turn the hoop over and lay face down on a flat surface.
- On the back of the hoop, locate the Zipper Tackdown lines.
- Place the folded edge of the Right Panel Lining fabric slightly inside the right side Zipper Tackdown stitch line.
- Place the folded edge of the Left Side Lining fabric slightly inside the left side Zipper Tackdown stitch line.
- Tape in place to secure.




Step 24

- Return the hoop to the machine.
- Stitch Machine Step 3, Front and Back Panels Tackdown.

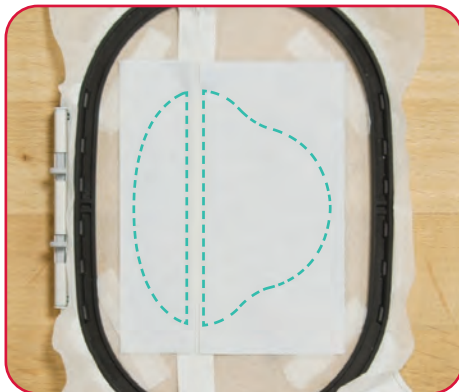

- Remove the hoop from the machine, but NOT the project from the hoop.
- Unzip the zipper halfway.

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line.

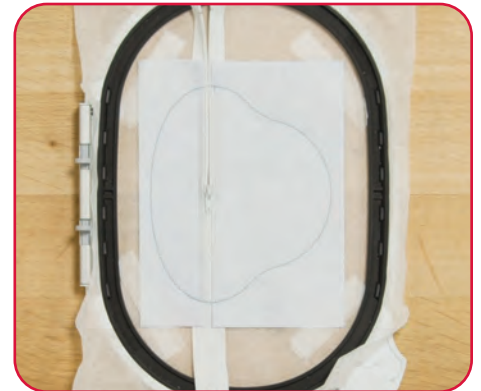

EMBROIDERY- POUCH BACK



Step 27

- When the design is complete, remove the project from the hoop.
- Remove all the tape.
- Trim approximately 1/8" outside the Cut Line.
- Gently remove the tear away stabilizer from the back of the design, including the zipper area.

Tip: If any of the washaway tape is left on the zipper, use a damp cloth or cotton bud to remove it.



Step 28

- The Pouch Back is complete.




EMBROIDERY- POUCH FRONT




Step 29

- Apply Fusible Woven to the wrong side of the Front Panel outer fabric.

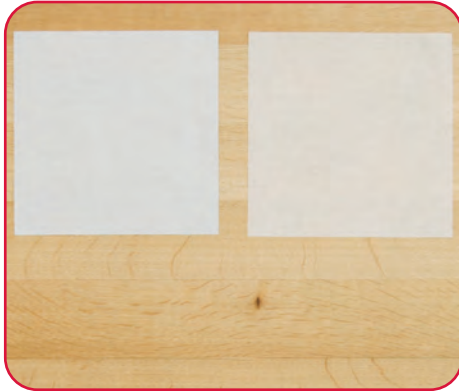

Step 30

- Using the OESD Grippy Grid, hoop one layer of Light Weight TearAway.

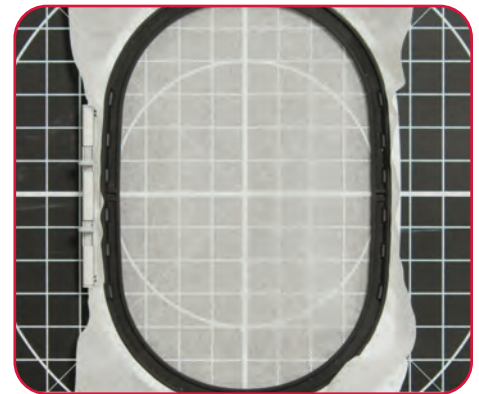


EMBROIDERY- POUCH FRONT



Step 31

- Load the selected design into the machine.
- Example design is PK10145-09.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Light Blue Fabric/Ear and Ribbon Placement Stitch.

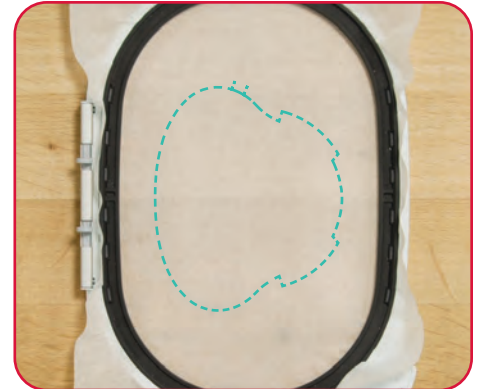

Step 32

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the Front Panel outer fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



Step 33

- Return the hoop to the machine.
- Stitch Machine Step 2, Fabric Tackdown.



- **Stitch Machine Steps 3 – 6.**



- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Using the placement stitches on the fabric, line up the ears, right side down, on the top of the head.
- Tape in place to secure.



🔔 Tip: Place Expert Embroidery Tape Tear Away along the seam line. This allows the presser foot to glide along the height change from front panel to front panel and ear.

 **Note: The ears will face towards the inside of the design**

EMBROIDERY- POUCH FRONT



Step 36

- Fold the 3" piece of ribbon in half.
- Align the folded ribbon between the placement lines as shown.
- Tape in place to secure.

 **Note:** The fold will be towards the inside of the design.



Step 37

- Return the hoop to the machine.
- Stitch Machine Step 7, Ear and Ribbon Tackdown.



EMBROIDERY- POUCH FRONT



Step 38

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the tape from the ears.
- Place the Pouch Back, **right side/zipper head down**, aligning the edges with the tackdown stitches.
- Tape in place to secure.




Note: Make sure that the zipper still halfway undone.

Step 39

- Return the hoop to the machine.
- Stitch Machine Step 8, Zipper Panel Tackdown.

Tip: Slow the machine down and, if the machine allows it, raise the presser foot height.

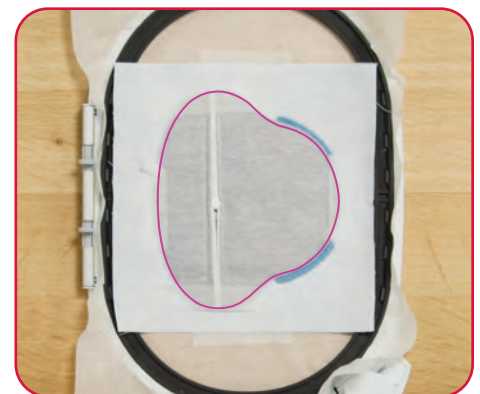


EMBROIDERY- POUCH FRONT



Step 40


- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Position the Front Panel Lining, right side down, completely covering the stitched pieces.

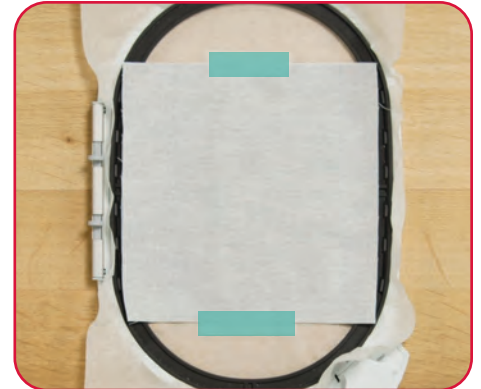

Step 41

- Return the hoop to the machine.
- Stitch Machine Step 9, Inner Lining Tackdown.

Note: The opening in the bottom is called the "neck". This opening is used for turning the pouch.

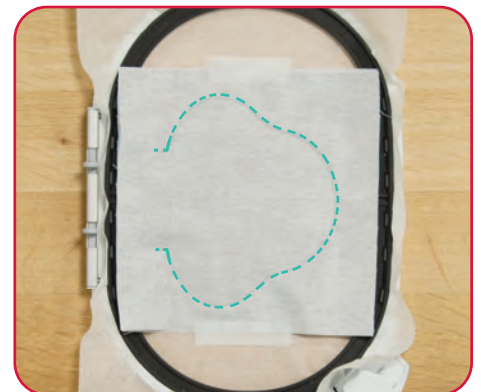

Step 42

- When the design is complete, remove the project from the hoop.
- Trim approximately 1/4" from the outermost stitching line.
- DO NOT cut the neck opening. Trim across the neck above the vertical lines of stitching.

Note: The zipper pouch is turned twice, so don't panic after the first turn!



EMBROIDERY- POUCH FRONT



□ Step 43

- Turn the pouch inside out to show the right side of the lining fabric.
- Use the large end of the Expert Point and Press tool to push out the corners and edges



□ Step 44

- Unzip the zipper.



EMBROIDERY- POUCH FRONT



Step 45

- Tuck the neck area to the inside of the bag.
- Press.
- Close the opening with a small piece of Fuse and Seal.



Step 46

- Turn the pouch right side out through the zipper.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.
- Press right side down on the Perfect Embroidery Press Cloth



- The project is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

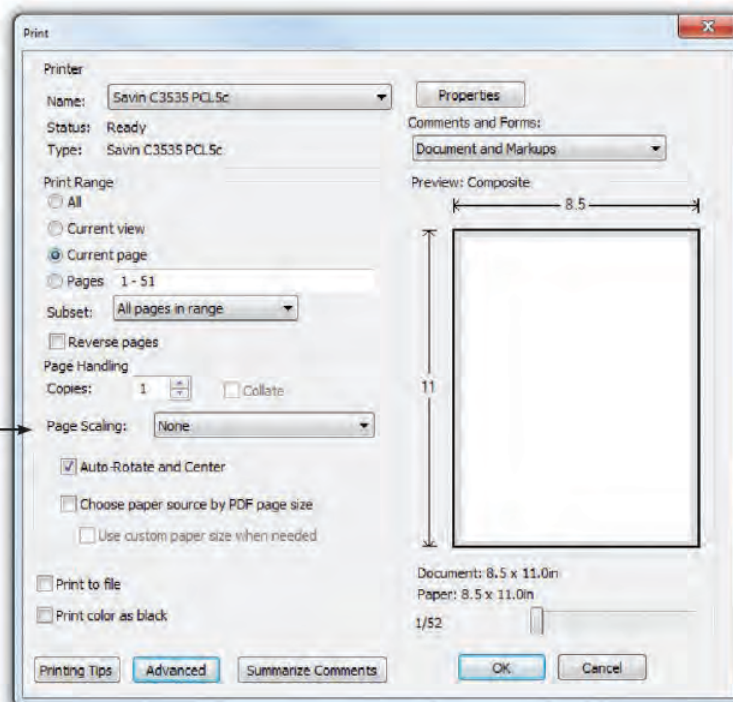

TO SAVE PAPER





Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

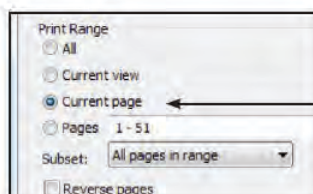

APPLIQUE PATTERNS







Print at 100%. No
scaling. This box
measures 1"x 1".
Use the box as an
accuracy guide
when printing
templates.

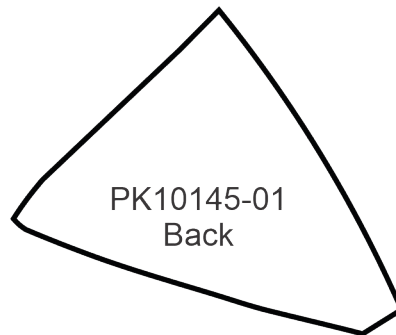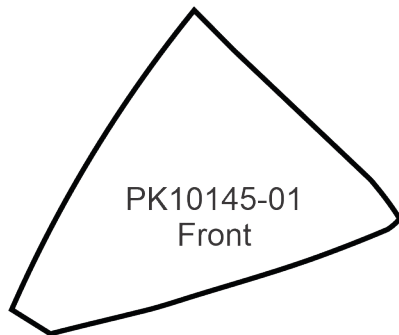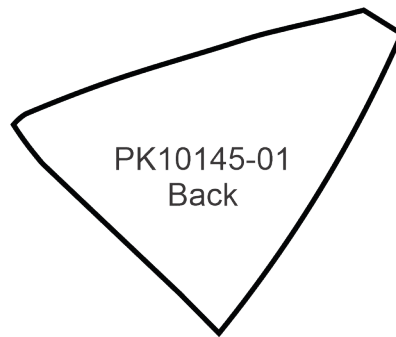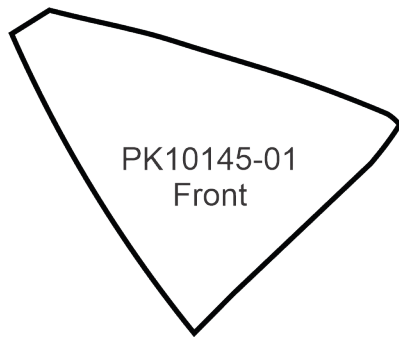

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

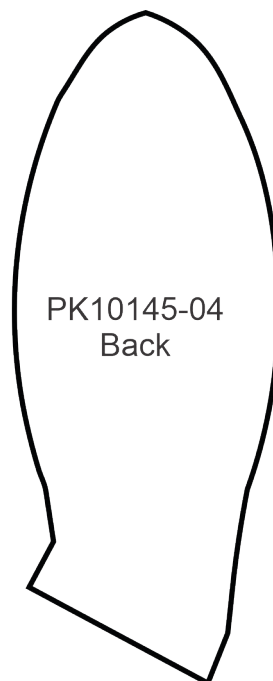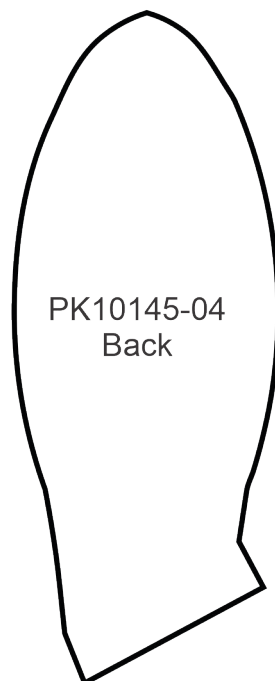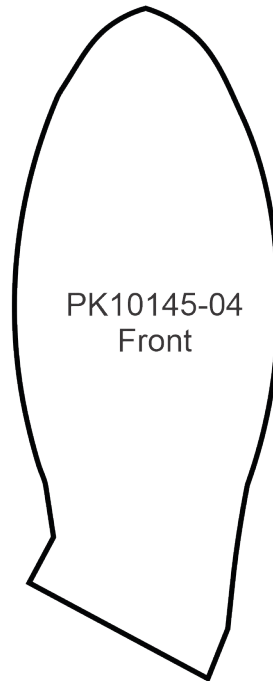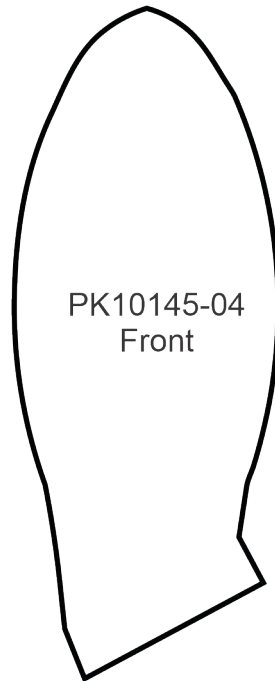

APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

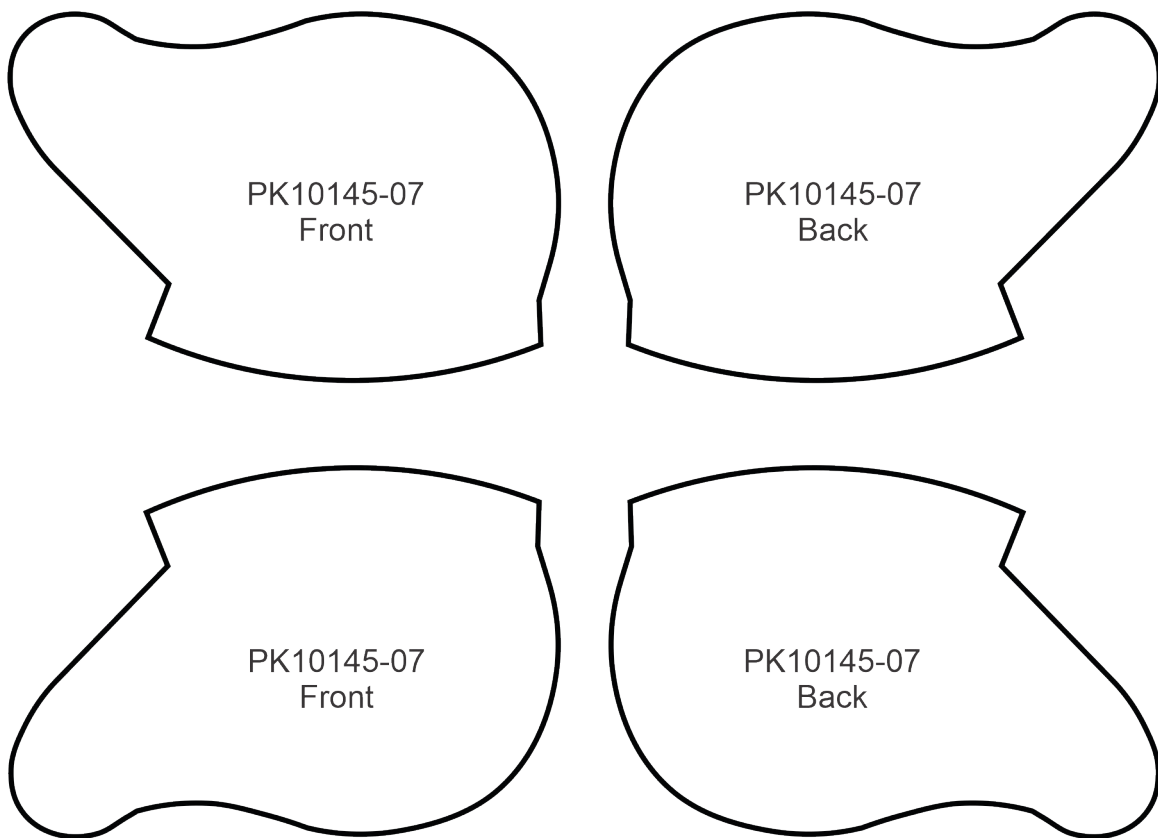

APPLIQUE PATTERNS







Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

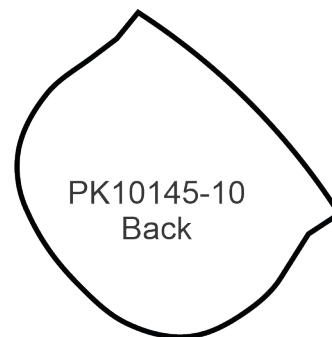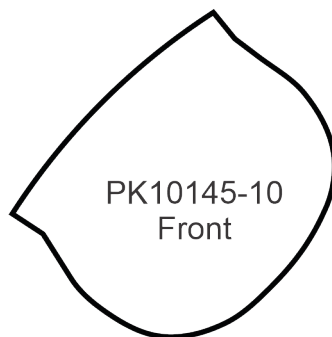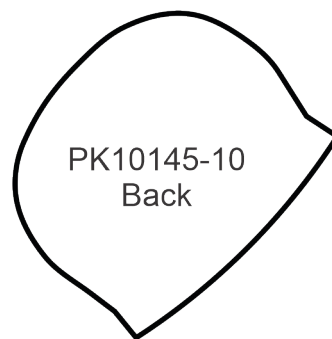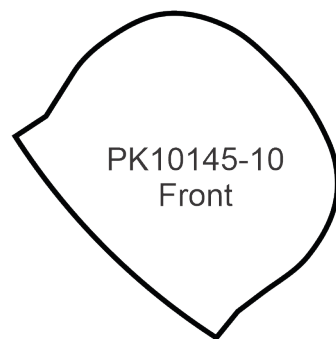

MIRRORED PATTERNS







Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

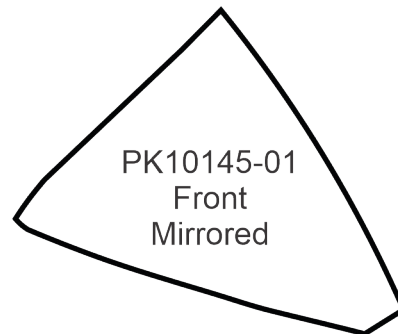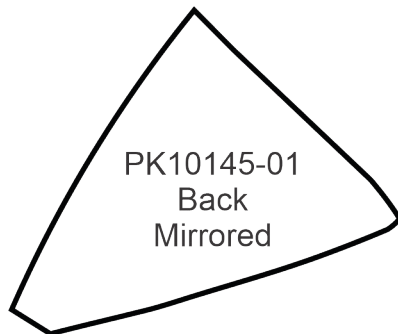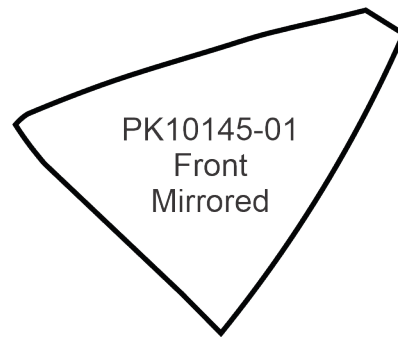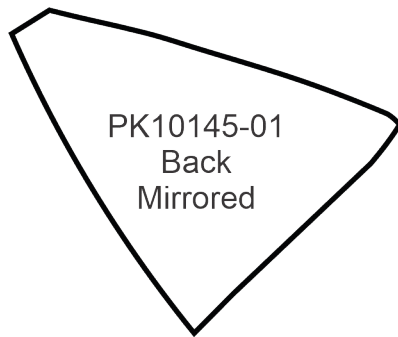

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

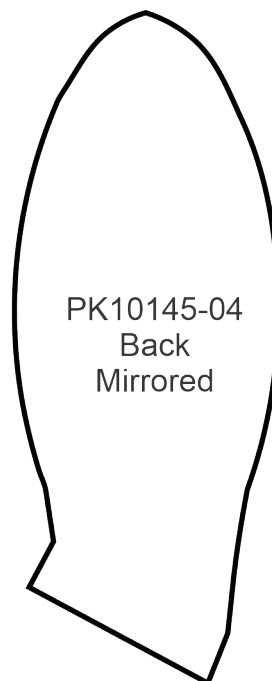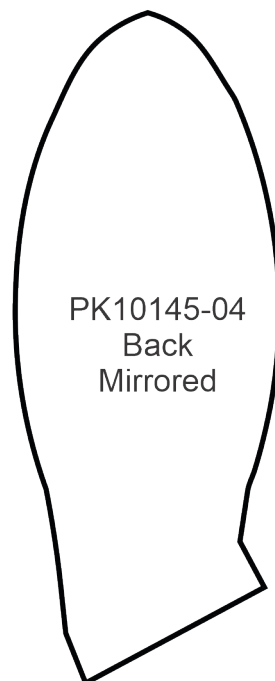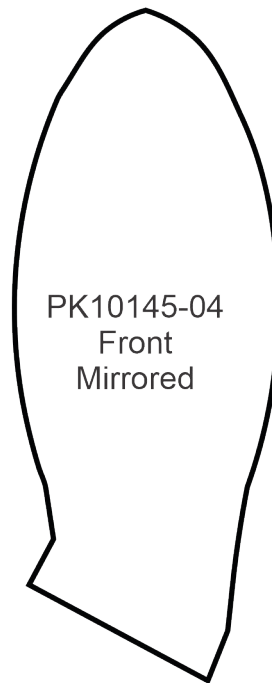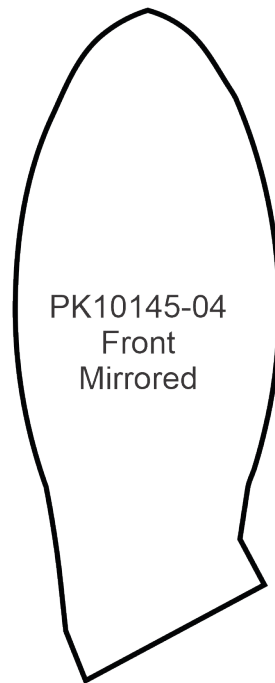

MIRRORED PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

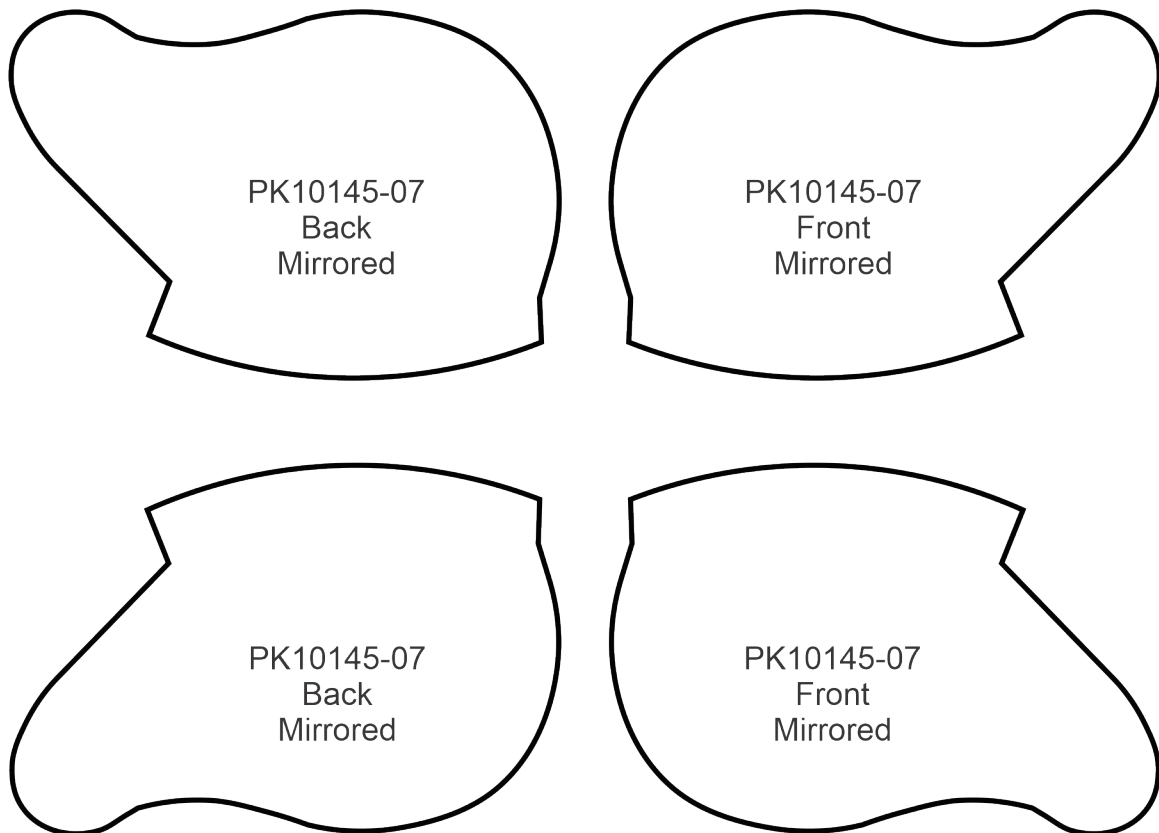


MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

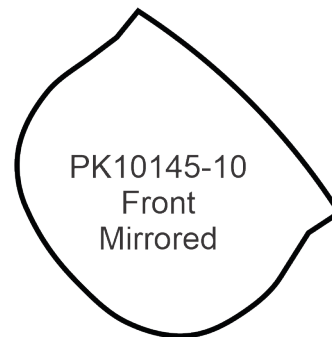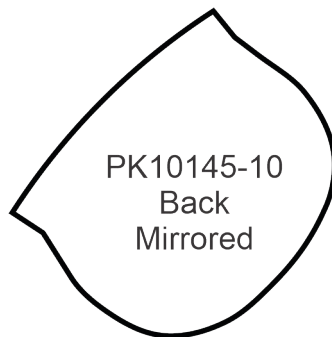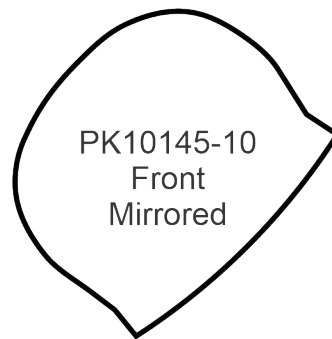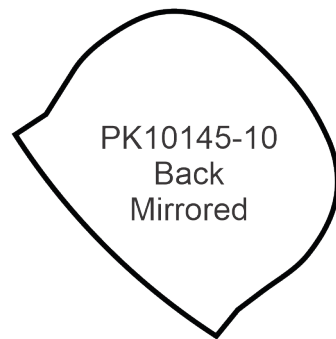

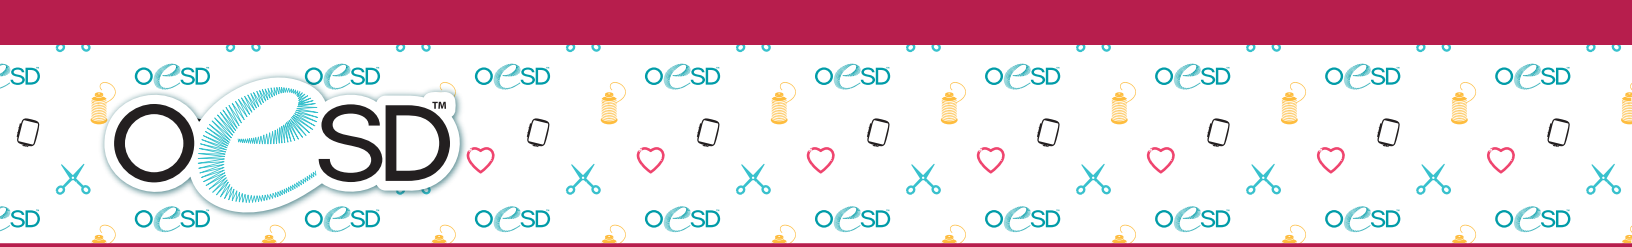

In the Hoop Award Ribbons



Collection No. PK10151
3 Designs

Isacord Thread Colors

0101 Eggshell
1903 Lipstick
3544 Sapphire

 **Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**

Stabilizers

- OESD Medium Weight TearAway
- OESD StabilStick CutAway

Fabrics/Textiles

- 1 1/2" Ribbon
- 1" Ribbon
- Assorted Quilter's Cotton

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- DIME Crafter's Temp Tack Glue Stick
- Embroidery Needle Sharp 75/11

Thread Colors

- Per thread chart



SUMMARY



PK10151-01



Design Size:
4.98 X 5.00 in.

PK10151-02



Design Size:
3.74 X 3.75 in.

PK10151-03



Design Size:
2.99 X 3.00 in.

Cutting

	Front Rosette	Back Rosette	Streamer	Center Fabric
PK10151-01	37" of 1" Ribbon	37" of 1 1/2" Ribbon	16" of 1 1/2" Ribbon	4" x 4"
PK10151-02	27" of 1" Ribbon	28" of 1 1/2" Ribbon	16" of 1 1/2" Ribbon	3" x 3"
PK10151-03	24" of 1" Ribbon	24" of 1" Ribbon	16" of 1" Ribbon	2 1/2" x 2 1/2"

GENERAL INSTRUCTIONS

The instructions included in this collection are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design PK10151-02 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique technique shown is cut in place. Pre-cut applique patterns are included at the end of the instructions.

Visit the OESD Learning Center for a video tutorial.

 **Note:** Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

 **Tip:** Although some of these designs can fit in smaller hoops, we recommend using a 5 x 7 or equivalent hoop, so the ribbon can lay flat while creating the design.
If available, use an embroidery foot with a larger surface area like an echo quilting or glide foot to assist in keeping the embroidery foot on top of the ribbon.



Step 1

- Cut the Ribbon as indicated on the summary on page 4.
- Here, the Yellow is the Front Rosette, the Blue is the Back Rosette, and the Green is the Streamers.



Step 2

- On one short end of each ribbon, fold over approximately 1/2" to create a finished edge.

 **Tip: Use a Crafter's Temp Tack Glue Stick to hold the raw edge in place.**




Step 3

- Cut the Center applique fabric 1/4" – 1/2" larger than the applique patterns or as indicated in the summary on page 4.
- Apply two layers of StabilStick CutAway to the wrong side of the fabric to provide body to the fabric.
- Adding StabilStick CutAway adds the body that is normally seen in store bought award ribbons.




☐ Step 4

- Using the OESD Grippy Grid, hoop one layer of Medium Weight TearAway.

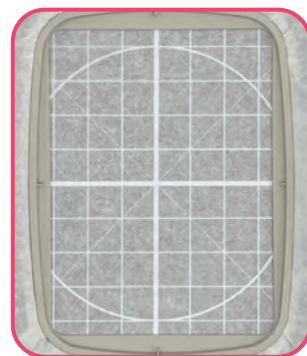


☐ Step 5

- Load the selected design into the machine.
- Example design is PK10151-02.
- Thread the machine with a color that coordinates with the Center Fabric.
- Place the hoop on the machine.
- Stitch Machine Step 1, Streamer Placement Guide.

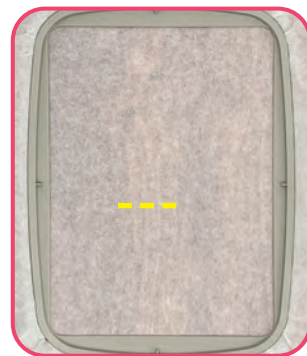

Step 6


- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Fold the Streamer Ribbon in half where the width is approximately the length of the placement line.
- Place the fold approximately 1/8" – 1/4" above the Placement Guide.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

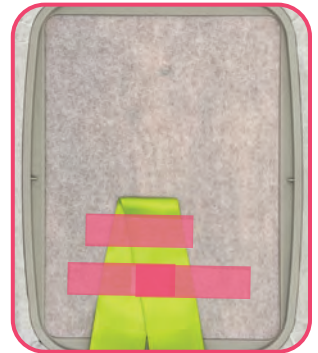

+ Optional: Cut the ribbon in half and place over the line as above if the ribbon has a right and wrong side.


Step 7

- Return the hoop to the machine.
- Stitch Machine Step 2, Streamer Tackdown.

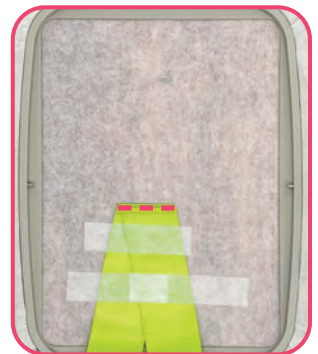


☐ Step 8

- Stitch Machine Step 3, Back Rosette Ribbon Guide.

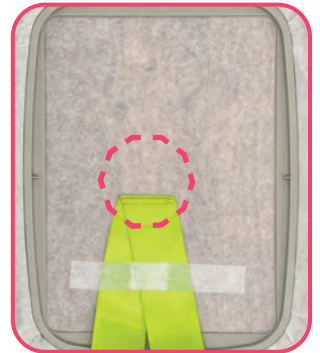

☐ Step 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the tape from the Streamer.
- Align the top edge of the Back Rosette Ribbon, right side up, along the bottom of the Back Rosette Ribbon Guide. The bulk of the excess ribbon will be to the left with the hem to the right.
- Tape the right edge of the ribbon to secure.

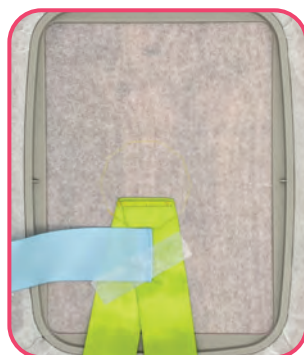

☐ Step 10


- Return the hoop to the machine.
- Stitch Machine Step 4, Back Ribbon Tackdown 1.

 **Tip: Use the Expert Point and Press Tool as a stiletto to help hold the ribbon down while embroidering.**




☐ Step 11

- Remove the tape.
- Fold the Back Rosette Ribbon firmly over the Tackdown.
- The top edge of the ribbon should follow the Back Rosette Ribbon Guide.
- Tape in place to secure.

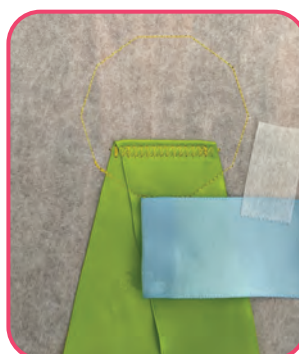

☐ Step 12

- Stitch Machine Step 5, Back Ribbon Fold Line 1.

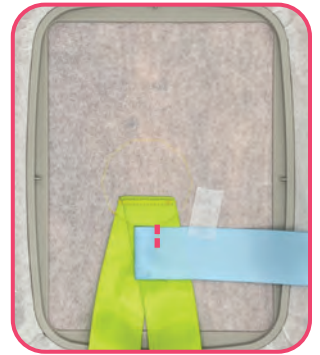

☐ Step 13

- Remove the tape.
- Fold the Back Rosette Ribbon over the Fold Line. It should not be tight to give dimension to the pleat.
- The top edge of the ribbon will align with the next point in the Back Rosette Ribbon Guide.
- Tape in place to secure.



☐ Step 14

- Stitch Machine Step 6, Back Ribbon Tackdown 2.



☐ Step 15

- Remove the tape.
- Fold the Back Rosette Ribbon over the Tackdown.
- The top edge of the ribbon will align to the just covered Back Rosette Ribbon Guide line.
- Tape in place to secure.



☐ Step 16

- Stitch Machine Step 7, Back Ribbon Fold Line 2.




☐ Step 17

- Remove the tape.
- Fold the Back Rosette Ribbon over the Fold Line.
- The top edge of the ribbon will align with the next point in the Back Rosette Ribbon Guide.
- Tape in place to secure.



☐ Step 18

- Stitch Machine Step 8, Back Ribbon Tackdown 3.

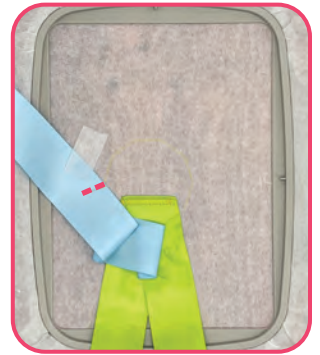

☐ Step 19

- Remove the tape.
- Fold the Back Rosette Ribbon over the Tackdown.
- The top edge of the ribbon will align to the just covered Back Rosette Ribbon Guide line.
- Tape in place to secure.



☐ Step 20

- Repeat Steps 16-19 for Machine Steps 9-23 (fold, tape, tackdown and remove tape), stopping before Machine Step 24.




☐ Step 21

- Remove the tape.
- Fold the Back Rosette Ribbon over the Back Ribbon Fold Line.
- The top edge of the ribbon will align with the next point in the Back Rosette Ribbon Guide.
- Trim any excess Back Rosette Ribbon just past the above point.



☐ Step 22

- Fold a small hem on the end of the ribbon.
- Tape in place to secure.

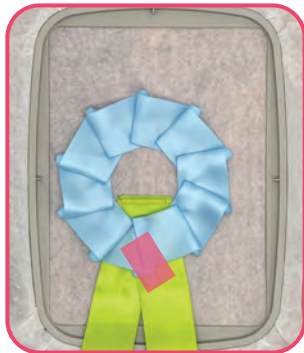

☐ Step 23

- Stitch Machine Step 24, Back Ribbon Tackdown 11.



☐ Step 24

- Stitch Machine Step 25, Front Rosette Ribbon Guide.



Step 25

- Repeat Steps 9 – 23 for Machine Steps 26 – 46 using the Front Rosette Ribbon and Front Rosette Ribbon Guide.
- Refer to Step 21- 23 for how to finish the Front Rosette.




Step 26

- Stitch Machine Step 47, Ribbon Cut Guide.



☐ Step 27

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim away the excess rosette ribbon inside the cut guide to reduce bulk.

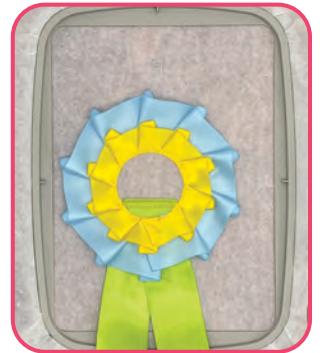


☐ Step 28

- Return the hoop to the machine.
- Stitch Machine Step 48, Blue Fabric Placement Stitch.



☐ Step 29

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared applique fabric.
- Tape in place to secure.

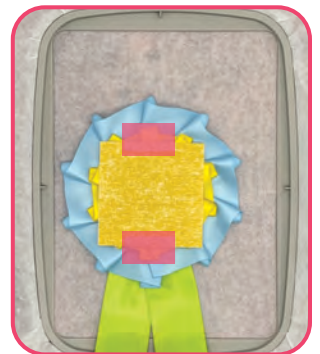

☐ Step 30

- Return the hoop to the machine.
- Stitch Machine Step 49, Cut Line and Tackdown.



☐ Step 31

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

 **Tip:** It is easier to trim in a counterclockwise direction due to the direction of the ribbon folds.



☐ Step 32

- Return the hoop to the machine.
- Stitch Machine Step 50, Cover Stitch.



☐ Step 33

- When the design is complete, remove the project from the hoop.
- Gently tear away the stabilizer.



☐ Step 34

- Trim the Streamers and attach a pin back if desired.
- The project is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

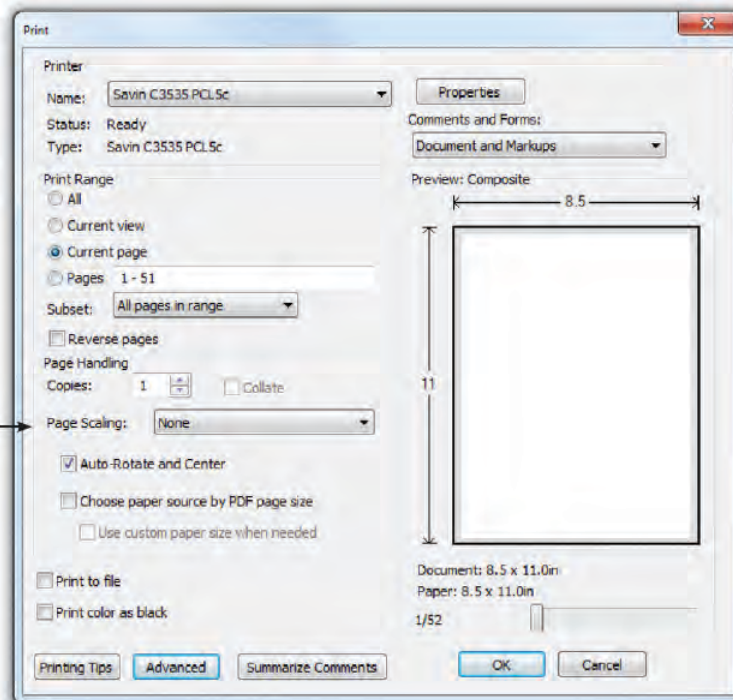

TO SAVE PAPER




Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

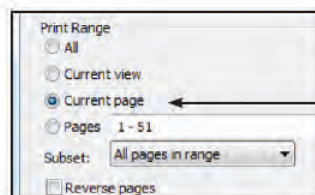

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

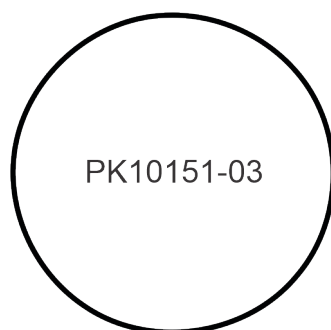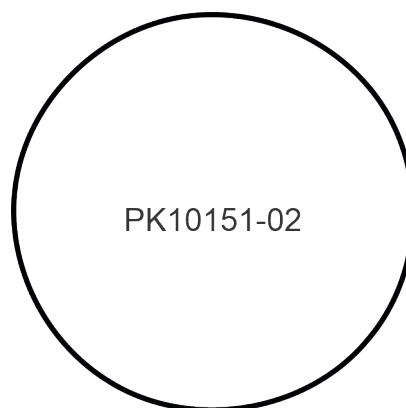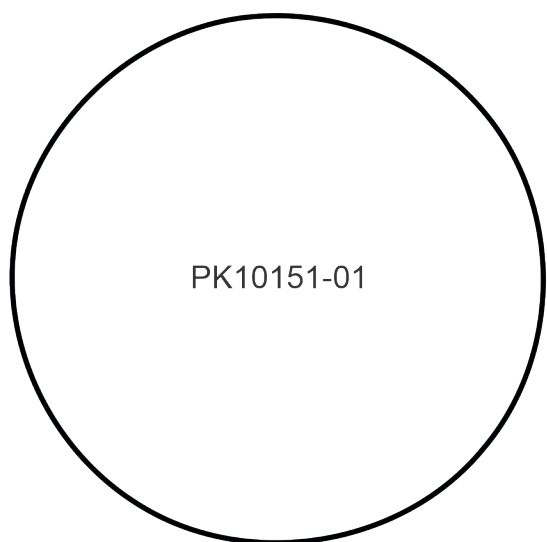

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10151-01
Mirrored

PK10151-02
Mirrored

PK10151-03
Mirrored



Patriotic Table Runner



Collection No. 13034
1 Design/8 Files

MATERIALS



Isacord Thread Colors

0015 White
0145 Skylight
1912 Winterberry
3644 Royal Navy

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD Heavy Weight TearAway
- OESD Fusible Woven
- OESD SoftWeb

Fabrics/Textiles

Background:

- Red Quilter's Cotton
 - 1 3/4 yard

Applique:

- Blue Quilter's Cotton
 - 1/2 yard
- White Quilter's Cotton
 - 1/2 yard

Batting:

- 1/2 yard (90" wide)

Backing:

- 1 1/2 yards OR
- 3/4 yard, cut 2 strips approximately 13 1/2" by the width of the fabric. Stitch together to create one long strip.

• Binding (Optional Finishing Technique)

- 3/4 yard, cut 2 1/2" bias fabric strips. Stitch together at a 45-degree angle to create one long strip. Approximately 144" of binding is needed.

 **Note: Fabric yardage is based on a 11" x 15" hooping. Fabric and stabilizer amounts may vary depending on hoop size and number of tiles per hooping.**

Notions & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Perfect Embroidery Press Cloth
- OESD Expert Point and Press Tool
- OESD Button Clips
- 505 Temporary Spray Adhesive
- Ruler, rotary cutter, mat
- Contrasting bobbin thread (seam stitch only, may be different colors)
- Fabric marking pen
- Walking foot or Dual feed foot
- Embroidery Needle Sharp 75/11
- Sharp 90/14 for quilting

Isacord Thread Colors

- Per thread chart



SUMMARY



Completed Tiling Scene Size: 9" H x 51" W

13034-01



Design Size:
8.87 X 4.64 in.
Requires 1

13034-02



Design Size:
8.82 X 4.64 in.
Requires 1

13034-03



Design Size:
8.87 X 4.64 in.
Requires 1

13034-04



Design Size:
8.82 X 4.64 in.
Requires 1

13034-05



Design Size:
8.77 X 4.56 in.
Requires 2

13034-06



Design Size:
8.77 X 4.56 in.
Requires 2

13034-07



Design Size:
8.65 X 4.54 in.
Requires 2

13034-08



Design Size:
8.65 X 4.54 in.
Requires 2



General Instructions

Embroider one of each design file 13034-01 through 13034-04 and two of each design file 13034-05 through 13034-08.

Design 13034-01 is shown in the instructions.

For each hooping, cut the following 11" x 15", or large enough to hoop:

- 1 layer of background fabric
- 1 layer of OESD Fusible Woven
- 1 layer of OESD Heavy Weight TearAway

Note: To economize on fabric, cut the fabric 15" wide (or the height of the hoop + 2") x the width of the fabric. Apply the stabilizers. Move the hoop down the length of the fabric as each tile is stitched. Leave a minimum of 1 1/2" between the tiles. This is called chain hooping.

Applique technique shown is cut in place. Pre-cut applique patterns are included at the end of the instructions.

Step 1

- Apply OESD Fusible Woven to the back of the background fabric, per the product directions.



- Load the selected design into the machine.
- Example design is 13034-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Blue Fabric Placement Stitch.



- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the SoftWeb on the blue applique fabric.
- Completely cover the placement stitch with the blue applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



EMBROIDERY



□ Step 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



□ Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.



□ Step 8

- Return the hoop to the machine.
- Stitch Machine Step 3, White Fabric Placement Stitch.



EMBROIDERY



□ Step 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the SoftWeb on the white applique fabric.
- Completely cover the placement stitch with the white applique fabric.
- Tape in place to secure.



□ Step 10

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.



□ Step 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



EMBROIDERY



□ Step 12

- Return the hoop to the machine.
- Stitch Machine Step 5, White Fabric Placement Stitch.



□ Step 13

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Remove the paper backing off the SoftWeb on the white applique fabric.
- Completely cover the placement stitch with the white applique fabric.
- Tape in place to secure.



□ Step 14

- Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.



A close-up photograph of a hand holding a silver and black steam iron. The iron is positioned vertically, and the hand is adjusting the steam control dial, which is marked with '0', '1', '2', and '3'. The iron is resting on a red fabric surface, and a black cord is visible in the background.

- The last color in each tile is called "Seam". This line is the guide when trimming and stitching the tiles together and needs to be highly visible on the back side of the tile. Stitch the top color in a thread that blends with the fabric.
- For the bobbin, use a color that contrasts sharply with the back of the tile.



- After embroidery is complete, press each tile face down on an OESD Perfect Embroidery Press Cloth.
- Write the number of the tile on the back so it is easily identified during construction! Use a pen or pencil that will not bleed through to the front side.




✍ Note: Using the Perfect Embroidery Press Cloth when pressing your design helps prevent the stitches from becoming crushed and absorbs steam for a perfectly pressed finish.

EMBROIDERY




□ Step 22

- Arrange the tiles in the layout for the scene.

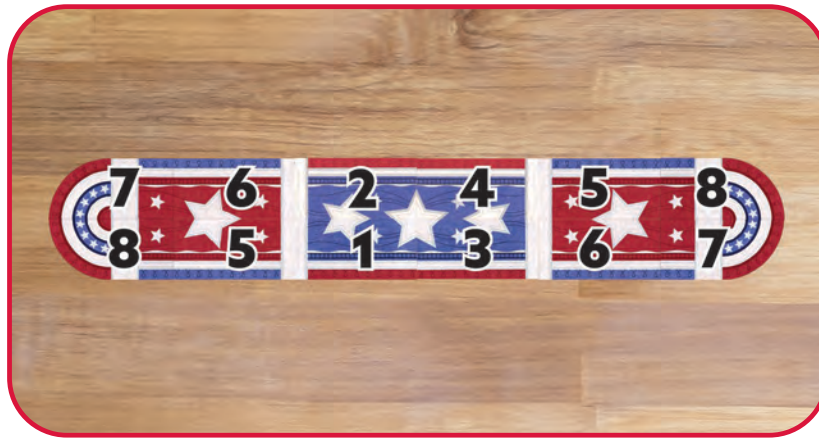

□ Step 23

- Stitch two adjacent tiles, right sides together; matching the long top and bottom sides together. Align the edges and stitch just inside of the seam line.
- If the seams or major points of matching do not match up, try stitching that part first. Check for accuracy.
- Repeat until all the tiles have been paired.

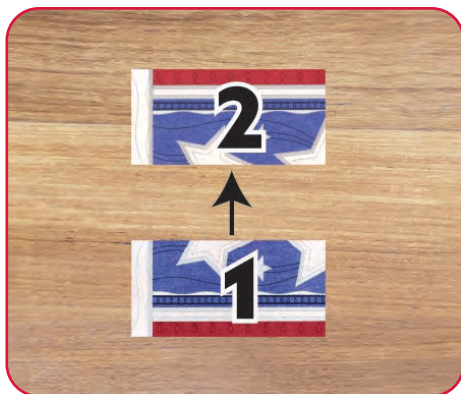


EMBROIDERY



□ Step 24


- Press each seam open.
- While warm, open the seam allowance with the large ball of the OESD Expert Point and Press Tool.
- Press again and allow to cool.
- Once cool, remove the excess stabilizer in the seam allowance.
- Do not remove excess stabilizer from inside the seam line.

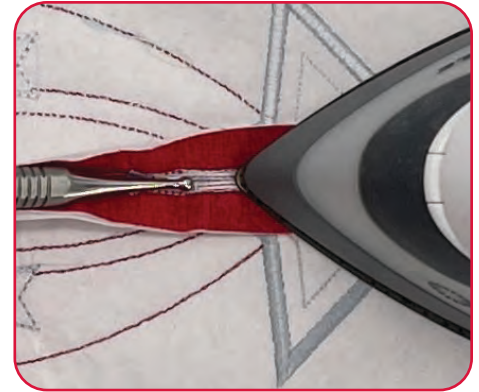

✓ **Note: If the seams do not come apart easily, press both seam allowances to one side using steam and a cotton or linen setting.**

□ Step 25

- Lay out the pressed tiles.
- Pair the tiles in groups of 4, connecting the columns.
- Align the center seams.
- Stitch just inside the seam line, connecting all four tiles.
- Press seams open.
- Repeat for remaining pairs of tiles.

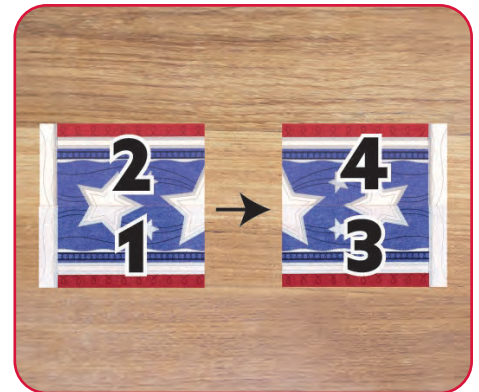

FINISHING



There are multiple ways to finish table runners. Two options are shown below.

Option 1: Stitch and Turn

 **Note:** This finishing method features a Patriotic Table Runner that uses two each of designs 13034-07 and 13034-08 which makes a smaller table topper.

Step 27

- Use the pieced table runner as a pattern for the back and batting pieces.
- Trace the outline of the table runner onto the wrong side of the backing fabric and batting.
- Cut out.



FINISHING



□ Step 28

- Layer the backing (right side up), the table runner (right side down), with the batting on top.



□ Step 29

- Sew around the outside of the table runner with a 1/2" seam allowance. Leave a 6" opening along one long edge for turning it right side out.



- Clip the curves.
- Turn the table runner right side out through the 6" opening.
- Use the Expert Point and Press Tool to smooth out the seams.



- Press the table runner on a Perfect Embroidery Press Cloth.
- Press the seam allowance of the opening inwards and hold in place with button clips.




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

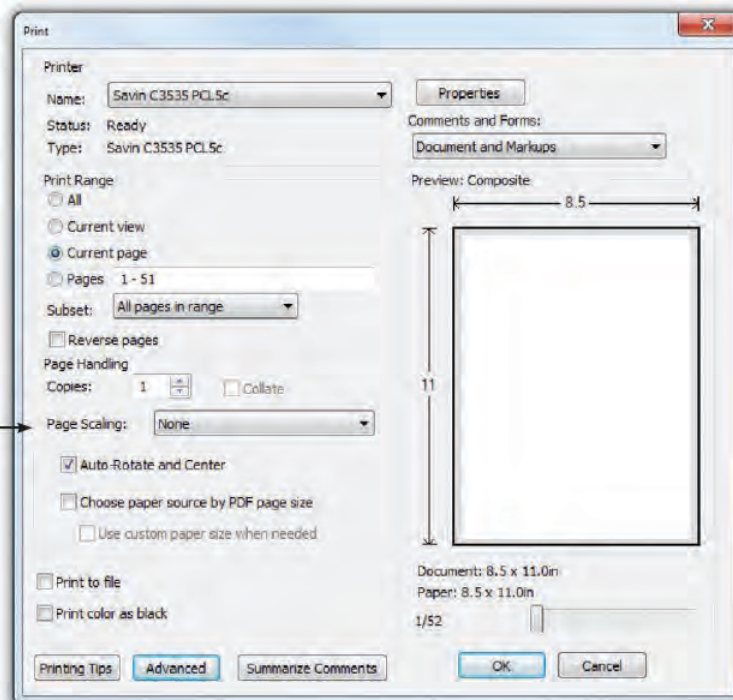

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

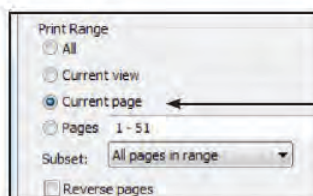

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

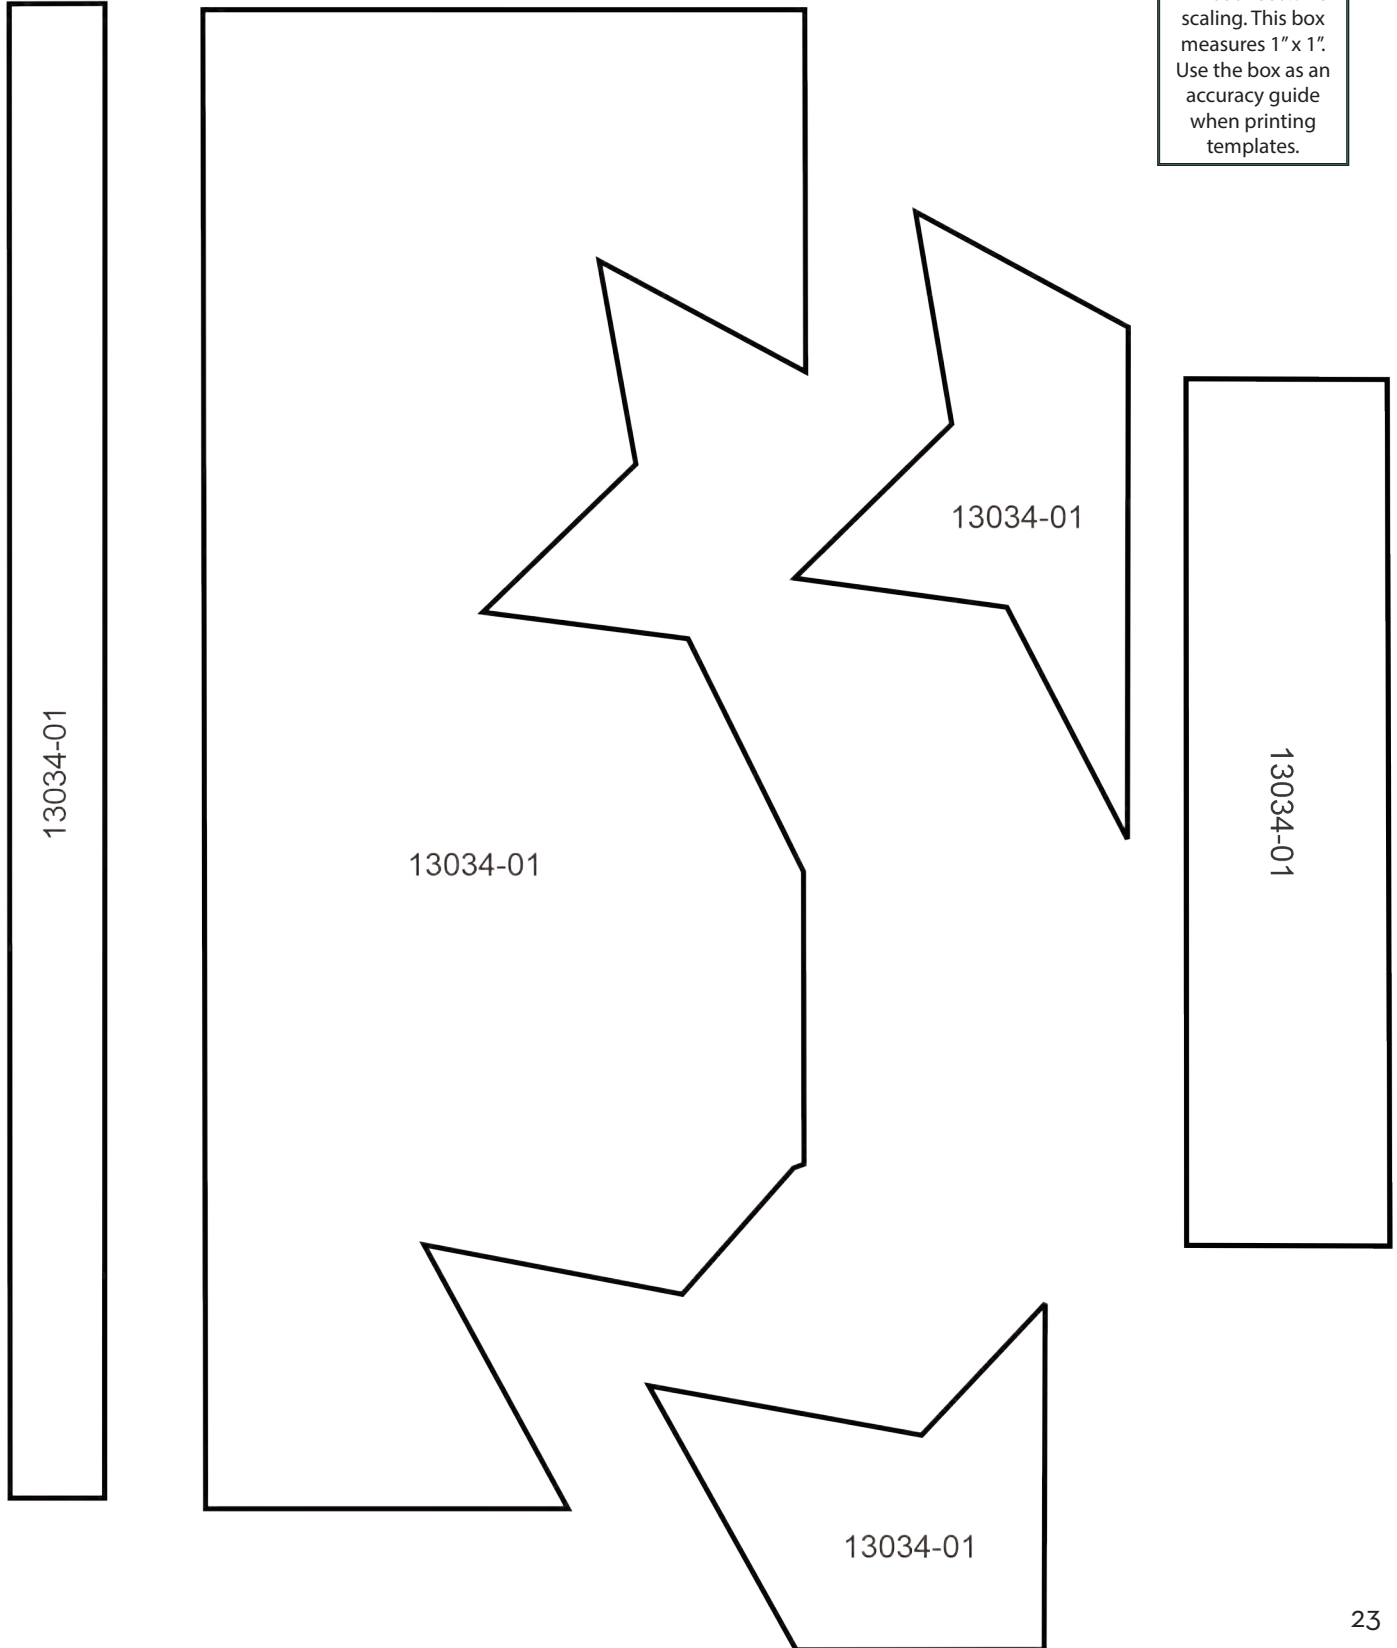

APPLIQUE PATTERNS






Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

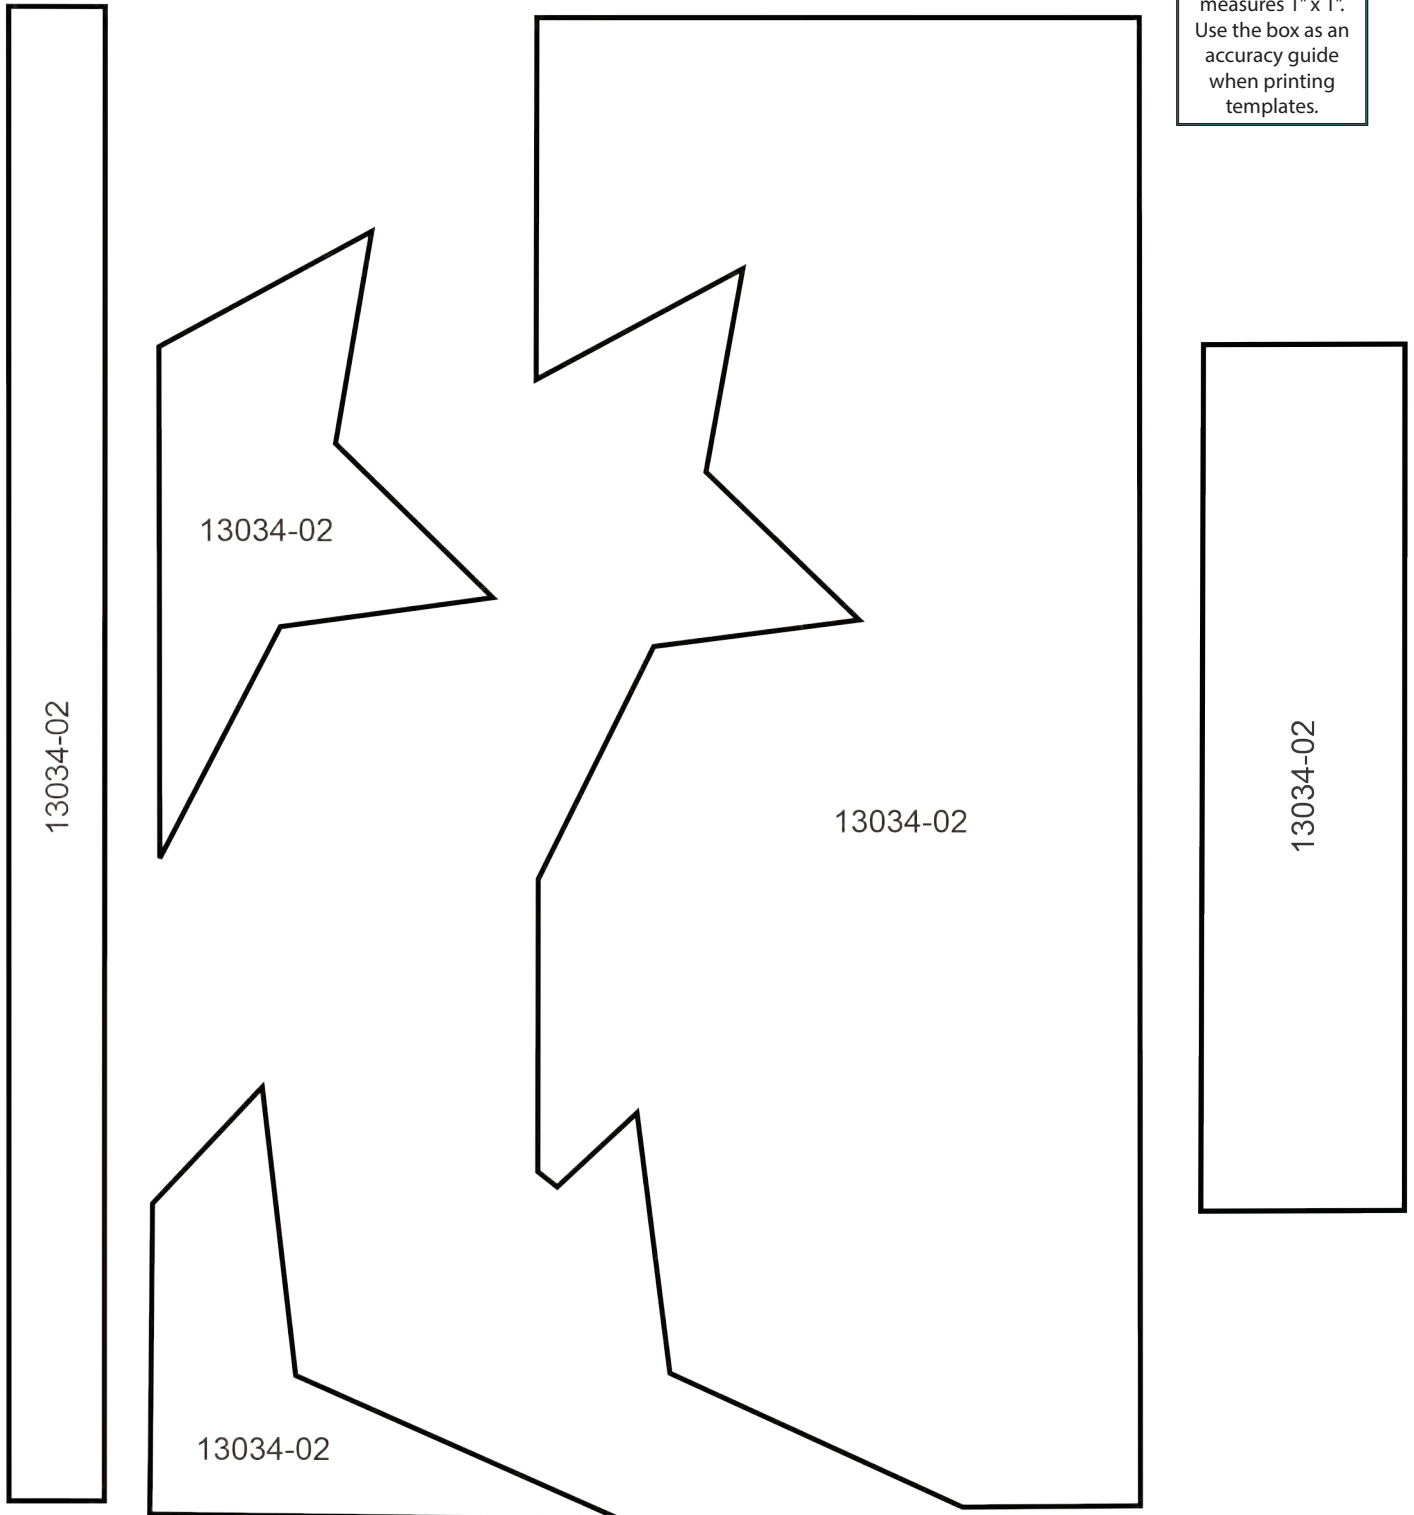

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

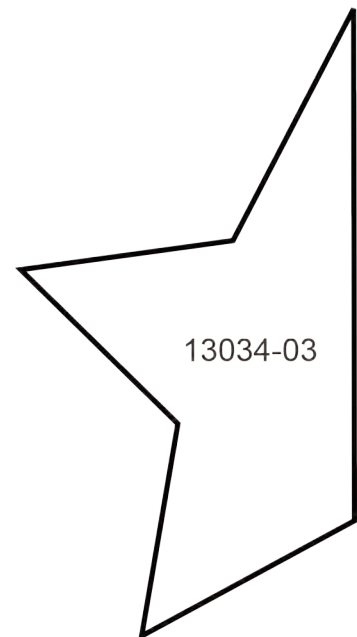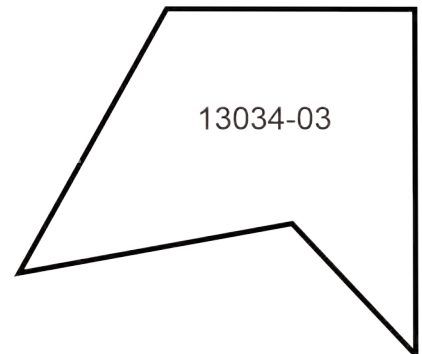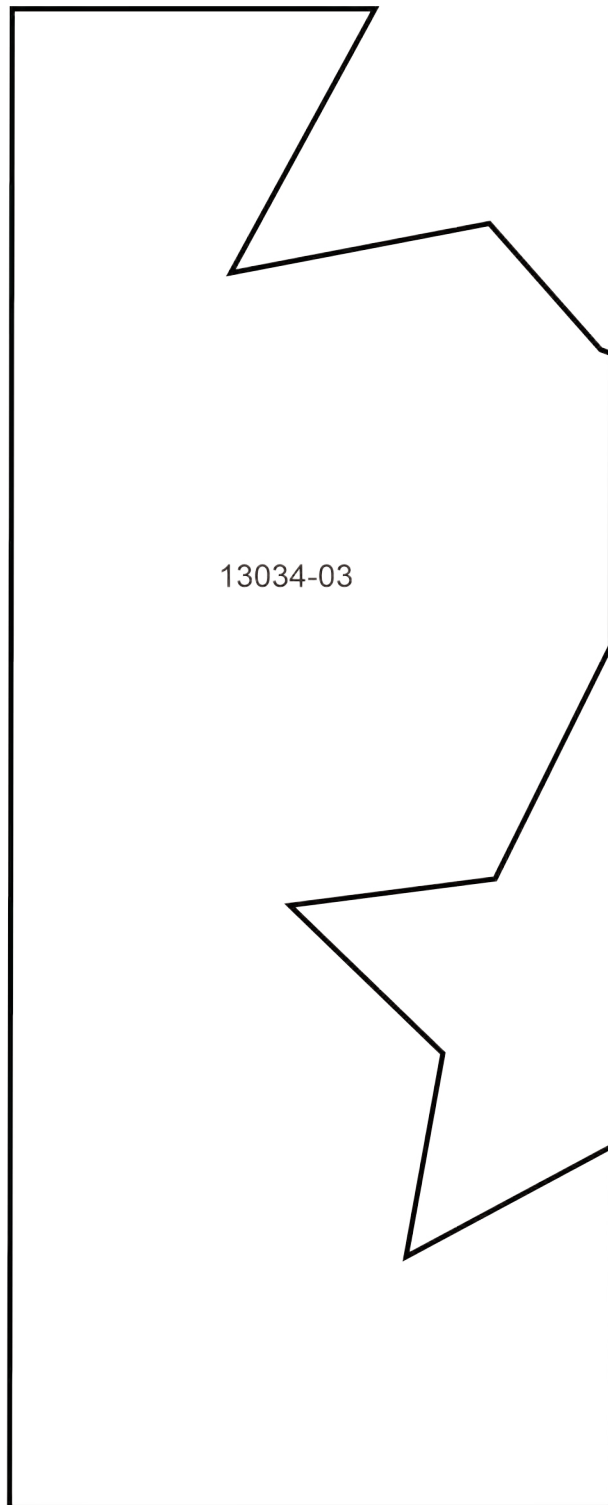


APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

13034-03

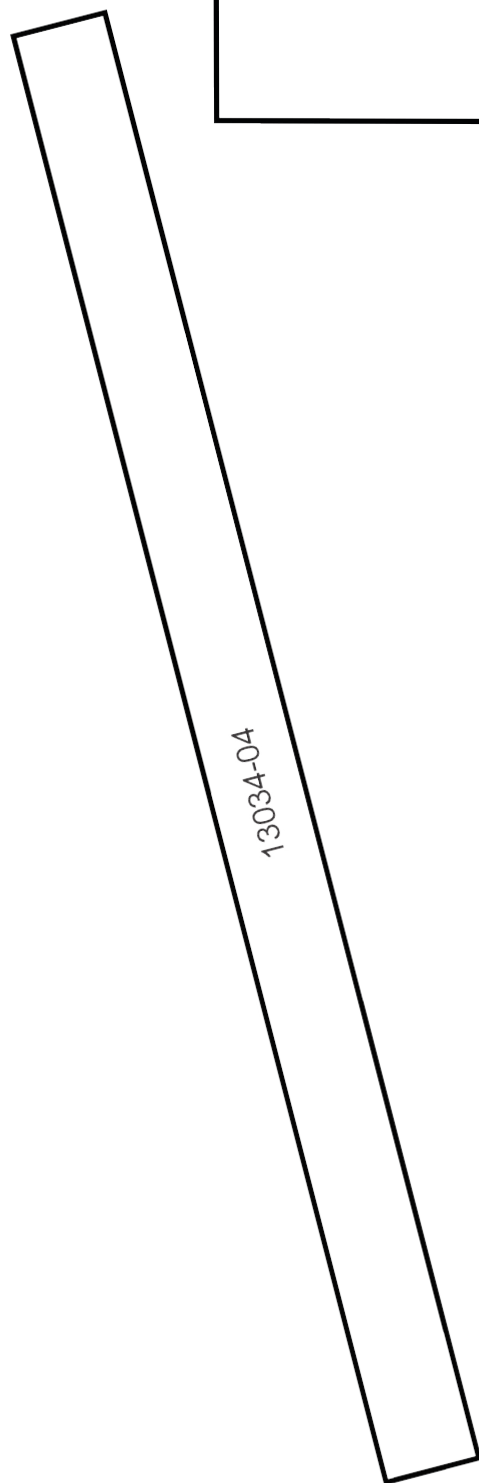



13034-04

13034-04

APPLIQUE PATTERNS






Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

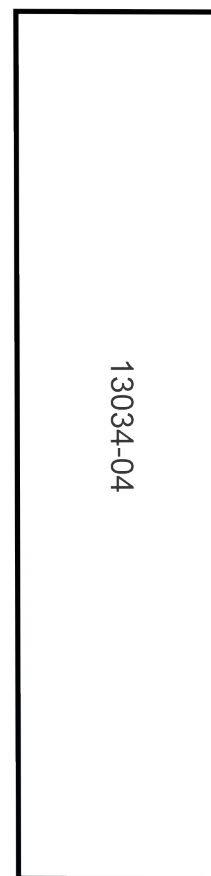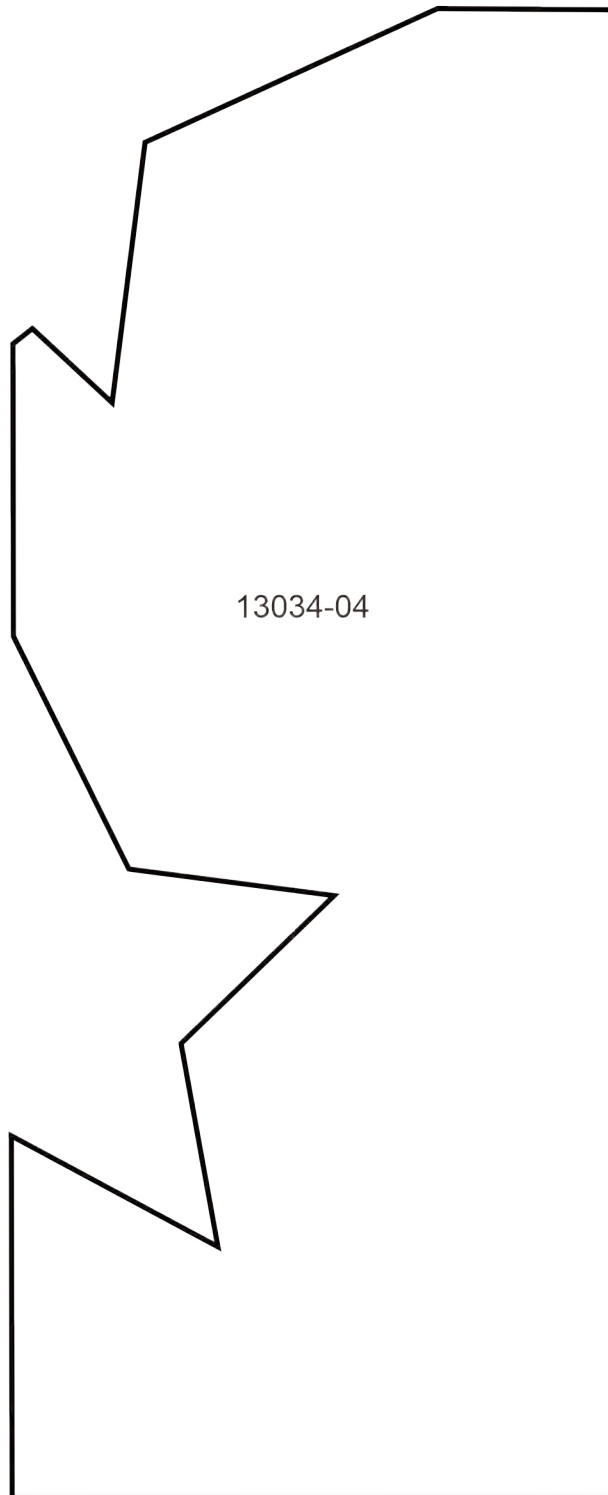

APPLIQUE PATTERNS






Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

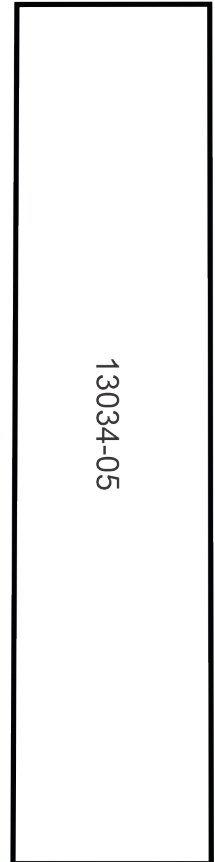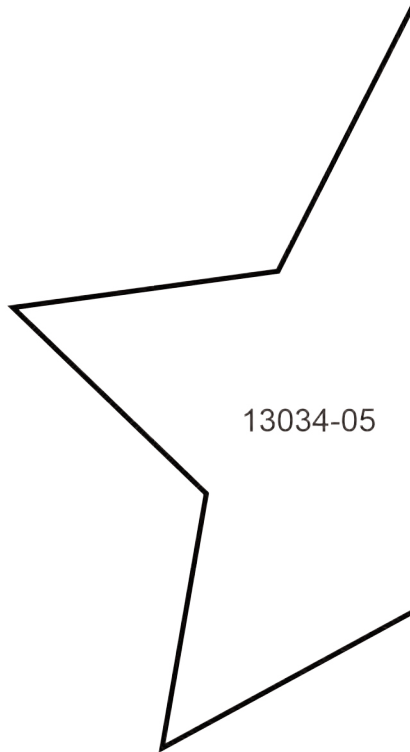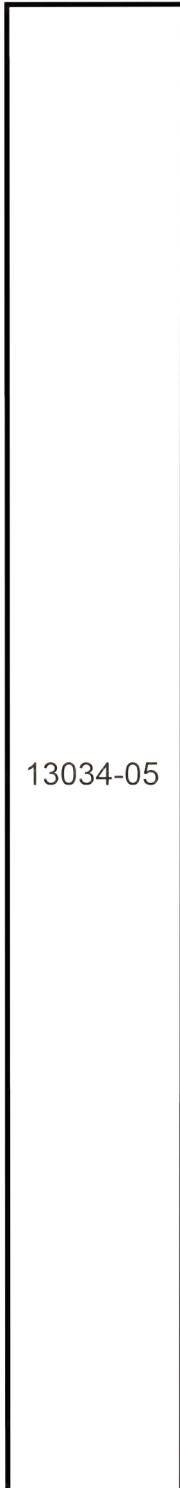

APPLIQUE PATTERNS






Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

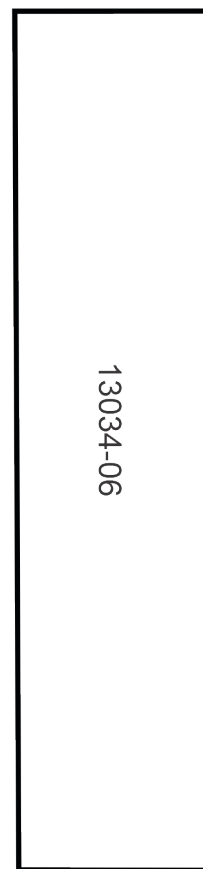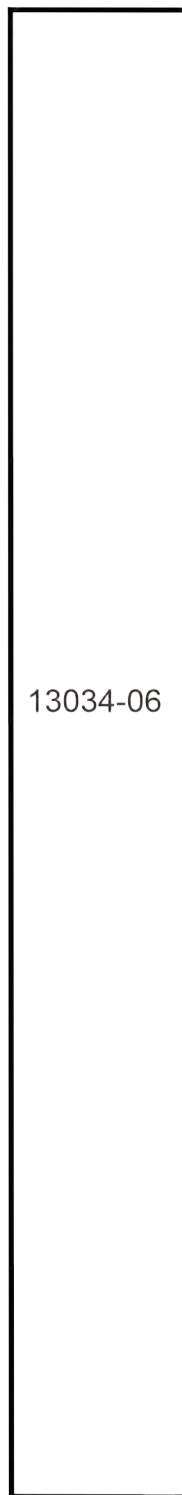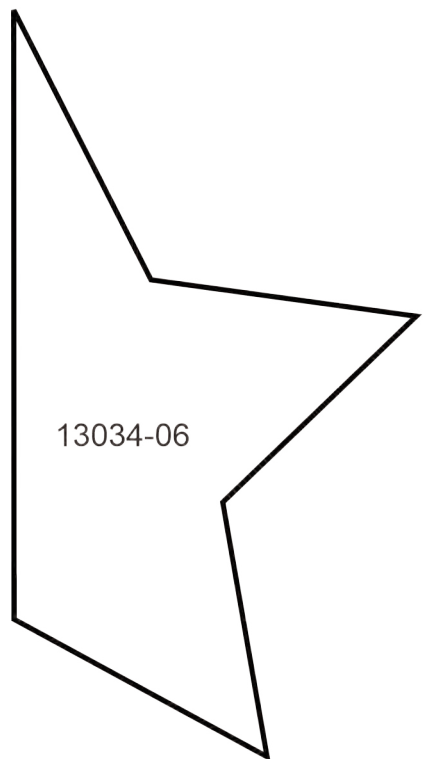

APPLIQUE PATTERNS








Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

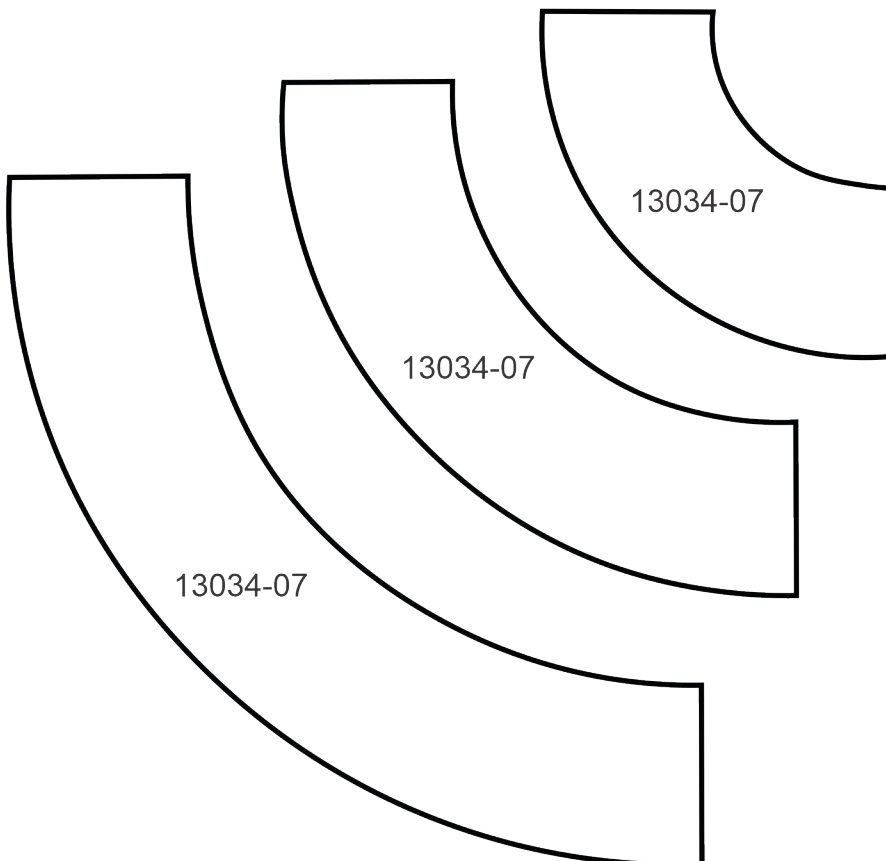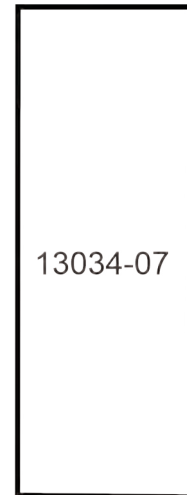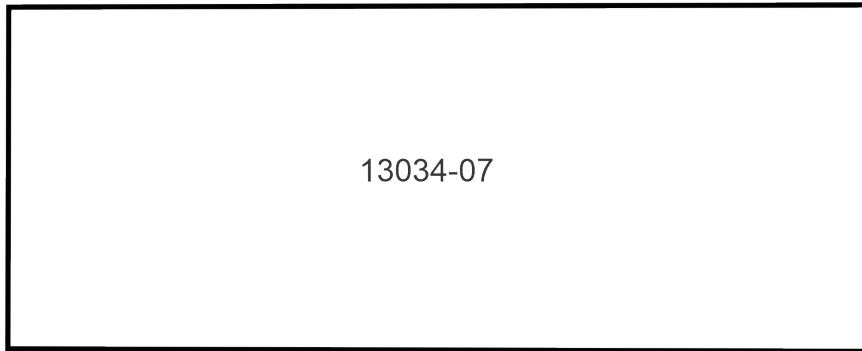

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

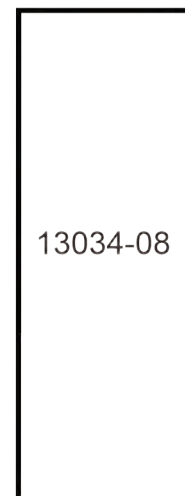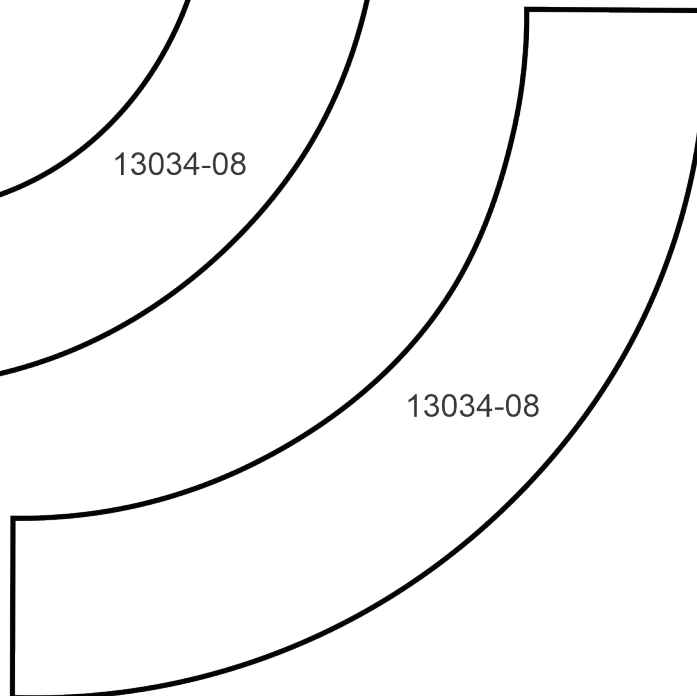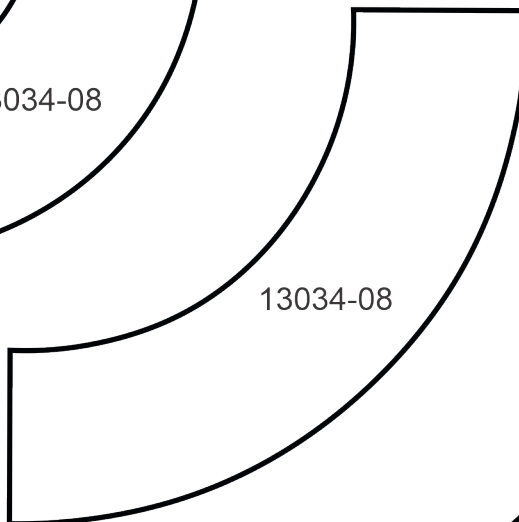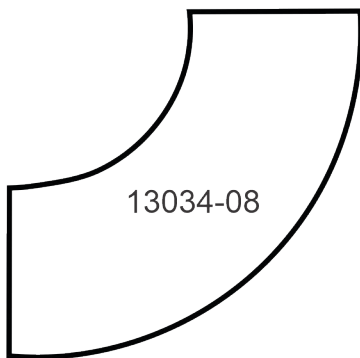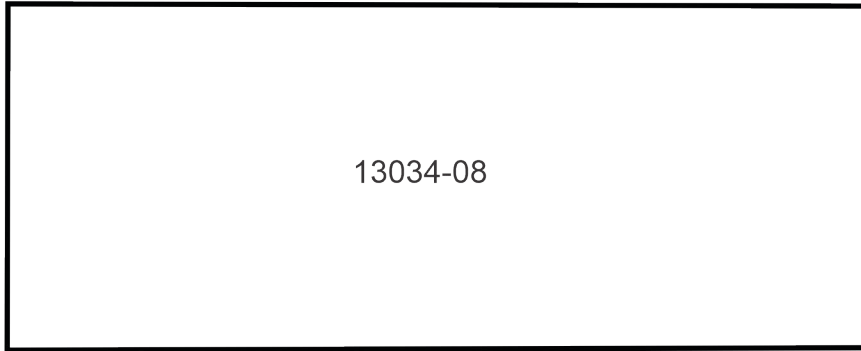

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

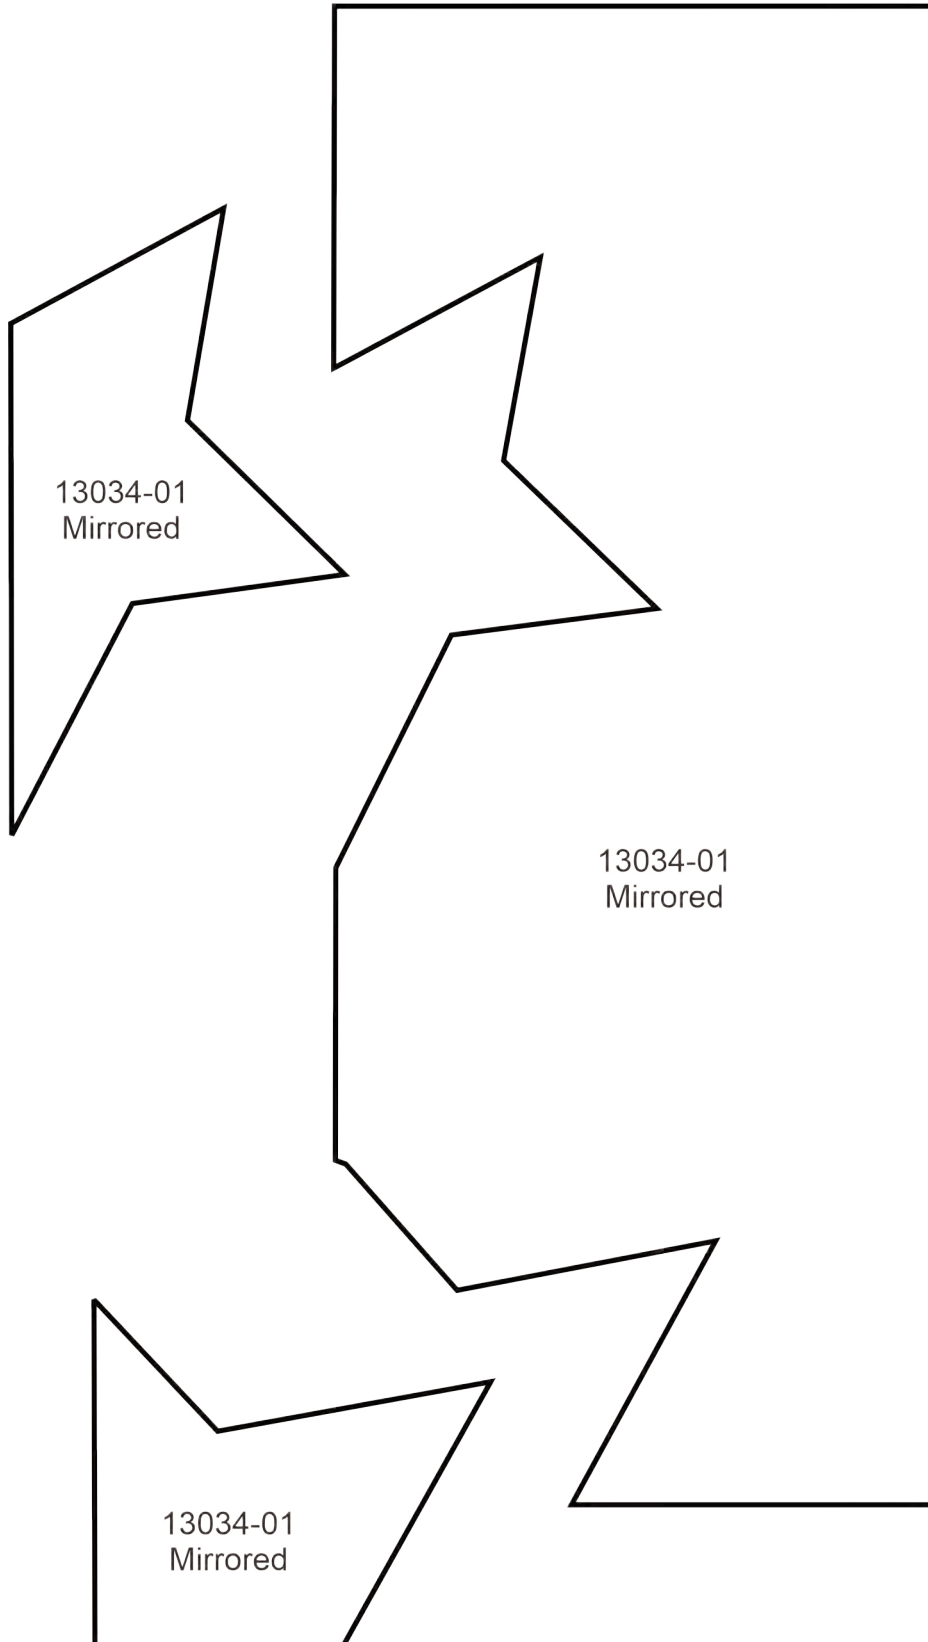

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

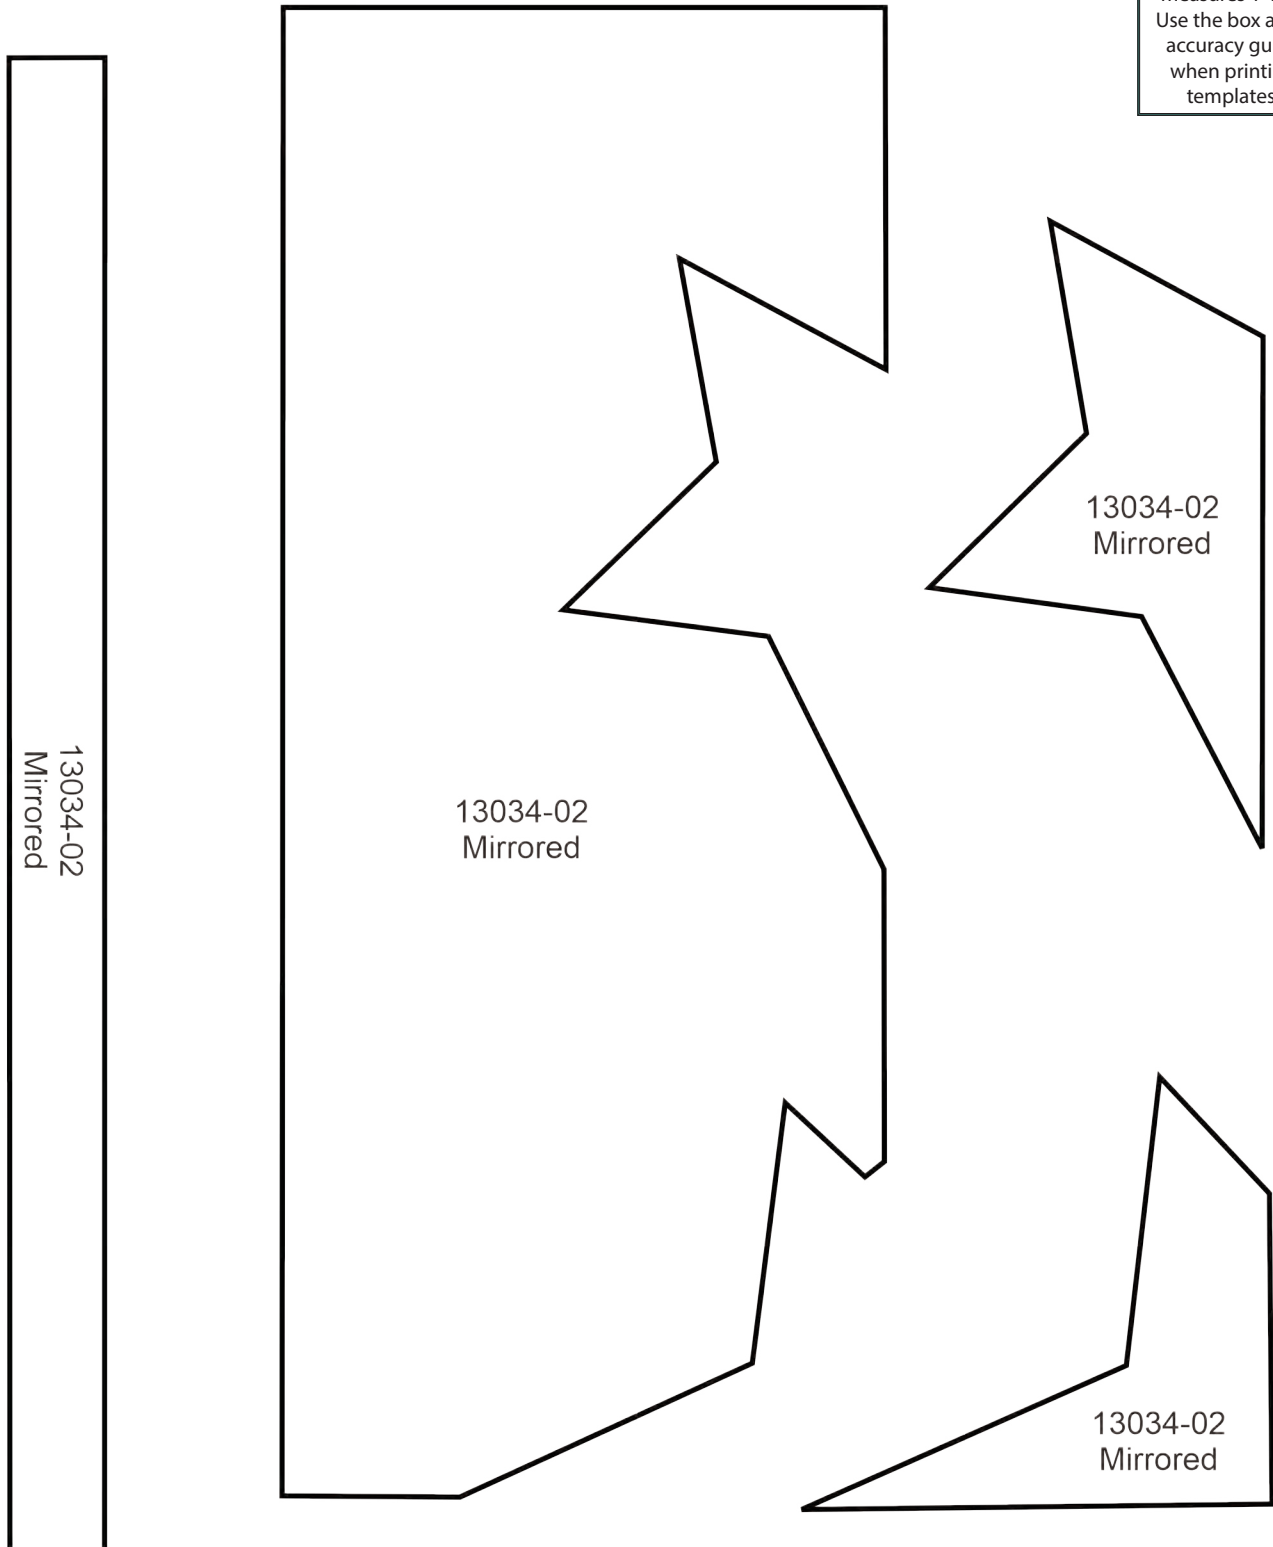

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

13034-02
Mirrored

13034-03
Mirrored


13034-03
Mirrored

13034-03
Mirrored

MIRRORED PATTERNS






Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

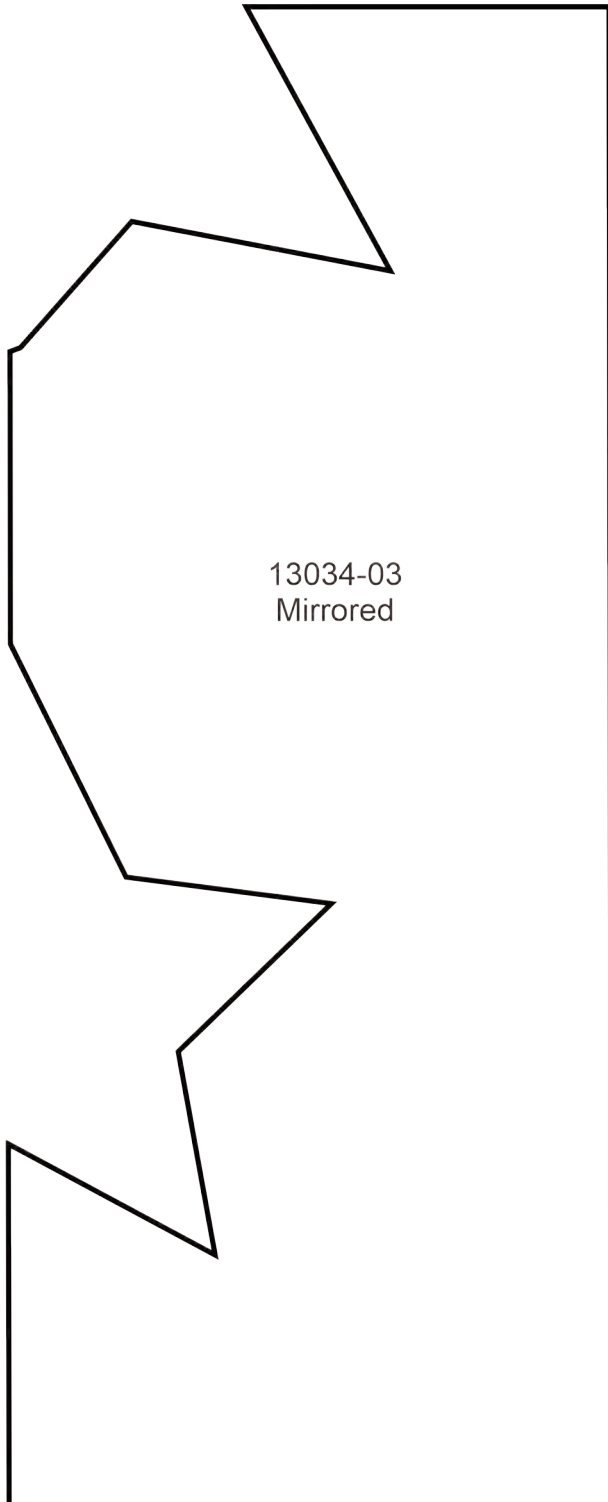

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

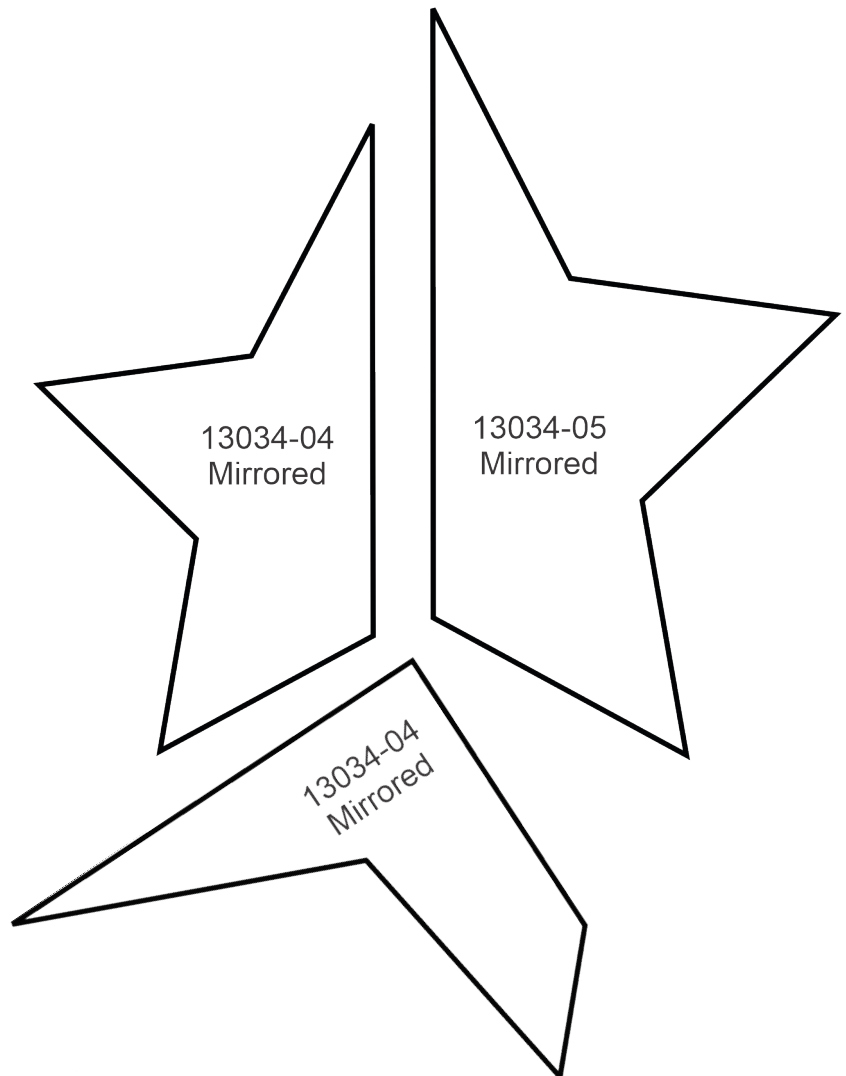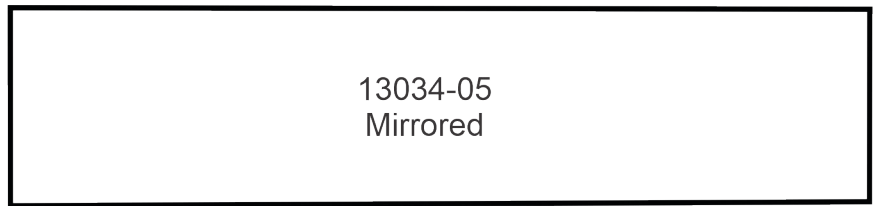

MIRRORED PATTERNS







Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

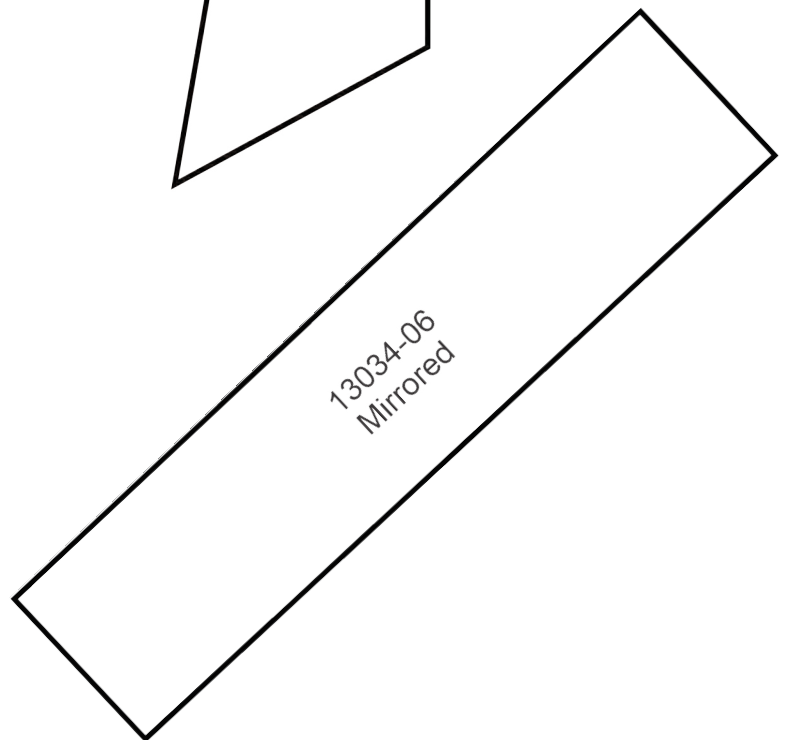

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

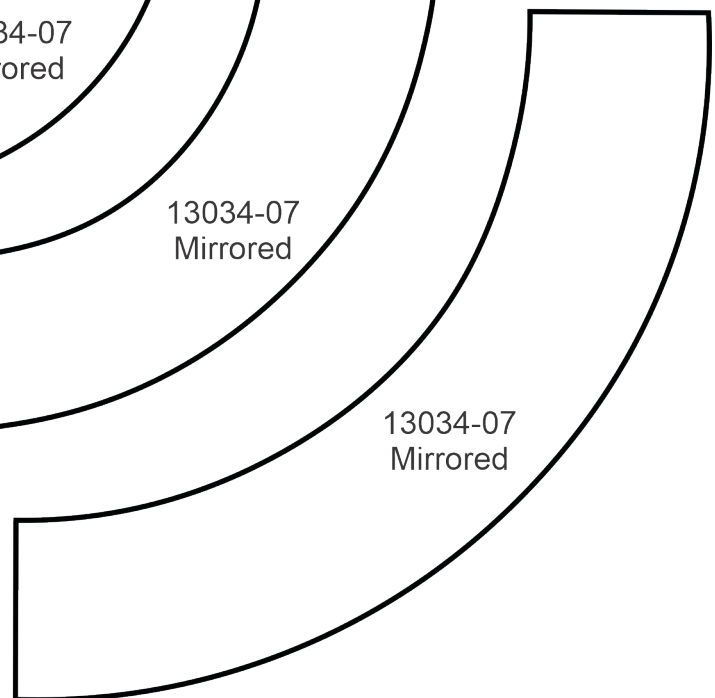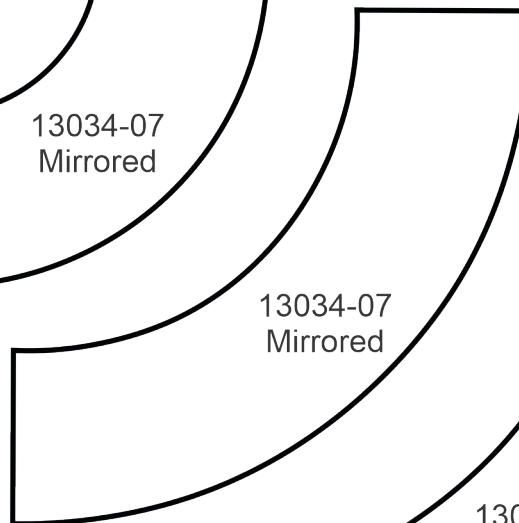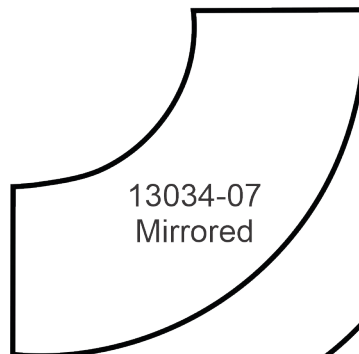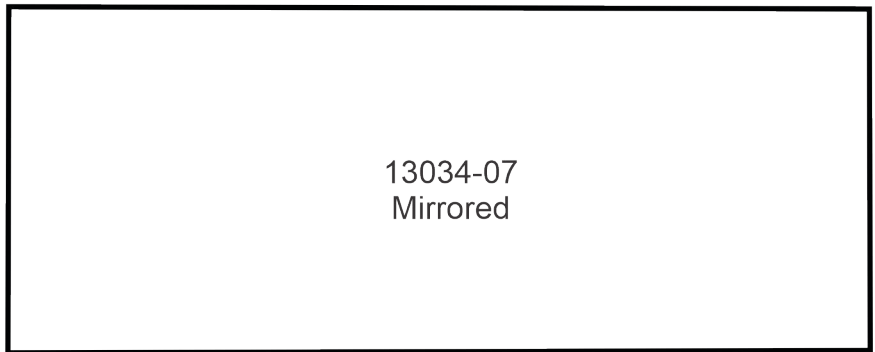

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

13034-08
Mirrored


13034-08
Mirrored

13034-08
Mirrored

13034-08
Mirrored

13034-08
Mirrored

13034-08
Mirrored

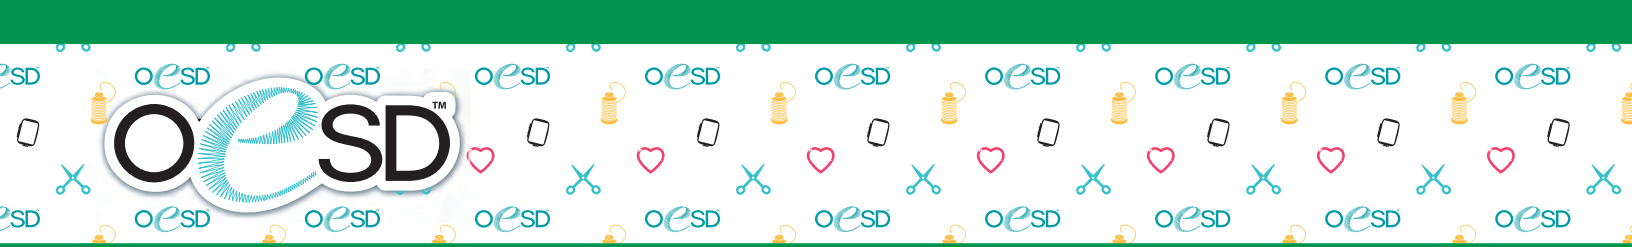

Lucky Bag Charms



Collection No. PK10154
8 Designs

Isacord Thread Colors

0010 Silky White
0020 Black
0101 Eggshell
0230 Easter Dress
0311 Canary
0504 Mimosa
0640 Parchment
0660 Vanilla
0670 Cream
0702 Papaya
0824 Liberty Gold
0904 Spanish Gold
1301 Paprika
1903 Lipstick
2113 Cranberry
3522 Blue
5415 Irish Green
5510 Emerald
5832 Celery

 **Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**

Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway (Optional)

Fabrics/Textiles

- OESD Favorite Felt, Light Yellow
- OESD Favorite Felt, Green
- OESD Favorite Felt, Red
- OESD Favorite Felt, Cream
- OESD Favorite Felt, Navy

Notion & Tools

- | | |
|--|---------------------------------|
| • OESD Grippy Grid | • OESD Perfect Punch Tool |
| • OESD Expert Embroidery Tape TearAway | • OESD MiniMat |
| • OESD Expert Embroidery Tape WashAway | • Embroidery Needle Sharp 75/11 |
| • OESD Perfect Embroidery Press Cloth | |

Thread Colors

- Per thread chart



SUMMARY



PK10154-01




Design Size:
1.40 X 3.05 in.

PK10154-02



Design Size:
3.09 X 2.31 in.

PK10154-03

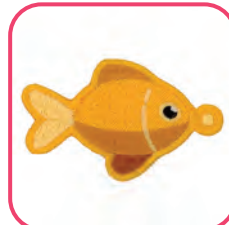

Design Size:
1.97 X 3.08 in.

PK10154-04



Design Size:
2.56 X 2.22 in.

PK10154-05



Design Size:
2.58 X 2.71 in.

PK10154-06



Design Size:
2.90 X 1.83 in.

PK10154-07



Design Size:
2.70 X 2.04 in.

PK10154-08



Design Size:
2.66 X 2.27 in.

GENERAL INSTRUCTIONS


The freestanding applique (FSA) instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design PK10154-04 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique technique shown is cut in place. Pre-cut applique patterns are included at the end of the instructions.

 **Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.**

Step 1


- Cut the applique felts 1/4" - 1/2" larger than the applique patterns.

 **Optional: Adhere one layer of StabilStick CutAway to the wrong side of all applique felts to provide stiffness to the finished bag charm.**

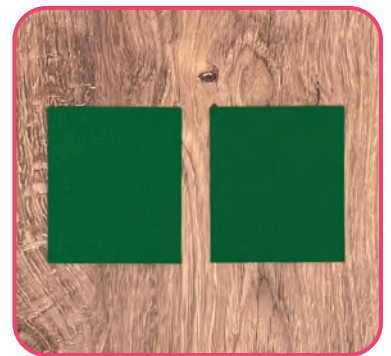

☐ Step 2

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.

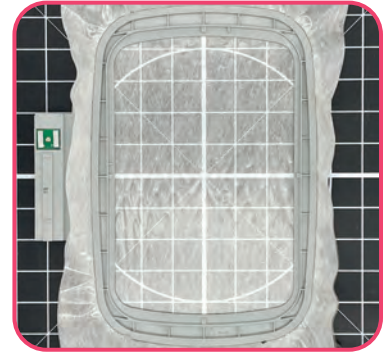

☐ Step 3

- Load the selected design into the machine.
- Example design is PK10154-04.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Green Felt Placement Stitch.



☐ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the green applique felt.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



☐ Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



☐ Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess felt as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

 **Tip: If the stabilizer is cut or a hole is created while trimming the felt, use OESD Expert Embroidery Tape WashAway as a patch.**



☐ Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Petals.
- Stitch Machine Step 4, Petals.



Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the applique felt, right side up, completely covering the stitching.
- Carefully tape to secure.

 **Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.**



Step 9

- Return the hoop to the machine.
- Stitch Machine Step 5, Back Felt Cut Line and Tackdown.



Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over. Trim the excess felt as close to the cut line as possible.



☐ Step 11

- Return the hoop to the machine.
- Stitch the Machine Step 6, Cover Stitch **with matching bobbin thread**.



☐ Step 12

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" – 1/2" outside the design.



FINISHING TOUCHES



□ Step 13

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



✍ **Note:** Using the Perfect Embroidery Press Cloth when pressing your design helps prevent the stitches from becoming crushed and absorbs steam for a perfectly pressed finish.

□ Step 14

- Use the OESD MiniMAT and the OESD Perfect Punch Tool with the 3mm attachment to create the eyelets indicated in the diagram.
- Reference the Punch Tool Guide on page 12.

🔔 **Tip:** Take care to not cut the satin stitching.



FINISHING TOUCHES




☐ Step 15

- Attach a key ring.
- The project is complete. Enjoy!



PUNCH TOOL GUIDE

PK10154-01

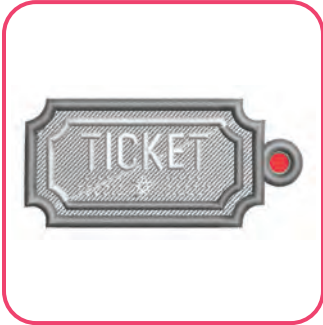

PK10154-02



PK10154-03



PK10154-04



PK10154-05



PK10154-06



PK10154-07



PK10154-08



● = 2 MM

● = 3 MM

● = 4 MM

CRAFT KNIFE




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

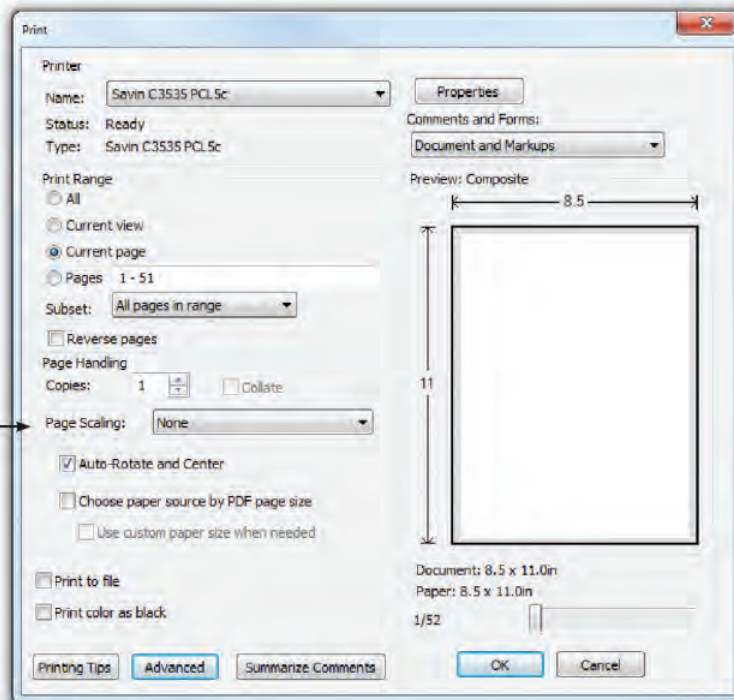

TO SAVE PAPER



Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

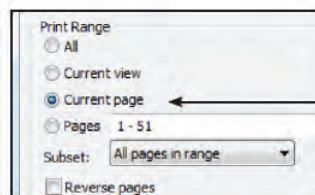

APPLIQUE PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

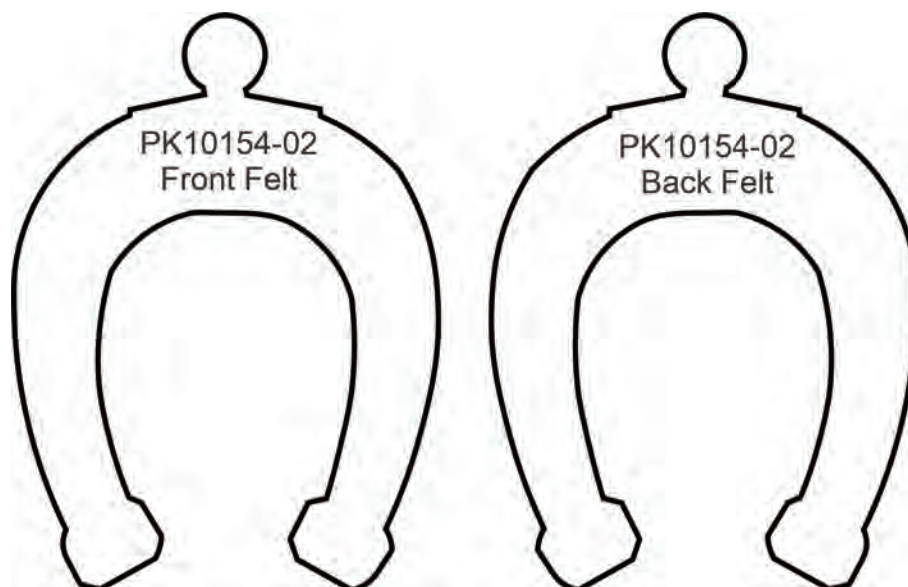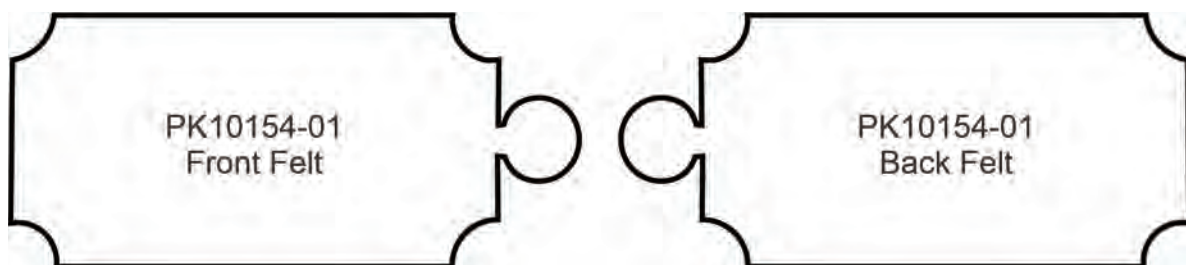

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

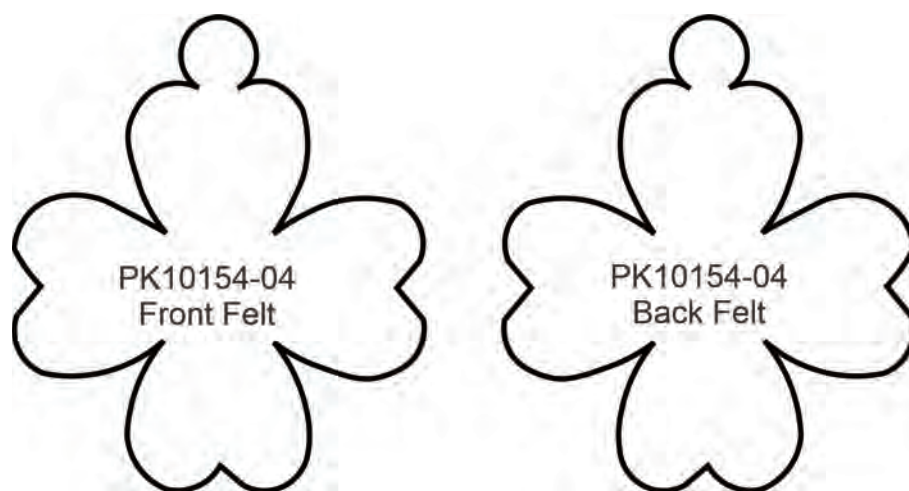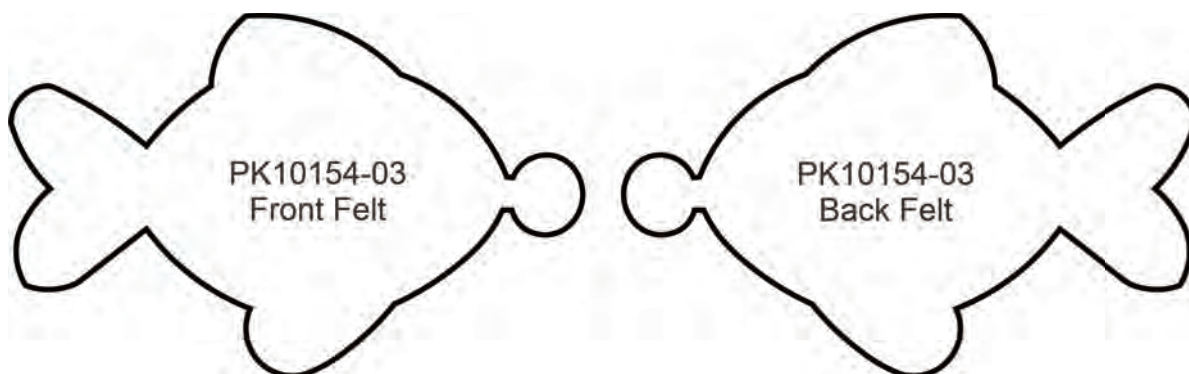

APPLIQUE PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

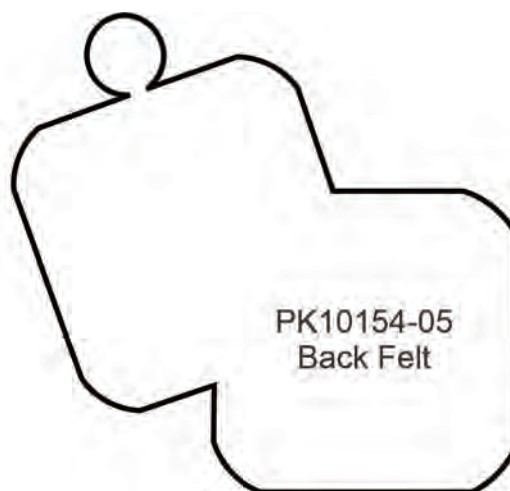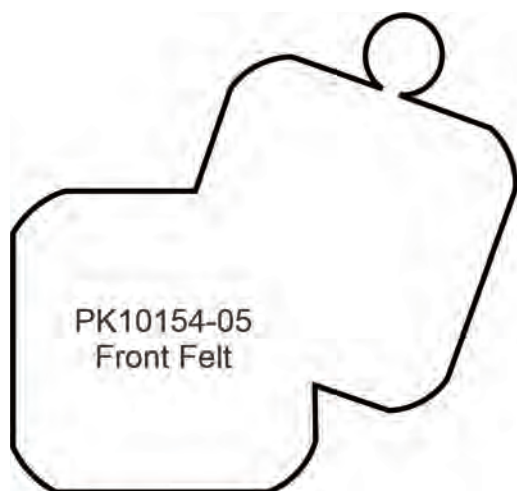

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

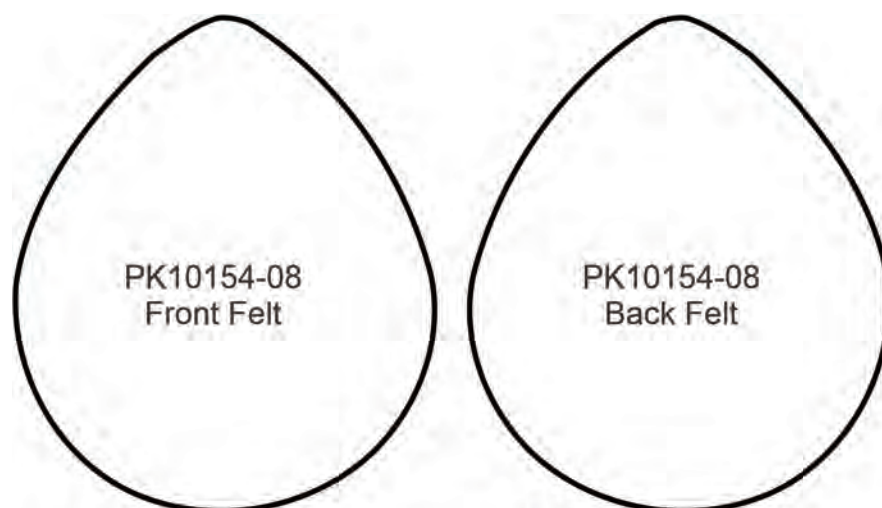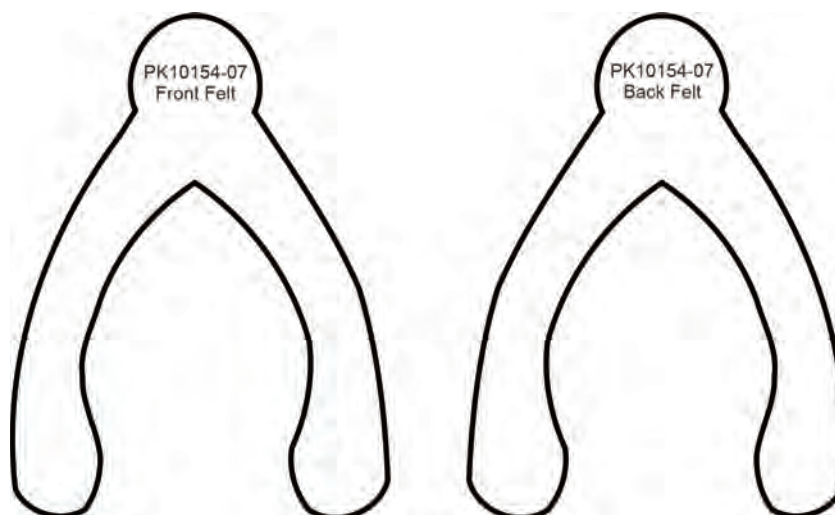

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

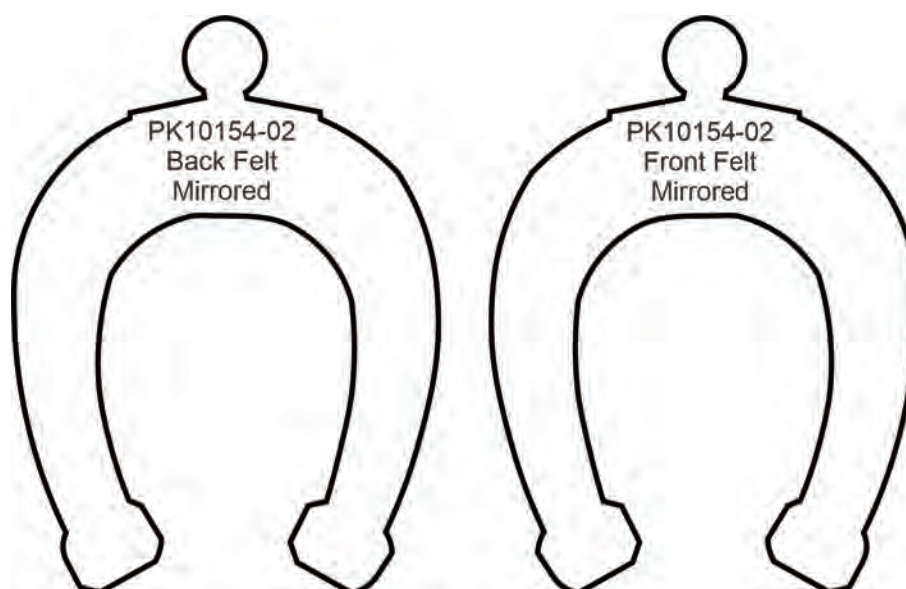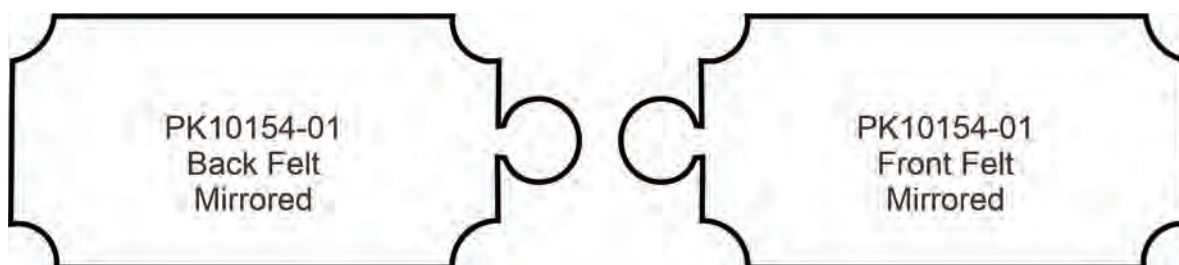

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

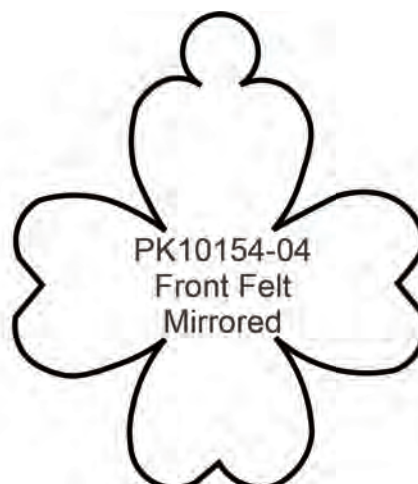

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

