



#51206
6 DESIGNS



HALLOWEEN MINKEE MISFITS COLLECTION

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2019 OESD, LLC. All rights reserved.

MATERIALS



Isacord Thread Colors

0015 White
0017 Paper White
0020 Black
1032 Bronze
1102 Pumpkin
1321 Dark Orange

1840 Corsage
2155 Pink Tulip
2810 Orchid
2912 Sugar Plum
3040 Lavender
3110 Dark Ink

3130 Dawn of Violet
3150 Stainless
4174 Charcoal
5500 Limesdrop
5730 Apple Green

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



51206-01 Stitch 'N' Turn Ghost

Size Inches:	Size mm:	Stitch Count:
6.52 X 4.86 in.	165.6 X 123.4 mm	3704 St.

<input type="checkbox"/>	1. White Fabric Placement Stitch	0017
<input type="checkbox"/>	2. White Fabric Tackdown	0017
<input type="checkbox"/>	3. Mouth	2810
<input type="checkbox"/>	4. Tongue.....	3040
<input type="checkbox"/>	5. Cheeks	2155
<input type="checkbox"/>	6. Eyes	4174
<input type="checkbox"/>	7. Eye Highlights	0017
<input type="checkbox"/>	8. Seam.....	0015

DESIGNS






Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



51206-02 Stitch 'N' Turn Jack O' Lantern

Size Inches:	Size mm:	Stitch Count:
5.82 X 5.27 in.	147.8 X 133.9 mm	6974 St.

	1. Orange Fabric Placement Stitch	1032
	2. Orange Fabric Tackdown	1032
	3. Stem Detail.....	1032
	4. Inside Pumpkin Shading.....	4174
	5. Dark Orange Pumpkin Detail.....	1321
	6. Seam.....	1321

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



51206-03 Stitch 'N' Turn Cat

Size Inches:	Size mm:	Stitch Count:
8.07 X 4.70 in.	205.0 X 119.4 mm	6908 St.
■ 1. Black Fabric Placement Stitch.....		0020
■ 2. Black Fabric Tackdown.....		0020
□ 3. White Detail		0017
■ 4. Eyes		5730
■ 5. Nose and Ear Detail		1840
■ 6. Seam		0020

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



51206-04 Stitch 'N' Turn Candy Corn

Size Inches:	Size mm:	Stitch Count:
6.48 X 4.86 in.	164.6 X 123.4 mm	4573 St.

1.	Orange Fabric Placement Stitch	1102
2.	Orange Fabric Cut Line and Tackdown	1102
3.	White Fabric Placement Stitch	1102
4.	White Fabric Cut Line and Tackdown	1102
5.	Yellow Fabric Placement Stitch	1102
6.	Yellow Fabric Cut Line and Tackdown	1102
7.	Cover Stitches	1102
8.	Mouth	3110
9.	Tongue	3130
10.	Face Detail	0020
11.	Seam	1102

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



51206-05 Stitch 'N' Turn Owl

Size Inches:	Size mm:	Stitch Count:
7.31 X 5.12 in.	185.7 X 130.0 mm	8878 St.

■ 1.	Light Purple Fabric Placement Stitch	1321
■ 2.	Light Purple Cut Line and Tackdown	1321
■ 3.	Orange Fabrics Placement Stitch.....	1321
■ 4.	Orange Fabrics Cut Line and Tackdown	1321
■ 5.	Cover Stitch and Beak.....	1321
■ 6.	Chest Detail.....	2912
□ 7.	Eyes	0017
■ 8.	Pupils.....	5730
■ 9.	Eye Outlines and Brows.....	0020
■ 10.	Seam.....	3150

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



51206-06 Stitch 'N' Turn Spider

Size Inches: **5.85 X 4.15 in.** Size mm: **148.6 X 105.4 mm** Stitch Count: **3627 St.**

■	1. Black Fabric Placement Stitch.....	0020
■	2. Black Fabric Tackdown.....	0020
□	3. Eyes	0017
■	4. Pupils.....	5500
■	5. Rick Rack Placement Stitches	0020
■	6. Rick Rack Tackdowns	0020
■	7. Seam.....	0020

MATERIALS



Stabilizer

- OESD PolyMesh CutAway
- OESD StitcH2O WashAway

Fabric/Notions

- Please see instructions for individual designs for fabric requirements.
- Minkee
- Rick Rack
- Expert Embroidery Tape TearAway
- 505 Temporary Spray Adhesive
- Isacord thread
- Embroidery Machine
- Embroidery Scissors
- Polyester Fiberfill
- Hand Needle
- OESD Expert Embroidery Point and Press Tool


INSTRUCTIONS

51206-01, 51206-02, 51206-03



Step 1

- **Fabric Requirement:**
(2) 8" x 6.5" pieces of Minkee fabric in desired color.
- Hoop one layer of OESD PolyMesh CutAway stabilizer.
- Stitch the first color called Placement Stitch. Use a thread color that blends with your fabric choice.

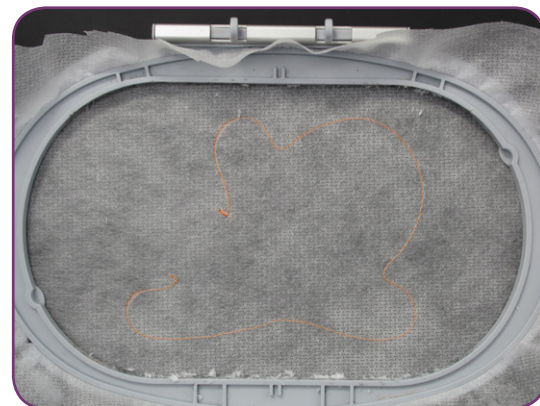

Step 2

- Place the fabric (8" x 6.5") right side up onto the stabilizer, completely covering the Placement Stitch.



Step 3

- Lay the StitchH2O topper over the fabric and tape in place with Expert Embroidery Tape TearAway.
- Raise the presser foot if possible to accommodate the added loft of the fabric. If not, slow the machine speed.
- Stitch the second color, the Tackdown Stitch.



INSTRUCTIONS

51206-01, 51206-02, 51206-03



Step 4

- Stitch the next few colors until you get to the seam stitch.




Step 5

- Place the second piece of fabric right side down directly over the first piece.



Step 6

- Stitch the final color, again using the first thread color, called Seam - Match Top Fabric (For visual purposes we used a bright color so you could see the seam).

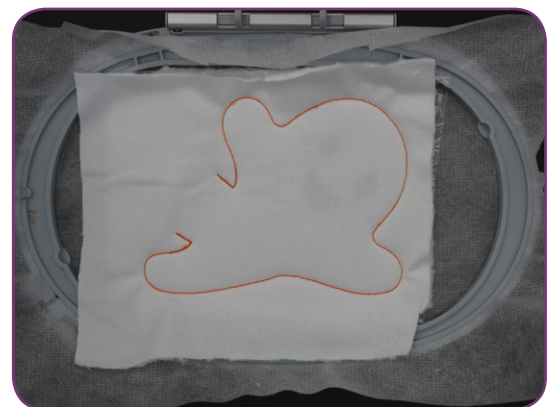

INSTRUCTIONS

51206-01, 51206-02, 51206-03



Step 7

- Remove the hoop from the machine and the fabric from the hoop.
- Using scissors, carefully cut out the stitch 'n' turn project close to the stitching line. Cut around the stitches at the opening to create a tab.



Step 8

- Clip to seam line at corners and on curves.
- Turn the project right side out. Use Expert Point and Press Tool to turn out corners and curves.



Step 9

- Trim any jump stitches and then peel off the StitchH2O topping.
- Stuff with polyester fiberfill.
- **Note:** For a smooth project, add small pieces of fiberfill until desired fullness is reached. Use Expert Point and Press tool to move fiberfill into corners.
- Fold tabs in and slip stitch the slit closed with a hand needle, or use a narrow machine zigzag stitch.




INSTRUCTIONS

51206-04, 51206-05




Step 1

- **Fabric Requirement:**
Assorted 6" x 4" Minkee fabric in desired color. (Candy Corn takes 3 colors, Owl uses 2).
(1) 8" x 6.5" piece of Minkee in desired color for back.
- Hoop one layer of OESD PolyMesh CutAway stabilizer.
- Stitch the first color called Placement Stitch. Use a thread color that blends with your fabric choice.

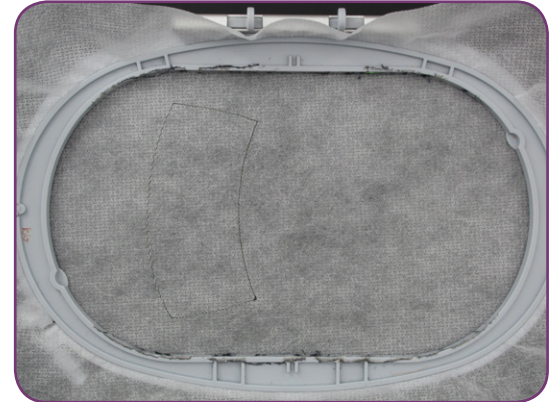


Step 2

- Cut at least a 6" x 4" piece of Minkee for the first placement stitch being sure that the Placement Stitch is covered by the fabric.

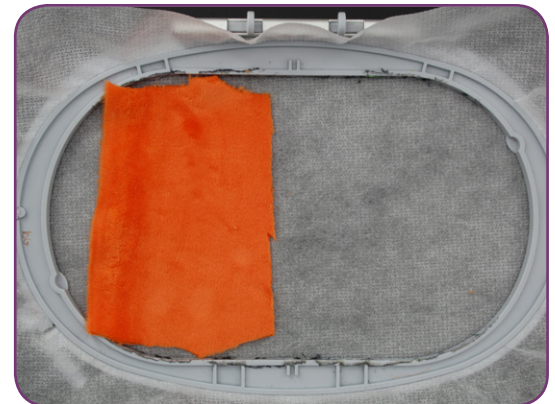

Step 3

- Lay the StitchH2O topper over the fabric and tape in place with Expert Embroidery Tape TearAway.
- Raise the presser foot if possible to accommodate the added loft of the fabric. If not, slow the machine speed.
- Stitch the second color, the Tackdown Stitch.

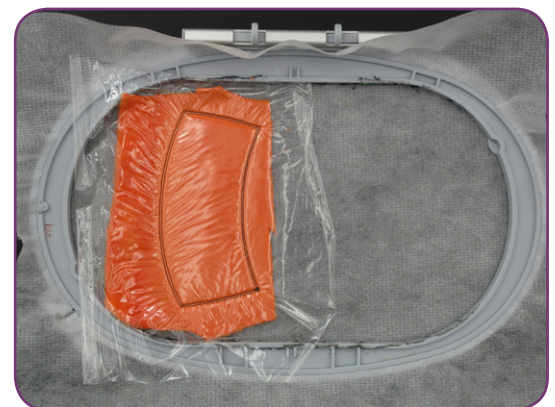


INSTRUCTIONS

51206-04, 51206-05




Step 4

- Only trim the center fabric next to the cut line and tackdown stitch. DO NOT TRIM OUTSIDE OF THE DESIGN UNTIL ALL IS FINISHED.

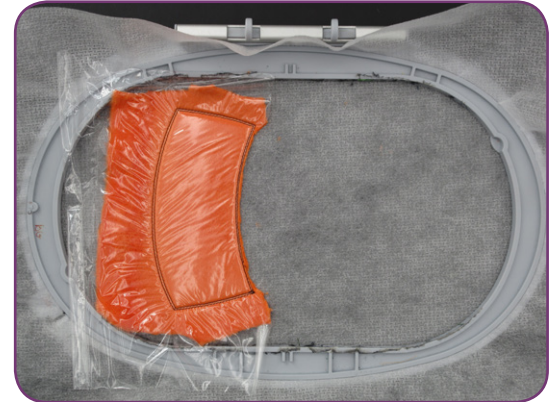

Step 5

- Continue the same process for the next two steps.
- Sew Placement Stitch, cover with fabric, place (OESD StitcH20) topping over and sew tackdown and cutline stitch and only trim the the center. DO NOT TRIM OUTSIDE OF DESIGN UNTIL ALL IS FINISHED.

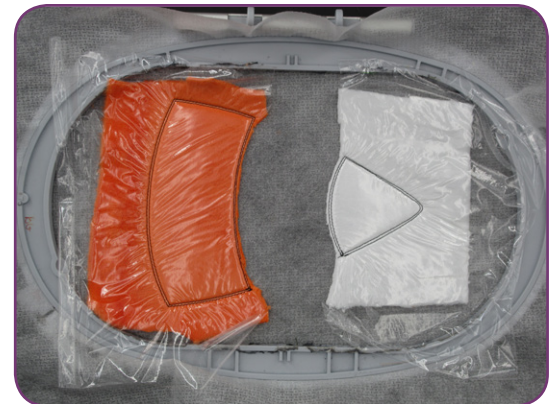

Step 6

- Continue the same process for the next two steps.
- Sew Placement Stitch, cover with fabric, place (OESD StitcH20) topping over and sew tackdown and cutline stitch and only trim the the center. DO NOT TRIM OUTSIDE OF THE DESIGN UNTIL ALL IS FINISHED.



INSTRUCTIONS

51206-04, 51206-05



Step 7

- Make sure the middle color is trimmed close to the cut line and tackdown stitch then sew the cover stitch. Then stitch the rest of the colors on the front of the design until you get to the seam.




Step 8

- Place the second piece of fabric right side down directly over the first piece.



Step 9

- Stitch the final color, again using the first thread color, called Seam - Match Top Fabric. (For visual purposes we used a bright color so you could see the seam)

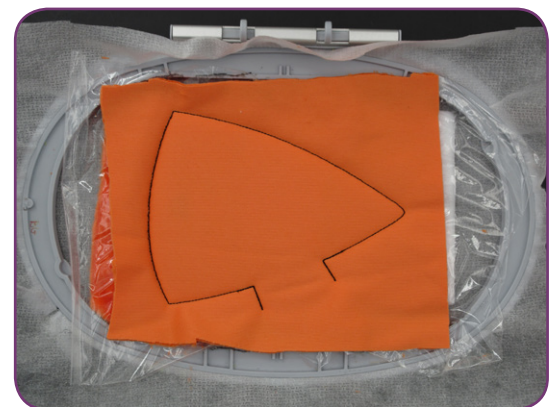

INSTRUCTIONS

51206-04, 51206-05



Step 10

- Remove the hoop from the machine and the fabric from the hoop.
- Using scissors, carefully cut out the stitch 'n' turn project close to the stitching line. Cut around the stitches at the opening to create a tab.



Step 11

- Clip corners as needed.
- Turn the project right side out. Use Expert Point and Press Tool to turn out corners and curves.



Step 12

- Trim any jump stitches and then peel off the StitchH2O topping.
- Stuff with polyester fiberfill.
- **Note:** For a smooth project, add small pieces of fiberfill until desired fullness is reached. Use Expert Point and Press tool to move fiberfill into corners.
- Fold tabs in and slip stitch the slit closed with a hand needle, or use a narrow machine zigzag stitch.




INSTRUCTIONS

51206-06




Step 1

- **Fabric Requirements:**
(2) Pieces 7.5" x 6" of Minkee fabric in desired color.
(8 pieces of rick rack cut to 5" each for legs).
- Hoop one layer of OESD PolyMesh CutAway stabilizer.
- Stitch the first color called Placement Stitch. Use a thread color that blends with your fabric choice.

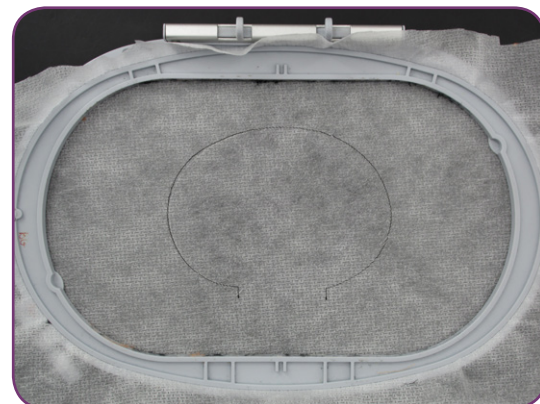

Step 2

- Cut a 7.5" x 6" piece of Minkee for the first placement stitch being sure that the Placement Stitch is covered by the fabric.

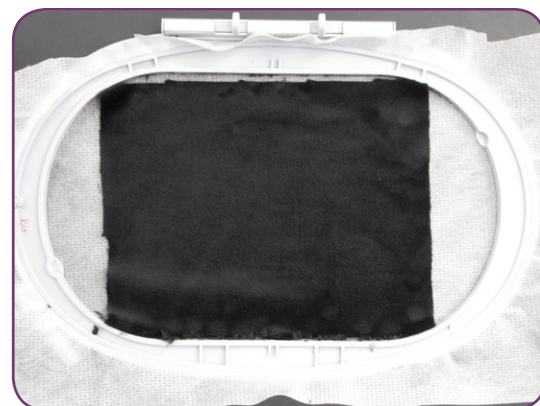

Step 3

- Lay the StitchH2O topper over the fabric and tape in place with Expert Embroidery Tape TearAway.
- Raise the presser foot if possible to accommodate the added loft of the fabric. If not, slow the machine speed.
- Stitch the second color, the Tackdown Stitch.



INSTRUCTIONS

51206-06




Step 4

- Sew the rest of the colors on the design and stop after you sew Rick Rack tackdown stitch.



Step 5

- Cut 8 pieces of Rick Rack 5" and Place direction of the placement stitches with the largest part of the Rick Rack on the inside and the smallest section on the outside. Using OESD Expert Embroidery TearAway Tape. Tape the small part of the Rick Rack on the outside of the design making sure the longer piece doesn't go outside the Tackdown Stitch.
- Do the same process for that side and the other side.

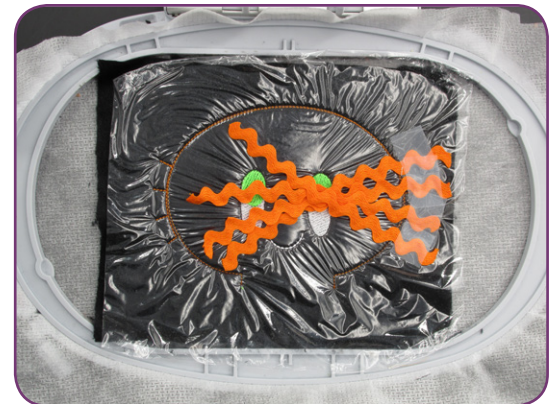

Step 6

- Sew the next color Rick Rack Tackdown sew this slowly and make sure the Rick Rack don't get hung up on your sewing foot. It should sew over the tape you put on the Rick Rack.



INSTRUCTIONS

51206-06



Step 7

- Place the second piece of fabric right side down directly over the first piece.



Step 8

- Stitch the final color, again using the first thread color, called Seam - Match Top Fabric. (For visual purposes we used a bright color so you could see the seam)



Step 9

- Remove the hoop from the machine and the fabric from the hoop.
- Using scissors, carefully cut out the stitch 'n' turn project close to the stitching line and over the small pieces of Rick Rack. Cut around the stitches at the opening to create a tab.




INSTRUCTIONS

51206-06



Step 10

- Clip corners as needed.
- Turn the project right side out. Use a point turner or chopstick to turn out corners and curves.

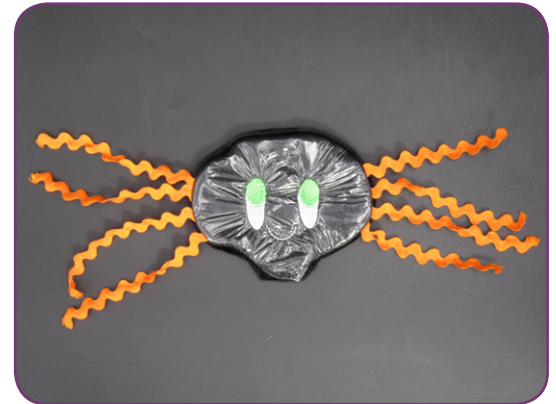

Step 11

- Trim any jump stitches and then peel off the StitchH2O topping.
- Stuff with polyester fiberfill.
- **Note:** For a smooth project, add small pieces of fiberfill until desired fullness is reached. Use Expert Point and Press tool to move fiberfill into corners.
- Fold tabs in and slip stitch the slit closed with a hand needle, or use a narrow machine zigzag stitch.

