



#51241
6 DESIGNS



SASSY & SWEET ZIPPER POUCHES

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2020 OESD, LLC. All rights reserved.

MATERIALS



Isacord Thread Colors

0020 Black
0142 Sterling
0600 Citrus
0822 Palomino
1904 Cardinal
2530 Rose
3151 Blue Dawn
5115 Baccarat Green
5610 Bright Mint
5822 Kiwi

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.






51241-01 Pineapple Applique Zipper Pouch



	Size Inches:	Size mm:	Stitch Count:
S	7.37 X 5.09 in.	187.2 X 129.3 mm	5653 St.
M	8.19 X 5.65 in.	208.0 X 143.5 mm	6189 St.
L	10.65 X 7.34 in.	270.5 X 186.4 mm	7937 St.
	1. Zipper Placement Guide		5822
	2. Zipper Tackdown.....		5822
	3. Front Panel Top Tackdown.....		5822
	4. Front Panel Bottom Tackdown.....		5822
	5. Green Fabric Placement Stitch.....		0142
	6. Leaves Tackdown		5822
	7. Brown Fabric Placement Stitch.....		0142
	8. Pineapple Tackdown.....		0822
	9. Pineapple Detail.....		0020
	10. Backing Tackdown		5822
	11. Inner Lining Tackdown		5822

51241-02 Cupcake Applique Zipper Pouch



	Size Inches:	Size mm:	Stitch Count:
S	7.37 X 5.09 in.	187.2 X 129.3 mm	5527 St.
M	8.19 X 5.65 in.	208.0 X 143.5 mm	6129 St.
L	10.65 X 7.34 in.	270.5 X 186.4 mm	7742 St.
	1. Zipper Placement Guide		1904
	2. Zipper Tackdown.....		1904
	3. Front Panel Top Tackdown.....		1904
	4. Front Panel Bottom Tackdown.....		1904
	5. Pink Fabric Placement Stitch		0142
	6. Cupcake Tackdown.....		2530
	7. Aqua Fabric Placement Stitch.....		0142
	8. Icing Tackdown.....		5115
	9. Red Fabric Placement Stitch.....		0142
	10. Cherry Tackdown.....		1904
	11. Cupcake Detail		0020
	12. Backing Tackdown		1904
	13. Inner Lining Tackdown		1904











DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

51241-03 Flamingo Applique Zipper Pouch



	Size Inches:	Size mm:	Stitch Count:
S	7.37 X 5.09 in.	187.2 X 129.3 mm	4575 St.
M	8.19 X 5.65 in.	208.0 X 143.5 mm	5054 St.
L	10.65 X 7.34 in.	270.5 X 186.4 mm	6446 St.
	1. Zipper Placement Guide		2530
	2. Zipper Tackdown.....		2530
	3. Front Panel Top Tackdown.....		2530
	4. Front Panel Bottom Tackdown.....		2530
	5. Pink Fabric Placement Stitch		0142
	6. Flamingo Tackdown.....		2530
	7. Bill		0600
	8. Flamingo Detail.....		0020
	9. Backing Tackdown		2530
	10. Inner Lining Tackdown		2530

51241-04 Lemon Applique Zipper Pouch Large



	Size Inches:	Size mm:	Stitch Count:
S	6.97 X 5.39 in.	177.0 X 136.9 mm	4018 St.
M	7.74 X 5.99 in.	196.6 X 152.1 mm	4419 St.
L	10.11 X 7.72 in.	256.8 X 196.1 mm	5824 St.
	1. Zipper Placement Guide		0600
	2. Zipper Tackdown.....		0600
	3. Front Panel Top Tackdown.....		0600
	4. Front Panel Bottom Tackdown.....		0600
	5. Yellow Fabric Placement Stitch		0142
	6. Lemon Tackdown		0600
	7. Green Fabric Placement Stitch.....		0142
	8. Leaf Tackdown		5822
	9. Lemon and Leaf Detail.....		0020
	10. Backing Tackdown		0600
	11. Inner Lining Tackdown.....		0600

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

51241-05 Butterfly Applique Zipper Pouch Large

***Fabric Required**



Size Inches: Size mm: Stitch Count:

S	6.97 X 5.39 in.	177.0 X 136.9 mm	4628 St.
M	7.74 X 5.99 in.	196.6 X 152.1 mm	5105 St.
L	10.11 X 7.70 in.	256.8 X 195.6 mm	6310 St.

■	1. Zipper Placement Guide	3151
■	2. Zipper Tackdown.....	3151
■	3. Front Panel Top Tackdown.....	3151
■	4. Front Panel Bottom Tackdown	3151
■	5. Purple Fabric Placement Stitch	0142
■	6. Butterfly Tackdown	3151
■	7. Butterfly Detail	0020
■	8. Backing Tackdown	3151
■	9. Inner Lining Tackdown	3151

51241-06 Floral Applique Zipper Pouch Large

***Fabric Required**



Size Inches: Size mm: Stitch Count:

S	6.97 X 5.39 in.	177.0 X 136.9 mm	7369 St.
M	7.74 X 5.99 in.	196.6 X 152.1 mm	7892 St.
L	10.11 X 7.70 in.	256.8 X 195.6 mm	10328 St.

■	1. Zipper Placement Guide	5115
■	2. Zipper Tackdown.....	5115
■	3. Front Panel Top Tackdown.....	5115
■	4. Front Panel Bottom Tackdown	5115
■	5. Aqua Fabric Placement Stitch	0142
■	6. Flowers Tackdown	5115
■	7. Leaves.....	5610
■	8. Flowers and Leaves Detail	0020
■	9. Backing Tackdown	5115
■	10. Inner Lining Tackdown	5115

MATERIALS



Stabilizer

- Light Weight TearAway
- Fusible Woven

Supplies

- Isacord thread per thread chart
- OESD White Bobbin Thread
- Expert Embroidery Tape TearAway or Wash way
- Expert Point and Press Tool
- Polyester or Nylon Zipper approximately 2" longer than opening (NO metal zippers)
- Fabric for applique: cut fabric for applique about an inch larger than needed.
- Note: These designs are raw edge applique. If you don't like the "frayed" look of the fabric, iron Fusible Woven to the back of the applique fabrics before placing the fabrics over the placement stitch.

MATERIALS



Fabric


Bag Size	Front Panel Top Cut 1 of outer fabric and 1 of lining	Front Panel Bottom Cut 1 of outer fabric and 1 of lining	Back Cut 1 of outer fabric and 1 of lining
Small Horizontal Zipper: 10"	7.5" x 2.5" Cut Fusible Woven 7.5" x 1.25"	7.5" x 8.5" Cut Fusible Woven 7.5" x 4.25"	7.5" x 5.5" Cut Fusible Woven 7.5" x 5.5"
Medium Horizontal Zipper: 12"	8.5" x 3.5" Cut Fusible Woven 8.5" x 1.75"	8.5" x 10" Cut Fusible Woven 8.5" x 5"	8.5" x 7" Cut Fusible Woven 8.5" x 7"
Large Horizontal Zipper: 14"	12 x 4 Cut Fusible Woven 12 x 2	12 x 12 Cut Fusible Woven 12 x 6	12" x 8" Cut Fusible Woven 12" x 8"
Small Vertical Zipper: 8"	6" x 2.5" Cut Fusible Woven 6" x 1.25"	6" x 13.5" Cut Fusible Woven 6" x 6.75"	6" x 8.5" Cut Fusible Woven 6" x 8.5"
Medium Vertical Zipper: 9"	7" x 3.5" Cut Fusible Woven 7" x 1.75"	7" x 14" Cut Fusible Woven 7" x 7"	7" x 9" Cut Fusible Woven 7" x 9"
Large Vertical Zipper: 12"	8.5" x 4" Cut Fusible Woven 8.5" x 2"	8.5" x 19" Cut Fusible Woven 8.5" x 9.5"	8.5" x 15" Cut Fusible Woven 8.5" x 15"

HORIZONTAL POUCHES



Step 1

- Press Bottom Front, Top Front, Top Front Lining and Bottom Front Lining in 1/2 wrong sides together, lengthwise.
- Fusible Woven is applied only to the outer fabrics, not the lining.
- Open fabrics and press Fusible Woven to one half of the wrong side of the fabric, lining up the Fusible Woven with the fold of the fabric.
- Press a whole piece of Fusible Woven to the wrong side of the Back fabric.

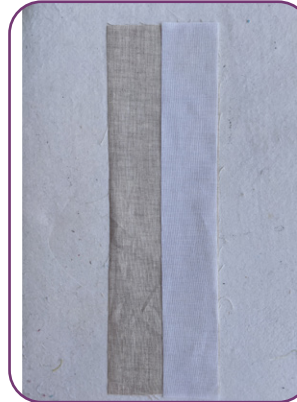

Step 2

- Re-fold and press fabrics.



Step 3

- Design used for this project is 51241-O6L.
- Hoop 1 piece of Light Weight TearAway Stabilizer.
- Stitch Machine Step 1, the Zipper Placement Guide.



HORIZONTAL POUCHES



Step 4

- Place the zipper, right side up, within the Placement Guide and tape in place.
- Metal ends should be outside of the stitching area.
- Stitch Machine Step 2, Zipper Tackdown.



Step 5

- Place the folded edge of the top front next to the zipper teeth on the top (right edge) of the zipper.
- Cover the zipper tackdown line, but not the zipper teeth.
- Tape in place.



Step 6

- Remove the hoop from the machine, but do NOT remove the project from the hoop.
- Turn hoop over and place the folded edge of the top front lining along the zipper tackdown, just barely covering the line.
- Tape in place.



HORIZONTAL POUCHES



Step 7

- Stitch Machine Step 3, the Front Panel Top Tackdown.



Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn hoop over and lay face down on a flat surface.
- Locate the Lower Zipper Tackdown stitch which is right above the Lower Zipper Placement Line.
- Place the folded edge of the front lining fabric along the zipper tackdown line.
- Gently secure with tape on the fold. (Do not press too hard!)
- **Tip:** The tape acts as a 'hinge' for the next step.



Step 9

- Gently open the folded fabric. The tape on the fold will hold the center of the fabric along the stitching line.
- Tape the top, bottom and sides to hold fabric in place during stitching.
- Return to the machine, being careful that the fabric under the hoop is flat and smooth.



HORIZONTAL POUCHES



Step 10

- Place the fold of the front fabric over the zipper tackdown line butting up to the zipper teeth, but not over them.
- Tape in place if desired.




Step 11

- Stitch Machine Step 4, Front Panel Bottom Tackdown.
- **Note:** The fabric side with the Fusible Woven attached needs to be on top to support the embroidery stitches.



Step 12

- Stitch Machine Step 5, the Applique Placement Stitch.
- **Note:** thread color should match the fabric used for the front panel.

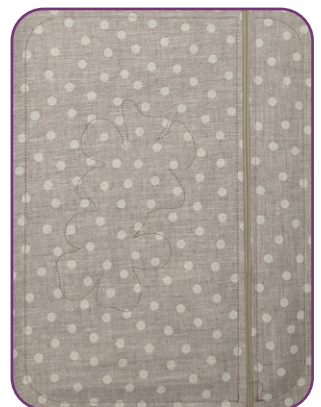

HORIZONTAL POUCHES




Step 13

- Place the applique fabric (6 .5" x 4.5") over the placement stitch, covering entirely. Tape in place.
- **Note:** applique patterns could also be used for applique fabric.




Step 14

- Stitch Machine Step 6, the Applique Tackdown Stitch.
- **Note:** thread color should match the fabric used.

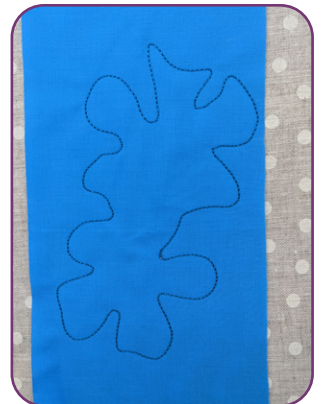

Step 15

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Trim the applique fabric about an 1/8" from the stitch line.

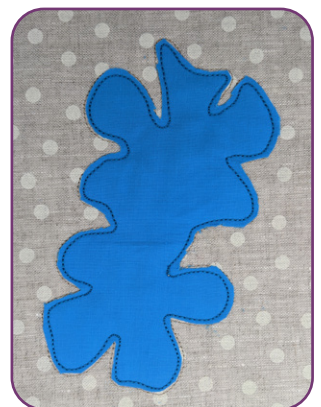

HORIZONTAL POUCHES



Step 16

- Place the hoop back on the machine. Remember to check the lining fabric is still in the correct position.
- Stitch through the rest of the design, stopping before Step 18.



Step 17

- Remove the hoop from the machine, leaving the project in the hoop.
- Turn it over and remove the side tapes from the Front Bottom Panel Lining.
- Fold the Front Panel Bottom Lining back into position, wrong sides together along the original fold line.
- Tape the sides as shown to hold in place for final construction.
- Return the hoop to the machine.



Step 18

- **Note: This is the most important step in the whole project!!**
- Without it, you will need a seam ripper!
- Unzip the zipper halfway!
- Not all the way, just HALFWAY!



HORIZONTAL POUCHES



Step 19

- Position the back fabric, right side down over the front of the zipper pouch completely covering the stitched pieces.



Step 20

- Stitch Machine Step 9, the Backing Tackdown.



Step 21

- Gently remove the hoop from the machine without disturbing the embroidery.
- Turn it over and position the back lining, face down on the back of the hoop.
- Tape fabric in place with TearAway Tape.
- Return the hoop to the machine.



HORIZONTAL POUCHES



Step 22

- Stitch Machine Step 10, the Inner Lining Tackdown.
- Note the “neck” opening in the top for turning the back lining.



Step 23

- The stitching is now complete.
- Remove the project from the hoop and trim approximately 1/4” from the outermost stitching line as shown.
- Do not cut off the “neck” opening at the top. Trim across above the vertical lines of stitching. Clip each inner corner to, but not through, the stitches in the corner.



Step 24

- Turn the pouch inside out to show the right side of the lining fabric.



HORIZONTAL POUCHES



Step 25

- Remove the excess stabilizer from the zipper area.
- Unzip the zipper.



Step 26

- Turn the 'neck' area to the inside of the bag, press.
- Close the opening by hand stitching or with double sided fusible tape or with a piece of Fuse and Seal cut to size.



Step 27

- Turn the pouch right side out, through the zipper and press.



VERTICAL POUCHES




Step 1

- Press Top Front and Top Front Lining in half, wrong sides together, lengthwise.
- Open Top Front fabric and press Fusible Woven to one half of the wrong side of the fabric, lining up the Fusible Woven with the fold of the fabric.



Step 2

- Press Fusible Woven to the wrong side of the Back fabric.
- Press Bottom Front and Bottom Front Lining in half, wrong sides together, crosswise.
- Open Bottom Front fabric and press Fusible Woven to one half of the wrong side of the fabric, lining up the Fusible Woven with the fold of the fabric.
- Re-fold and press fabrics.

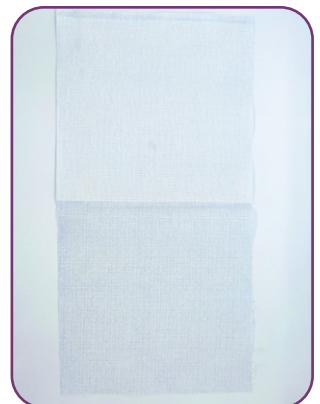

Step 3

- Design used for this project is 51241-03M.
- Hoop 1 piece of Light Weight TearAway Stabilizer.
- Stitch Machine Step 1, the Zipper Placement Guide.



VERTICAL POUCHES



Step 4

- Place the zipper, right side up, within the Placement Guide and tape in place. Metal ends should be outside of the stitching area.



Step 5

- Stitch Machine Step 2, Zipper Tackdown.



Step 6

- Place the folded edge of the top front next to the zipper teeth on the top (upper edge) of the zipper.
- Cover the zipper tackdown line, but not the zipper teeth.
- Tape in place.



VERTICAL POUCHES



Step 7

- Remove the hoop from the machine, be NOT the project from the hoop.
- Turn hoop over and place the folded edge of the top front lining along the zipper tackdown, just covering the line.
- Tape in place, place the hoop back onto the machine.



Step 8

- Stitch Machine Step 3, the Front Panel Top Tackdown.



Step 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn hoop over and lay face down on a flat surface.
- Locate the Lower Zipper Tackdown stitch which is right above the Lower Zipper Placement Line.
- Place the folded edge of the front lining fabric along the zipper tackdown line.
- Gently secure with tape on the fold. (Do not press too hard!)
- **Tip:** The tape acts as a 'hinge' for the next step.



VERTICAL POUCHES



Step 10

- Gently open the folded fabric. The tape on the fold will hold the center of the fabric along the stitching line.
- Tape the top, bottom and sides to hold fabric in place during stitching.
- Return to the machine, being careful that the fabric under the hoop is flat and smooth.



Step 11

- Place the fold of the front fabric over the zipper tackdown line butting up to the zipper teeth, but not over them.



Step 12

- **Note:** The part of the fabric that has Fusible Woven needs to be on top to support the embroidery stitches.
- Tape in place if desired.



VERTICAL POUCHES




Step 13

- Stitch Machine Step 4, Front Panel Bottom Tackdown.




Step 14

- Stitch Machine Step 5, the Applique Placement Stitch.

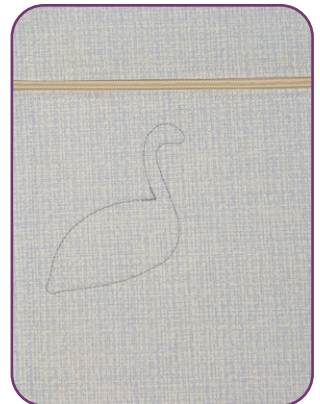

Step 15

- Place the applique fabric (4" x 4") over the placement stitch, covering entirely.
- Tape in place.

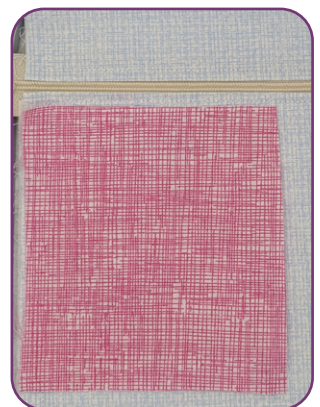


VERTICAL POUCHES



Step 16

- Stitch Machine Step 6, the Applique Tackdown Stitch.

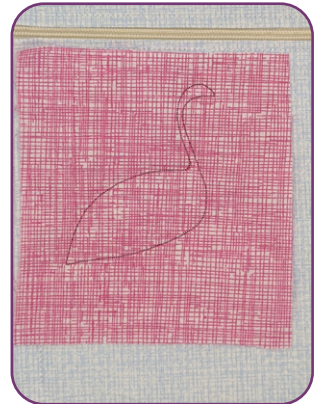


Step 17

- Remove the hoop from the machine, but DO NOT remove the project from the hoop.
- Trim the applique fabric about an 1/8" from the stitch line.



Step 18

- Place the hoop back on the machine. Remember to check the lining fabric is still in the correct position.
- Stitch through the rest of the design, stopping before Step 20.

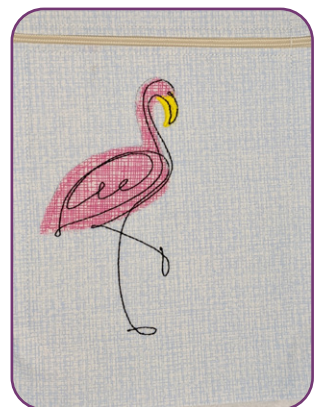

VERTICAL POUCHES




Step 19

- Remove the hoop from the machine, leaving the project in the hoop.
- Turn it over and remove the side tapes from the Front Bottom Panel Lining.
- Fold the Front Panel Bottom Lining back into position, wrong sides together along the original fold line.
- Tape the sides as shown to hold in place for final construction.
- Return the hoop to the machine.



Step 20

- **Note: This is the most important step in the whole project!!**
- Without it, you will need a seam ripper!
- Unzip the zipper halfway!
- Not all the way, just HALFWAY!

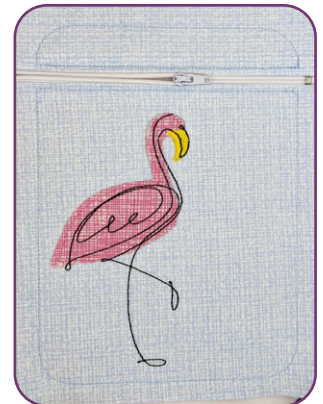

Step 21

- Position the back fabric, right side down over the front of the zipper pouch completely covering the stitched pieces.



VERTICAL POUCHES




Step 22

- Stitch Machine Step 9, the Backing Tackdown.




Step 23

- Gently remove the hoop from the machine without disturbing the embroidery.
- Turn it over and position the back lining, face down on the back of the hoop.
- Tape fabric in place with TearAway Tape.
- Return the hoop to the machine.

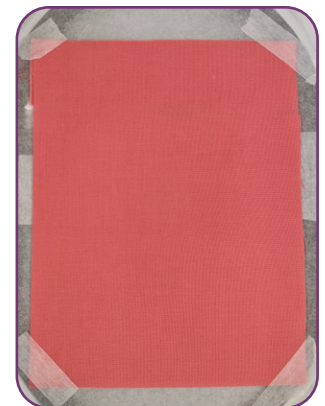

Step 24

- Stitch Machine Step 10, the Inner Lining Tackdown.
- Note the “neck” opening in the top for turning the back lining.

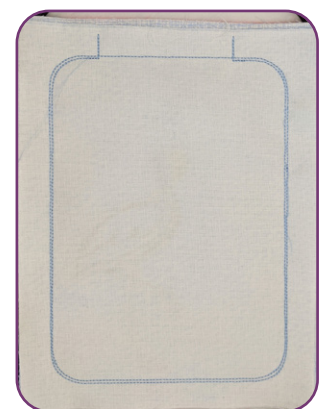

VERTICAL POUCHES



Step 25

- The stitching is now complete.
- Remove the project from the hoop and trim approximately 1/4" from the outermost stitching line as shown.
- Do not cut off the "neck" opening at the top. Trim across above the vertical lines of stitching. Clip each inner corner to, but not through, the stitches in the corner.



Step 26

- Turn the pouch inside out to show the right side of the lining fabric.



Step 27

- Remove the excess stabilizer from the zipper area.
- Unzip the zipper.



VERTICAL POUCHES



Step 28

- Turn the 'neck' area to the inside of the bag, press.
- Close the opening by Hand stitching or with double sided fusible tape.





Step 29





- Turn the pouch right side out, through the zipper and press.
- **Tip:** Use the Expert Point and Press Tool to turn corners and smooth seams.



PATTERNS

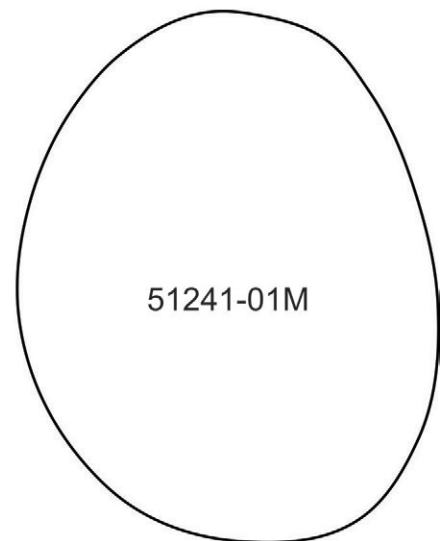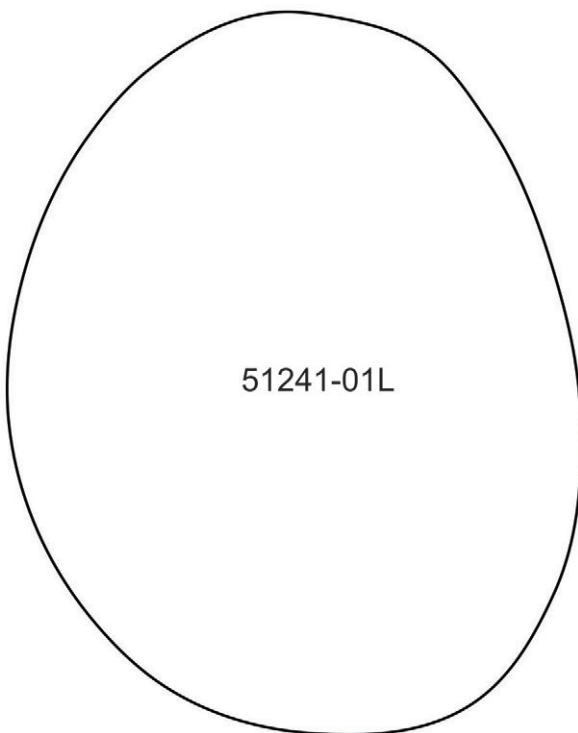


PATTERNS

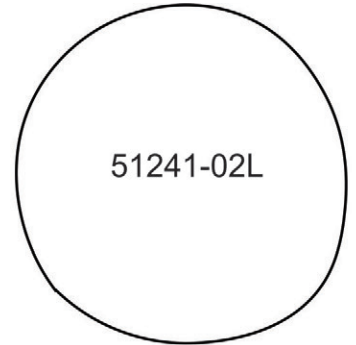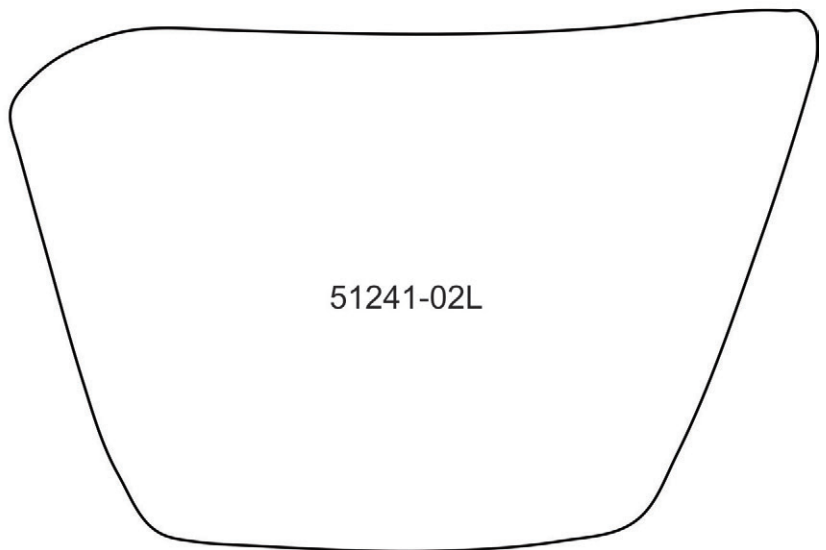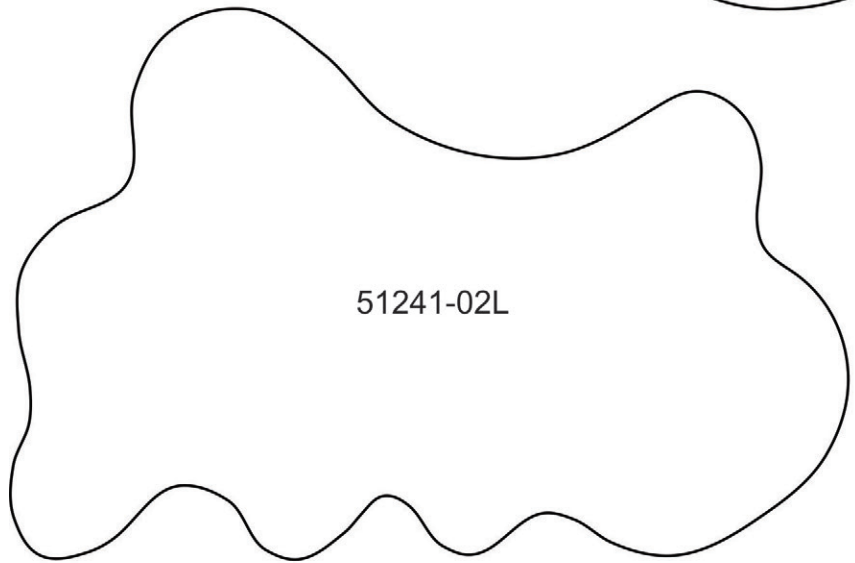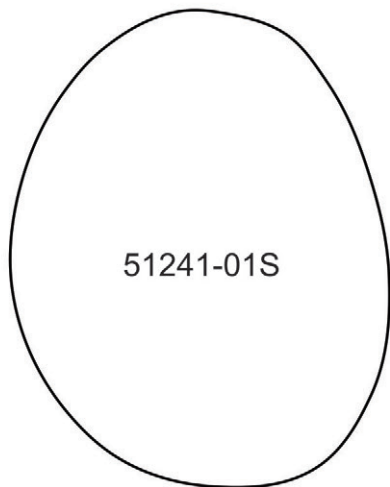


PATTERNS



51241-02M

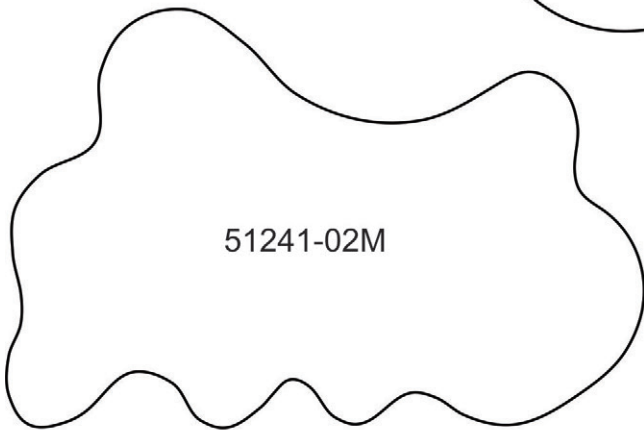

51241-02S

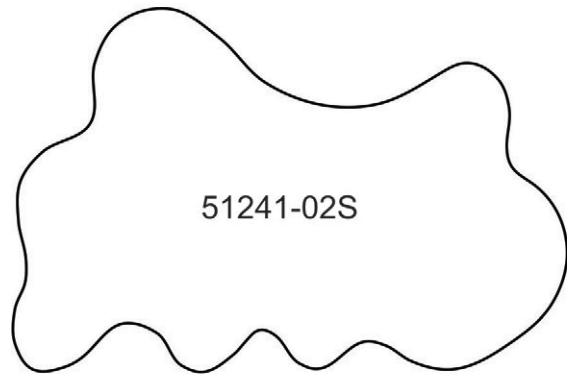




51241-02M







51241-02S





PATTERNS

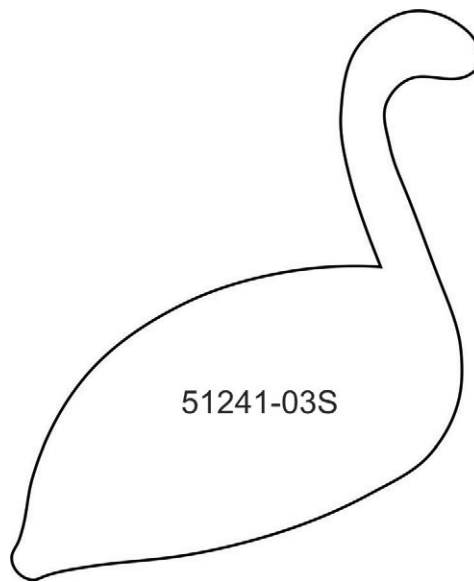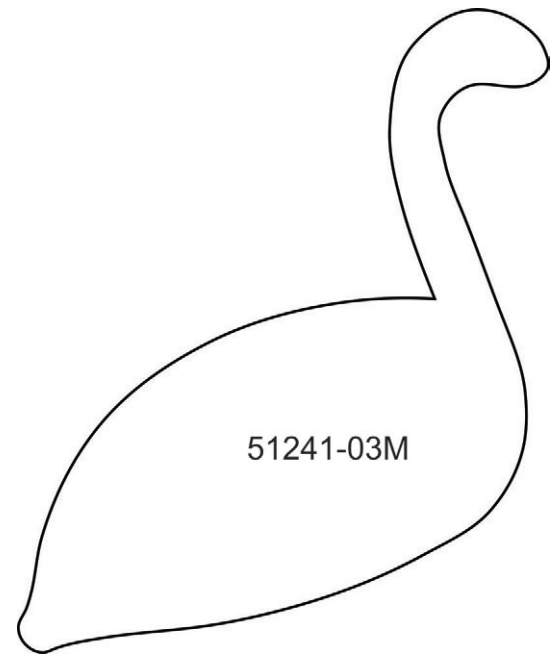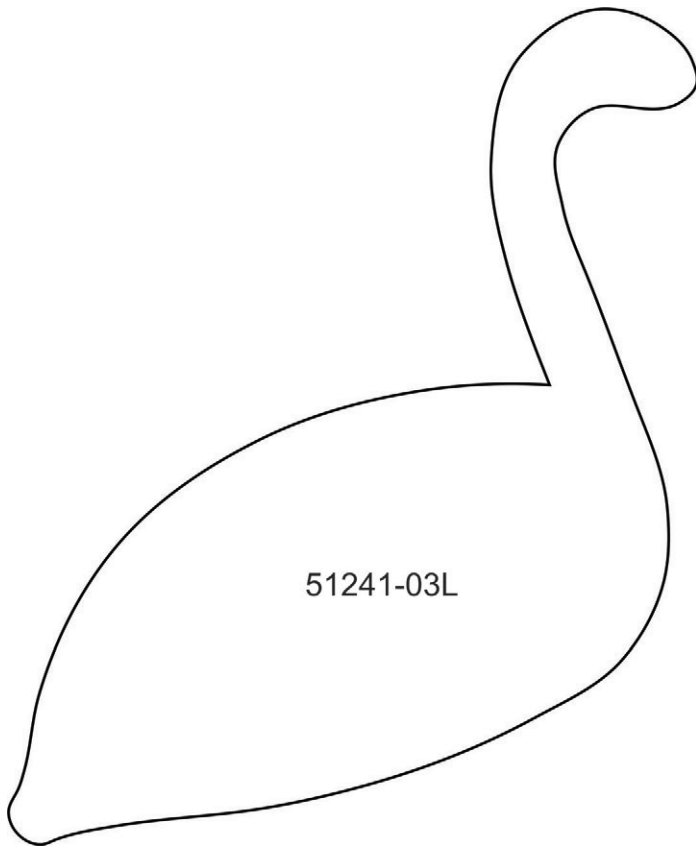

PATTERNS

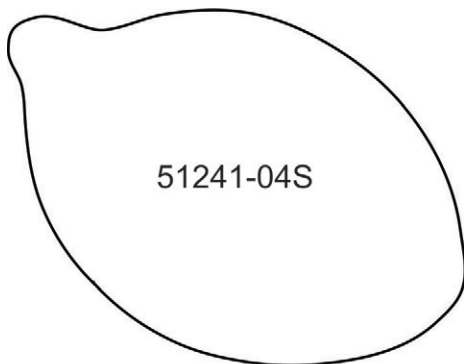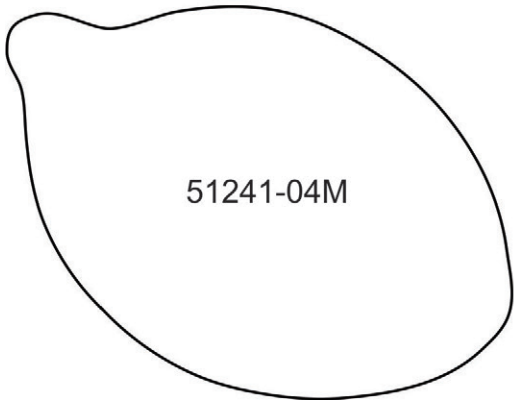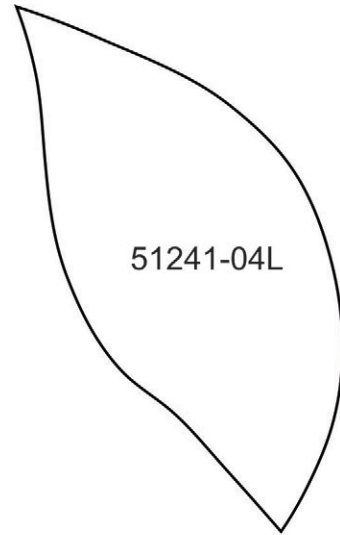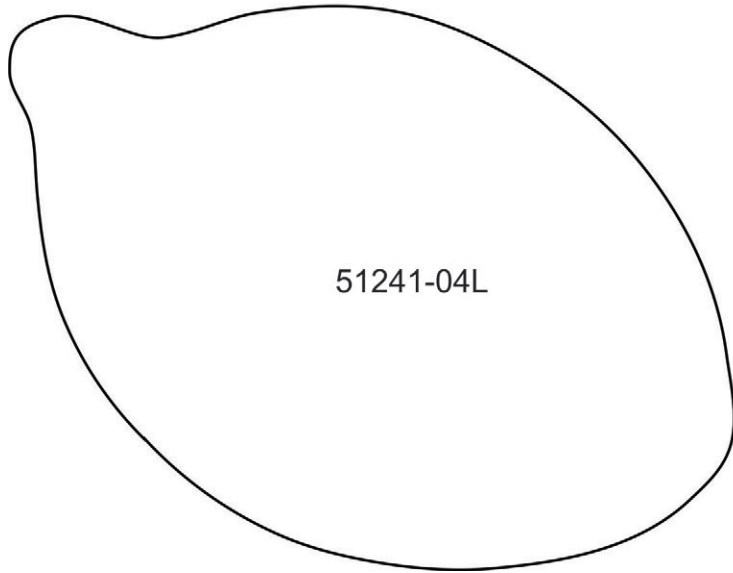

PATTERNS

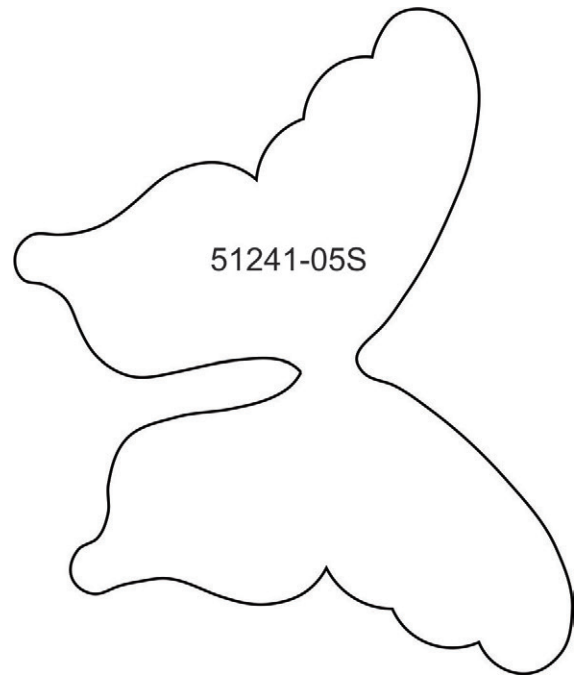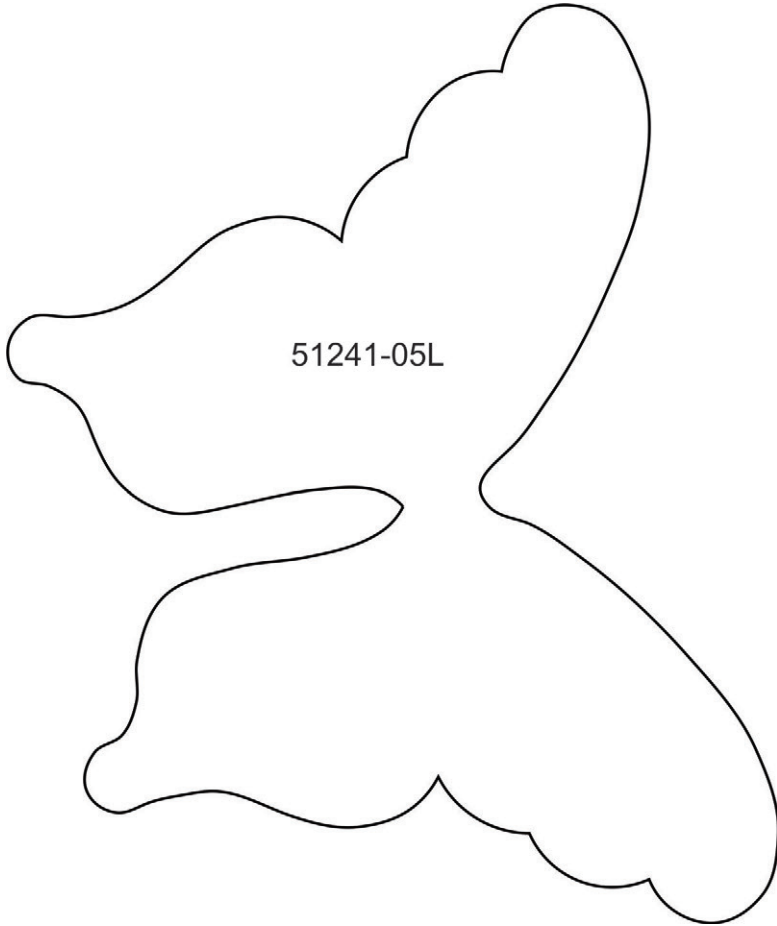

PATTERNS



51241-06L





51241-06M




51241-06S

MIRRORED PATTERNS

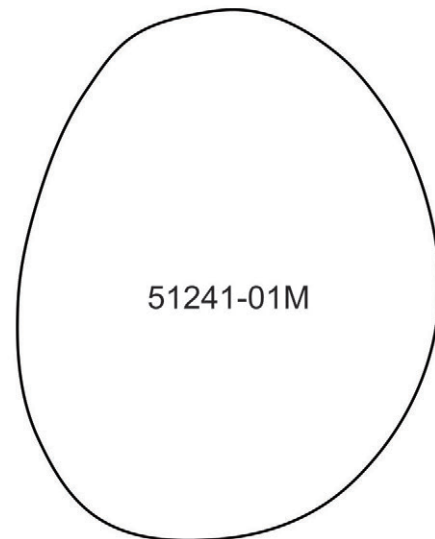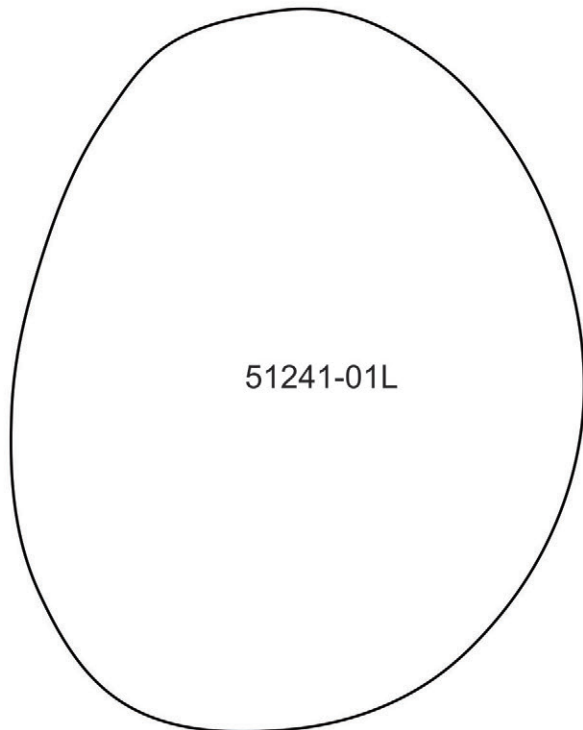

MIRRORED PATTERNS

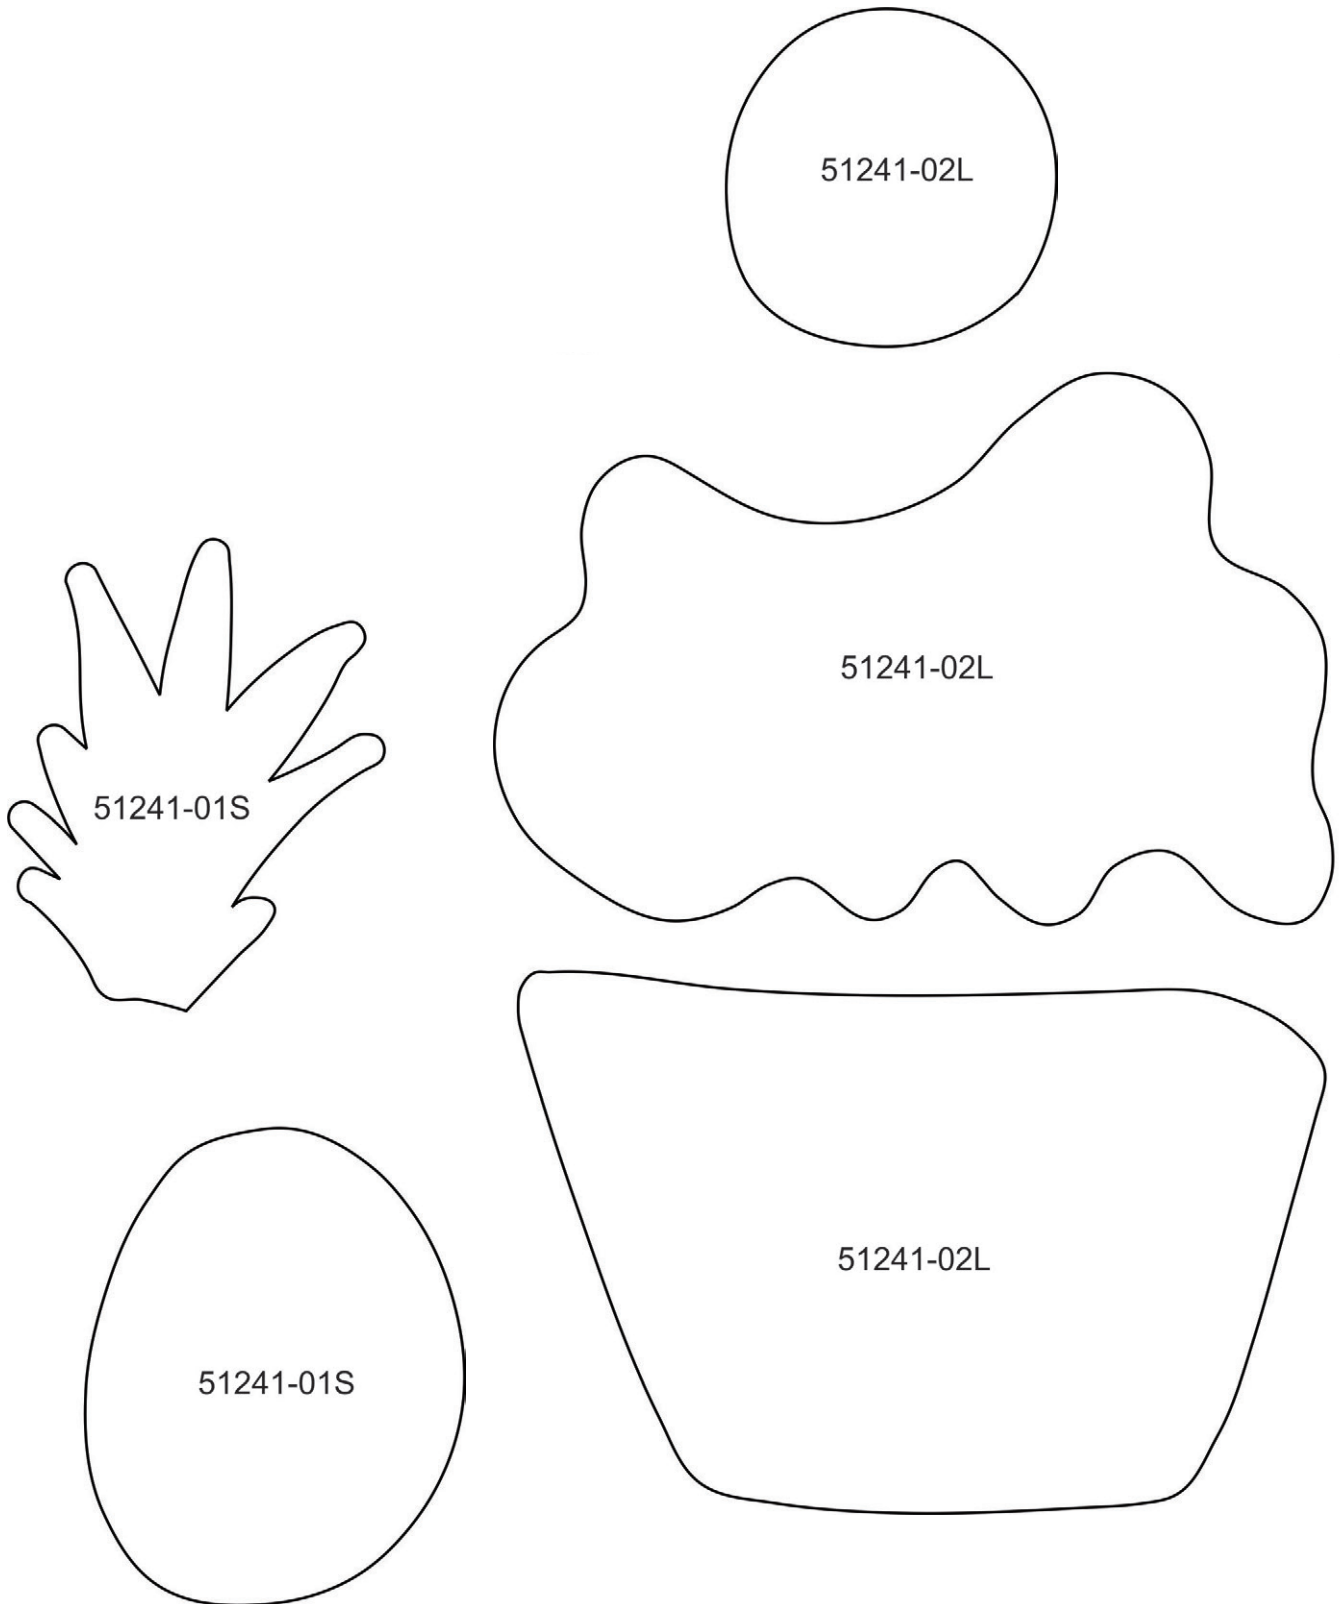

MIRRORED PATTERNS



51241-02M

51241-02M




51241-02S

51241-02M







51241-02S

51241-02S




MIRRORED PATTERNS

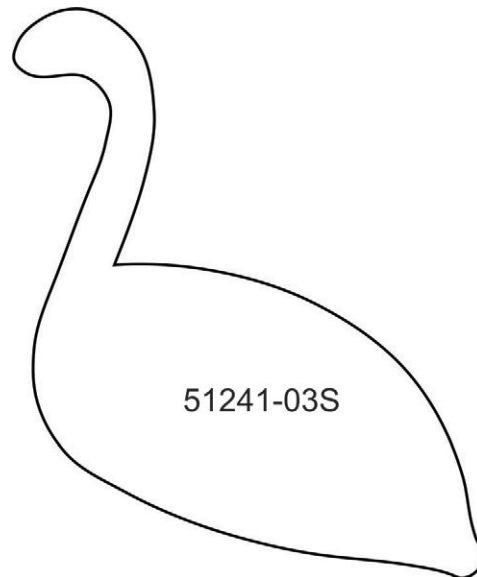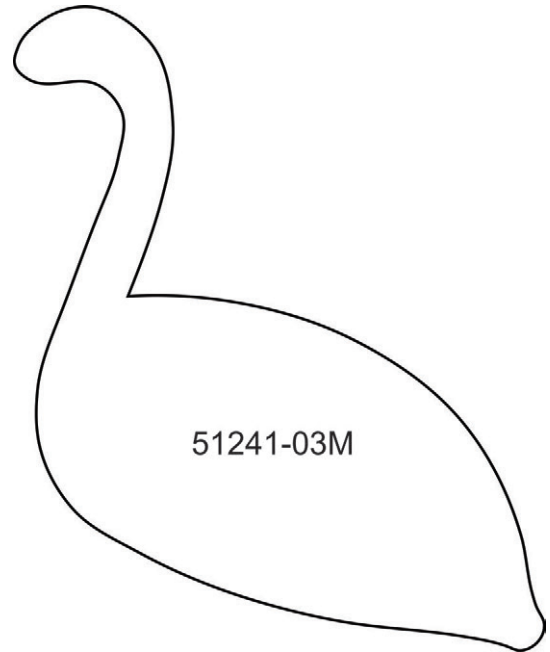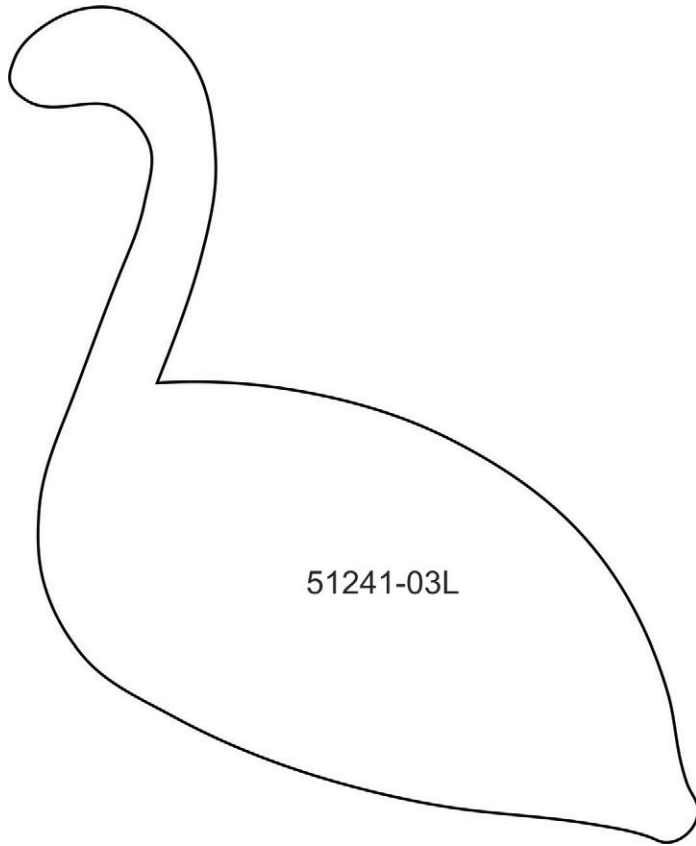


MIRRORED PATTERNS

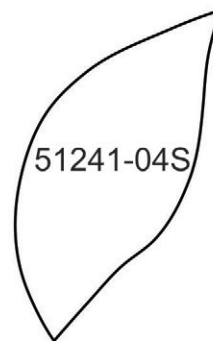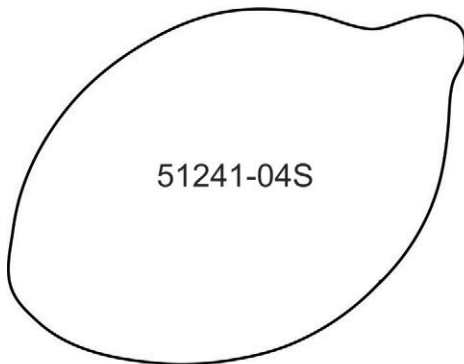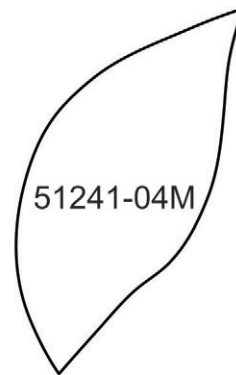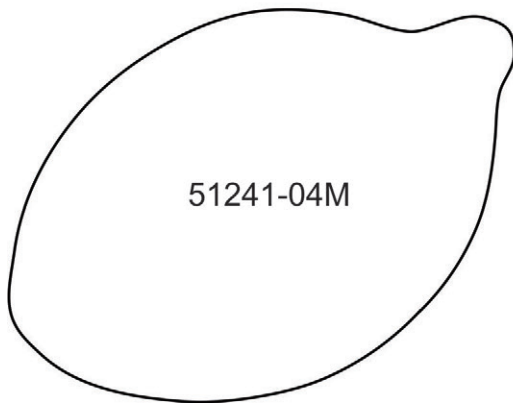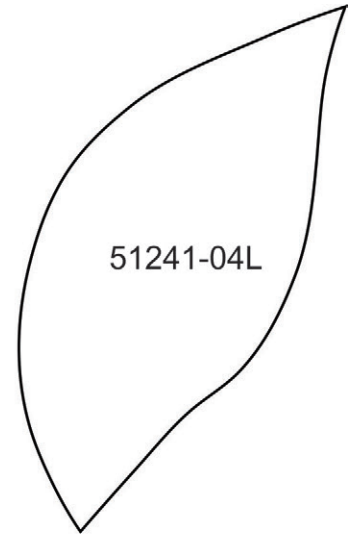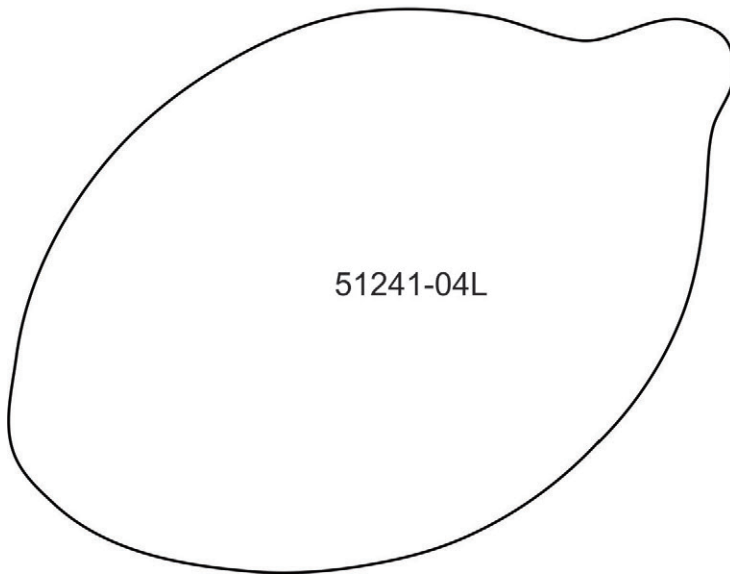

MIRRORED PATTERNS

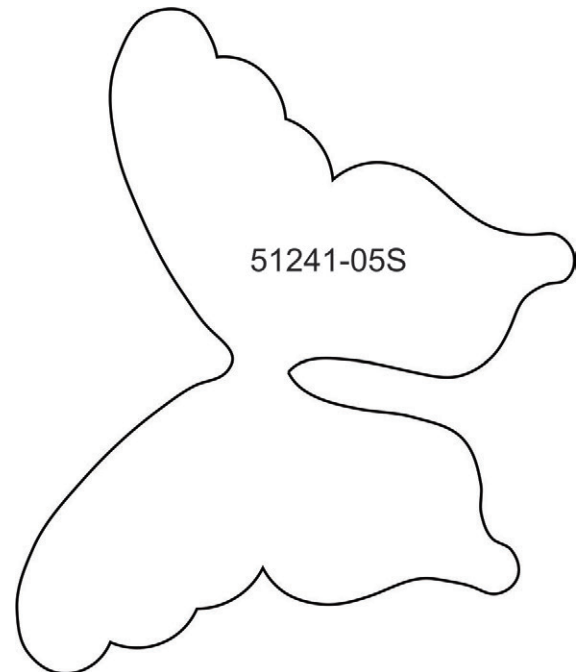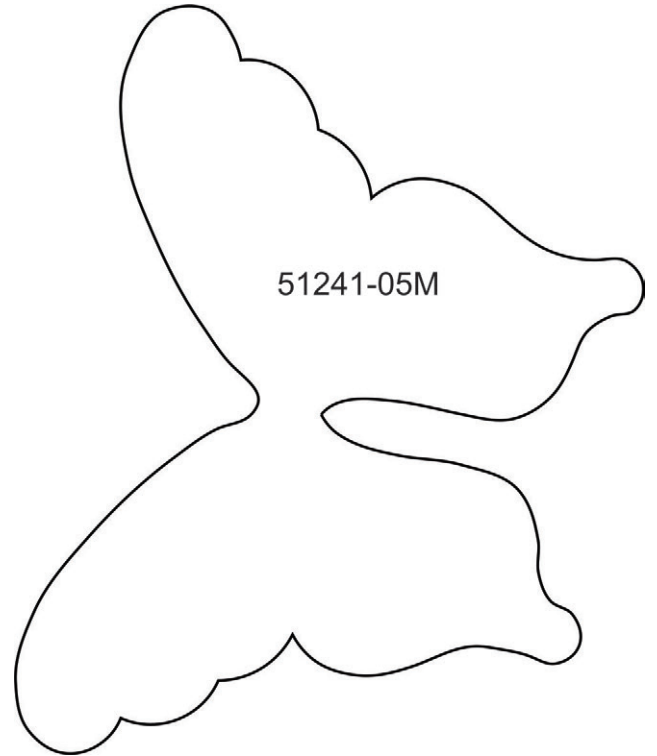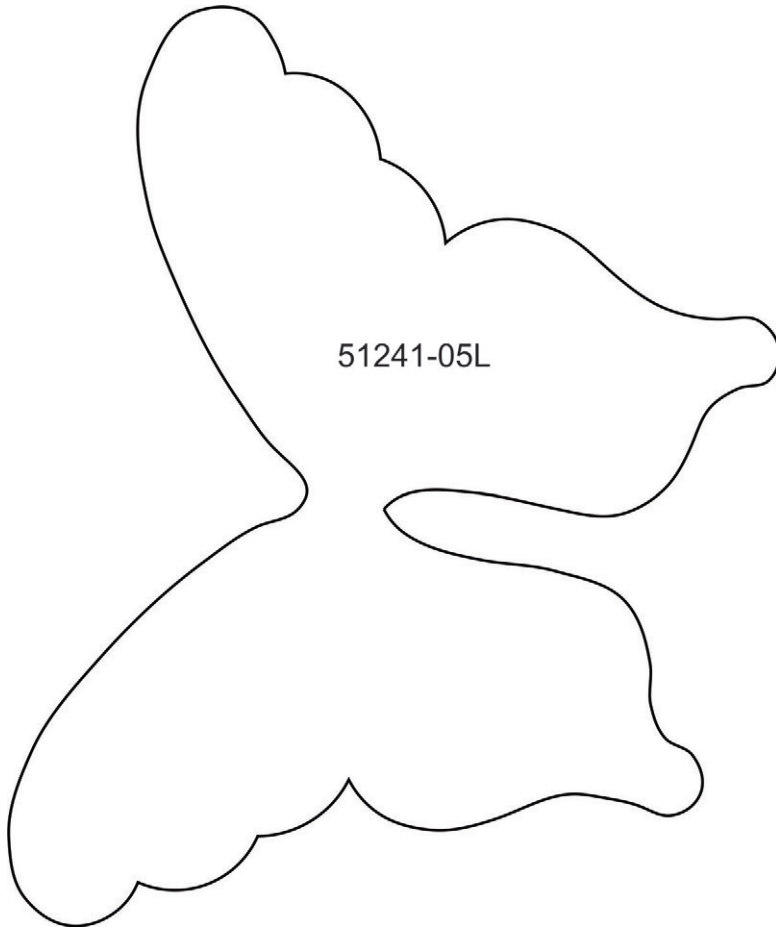

MIRRORED PATTERNS

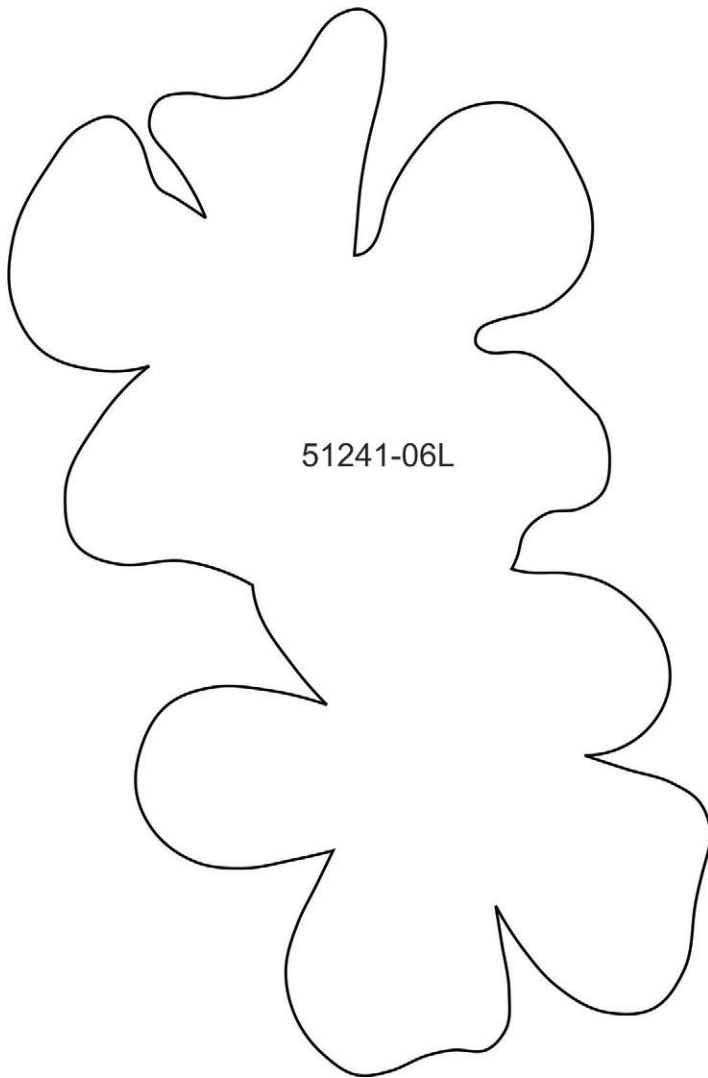

51241-06L



51241-06M



51241-06S