



Scissortail
STITCHES

#51261

3 DESIGNS



FREESTANDING
HAPPY CAMPERS

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.
Electronic designs are licensed to the original purchaser for use at one location. ©2021 OESD, LLC. All rights reserved.

MATERIALS



Isacord Thread Colors

0010 Silky White
0108 Cobblestone
0134 Smoky
0150 Mystik Grey
0622 Star Gold
1154 Penny
1172 Ivory
2532 Pretty in Pink
2550 Soft Pink
4531 Caribbean
4952 Mystic Ocean

***Project instructions included after design list**


DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51261-01 Camper 1 Wall 1 FSA

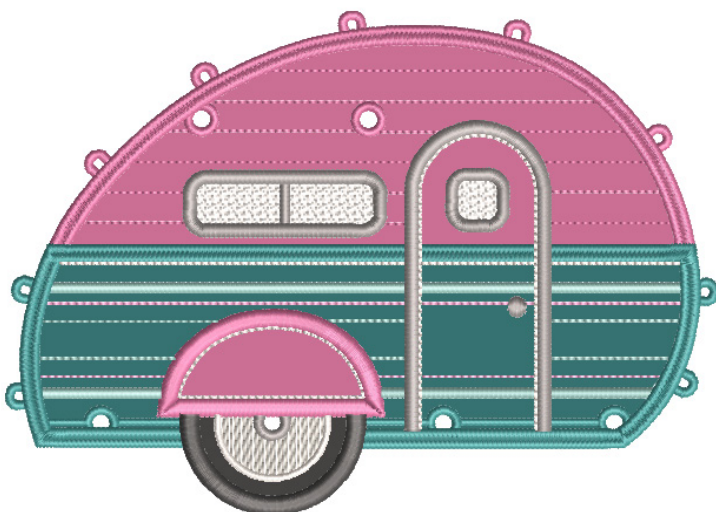

Size Inches: Size mm: Stitch Count:
7.11 X 5.03 in. 180.6 X 127.7 mm 22452 St.

- 1. Gray Fabric Placement Stitch0150
- 2. Cut Line & Tackdown.....0150
- 3. Blue Fabric Placement Stitch0150
- 4. Cut Line & Tackdown.....0150
- 5. Pink Fabric Placement Stitch.....0150
- 6. Cut Line & Tackdown.....0150
- 7. Light Gray Shading.....0150
- 8. Light Pink Detail..... 2550
- 9. Dark Pink Cover Stitch & Detail 2532
- 10. Light Blue Detail4952
- 11. Dark Blue Cover Stitch & Lace.....4531
- 12. White Lace Windows..... 0010
- 13. Medium Gray Detail0108
- 14. Dark Gray Cover Stitch..... 0134
- 15. White Detail 0010

FABRIC REQUIRED

51261-02 Camper 1 Wall 2 FSA



Size Inches: Size mm: Stitch Count:
7.11 X 5.03 in. 180.6 X 127.7 mm 21338 St.

- 1. Gray Fabric Placement Stitch0150
- 2. Cut Line & Tackdown.....0150
- 3. Blue Fabric Placement Stitch0150
- 4. Cut Line & Tackdown.....0150
- 5. Pink Fabric Placement Stitch.....0150
- 6. Cut Line & Tackdown.....0150
- 7. Light Gray Shading.....0150
- 8. Light Pink Detail..... 2550
- 9. Dark Pink Cover Stitch & Detail 2532
- 10. Light Blue Detail4952
- 11. Dark Blue Cover Stitch & Lace.....4531
- 12. White Lace Windows..... 0010
- 13. Medium Gray Detail0108
- 14. Dark Gray Cover Stitch..... 0134
- 15. White Detail 0010

DESIGNS




Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51261-03 Camper 1 Floor 1 FSA

Size Inches: **8.74 X 3.93 in.** Size mm: **221.9 X 99.9 mm** Stitch Count: **20279 St.**

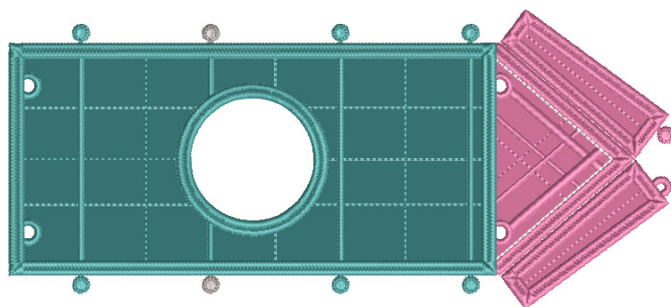


- 1. Blue Fabric Placement Stitch..... 2532
- 2. Cut Line & Tackdown..... 2532
- 3. Pink Fabric Placement Stitch..... 2532
- 4. Cut Line & Tackdown..... 2532
- 5. Dark Pink Cover Stitch & Lace 2532
- 6. White Detail 0010
- 7. Medium Gray Buttonette.....0108
- 8. Dark Blue Cover Stitch & Lace.....4531

FABRIC REQUIRED

51261-04 Camper 1 Roof 1 FSA

Size Inches: **8.43 X 3.54 in.** Size mm: **214.2 X 90.0 mm** Stitch Count: **16362 St.**

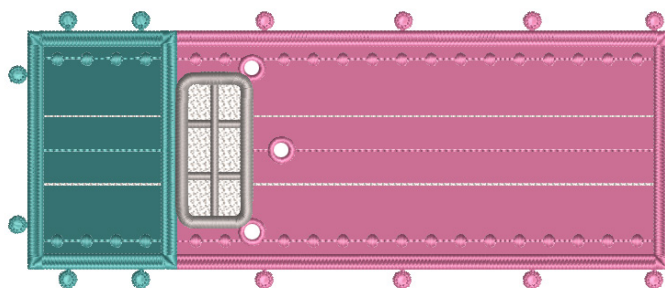


- 1. Pink Fabric Placement Stitch..... 0010
- 2. Cut Line & Tackdown..... 0010
- 3. Blue Fabric Placement Stitch..... 0010
- 4. Cut Line & Tackdown..... 0010
- 5. White Lace Window..... 0010
- 6. White Detail 0010
- 7. Dark Pink Cover Stitch & Lace 2532
- 8. Dark Blue Cover Stitch & Lace.....4531
- 9. Medium Gray Detail.....0108

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

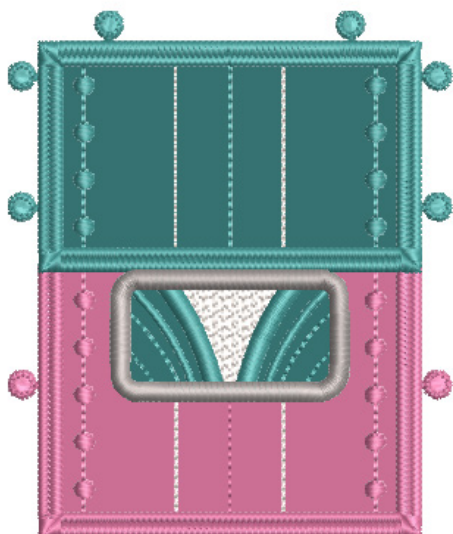

51261-05 Camper 1 Roof 2 FSA




Size Inches: Size mm: Stitch Count:
4.19 X 3.54 in. 106.5 X 90.0 mm 10575 St.

- 1. Pink Fabric Placement Stitch..... 0010
- 2. Cut Line & Tackdown..... 0010
- 3. Blue Fabric Placement Stitch..... 0010
- 4. Cut Line & Tackdown..... 0010
- 5. White Lace Window..... 0010
- 6. White Detail 0010
- 7. Dark Pink Cover Stitch & Lace 2532
- 8. Dark Blue Cover Stitch & Lace 4531
- 9. Medium Gray Detail 0108

51261-06 Camper 1 Overhangs FSL

Size Inches: Size mm: Stitch Count:
4.76 X 3.41 in. 121.0 X 86.6 mm 25564 St.

- 1. Single Color Design..... 4531

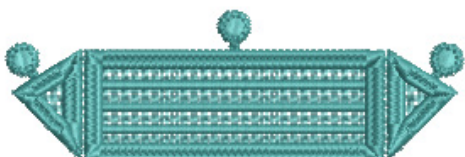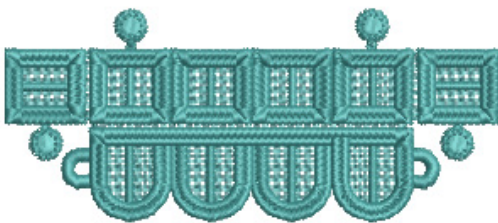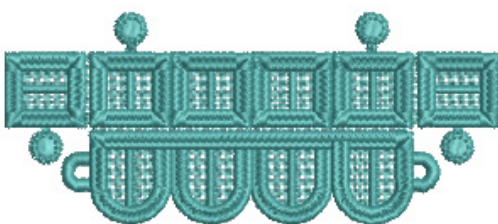

DESIGNS




Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51261-07 Camper 2 Wall 1 FSA

Size Inches: Size mm: Stitch Count:
7.11 X 5.02 in. 180.6 X 127.5 mm 25100 St.

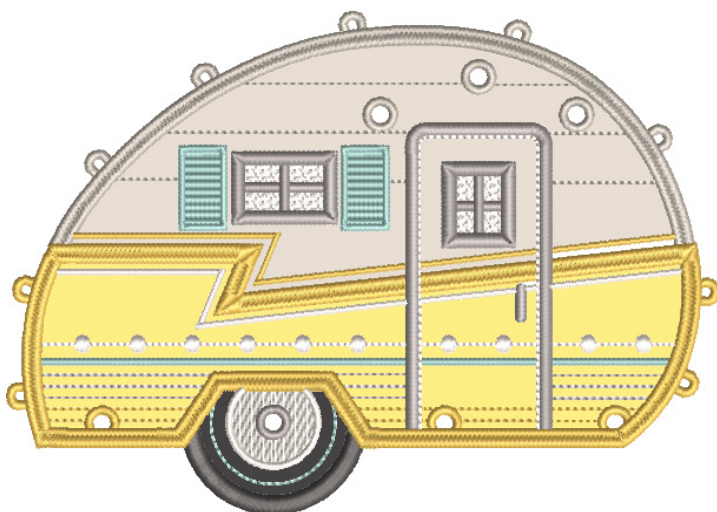


- 1. Gray Fabric Placement Stitch0150
- 2. Cut Line & Tackdown.....0150
- 3. Yellow Fabric Placement Stitch.....0150
- 4. Cut Line & Tackdown.....0150
- 5. White Fabric Placement Stitch.....0150
- 6. Cut Line & Tackdown.....0150
- 7. Light Gray Wheel0150
- 8. Light Gray Cover Stitch & Lace Detail ...0150
- 9. Light Blue Detail4952
- 10. White Lace Windows..... 0010
- 11. Dark Gray Cover Stitch..... 0134
- 12. Yellow Cover Stitch & Lace Detail 0622
- 13. Medium Gray Detail0108
- 14. White Detail 0010

FABRIC REQUIRED

51261-08 Camper 2 Wall 2 FSA

Size Inches: Size mm: Stitch Count:
7.11 X 5.02 in. 180.6 X 127.5 mm 23774 St.

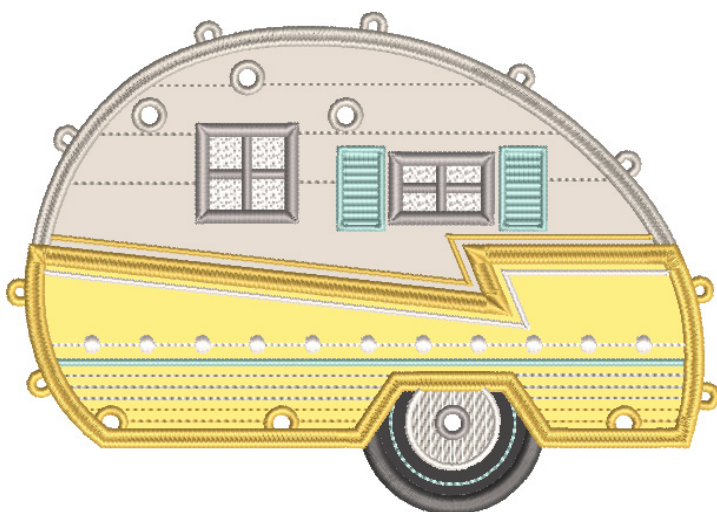

- 1. Gray Fabric Placement Stitch0150
- 2. Cut Line & Tackdown.....0150
- 3. Yellow Fabric Placement Stitch.....0150
- 4. Cut Line & Tackdown.....0150
- 5. White Fabric Placement Stitch.....0150
- 6. Cut Line & Tackdown.....0150
- 7. Light Gray Wheel0150
- 8. Light Gray Cover Stitch & Lace Detail ...0150
- 9. Light Blue Detail4952
- 10. White Lace Windows..... 0010
- 11. Dark Gray Cover Stitch..... 0134
- 12. Yellow Cover Stitch & Lace Detail 0622
- 13. Medium Gray Detail0108
- 14. White Detail 0010

DESIGNS




Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51261-09 Camper 2 Floor FSA

Size Inches: Size mm: Stitch Count:

8.74 X 3.93 in. 221.9 X 99.9 mm 20279 St.

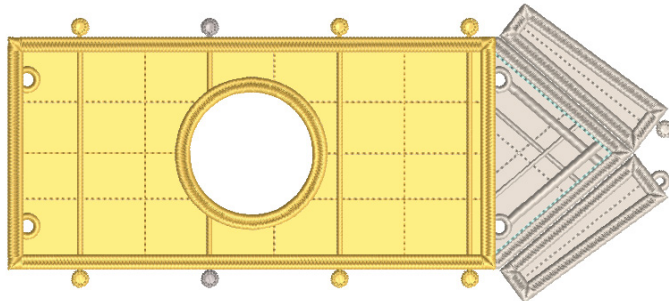


- 1. White Fabric Placement Stitch.....0150
- 2. Cut Line & Tackdown.....0150
- 3. Yellow Fabric Placement Stitch.....0150
- 4. Cut Line & Tackdown.....0150
- 5. Cover Stitch & Lace Detail.....0150
- 6. Blue Detail.....4952
- 7. Medium Gray Buttonettes.....0108
- 8. Yellow Cover Stitch & Lace Detail 0622

FABRIC REQUIRED

51261-10 Camper 2 Roof 1 FSA

Size Inches: Size mm: Stitch Count:

8.43 X 3.54 in. 214.2 X 90.0 mm 16362 St.

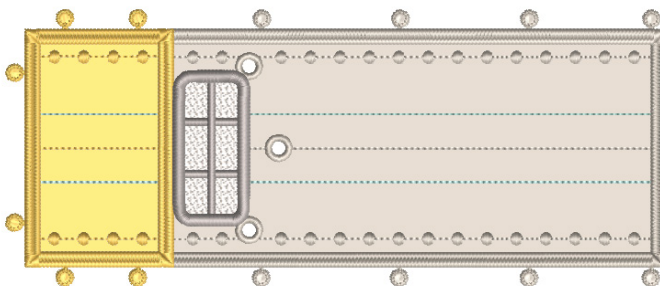


- 1. White Fabric Placement Stitch..... 0010
- 2. Cut Line & Tackdown..... 0010
- 3. Yellow Fabric Placement Stitch..... 0010
- 4. Cut Line & Tackdown..... 0010
- 5. White Lace Window..... 0010
- 6. Blue Detail.....4952
- 7. Light Gray Cover Stitch & Lace Detail ...0150
- 8. Yellow Cover Stitch & Lace Detail 0622
- 9. Medium Gray Detail.....0108

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

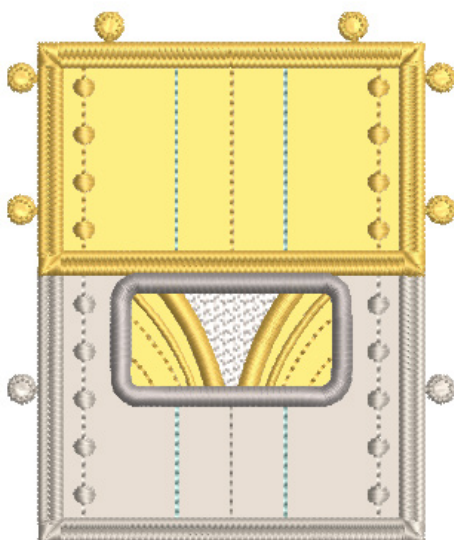

51261-11 Camper 2 Roof 2 FSA


Size Inches: **4.19 X 3.54 in.** Size mm: **106.5 X 90.0 mm** Stitch Count: **10575 St.**

- 1. White Fabric Placement Stitch..... 0010
- 2. Cut Line & Tackdown..... 0010
- 3. Yellow Fabric Placement Stitch..... 0010
- 4. Cut Line & Tackdown..... 0010
- 5. White Lace Window..... 0010
- 6. Blue Detail.....4952
- 7. Light Gray Cover Stitch & Lace Detail ...0150
- 8. Yellow Cover Stitch & Lace Detail 0622
- 9. Medium Gray Detail0108

51261-12 Camper 2 Overhangs FSL

Size Inches: **4.14 X 3.16 in.** Size mm: **105.1 X 80.2 mm** Stitch Count: **15716 St.**

- 1. Single Color Design..... 0622

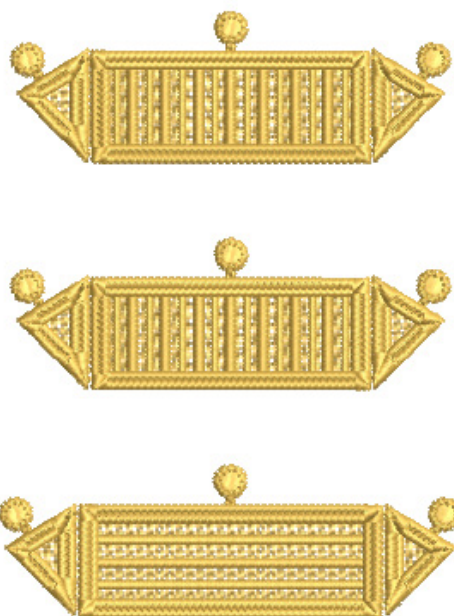

DESIGNS




Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51261-13 Camper 3 Wall 1 FSA

Size Inches: Size mm: Stitch Count:
7.11 X 5.03 in. 180.6 X 127.7 mm 22009 St.

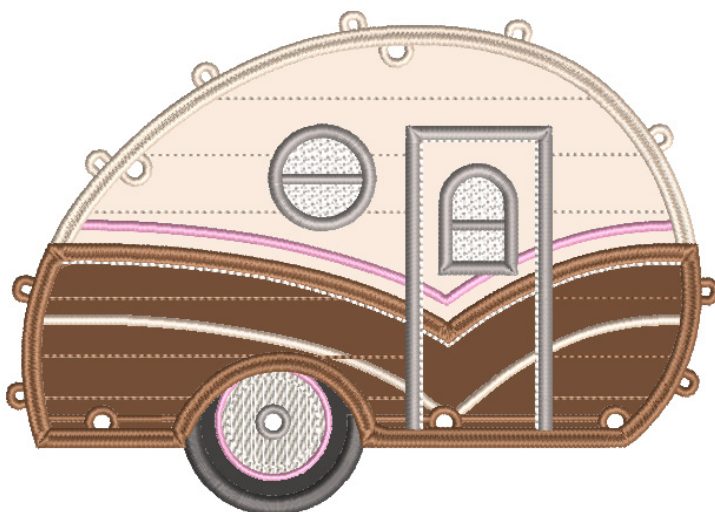


- 1. Gray Fabric Placement Stitch0150
- 2. Cut Line & Tackdown.....0150
- 3. Brown Fabric Placement Stitch0150
- 4. Cut Line & Tackdown.....0150
- 5. Cream Fabric Placement Stitch0150
- 6. Cut Line & Tackdown.....0150
- 7. Light Gray Wheel0150
- 8. White Lace Windows..... 0010
- 9. Pink Detail 2550
- 10. Light Tan Cover Stitch & Lace Detail 1172
- 11. Dark Gray Cover Stitch..... 0134
- 12. Brown Cover Stitch & Lace Detail1154
- 13. Medium Gray Detail0108
- 14. White Detail 0010

FABRIC REQUIRED

51261-14 Camper 3 Wall 2 FSA

Size Inches: Size mm: Stitch Count:
7.11 X 5.03 in. 180.6 X 127.7 mm 22177 St.

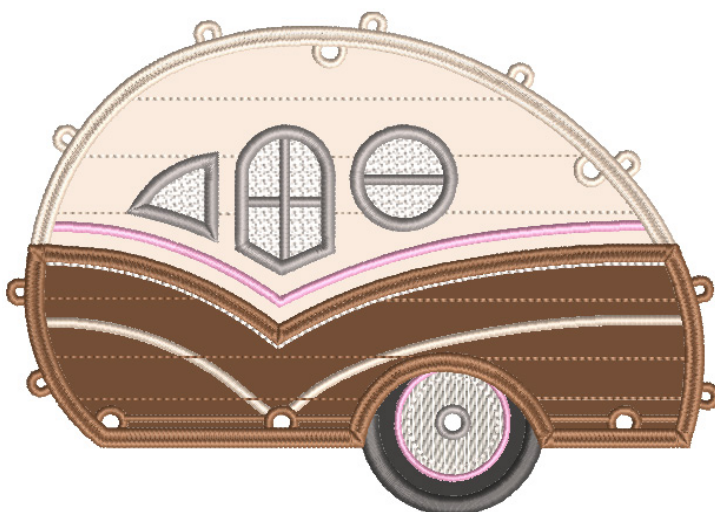

- 1. Gray Fabric Placement Stitch0150
- 2. Cut Line & Tackdown.....0150
- 3. Brown Fabric Placement Stitch0150
- 4. Cut Line & Tackdown.....0150
- 5. Cream Fabric Placement Stitch0150
- 6. Cut Line & Tackdown.....0150
- 7. Light Gray Wheel0150
- 8. White Lace Windows..... 0010
- 9. Pink Detail 2550
- 10. Light Tan Cover Stitch & Lace Detail 1172
- 11. Dark Gray Cover Stitch..... 0134
- 12. Brown Cover Stitch & Lace Detail1154
- 13. Medium Gray Detail0108
- 14. White Detail 0010

DESIGNS




Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

51261-15 Camper 3 Floor FSA

Size Inches: **8.74 X 3.93 in.** Size mm: **221.9 X 99.9 mm** Stitch Count: **20274 St.**

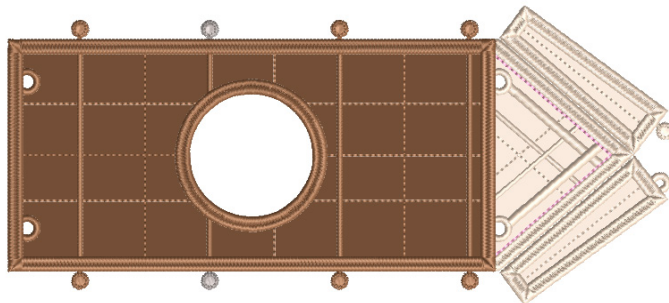


- 1. Brown Fabric Placement Stitch 1172
- 2. Cut Line & Tackdown..... 1172
- 3. Cream Fabric Placement Stitch 1172
- 4. Cut Line & Tackdown..... 1172
- 5. Light Tan Cover Stitch & Lace Detail 1172
- 6. Pink Detail 2550
- 7. Medium Gray Buttonettes.....0108
- 8. Brown Cover Stitch & Lace Detail1154

FABRIC REQUIRED

51261-16 Camper 3 Roof 1 FSA

Size Inches: **8.43 X 3.54 in.** Size mm: **214.2 X 90.0 mm** Stitch Count: **16364 St.**

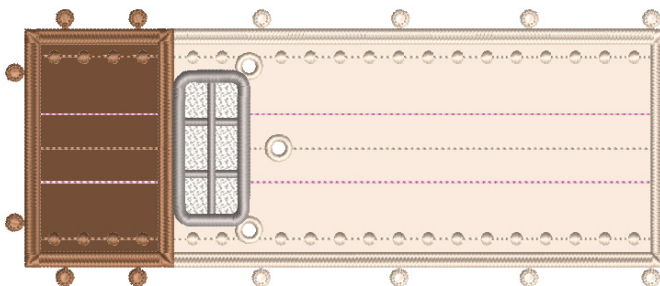


- 1. Cream Fabric Placement Stitch 0010
- 2. Cut Line & Tackdown..... 0010
- 3. Brown Fabric Placement Stitch 0010
- 4. Cut Line & Tackdown..... 0010
- 5. White Lace Window..... 0010
- 6. Pink Detail 2550
- 7. Light Tan Cover Stitch & Lace Detail 1172
- 8. Brown Cover Stitch & Lace Detail1154
- 9. Medium Gray Detail0108

DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

FABRIC REQUIRED

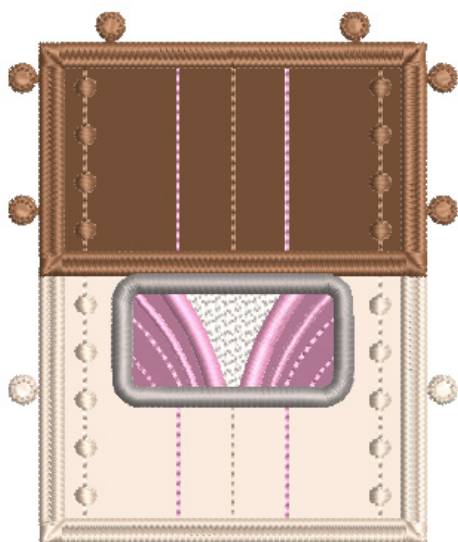

51261-17 Camper 3 Roof 2 FSA

Size Inches: Size mm: Stitch Count:

4.19 X 3.54 in. 106.5 X 90.0 mm 10580 St.

- 1. Cream Fabric Placement Stitch 0010
- 2. Cut Line & Tackdown..... 0010
- 3. Brown Fabric Placement Stitch 0010
- 4. Cut Line & Tackdown..... 0010
- 5. Pink Fabric Placement Stitch..... 0010
- 6. Cut Line & Tackdown..... 0010
- 7. White Lace Window..... 0010
- 8. Pink Detail 2550
- 9. Pink Cover Stitch..... 2550
- 10. Light Tan Cover Stitch & Lace Detail 1172
- 11. Brown Cover Stitch & Lace Detail 1154
- 12. Medium Gray Cover Stitch 0108

51261-18 Camper 3 Pennants & Overhang FSL

Size Inches: Size mm: Stitch Count:

3.98 X 3.39 in. 101.2 X 86.2 mm 13698 St.

- 1. Single Color Design..... 2550



MATERIALS



Stabilizer

- OESD AquaMesh
- OESD BadgeMaster
- OESD StabilStick CutAway

Notions & Tools

- Alligator Clamps
- Button Clips
- Expert Embroidery Tape WashAway
- Perfect Punch Tool
- Perfect Embroidery Press Cloth
- Organ Needle: 75/11 Embroidery Sharp

Isacord Thread Colors

As per thread chart
Match bobbin thread to top thread

MATERIALS



Fabric/Textiles



Camper 1

- Blue - ¼ yard
- Pink - ¼ yard
- Gray - (1) 6" x 3"
- Designs 51261-01 & 02 (camper walls)
Cut 2 blue fabric 3" x 8"
Cut 2 pink fabric 4" x 8"
Cut 2 gray fabric 2 ½" x 2 ½"
- Design 51261-03 (camper floor)
Cut 1 blue fabric 4" x 7"
Cut 1 pink fabric 4 ½" x 3"
- Design 51261-04 (camper roof)
Cut 1 blue fabric 4" x 2 ½"
Cut 1 pink fabric 4" x 7"
- Design 51261-05 (camper roof 2)
Cut 1 blue fabric 4" x 4"
Cut 1 pink fabric 4" x 3"
- Note: Fabric sizes are estimates and may result in overage.

51261-01




Requires 1 Design

51261-02




Requires 1 Design

51261-03

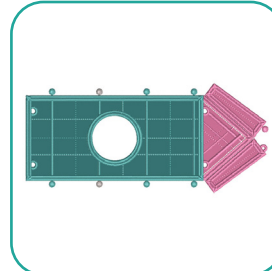


Requires 1 Design

51261-04

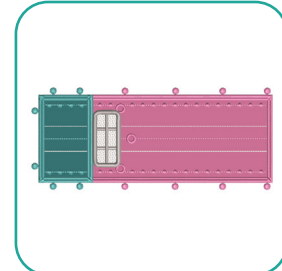


Requires 1 Design

51261-05

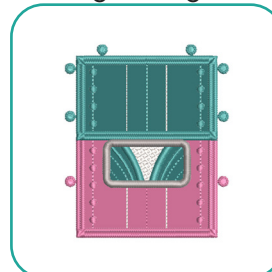

Requires 1 Design

51261-06

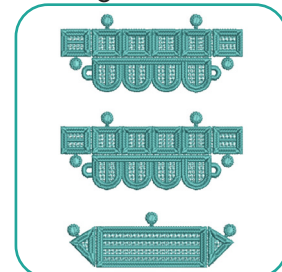

Requires 1 Design

MATERIALS




Fabric/Textiles



Camper 2


- Yellow - ¼ yard
- White - ¼ yard
- Gray - (1) 6" x 3"
- Designs 51261-07 & 08 (camper walls)
 - Cut 2 yellow fabric 3" x 8"
 - Cut 2 white fabric 4" x 8"
 - Cut 2 gray fabric 2 ½" x 2 ½"
- Design 51261-09 (camper floor)
 - Cut 1 yellow fabric 4" x 7"
 - Cut 1 white fabric 4 ½" x 3"
- Design 51261-10 (camper roof)
 - Cut 1 yellow fabric 4" x 2 ½"
 - Cut 1 white fabric 4" x 7"
- Design 51261-11 (camper roof 2)
 - Cut 1 yellow fabric 4" x 4"
 - Cut 1 white fabric 4" x 3"
- Note: Fabric sizes are estimates and may result in overage.

51261-07

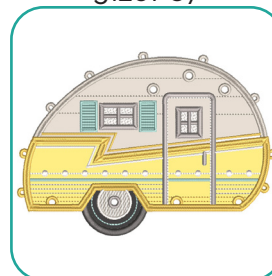


Requires 1 Design

51261-08

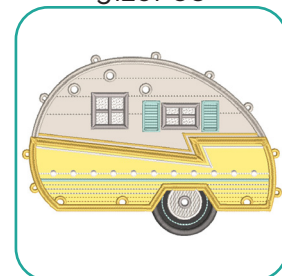


Requires 1 Design

51261-09

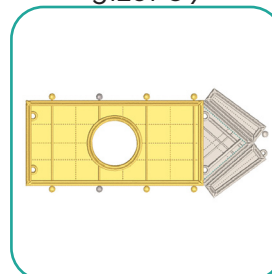


Requires 1 Design

51261-10

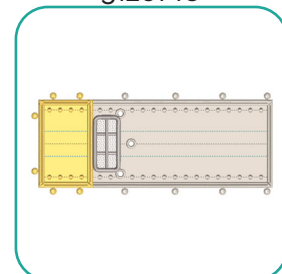


Requires 1 Design

51261-11

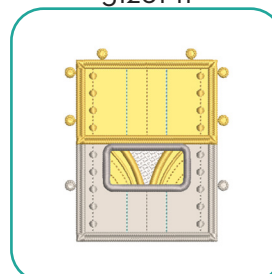

Requires 1 Design

51261-12

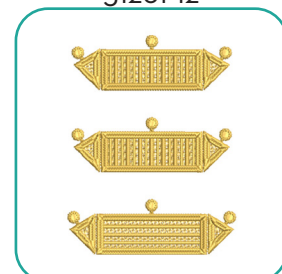

Requires 1 Design

MATERIALS



Fabric/Textiles



Camper 3

- Brown - $\frac{1}{4}$ yard
- Cream - $\frac{1}{4}$ yard
- Gray - (1) 6" x 3"
- Designs 51261-13 & 14 (camper walls)
Cut 2 brown fabric 3" x 8"
Cut 2 cream fabric 4" x 8"
Cut 2 gray fabric 2 $\frac{1}{2}$ " x 2 $\frac{1}{2}$ "
- Design 51261-15 (camper floor)
Cut 1 brown fabric 4" x 7"
Cut 1 cream fabric 4 $\frac{1}{2}$ " x 3"
- Design 51261-16 (camper roof)
Cut 1 brown fabric 4" x 2 $\frac{1}{2}$ "
Cut 1 cream fabric 4" x 7"
- Design 51261-17 (camper roof 2)
Cut 1 brown fabric 4" x 2 $\frac{1}{2}$ "
Cut 1 cream fabric 4" x 3"
Cut 1 pink fabric 2 $\frac{1}{2}$ " x 2"
- Note: Fabric sizes are estimates and may result in overage.

51261-13




Requires 1 Design

51261-14




Requires 1 Design

51261-15

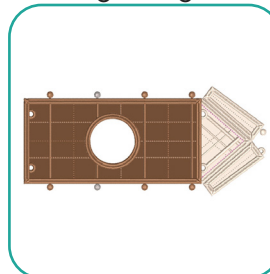


Requires 1 Design

51261-16

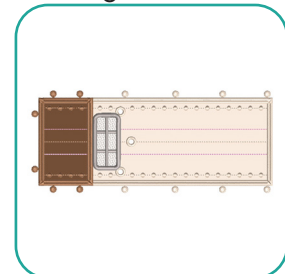

Requires 1 Design

51261-17

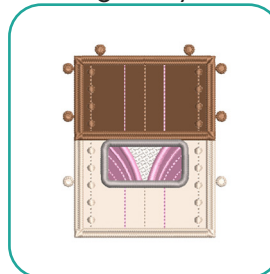

Requires 1 Design

51261-18



Requires 1 Design

GENERAL FREESTANDING LACE GUIDE



Stabilizer

- OESD AquaMesh
- OESD BadgeMaster

Notion/Tools

- 80/12 Embroidery Ballpoint Titanium needle for extended needle life
- OESD Alligator Clamps
- OESD Button Clips
- OESD Perfect Point and Press Tool

Isacord Thread Colors

- All OESD designs are digitized with Isacord 40 wt. polyester thread as the top thread and in the bobbin.
- Refer to the thread chart for color specifications.
- Match bobbin thread color to the top thread.

Instructions

Step 1 - Hoop

For FSL structures, hoop one layer of OESD AquaMesh and one layer of OESD BadgeMaster. BadgeMaster contains more starch so, combined with the AquaMesh, the lace is more rigid.

For other FSL, where a softer lace is desired, hoop two layers of AquaMesh.

Step 2 - Embroider

Stitch the design per the thread chart with matching thread in the bobbin at each color change.

When complete, remove from the hoop and trim away excess stabilizer about 1/4"-1/2" from the stitching.

Step 3 - Rinse

Rinse remaining stabilizer out in warm running water.

For stiffer lace and FSL structures, DO NOT rinse away all of the stabilizer. The lace should be just slightly tacky.

For softer lace, rinse until all traces of the stabilizer is removed.

Step 4 - Dry

Lay right side down flat on a non-stick surface, such as a cooling rack, parchment paper or Teflon sheet. This minimizes the tendency for the lace to curl.

Let the pieces dry completely before proceeding with any assembly.

Step 5 - Press

Once completely dry, press right side down on a OESD Perfect Embroidery Press Cloth.

Step 6 - Assemble Structure

Note: Specific assembly instructions for a design/collection may be found in the thread chart pdf following the individual design color charts.

Lace must be COMPLETELY DRY before assembly. Wetting the buttonettes or eyelets to assemble is not recommended and may result in them stretching and coming "unbuttoned" when dry.

Use a pair of OESD Alligator Clamps to insert the buttonettes into the eyelets. Insert the tip of the OESD Alligator Clamps into the eyelet, grasp the buttonette and pull through the eyelet. Alternatively, use a stiletto or tweezers to push the buttonette through the eyelet.

Helpful Tips

Limp Lace

If the design is not stiff enough, press the lace pieces on the wrong side while applying spray starch. After ironing, spray again with starch and allow to dry completely. This will stiffen the lace pieces nicely and aid in construction. Or easily re-stiffen by diluting some stabilizer scraps in water (or use liquid starch) and dipping the item in the solution. Lay flat to dry.

Eyelets Too Small

If any of the eyelets appear closed or too small to penetrate with Alligator Clamps, they may be stretched by inserting the small end of the OESD Perfect Point and Press Tool into the eyelet opening and stretching it open wide enough to accommodate the OESD Alligator Clamps.

Button Clips

During the assembly process, some structures pull on buttonettes that have already been inserted and could pull them out altogether. Putting a Button Clip on the assembled buttonette will keep it in position during the assembly process.

Remove the Button Clips when the assembly is complete.

Alternative Construction Option

In some cases, the buttonettes may be pulled to the inside of a project, instead of being visible on the outside.

Insert the OESD Alligator Clamps through the eyelet from the wrong, or inside, of the lace and grasp the corresponding buttonette. Pull the buttonette to the wrong side of the lace.

Pulling the buttonettes to the inside may cause stress on the ones already done. Button clips may be placed on the completed buttonette(s) to prevent them from pulling out of the eyelet.

EMBROIDERY



- The applique instructions included in the design pack are general instructions for the collection. For demonstration purposes, a sample design that best represents the entire collection is shown. Example design is 51261-01. Fabric and thread requirements will vary by design, but the general technique will be the same.
- All designs are stitched with matching thread in the top and bobbin.
- Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

Step 1

- Hoop one layer of AquaMesh and one layer of BadgeMaster for all designs.



Step 2

- Cut the applique fabrics and StabilStick CutAway to the sizes listed in the chart above. Prep the back of the applique fabrics with two layers of StabilStick CutAway, to provide stiffness to the finished structure.



EMBROIDERY




Step 3

- Thread the machine per the thread chart.
- Load selected design into the machine.
- Example design is 51261-01, Camper 1 Wall 1 FSA.
- Stitch Machine Step 1, Gray Fabric Placement Stitch.




Step 4

- Remove the hoop from the machine, but NOT the project from the hoop. Lay the hoop on a flat surface.
- Cover the placement line completely with the prepared fabric.
- Tape in place to secure.
- Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

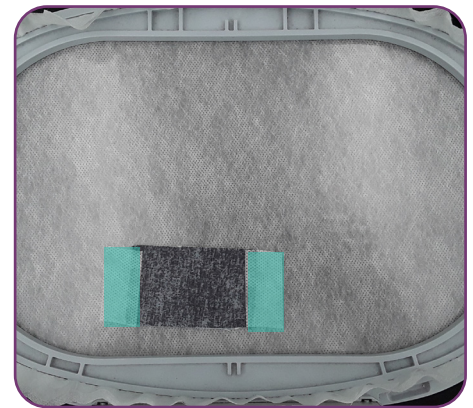

Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

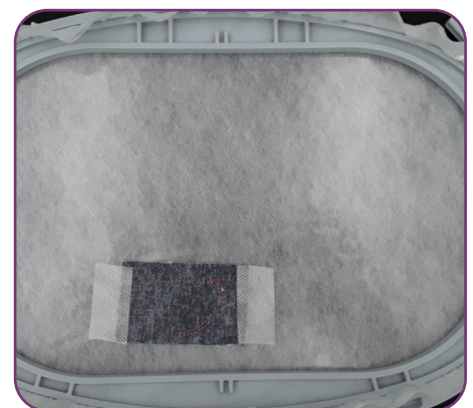

EMBROIDERY




Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the tackdown stitching as possible. If the outermost stitches are cut, the inner stitches will still hold the applique in place.
- Tip: If the AquaMesh is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway or AquaMesh Plus as a patch.




Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Blue Fabric Placement Stitch.

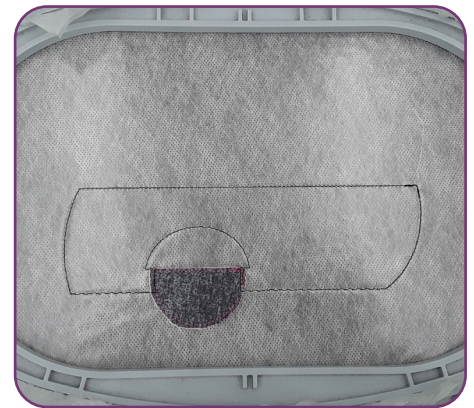

Step 8

- Remove the hoop from the machine, but NOT the project from the hoop. Lay the hoop on a flat surface.
- Cover the placement line completely with the prepared fabric.
- Tape in place to secure.

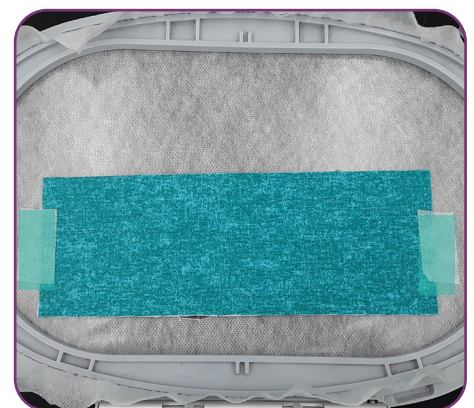


EMBROIDERY




Step 9

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

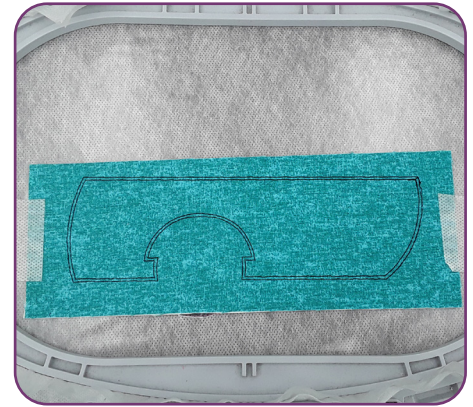


Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the tackdown stitching as possible. If the outermost stitches are cut, the inner stitches will still hold the applique in place.

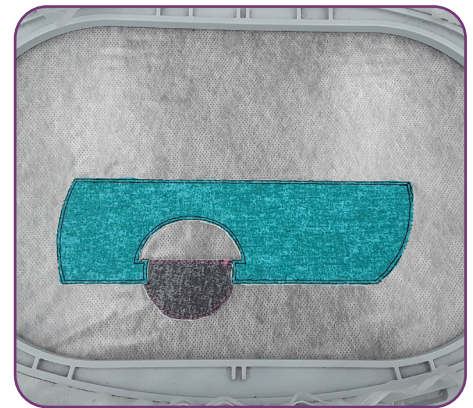

Step 11

- Return the hoop to the machine.
- Stitch Machine Step 5, Pink Fabric Placement Stitch.

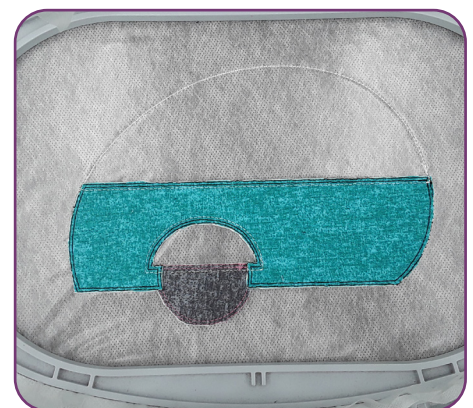


EMBROIDERY




Step 12

- Remove the hoop from the machine, but NOT the project from the hoop. Lay the hoop on a flat surface.
- Cover the placement line completely with the prepared fabric.
- Tape in place to secure.

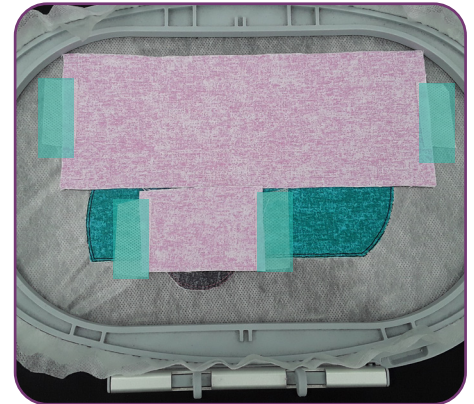


Step 13

- Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.

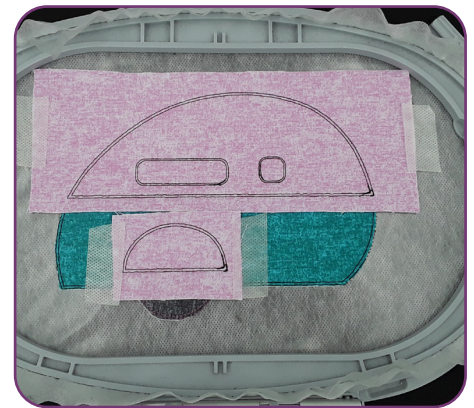

Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the tackdown stitching as possible. If the outermost stitches are cut, the inner stitches will still hold the applique in place.
- Don't forget the windows!
- Tip: If the AquaMesh is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway or AquaMesh Plus as a patch.

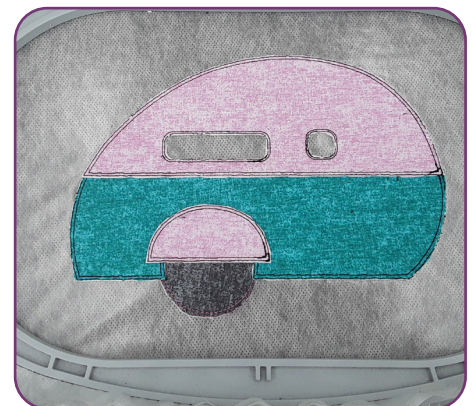


EMBROIDERY



Step 15

- Return the hoop to the machine and stitch the remaining colors according to the thread chart.
- Remember to match the bobbin thread to the upper thread.

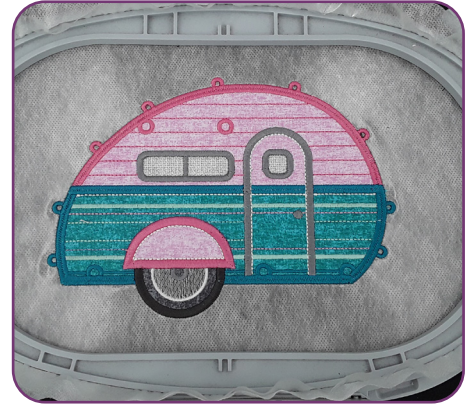

Step 16

- When design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.



ASSEMBLY



Note

- Assembled measurements- Approx. 4 3/4" height, 8 1/4" width, 3 1/4" depth
- Assembly for each camper is as follows. Please note that each camper's overhangs differ in size and shape and camper location. Overhangs are not interchangeable.

Step 1

- Rinse each piece in warm running water until the design is only slightly tacky.
- Lay face down on a non-stick surface to dry. Parchment paper or a cooling rack work well. This prevents the piece from curling.



Step 2

- Press each piece, right side down, on a Perfect Embroidery Press Cloth.




EMBROIDERY




Step 3

- Use the 3mm attachment in the OESD Perfect Punch Tool, to punch holes in the eyelets indicated in the photo.

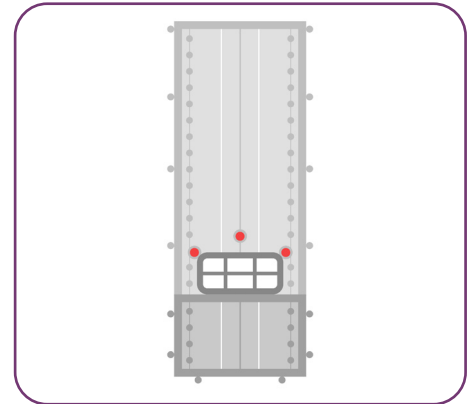


Step 4

- Line up the two roof pieces (51261-O4 & 51261-O5) to connect.
- Load the sewing machine with matching thread in the top and bobbin. An open toe or edge stitch foot is helpful.
- Stitch together using a multi-step zigzag stitch (also known as a serpentine stitch). Back stitch at the beginning and end to secure. Trim thread tails.

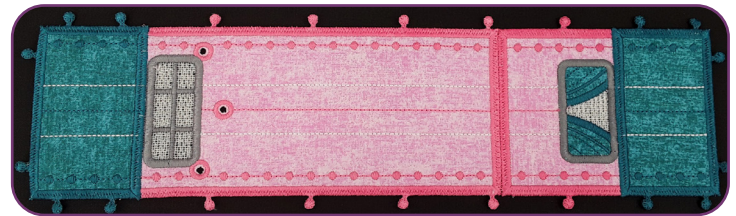

Step 5

- Match the eyelets and buttonettes on the overhang (51261-O6) and roof (51261-O4) as shown. Pull each buttonette through the corresponding eyelet, using button clips to temporarily hold them in place, as needed.

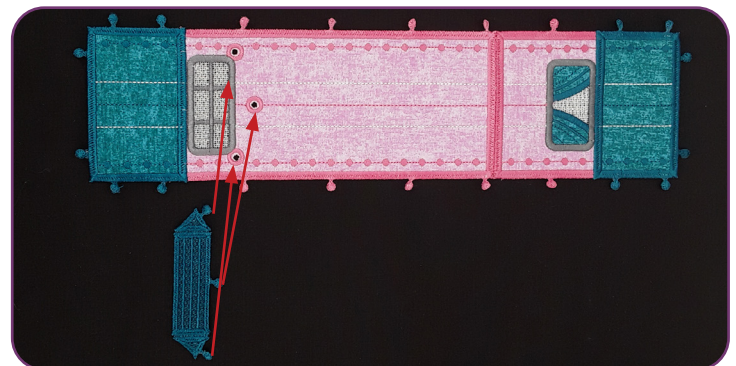


EMBROIDERY




Step 6

- Match the eyelets and buttonettes on the overhang (51261-06) and Wall 1 as shown. Pull each buttonette through the corresponding eyelet, using button clips to temporarily hold them in place, as needed.

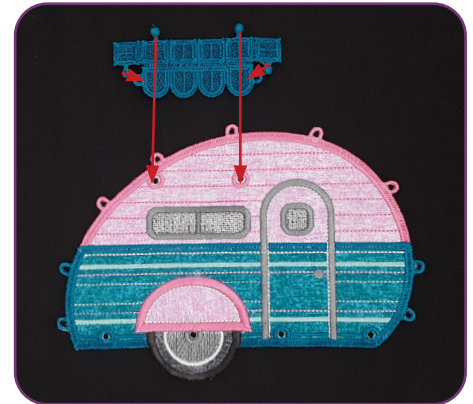


Step 7

- Match the eyelets and buttonettes on the overhang (51261-06) and Wall 2 as shown. Pull each buttonette through the corresponding eyelet, using button clips to temporarily hold them in place, as needed.

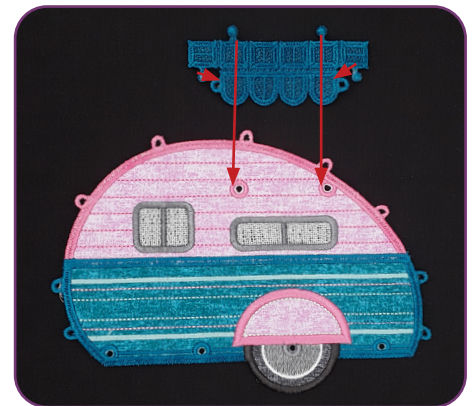

Step 8

- Match the eyelets and buttonettes on the walls and roof as shown. Pull each buttonette through the corresponding eyelet, using button clips to temporarily hold them in place, as needed.

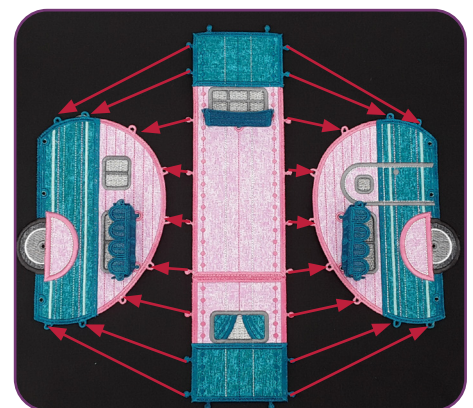


EMBROIDERY




Step 9

- Hinge the two side flanges of the base (51261-03) toward the bottom. Match the eyelet and buttonette at the top to create a triangle.

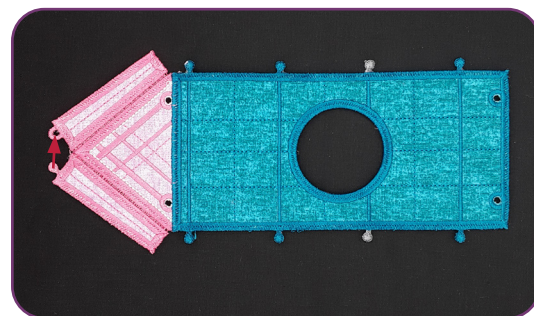

Step 10

- Match the eyelets and buttonettes on the overhang and Wall 2 as shown. Pull each buttonette through the corresponding eyelet, using button clips to temporarily hold them in place, as needed.

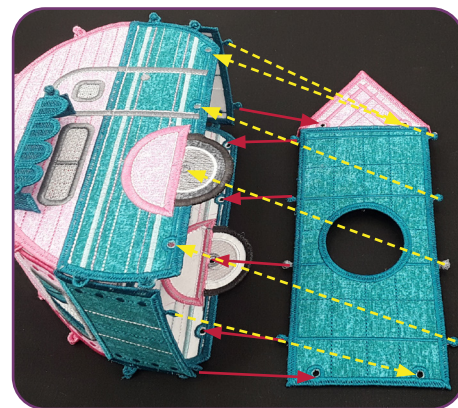

Finishing Touches


- Add tea lights or pixie lights to create a glow.




PUNCH TOOL GUIDES




51261-01

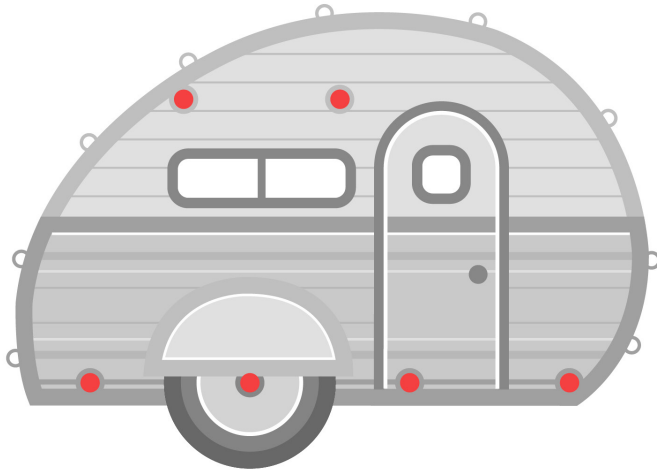


51261-02

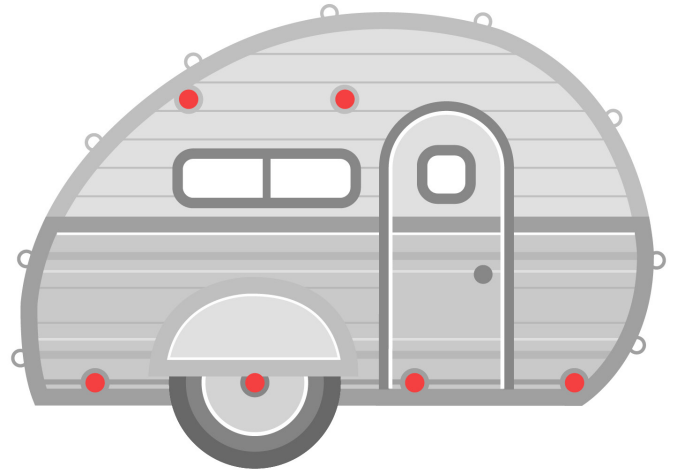

51261-03

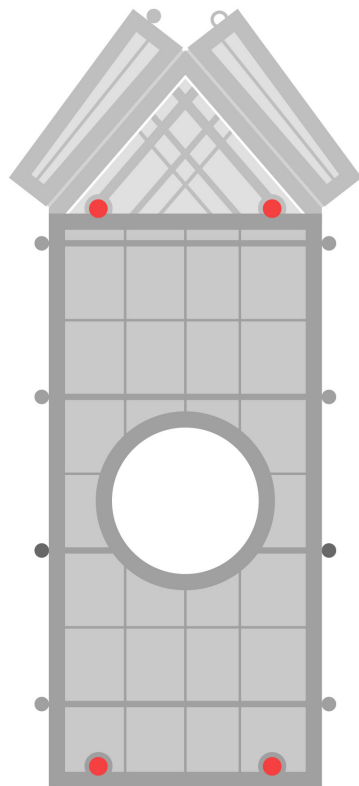

51261-04

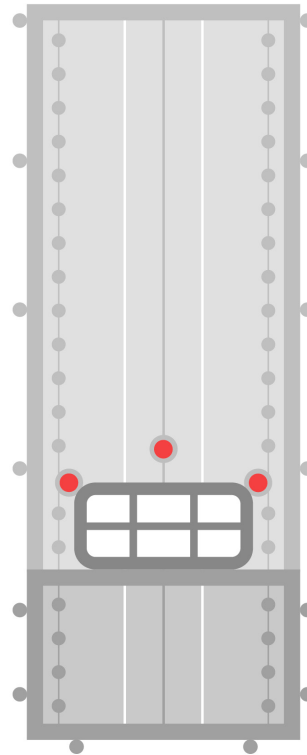


-  = 2 MM
-  = 3 MM
-  = 4 MM


PUNCH TOOL GUIDES




51261-07

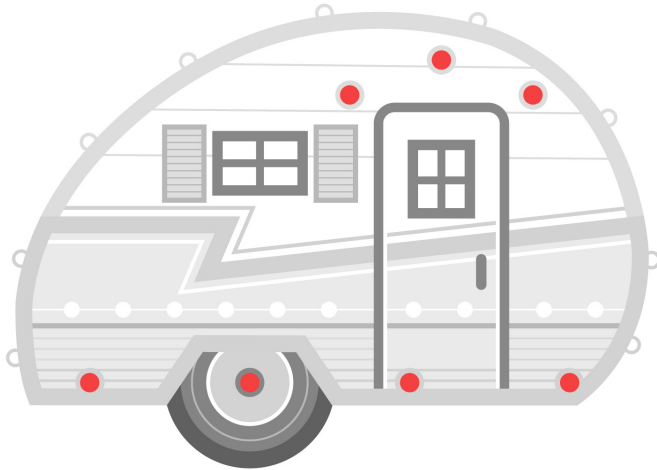


51261-08

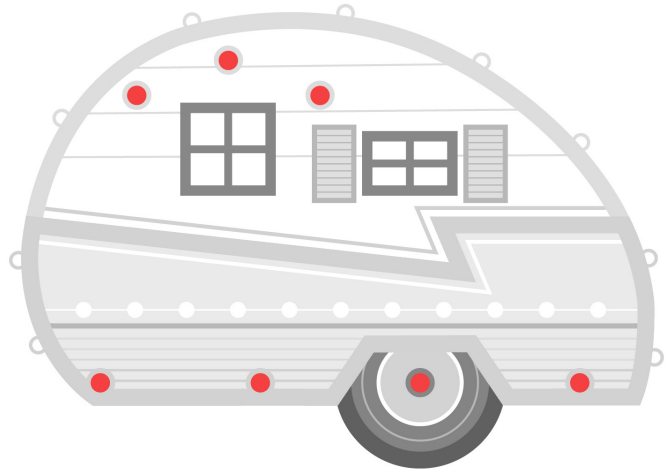

51261-09

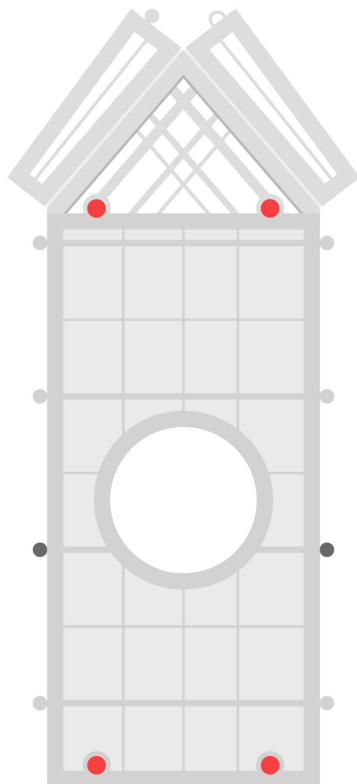

51261-10

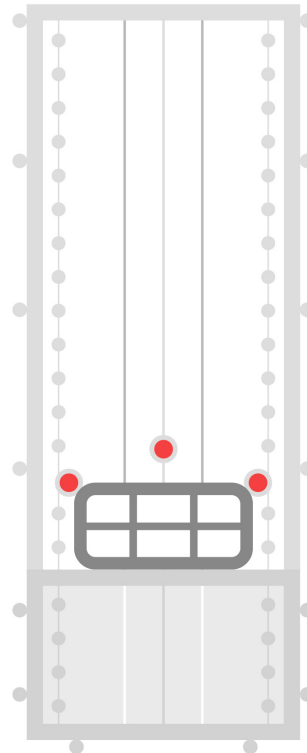


-  = 2 MM
-  = 3 MM
-  = 4 MM


PUNCH TOOL GUIDES




51261-13

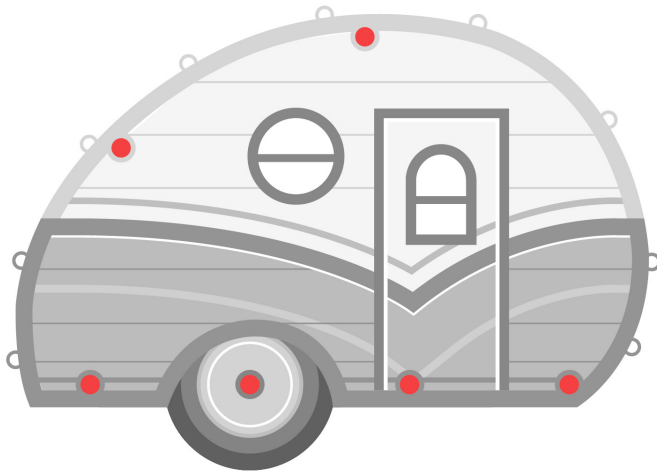


51261-14

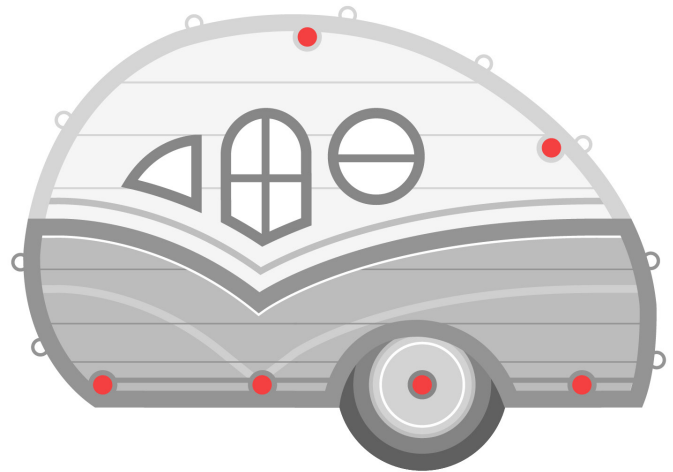

51261-15

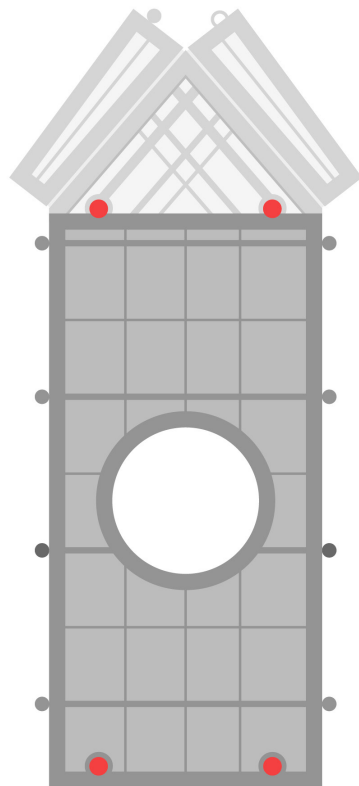

51261-16

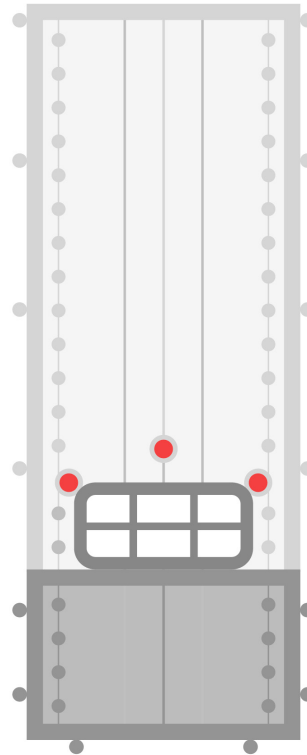


-  = 2 MM
-  = 3 MM
-  = 4 MM

PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

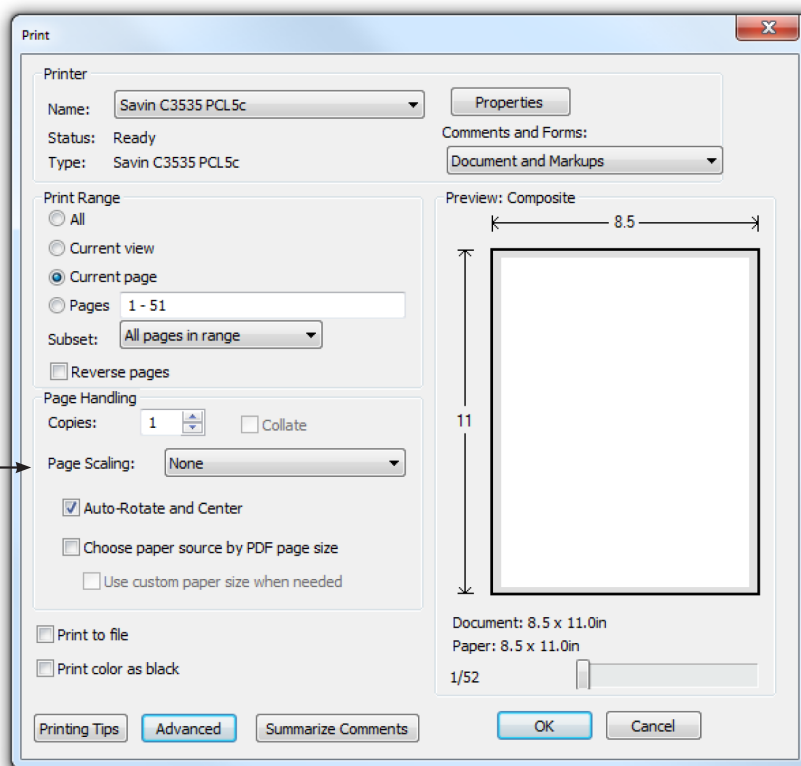

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

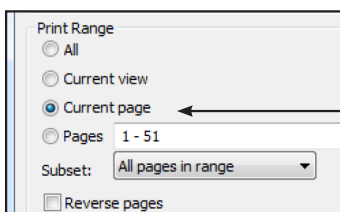

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

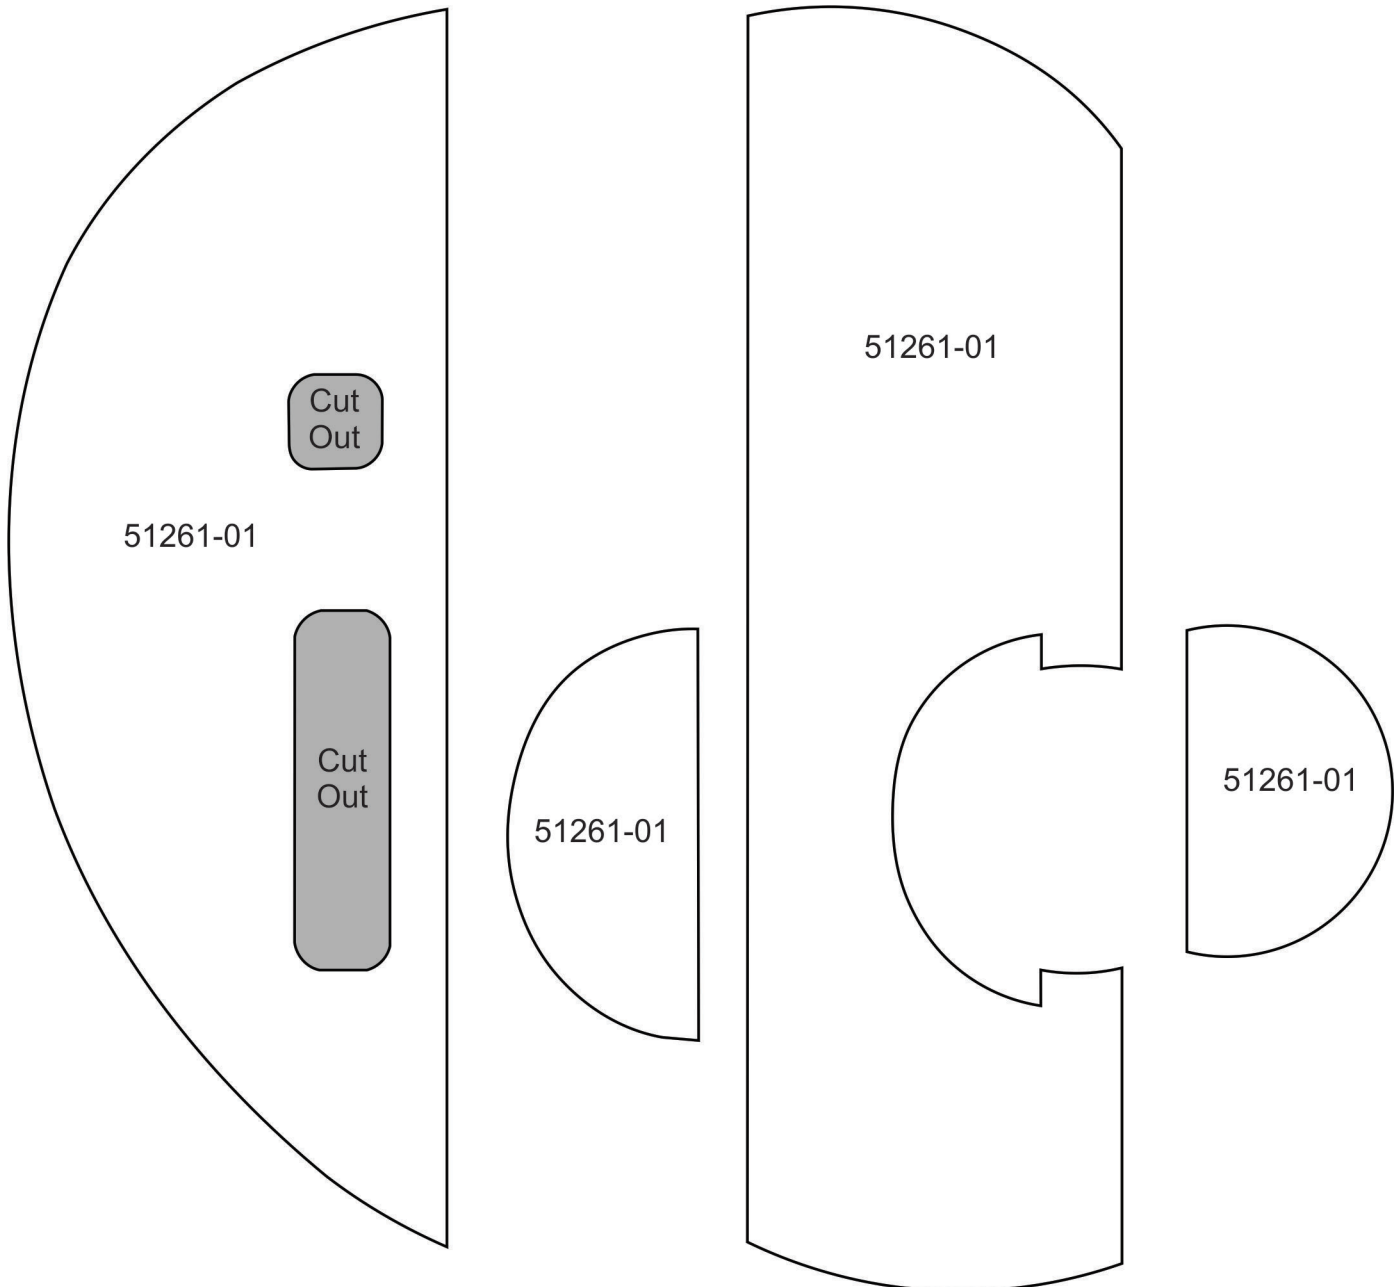

APPLIQUE PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

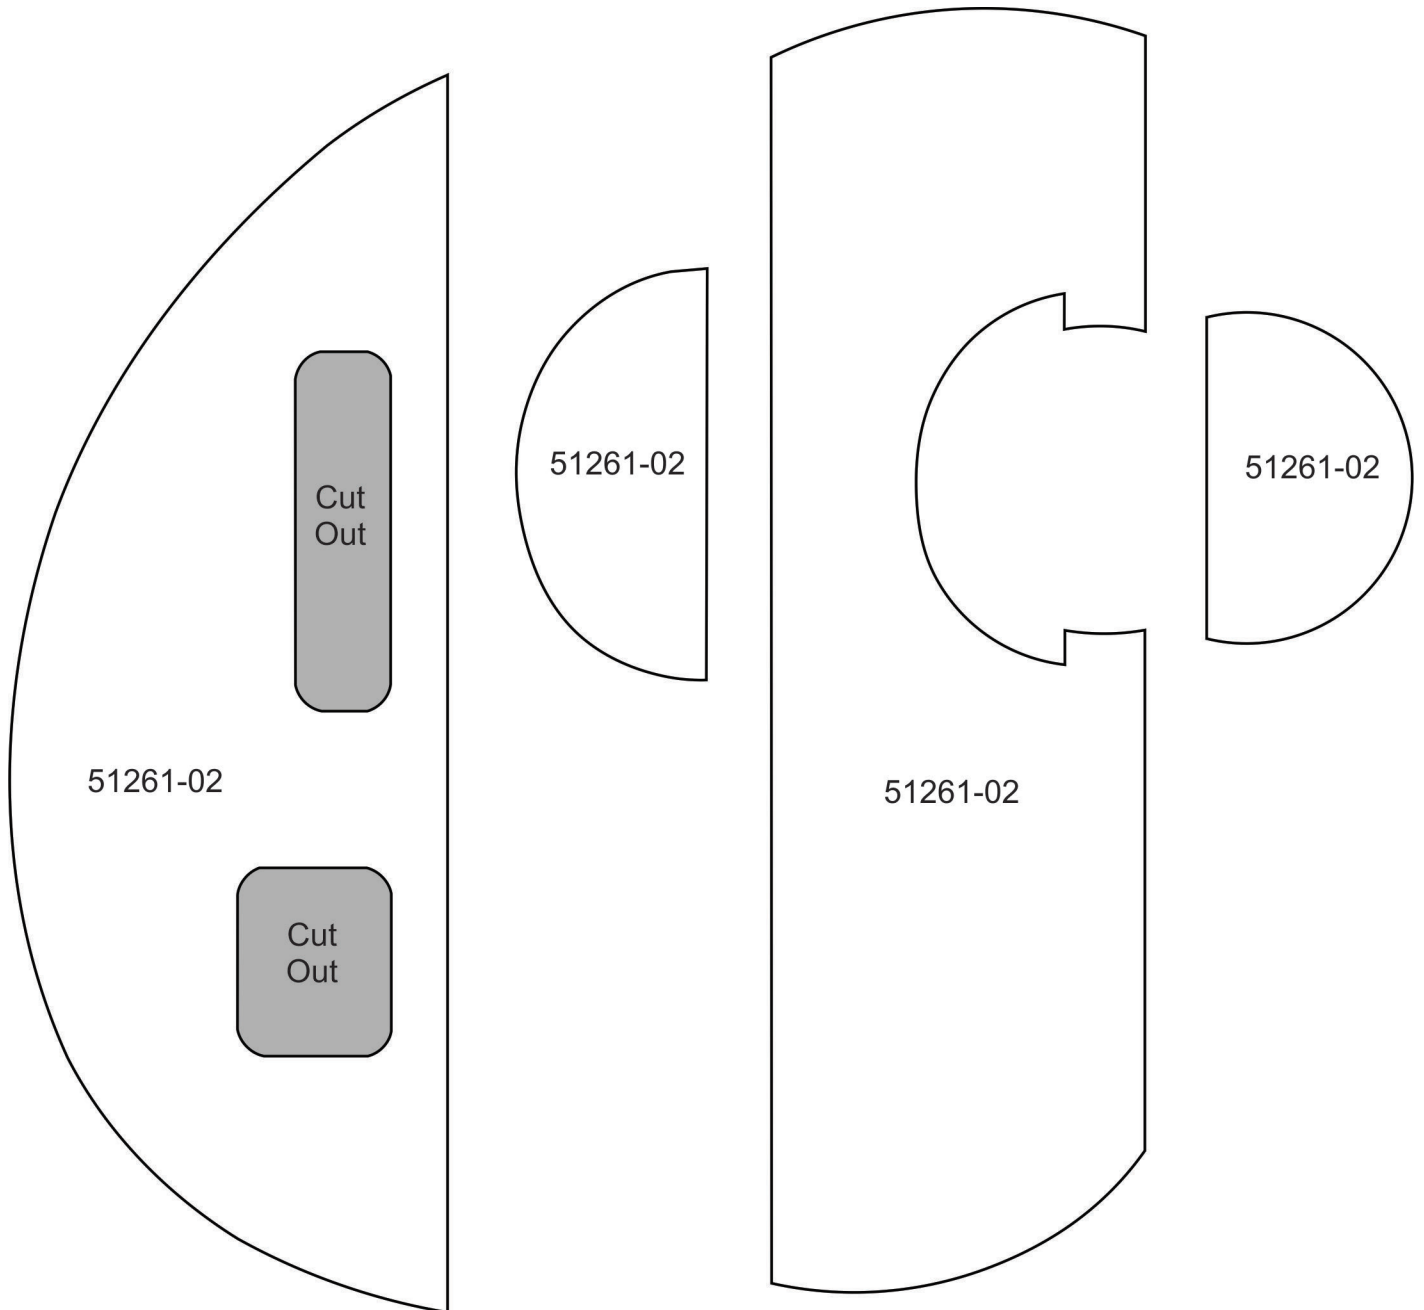

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

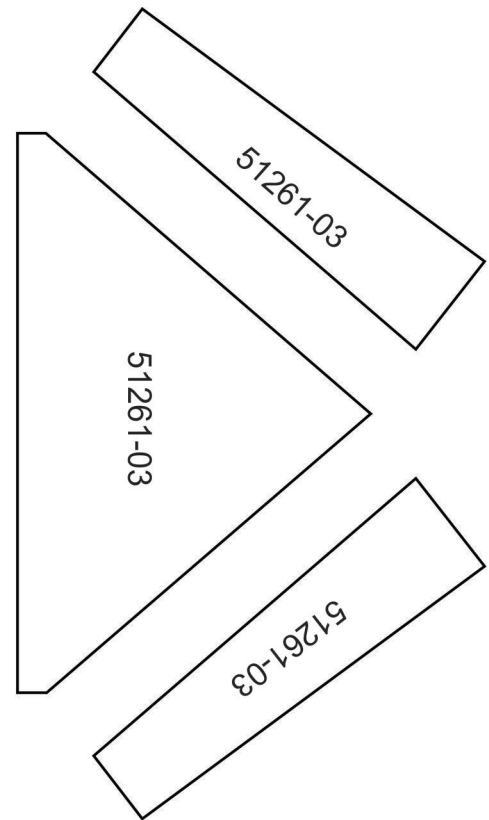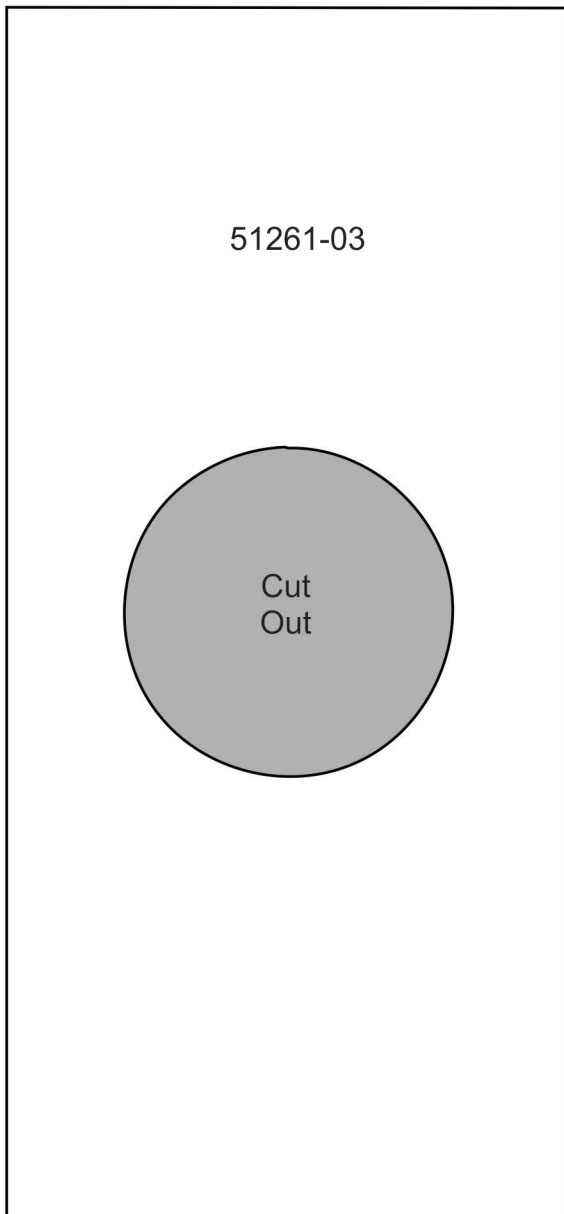

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

51261-04




Cut Out

51261-04

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

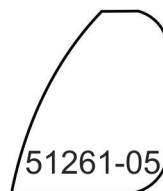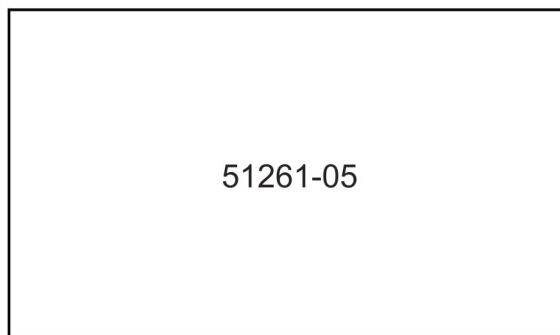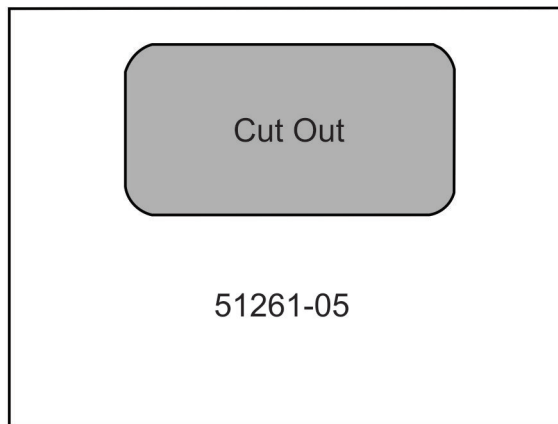

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

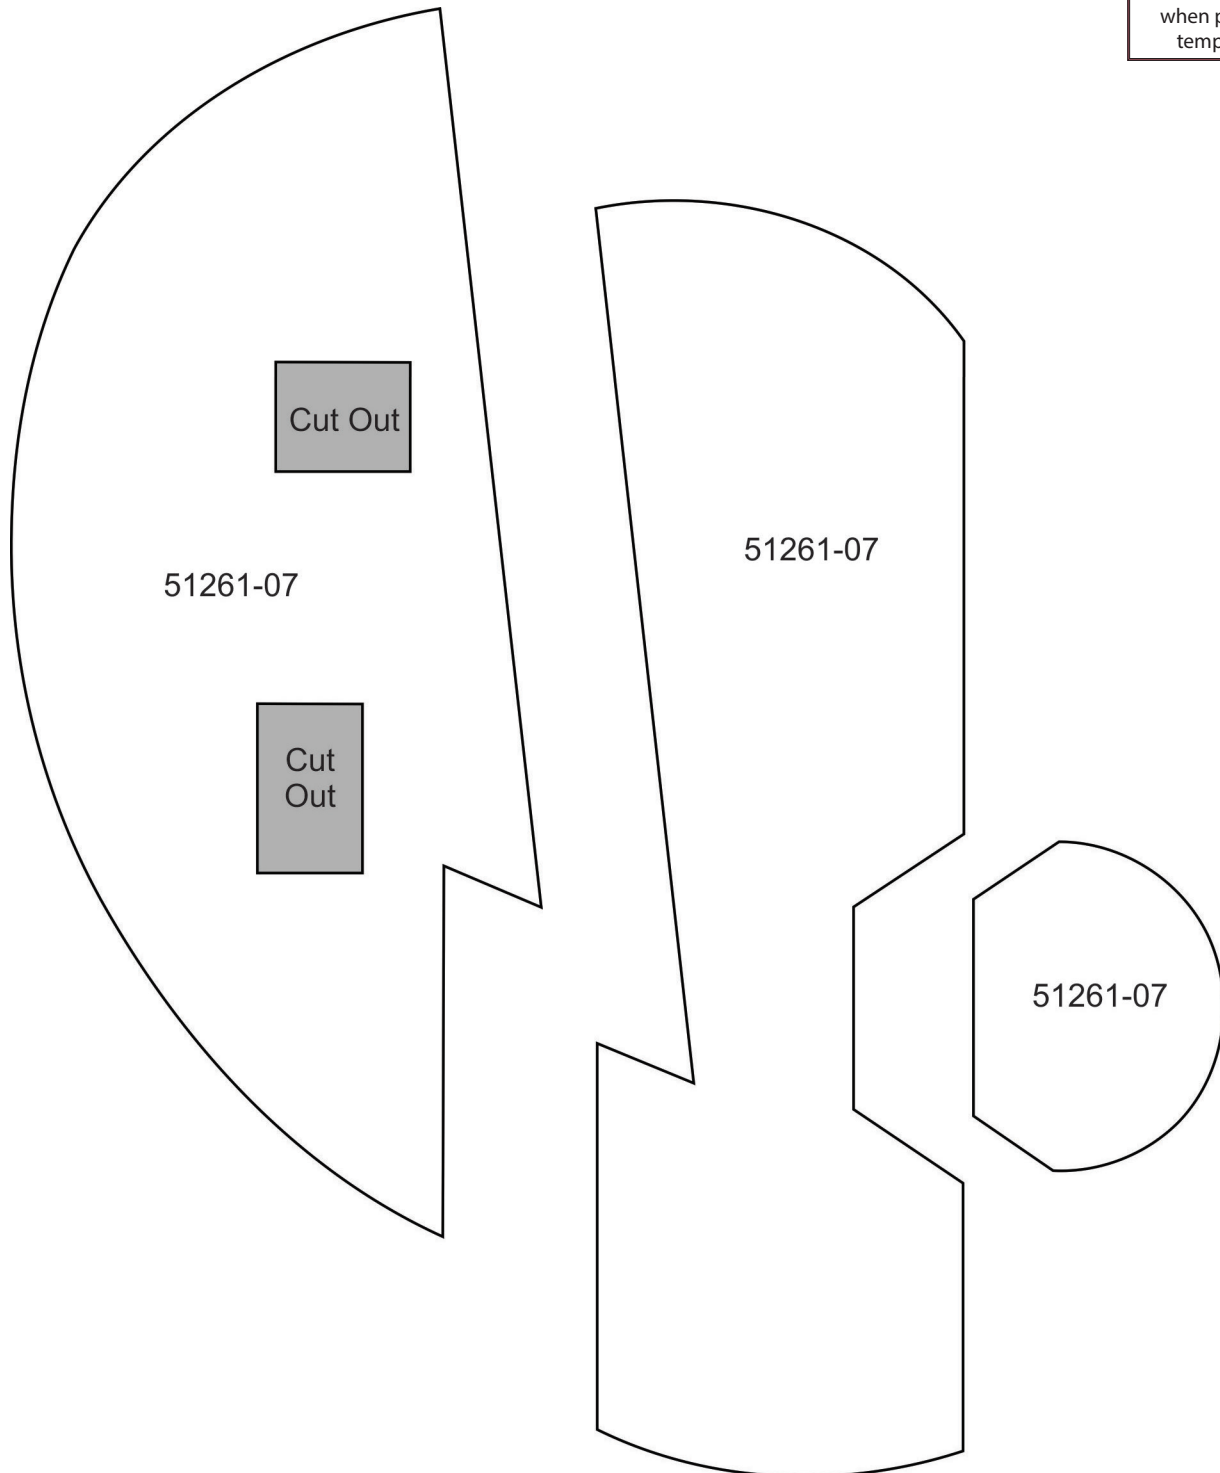

APPLIQUE PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

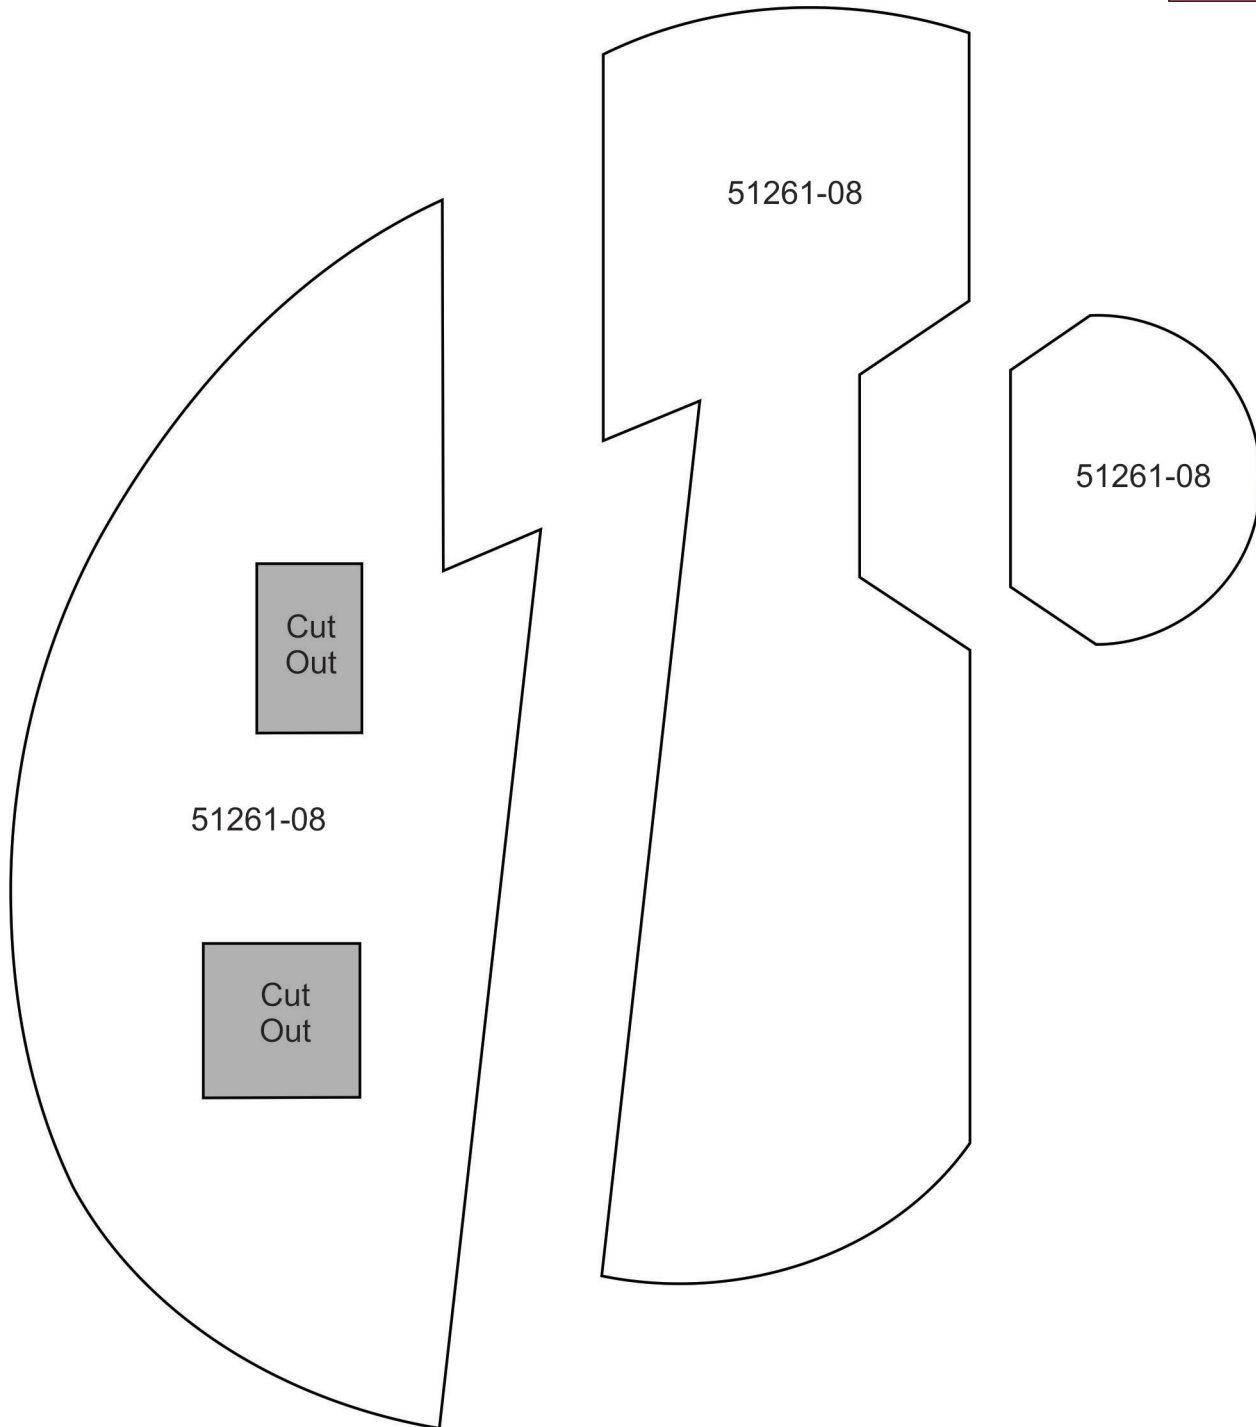

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

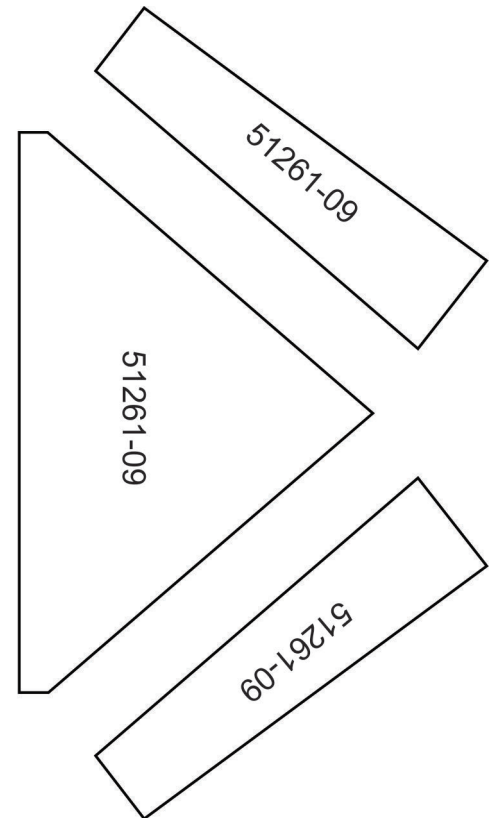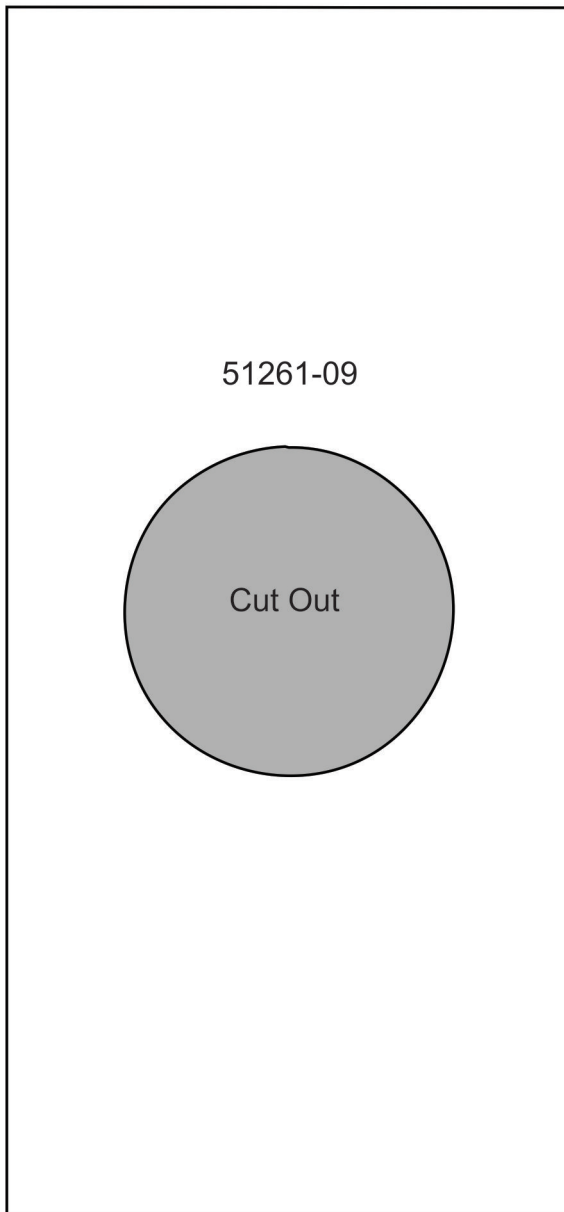

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

51261-10




Cut Out

51261-10

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

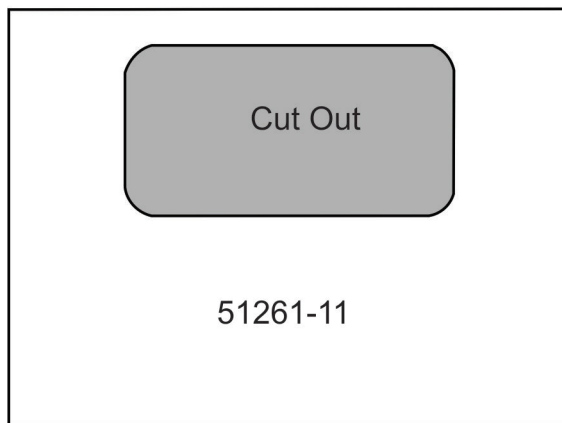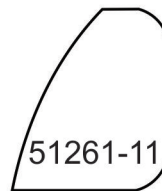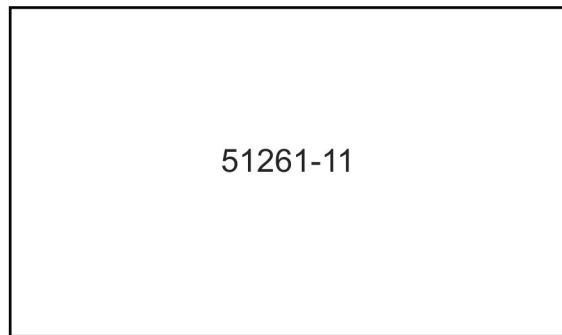

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

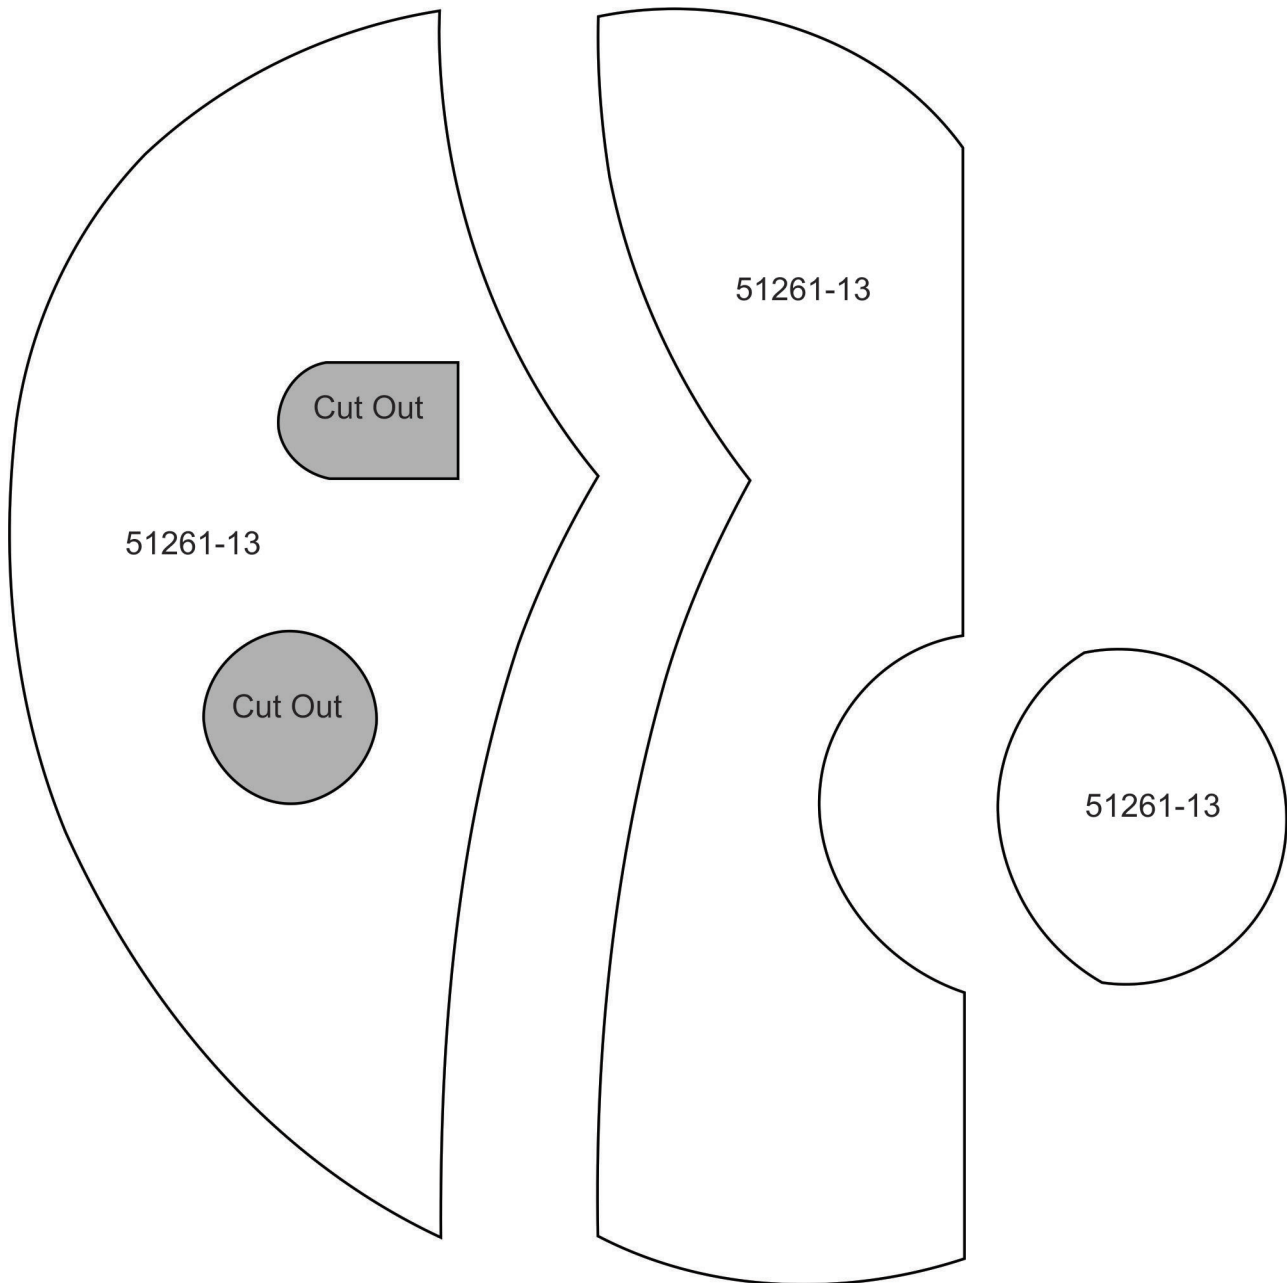

APPLIQUE PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

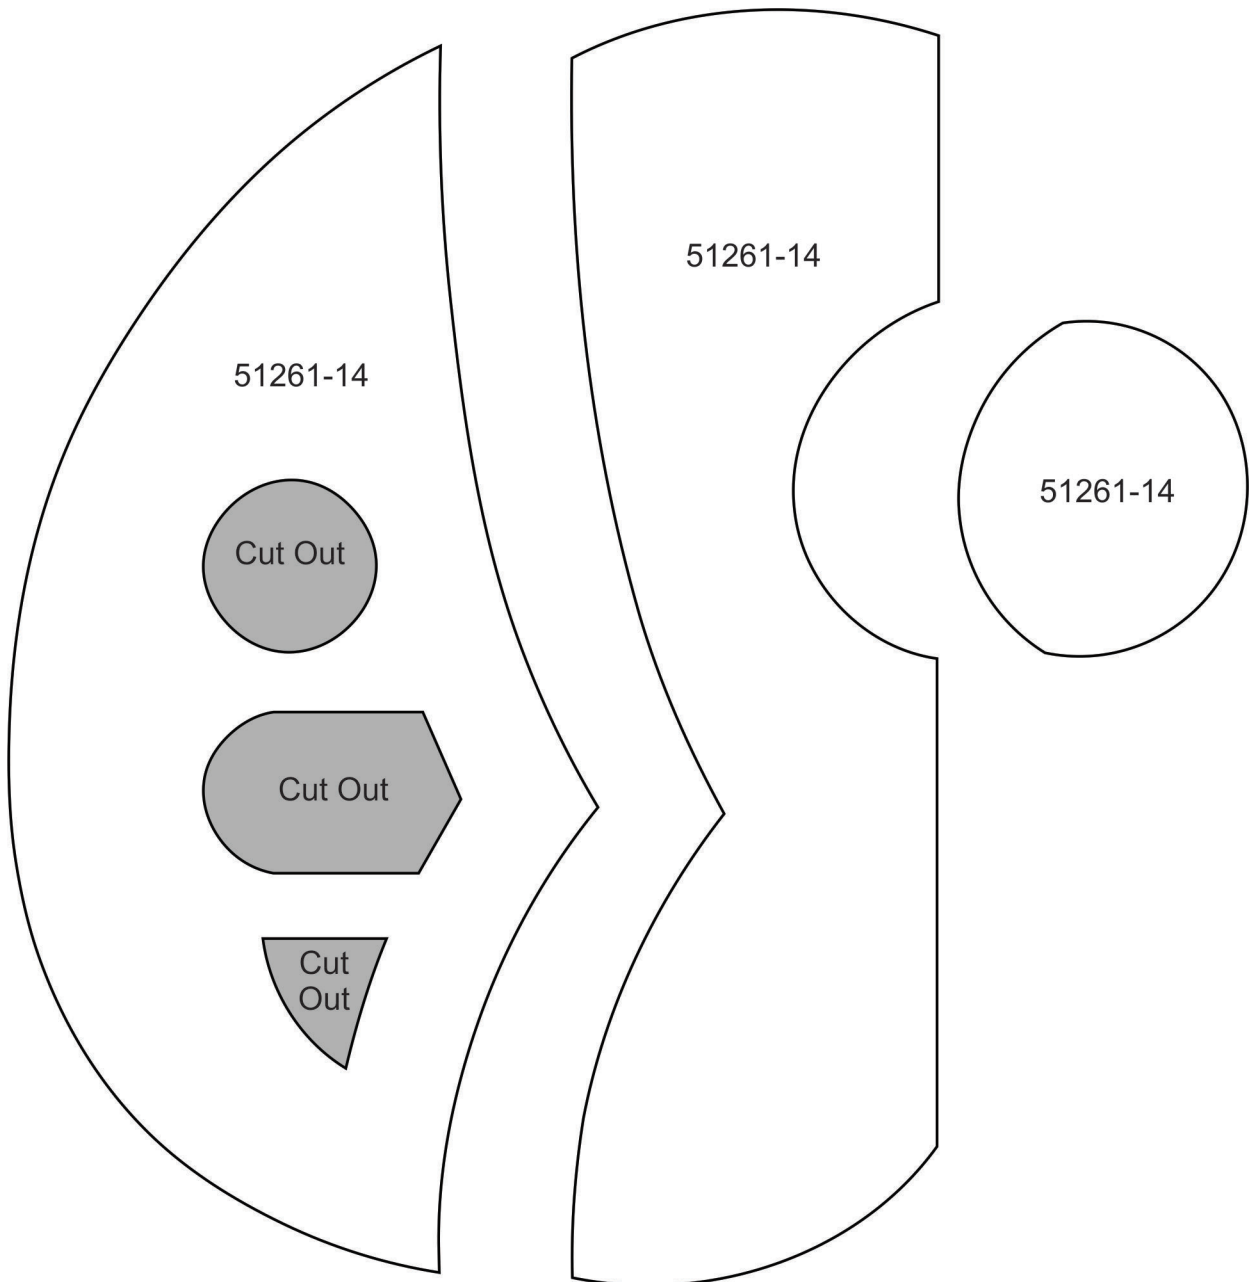

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

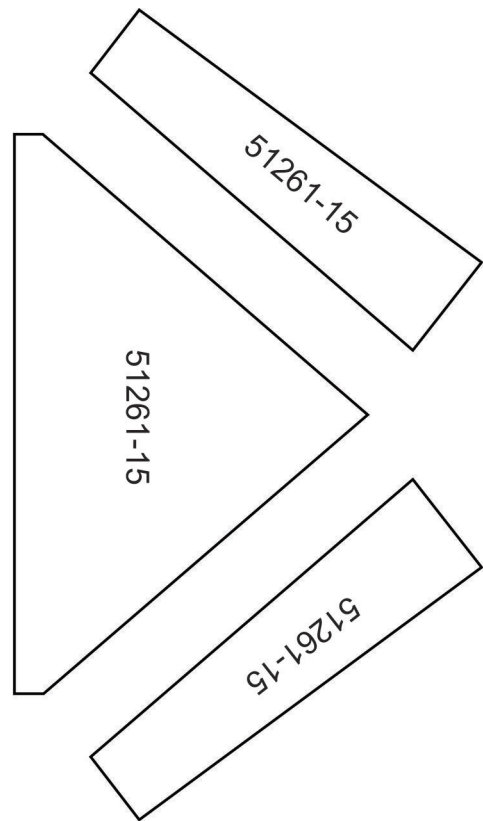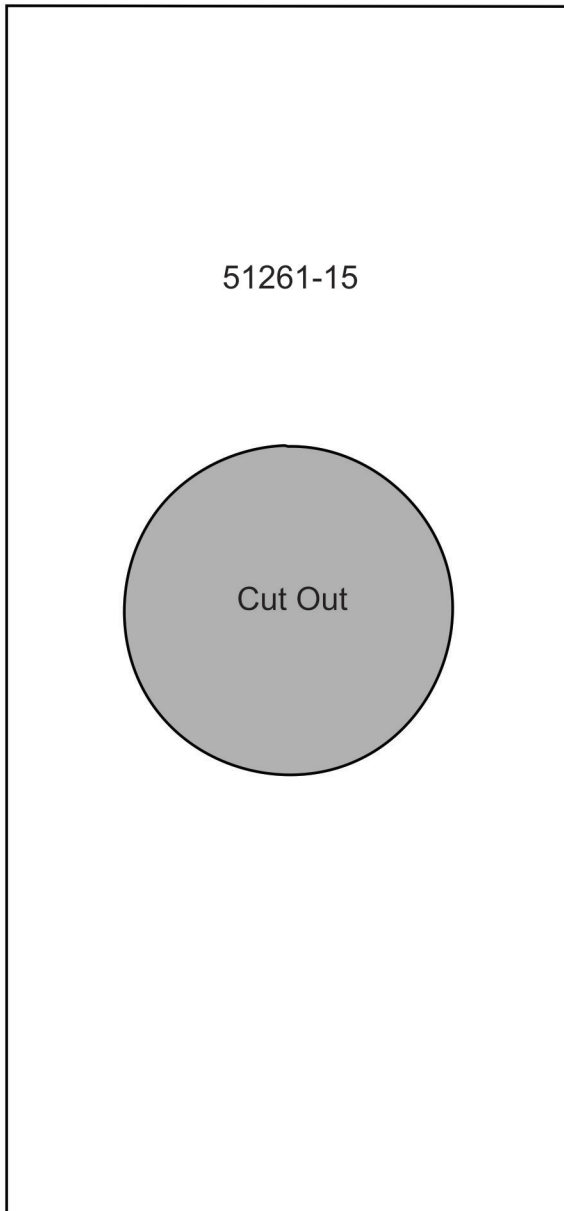

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

51261-16




Cut Out

51261-16

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

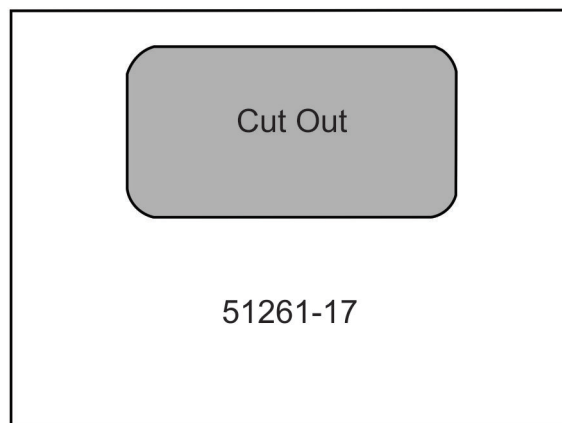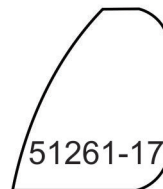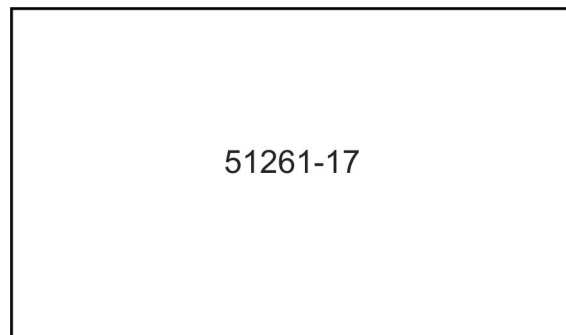

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

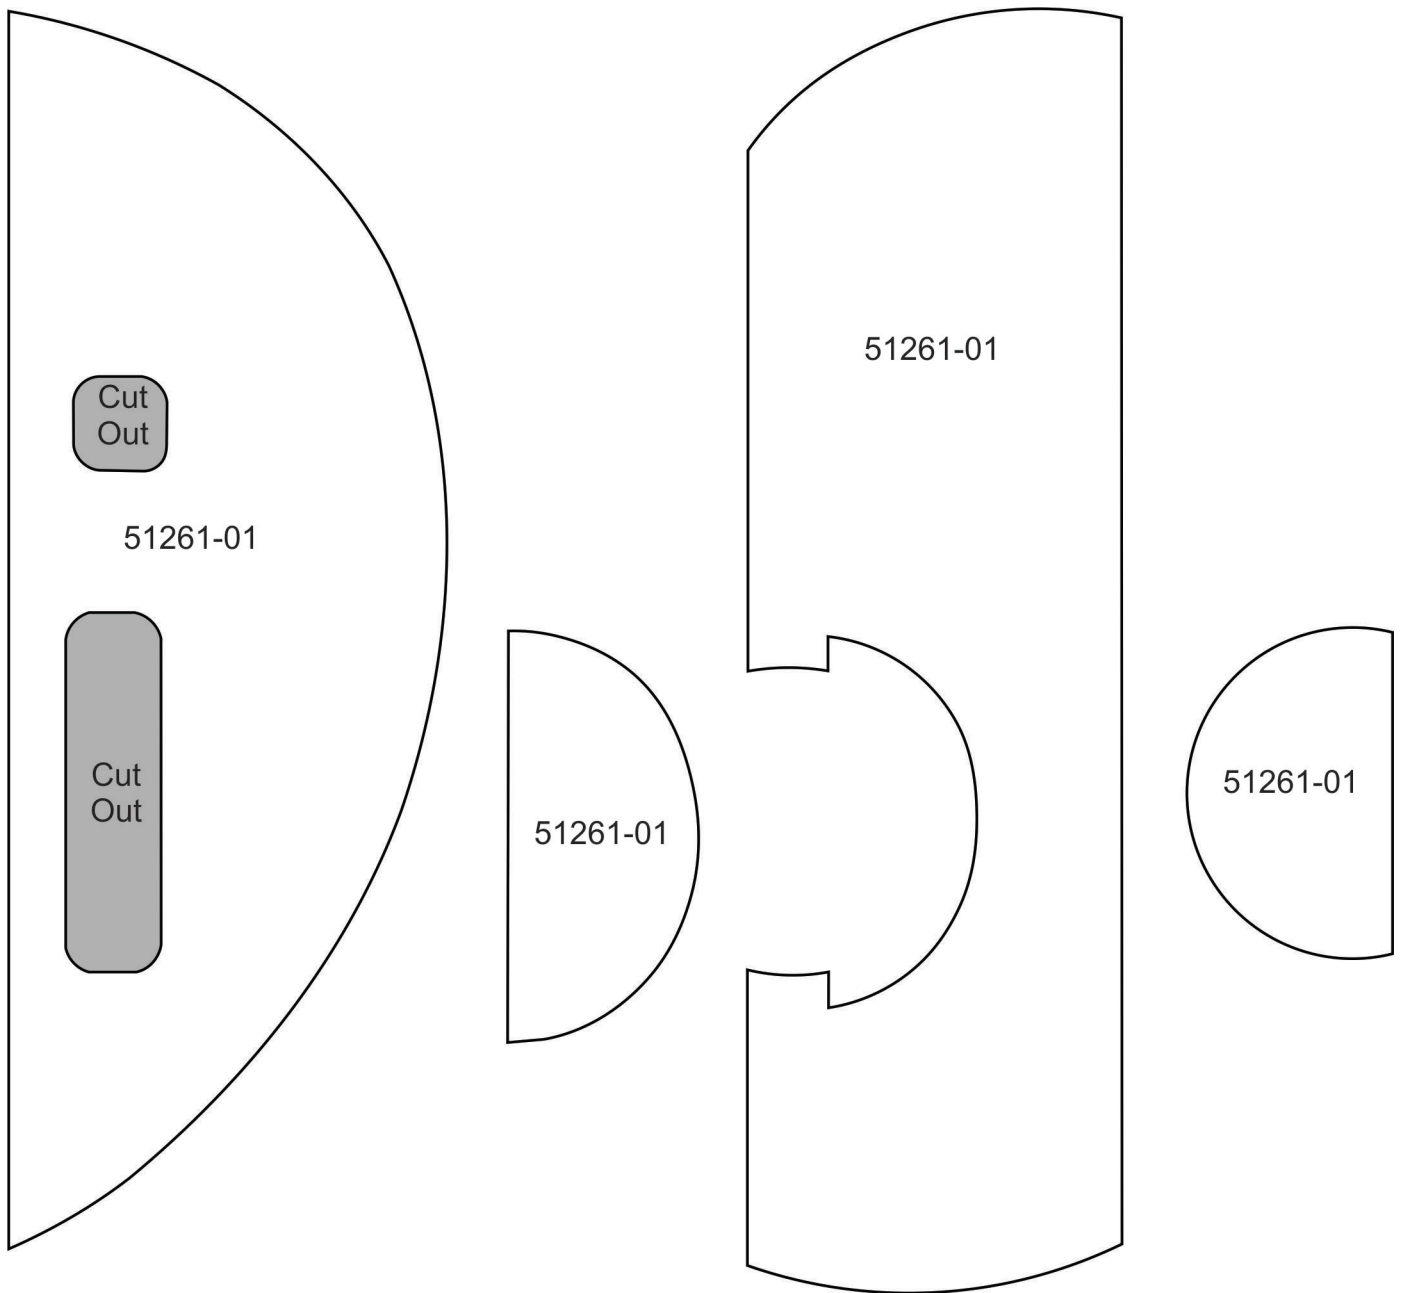

MIRRORED PATTERNS





Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

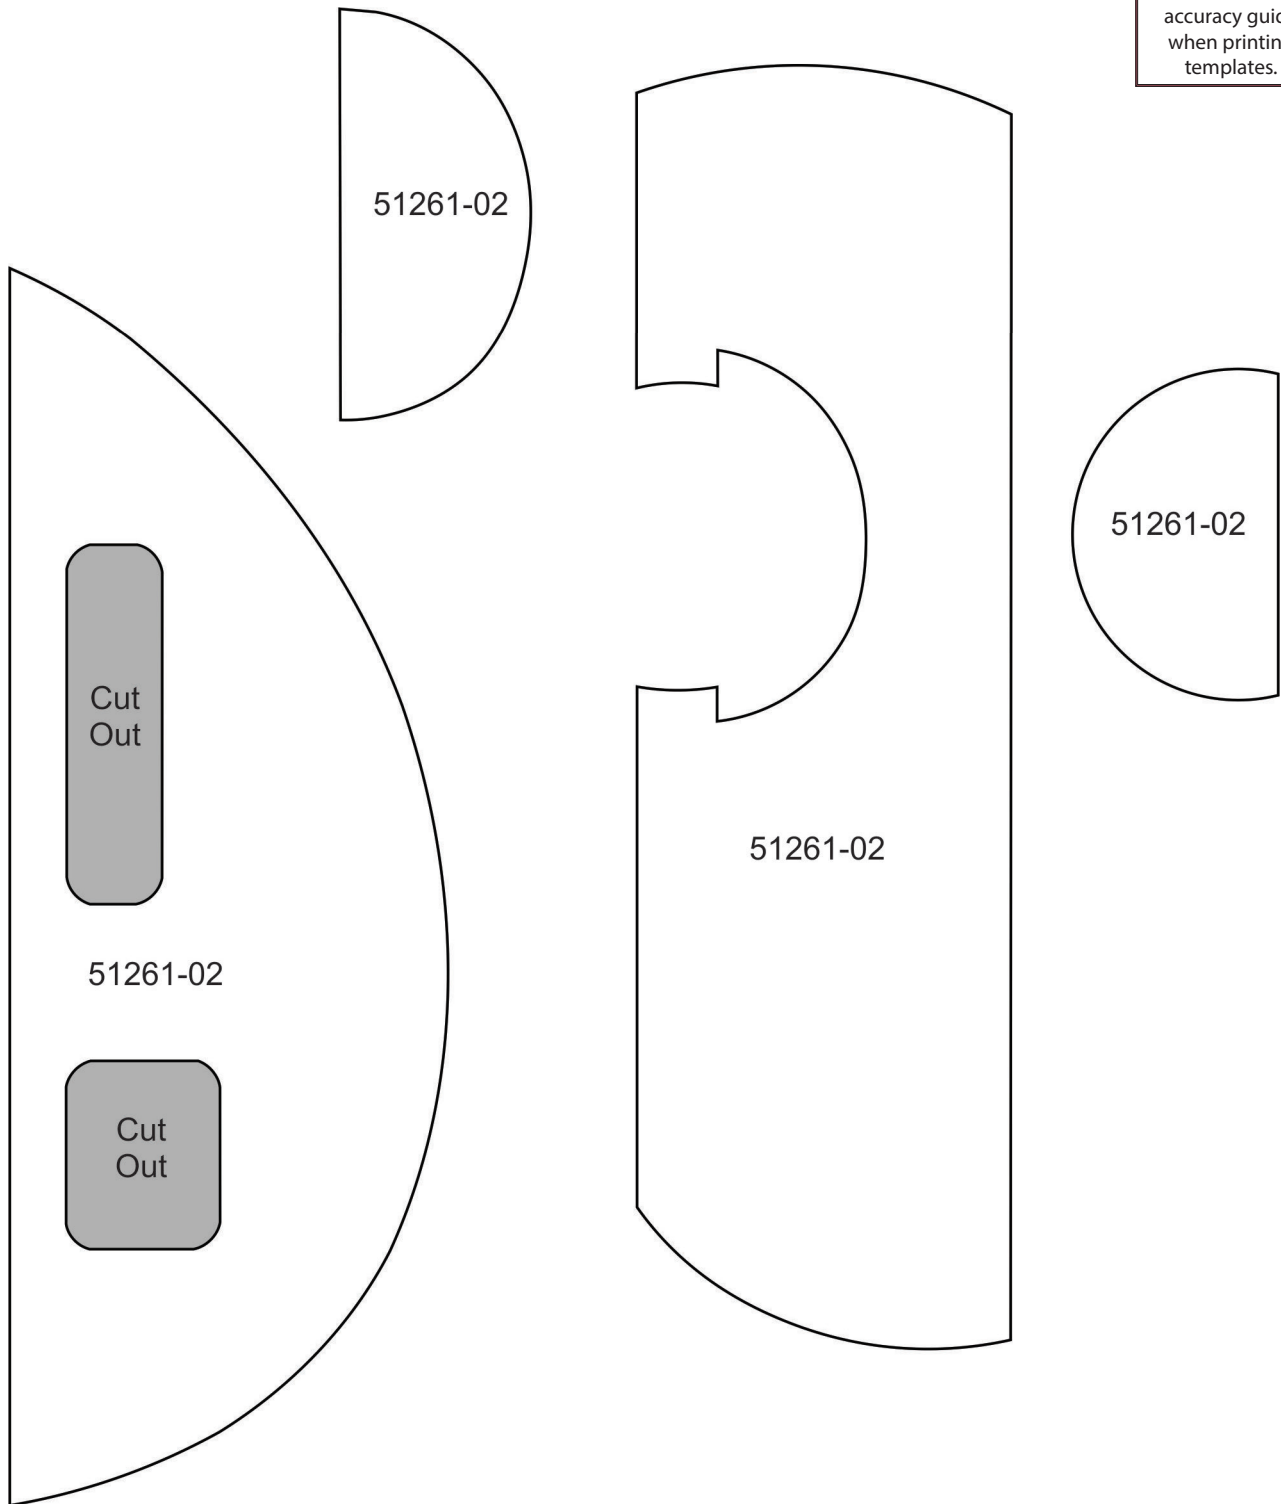

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

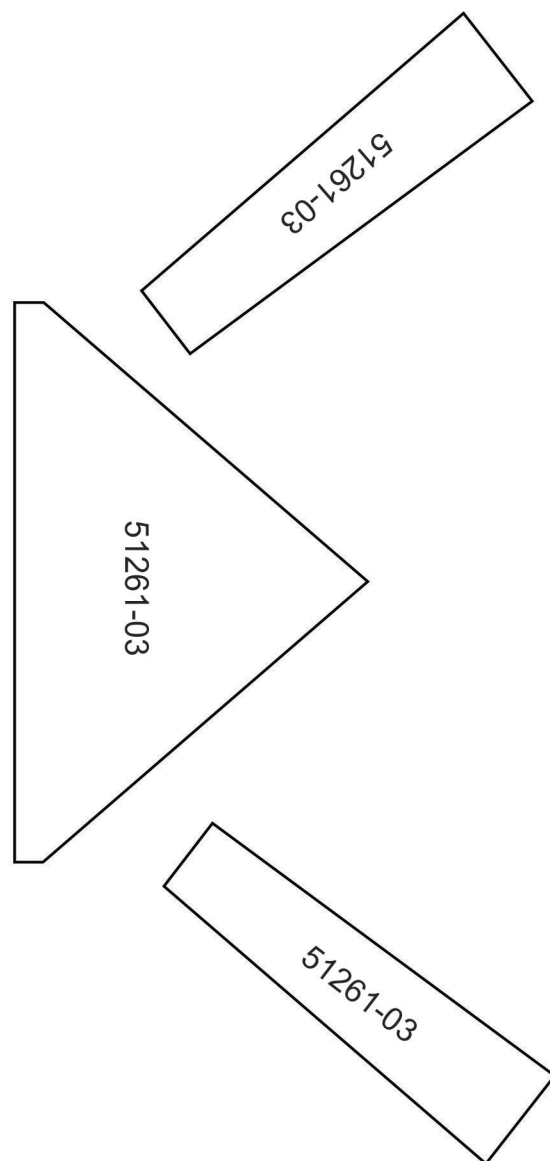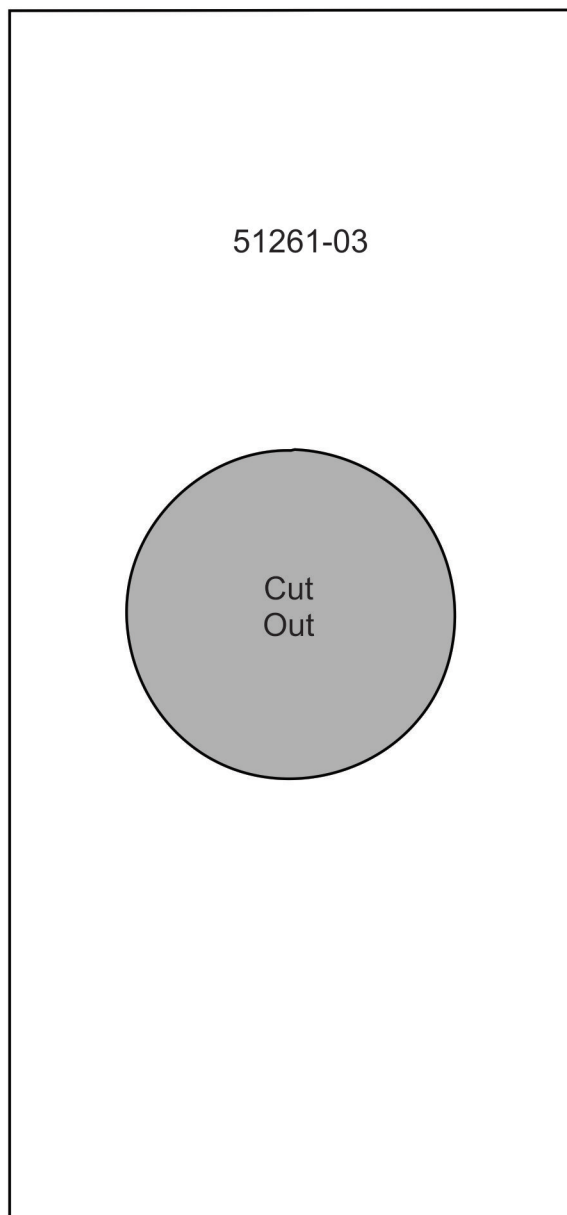

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

51261-04




Cut Out

51261-04

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

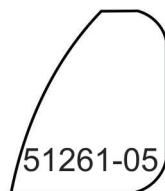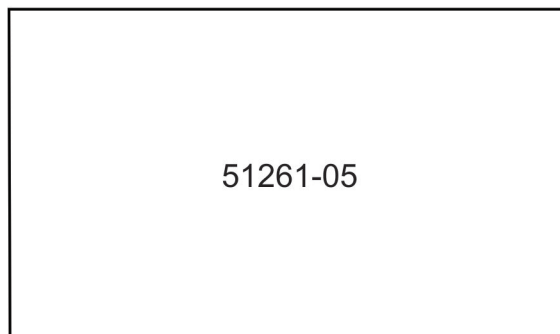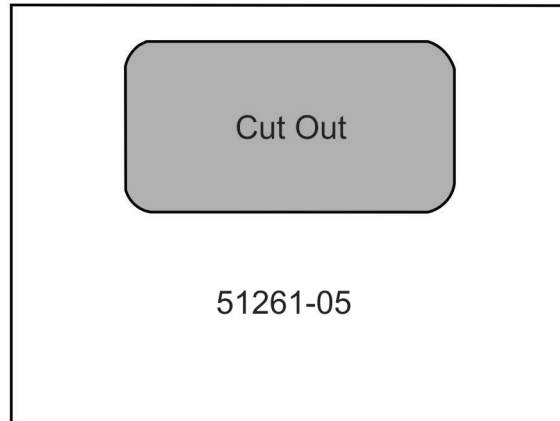

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

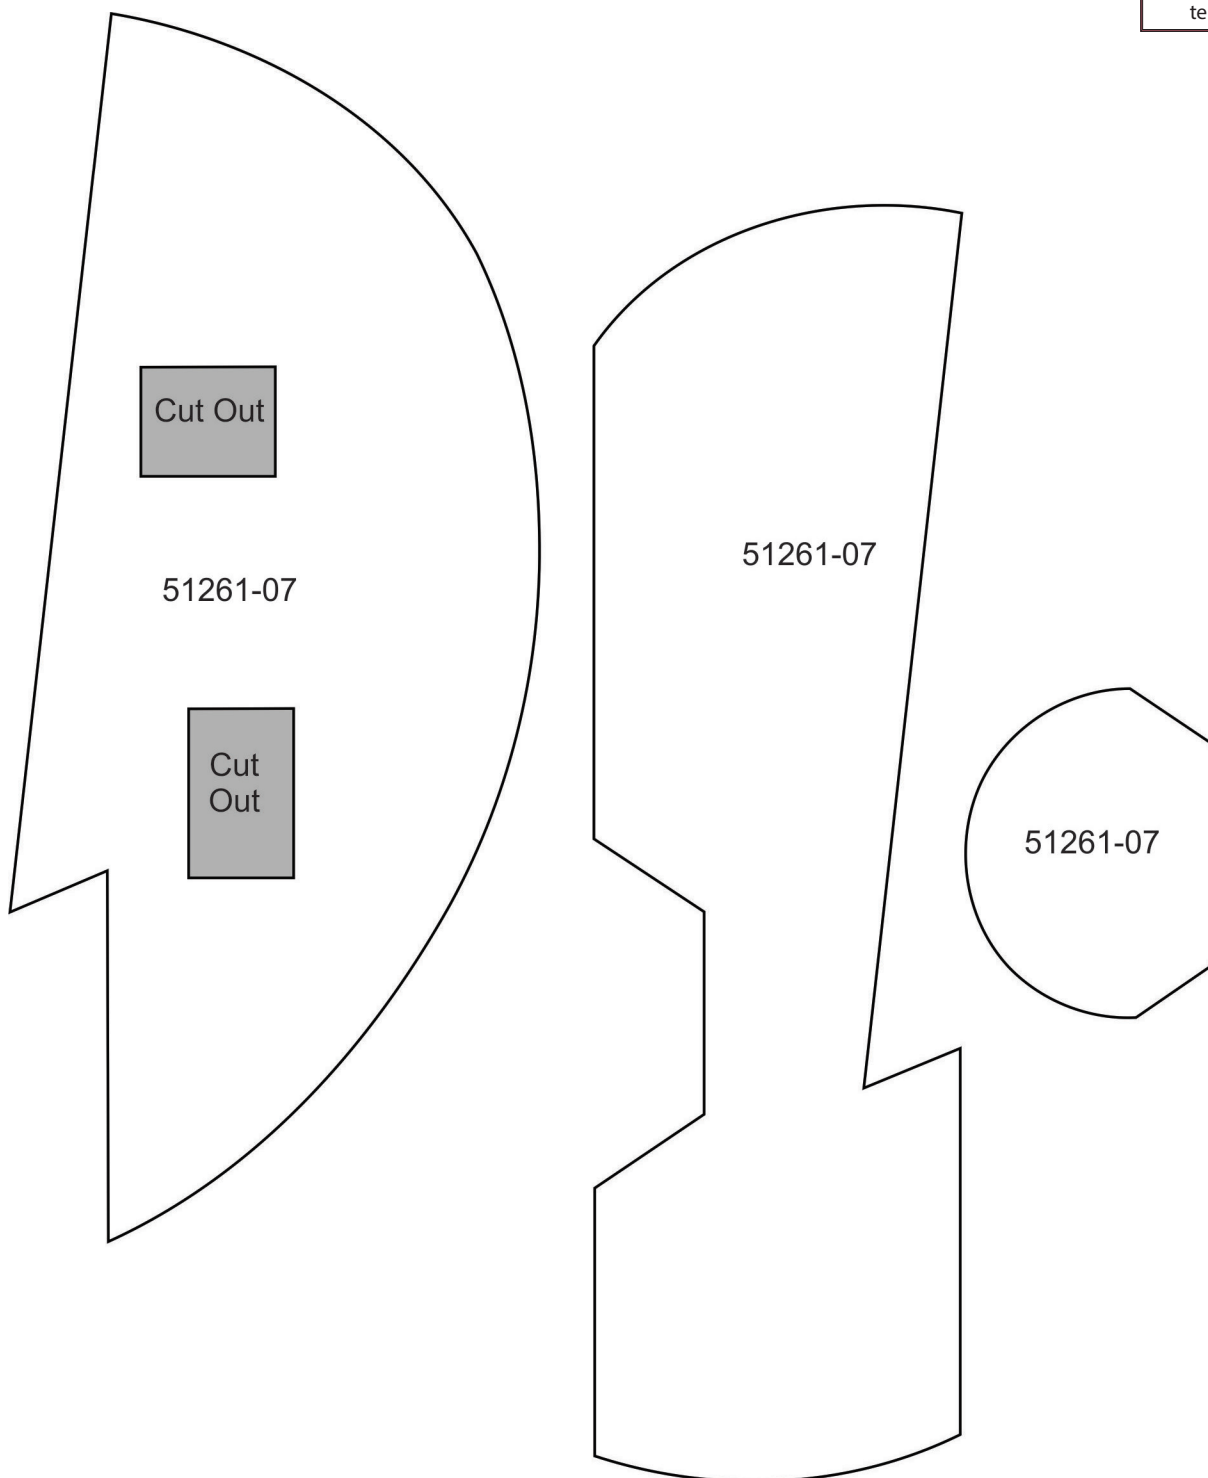

MIRRORED PATTERNS







Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

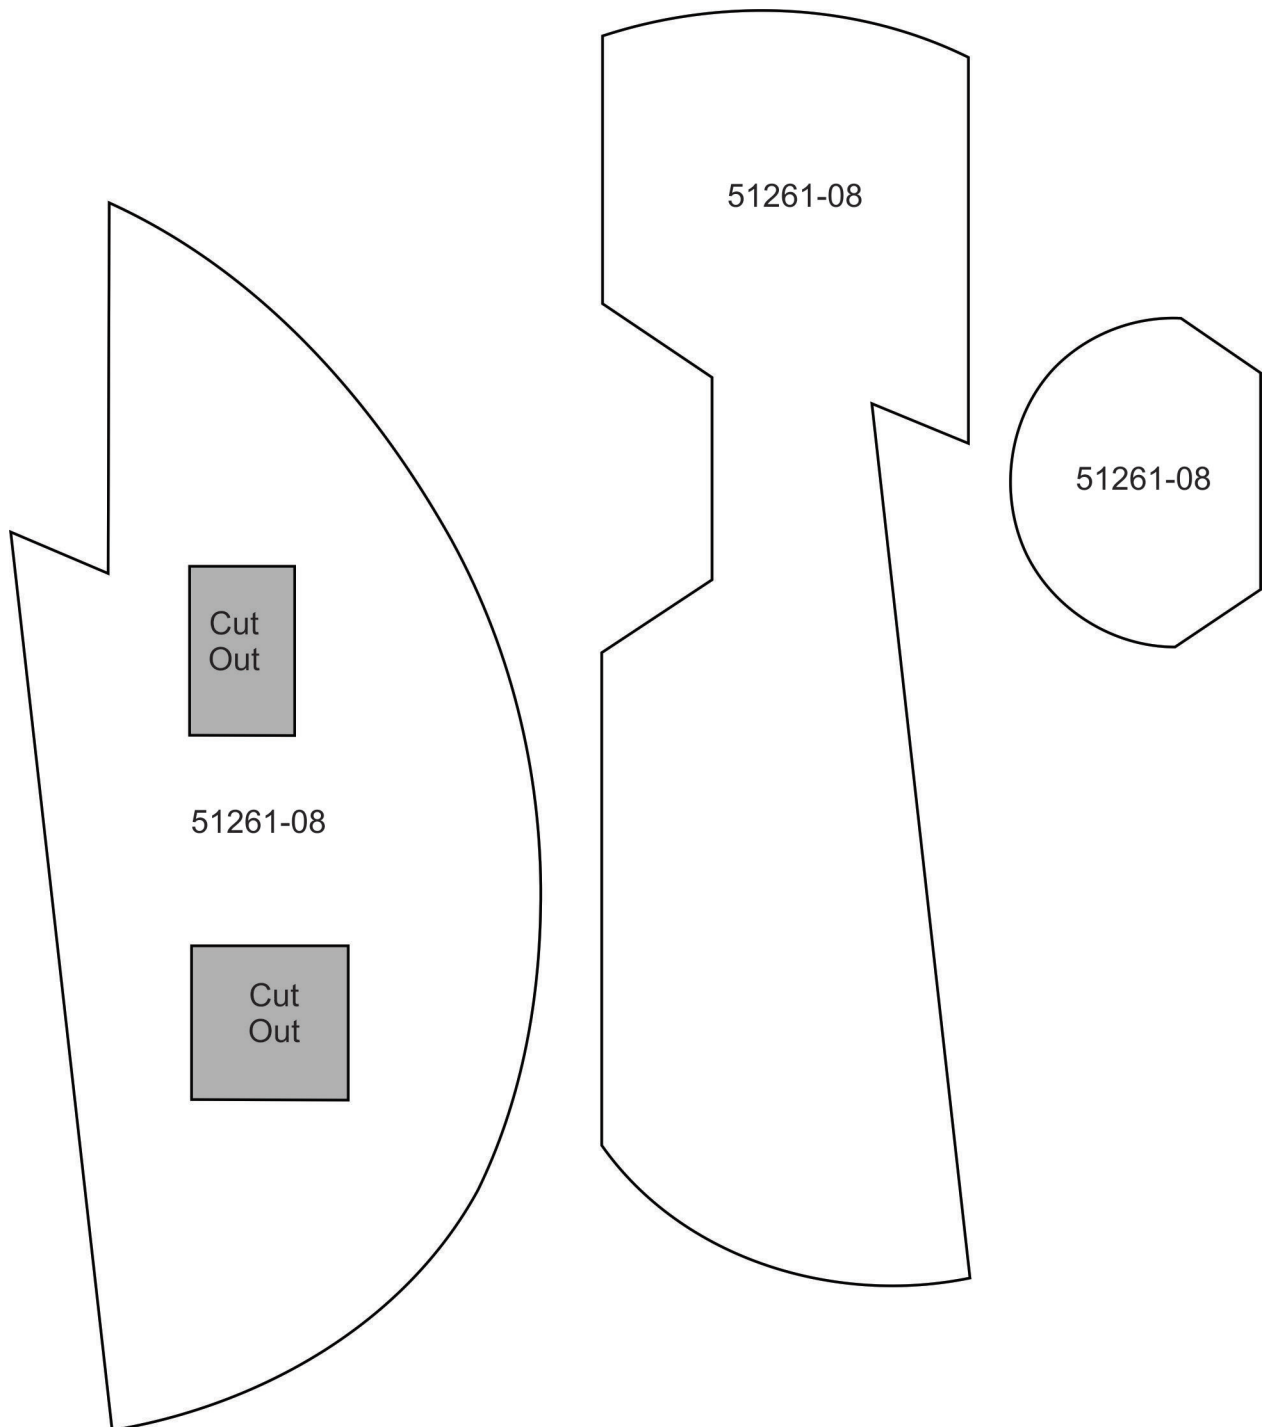

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

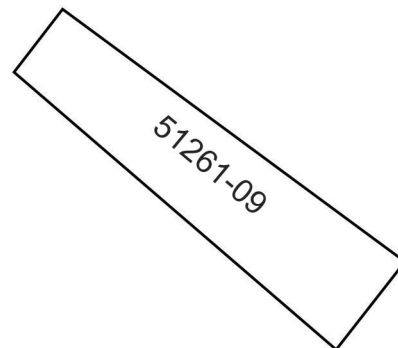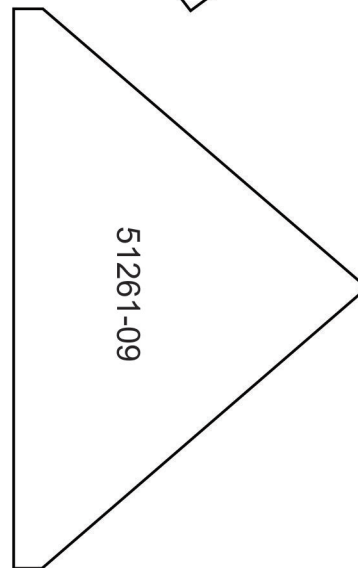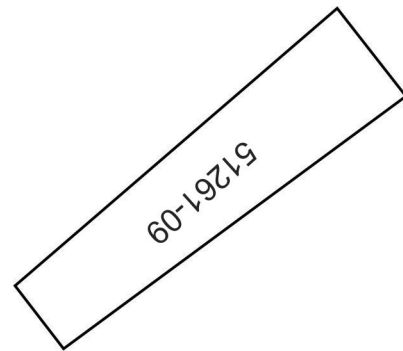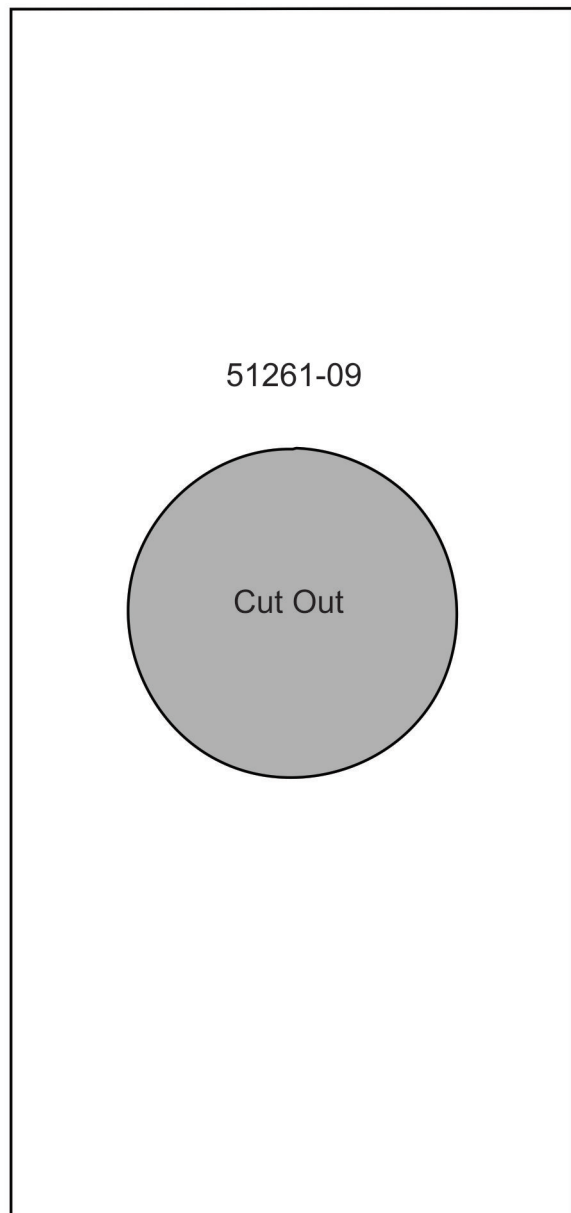

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

51261-10





Cut Out

51261-10

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

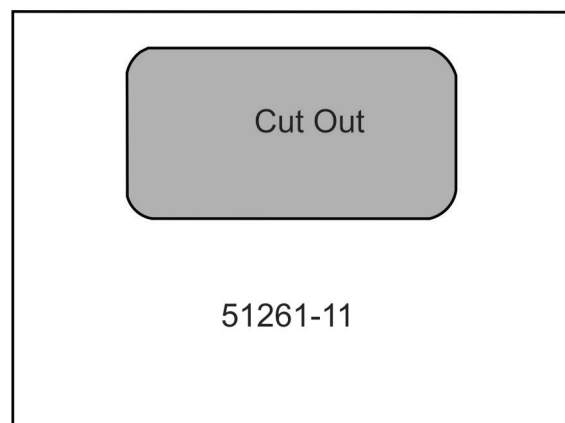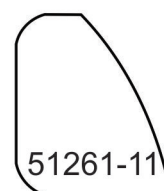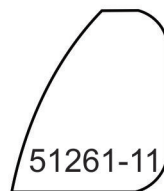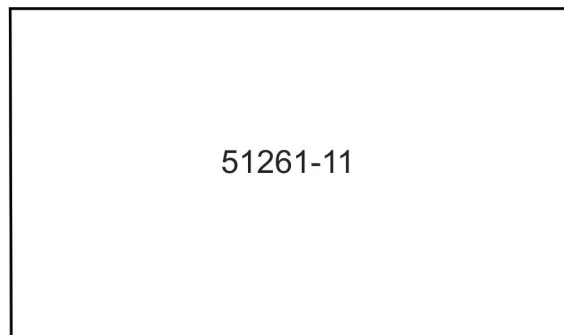

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

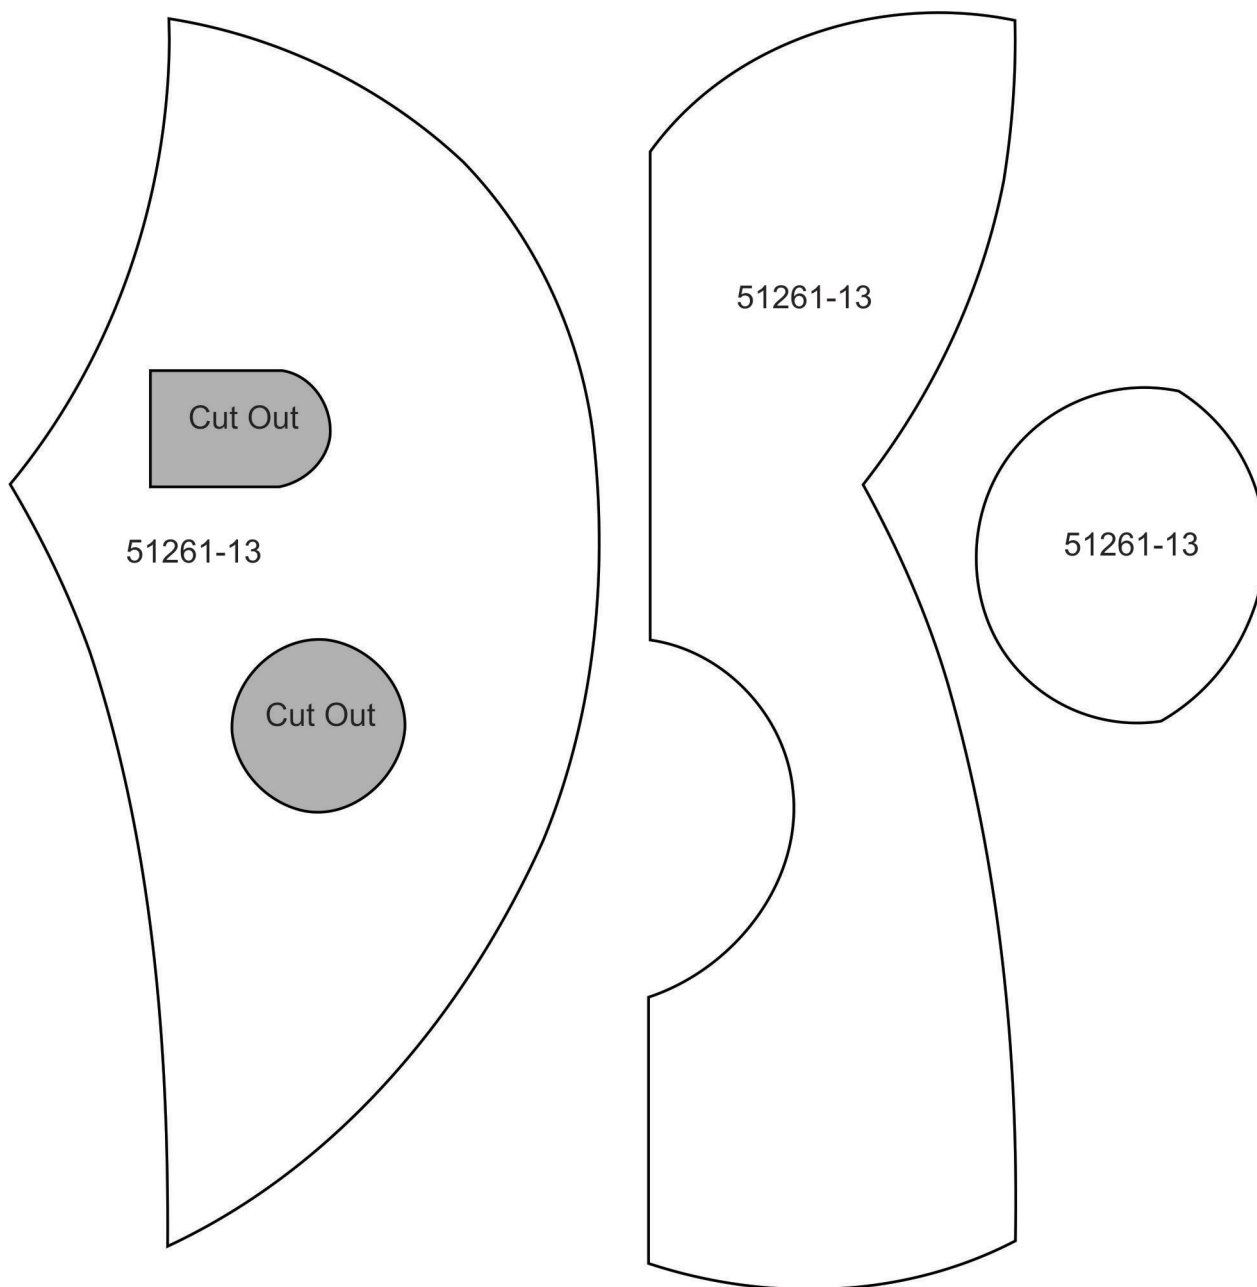

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

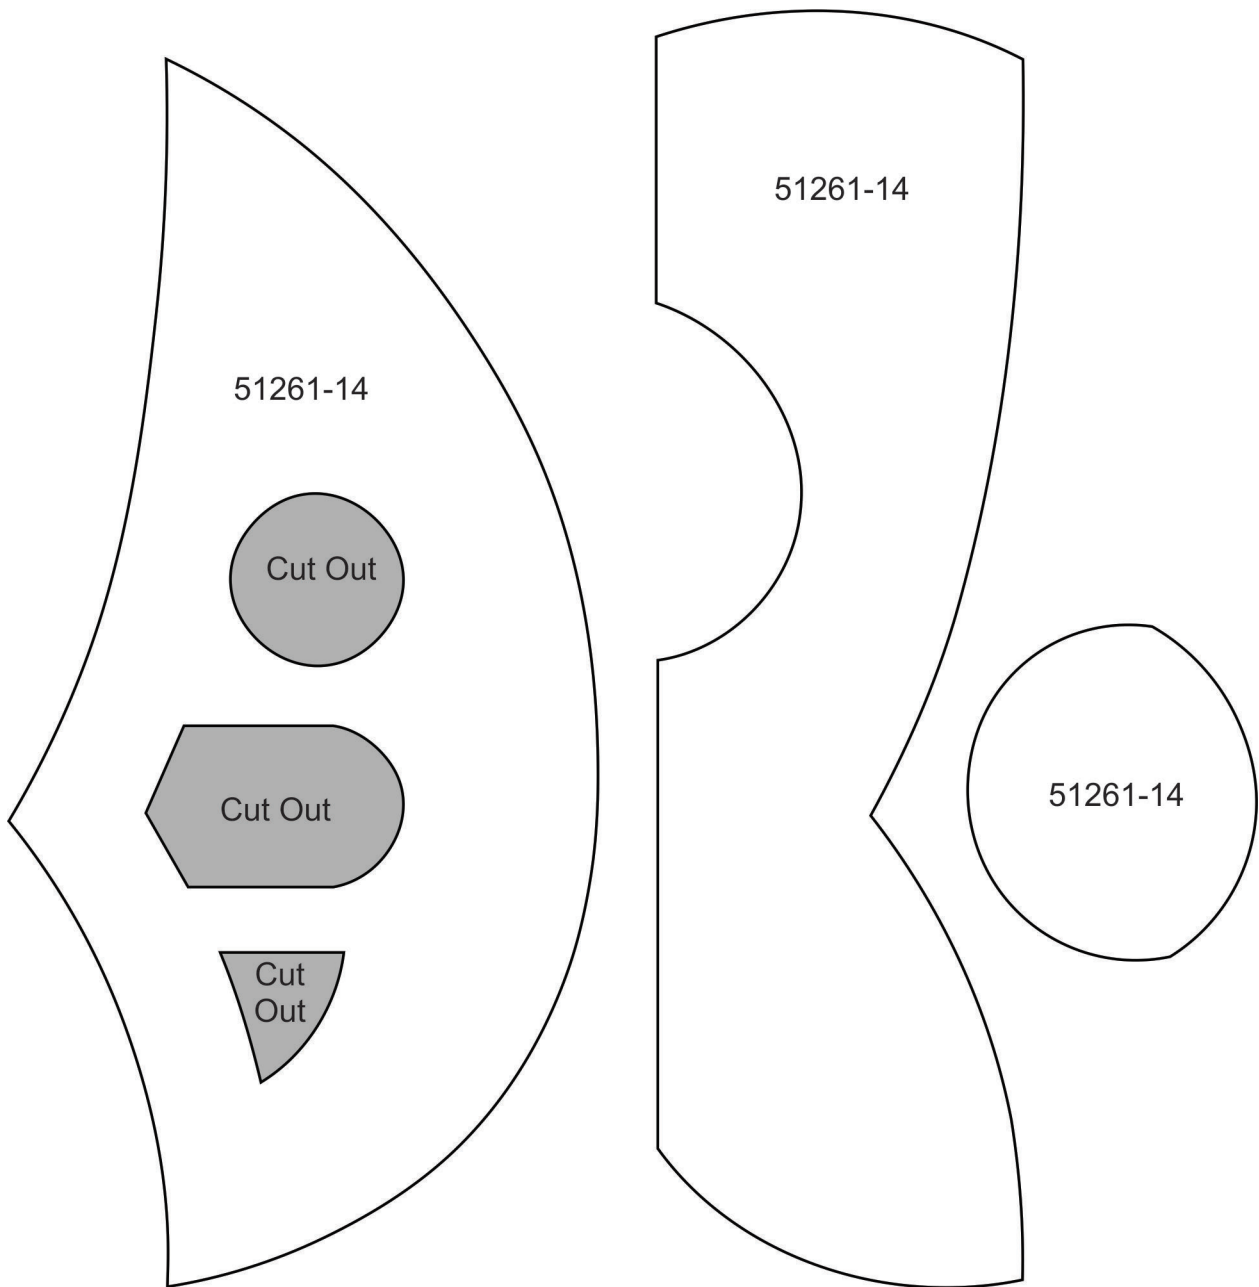

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

