

by Woo Hoo Designs / #80081 / 24 Designs

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.







80081-01 Heart Appliqué 1 4.92 X 3.65 in. 12.50 X 9.27 mm 12,951 St.

80081-02 Heart Appliqué 2 4.92 X 3.65 in. 12.50 X 9.27 mm 7,607 St.

80081-03 Heart Appliqué 3 4.92 X 3.65 in. 12.50 X 9.27 mm 11,685 St.

80081-04 Heart Linework 14.09 X 3.13 in.
10.39 X 7.95 mm
6,376 St.









80081-05 Heart Linework 2 3.79 X 2.78 in. 9.63 X 7.06 mm 3,246 St.

80081-06 Heart Linework 3 3.88 X 2.82 in. 9.86 X 7.16 mm 6,798 St.

80081-07 Heart 1 1.79 X 2.37 in. 4.55 X 6.02 mm 6,598 St

80081-08 Heart 2 2.32 X 1.75 in. 5.89 X 4.44 mm 6,492 St.







80081-09 Heart 3 2.24 X 1.64 in. 5.69 X 4.17 mm 4,182 St.

80081-10 Love Birds 6.01 X 2.79 in. 15.27 X 7.09 mm 19,919 St.

80081-11 Love Bird 1.98 X 1.61 in. 5.03 X 4.09 mm 3,766 St.

80081-12 Pink Ribbon Heart 4.31 X 2.79 in. 19.95 X 7.09 mm 12,365 St.



by Woo Hoo Designs / #80081 / 24 Designs

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.









80081-13 Black Swirl Border 7.66 X .90 in. 19.46 X 2.29 mm 6,144 St. **80081-14 Black Swirl** 1.87 X .89 in. 4.75 X 2.26 mm 1,490 St. **80081-15 Love Heart Border** 5.21 X .93 in. 13.23 X 2.36 mm 5,006 St.

80081-16 Mini Heart .88 X .72 in. 2.34 X 1.83 mm 671 St.









80081-17 Hearts Border 6.08 X .55 in. 15.44 X 1.40 mm 4,021 St.

80081-18 Mini Hearts .79 X 1.07 in. 2.01 X 2.72 mm 446 St.

80081-19 Hot Pink Swirls Border 4.22 X .92 in. 10.72 X 2.34 mm 7,952 St. **80081-20** Hot Pink Swirl 1.04 X .92 in. 2.64 X 2.33 mm 1,968 St.







80081-21 Heart Spray 1 1.77 X 1.58 in. 4.50 X 4.01 mm 3,803 St. 80081-22 Heart Spray 2 .85 X 1.02 in. 2.16 X 2.59 mm 1,505 St. 80081-23 Pink Spray 1.15 X .76 in. 2.92 X 1.93 mm 1,649 St. 80081-24 Hot Pink Spray 2.65 X 2.05 in. 6.73 X 5.21 mm 5.202 St.



by Woo Hoo Designs / #80081 / 24 Designs

Listings below indicate color sample, stitching order and suggested thread color number. Most numbers indicate Isacord thread. Colors beginning with 20501 refer to YLI Fine Metallics, 7 refer to Yenmet Metallic, 8 refer to YLI Variations Variegated Thread and 9 refer to Isacord Multicolor Variegated.

| 80081-01 Heart Appliqué 1 1. Heart Placement Stitch | 2521 | 80081-09 Heart 3 1.Heart Background 2.Heart Outline 3.Dots | . 0352 2.Hot Pink Hearts |
|---|------|---|---|
| 80081-02 Heart Appliqué 2 1.Heart Placement Stitch. 2.Cut Line & Tackdown. 3.Cover Stitch & Detail | 2521 | 80081-10 Love Birds 1.Ribbon & Heart | .0015 .2550 80081-19 Hot Pink Swirls Border |
| 80081-03 Heart Appliqué 3 1.Heart Placement Stitch | 0352 | 80081-11 Love Bird 1 Bird | 2550 |
| 80081-04 Heart Linework 1 1.Single Color Design | | 80081-12 Pink Ribbon Heart 1.Ribbon & Heart | 2.Hot Pink Detail |
| 80081-06 Heart Linework 3 1.Heart | | 80081-13 Black Swirl Border 1.Single Color Design | 1. Single Color Design |
| 80081-07 Heart 1 1.Heart Background | | 80081-15 Love Heart Border 1.Letters | |
| 80081-08 Heart 2 1.Heart Background | | 80081-16 Mini Heart 1.Single Color Design | 2521 |




Instructions

Pre-Cut Appliqué Instructions

- 1. Print out the necessary pages from the PDF of the applique pattern(s).
- 2. Mark the right side of the pattern pieces so you'll know which direction to lay the pattern on the fabric.
- 3. Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.
- 4. Place the pattern pieces on the right side of the fabric and carefully cut them out. **PHOTO 1**
- 5. Sew the placement stitch on your hooped fabric. **PHOTO 2**
- 6. With the paper still stuck to the right side of the appliqué fabric, spray the wrong side of the fabric with temporary spray adhesive.
- 7. Place the fabric inside the sewing placement stitch so that it matches the stitching line, and then remove the paper pattern. PHOTO 3
- 8. Sew the tackdown. **PHOTO 4**
- 9. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 5**

NOTE: The patterns are sized for the designs as they were made. If you resize the design, you will need to resize the pattern the same amount. You can print out the pattern at the normal size then copy it on a copy machine at the changed size. For example, resize the designs to 80%, resize the printed pattern to 80%.


TIP: When Printing the patterns, make sure that the "Fit to page" option is UNCHECKED in the Print Dialog Box. If this option is checked the printed patterns will not be actual size.

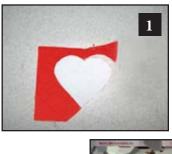







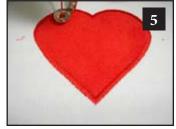




Instructions


ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

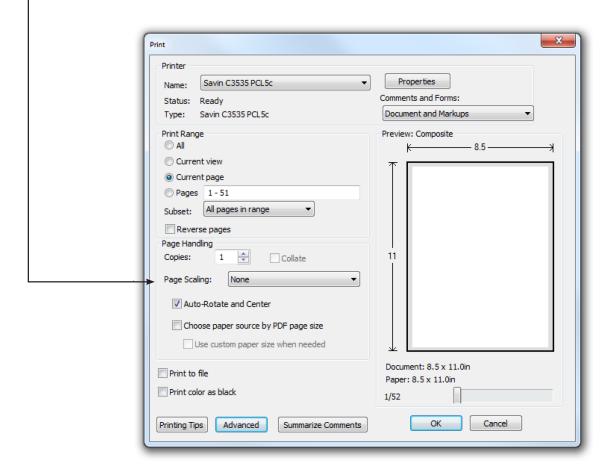

TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

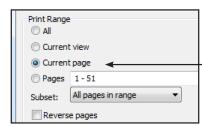

It is a violation of Copyright law to make and distribute copies of instructions or artwork. Electronic designs are licensed to the original purchaser for use at one location. ©2016 Teresa Woo-Murray. All rights reserved.



Appliqué Patterns

