

Travel Patches by The Whiskey Ginger



ллол

STITC

PREMIER COLLEC

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork. Electronic designs are licensed to the original purchaser for use at one location. ©2024 Jewel Branding & Licensing, Inc. All rights reserved.

MATERIALS





Isacord Thread Colors

0010 Silky White 0020 Black 0111 Whale 0124 Fieldstone 0138 Heavy Storm 0145 Skylight 0310 Yellow 0504 Mimosa 0555 Light Sage 0576 Very Dark Brown 0640 Parchment 0672 Baquette 0704 Gold 0721 Antique 0811 Candlelight 0824 Liberty Gold

0853 Pecan 0870 Muslin 0945 Pine Park 1010 Toast 1114 Clay 1115 Copper 1134 Light Cocoa 1154 Penny 1352 Salmon 1362 Shrimp 1430 Melon 1521 Flamingo 1532 Coral 1600 Spanish Tile 1725 Terra Cotta 1755 Hyacinth

1902 Poinsettia
2022 Rio Red
2123 Bordeaux
3444 Concord
4074 Dimgray
4174 Charcoal
4952 Mystic Ocean
5230 Bottle Green
5513 Ming
5542 Garden Moss
5555 Deep Green
5664 Willow
5933 Grasshopper
5944 Backyard Green
6133 Caper

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
- OESD Fuse and Seal

Fabrics/Textiles

• Assorted colors cotton fabric 4" squares

Note: Fabric sizes are estimates and may result in overage.

Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Grippy Grid
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per thread chart
- Match bobbin thread to top thread

EMBROIDERY





General Instructions

The applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown.

Fabric and thread requirements will vary by design, but the general technique is the same. These instructions use images from 12930 Magic Potion Labels.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.



• Hoop two layers of BadgeMaster for all designs.





• Adhere two layers of StabilStick CutAway to the wrong side of applique fabric.



EMBROIDERY

General Instructions

Step 3

- Load selected design into the machine.
- Example design is 12930-03.
- Thread the machine per the thread chart.
- Stitch Machine Step 1, Black Fabric Placement Stitch.



Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared fabric.
- Tape in place to secure.

Step 5

Ω

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



$\heartsuit 0$ It is a violation of Copyright law to make and distribute copies of electronic designs or artwork. 5 Electronic designs are licensed to the original purchaser for use at one location. ©2024 Jewel Branding & Licensing, Inc. All rights reserved.

EMBROIDERY



Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

Tip: If the BadgeMaster is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



Step 7

- Return the hoop to the machine and stitch the remaining machine steps, according to the thread chart.
- Remember to match the bobbin thread to the upper thread.



ASSEMBLY





General Instructions

Step 8

- When the design is complete, remove the project from the hoop and gently tear away the BadgeMaster, one layer at a time.
- Rinse each piece in warm running water until the design is only slightly tacky.
- Lay right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well to prevent curling. Dry completely.



Step 9

• Trace the applique shape or print mirrored version of the template on the paper side of Fuse and Seal.



ASSEMBLY



General Instructions

Step 10

- Cut just inside the outline.
- Following the package instructions, iron the Fuse and Seal to the wrong side of the applique.
- Cool completely.






Step 11


- Remove the paper from the Fuse and Seal.
- Place the design on the project and press to adhere.










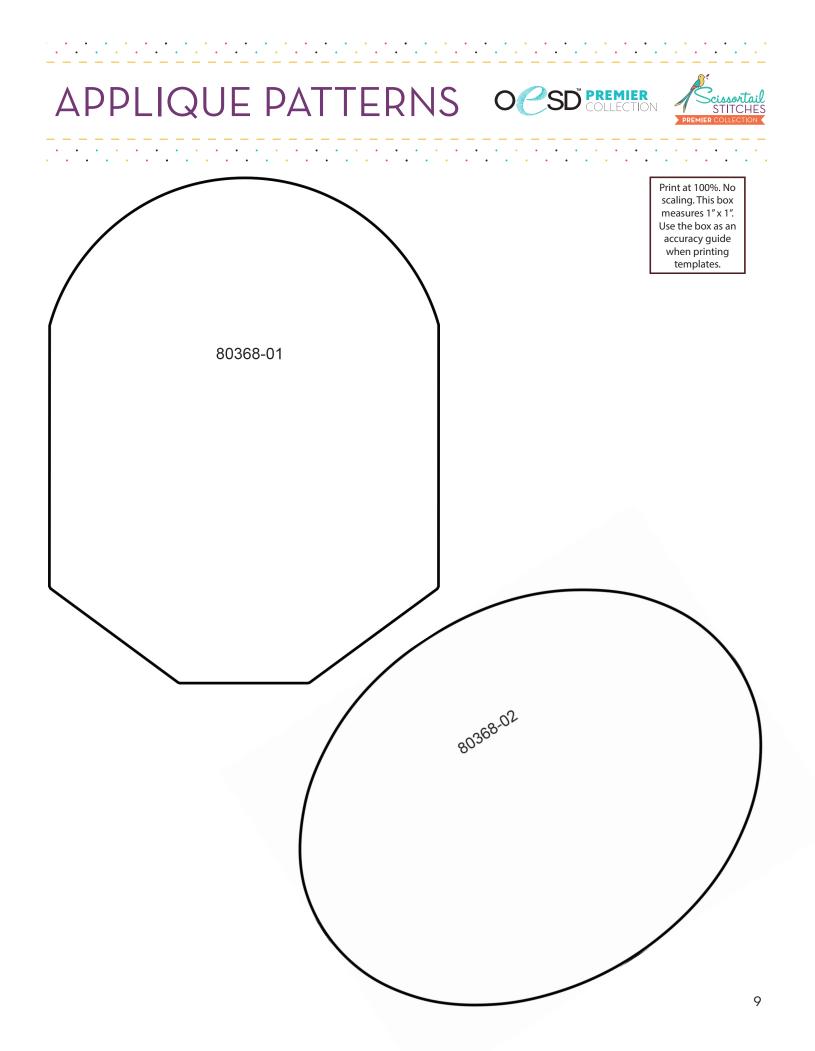

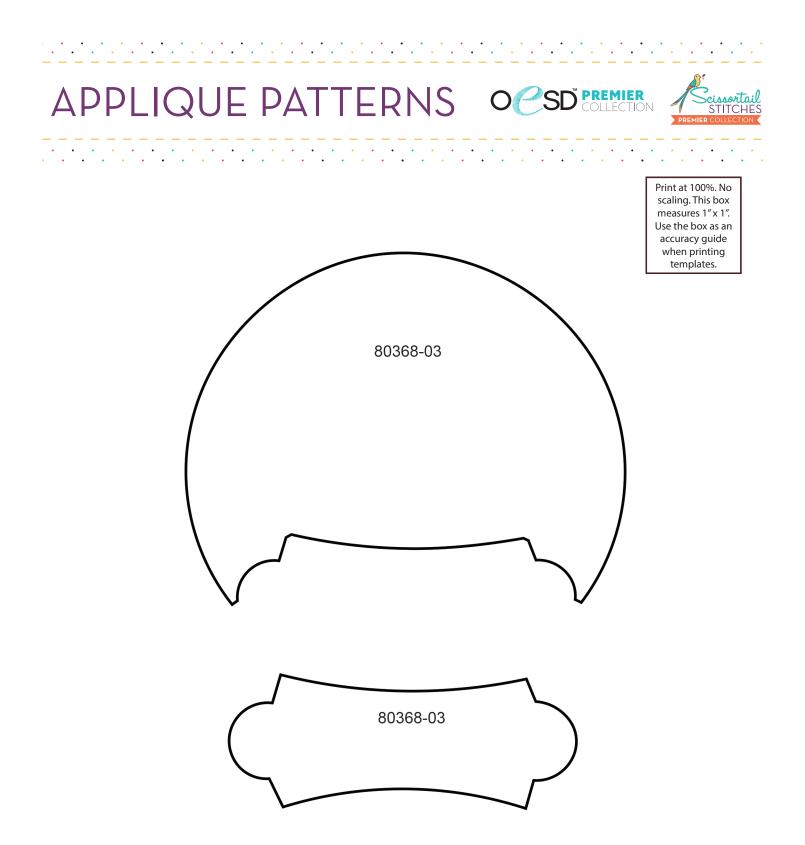


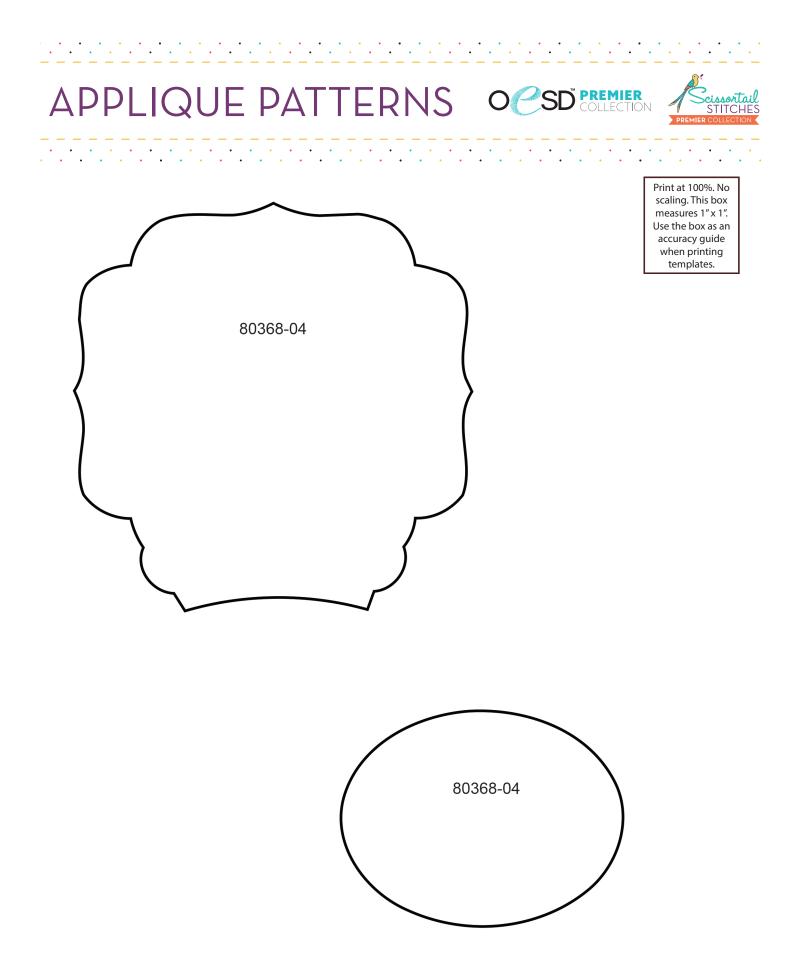

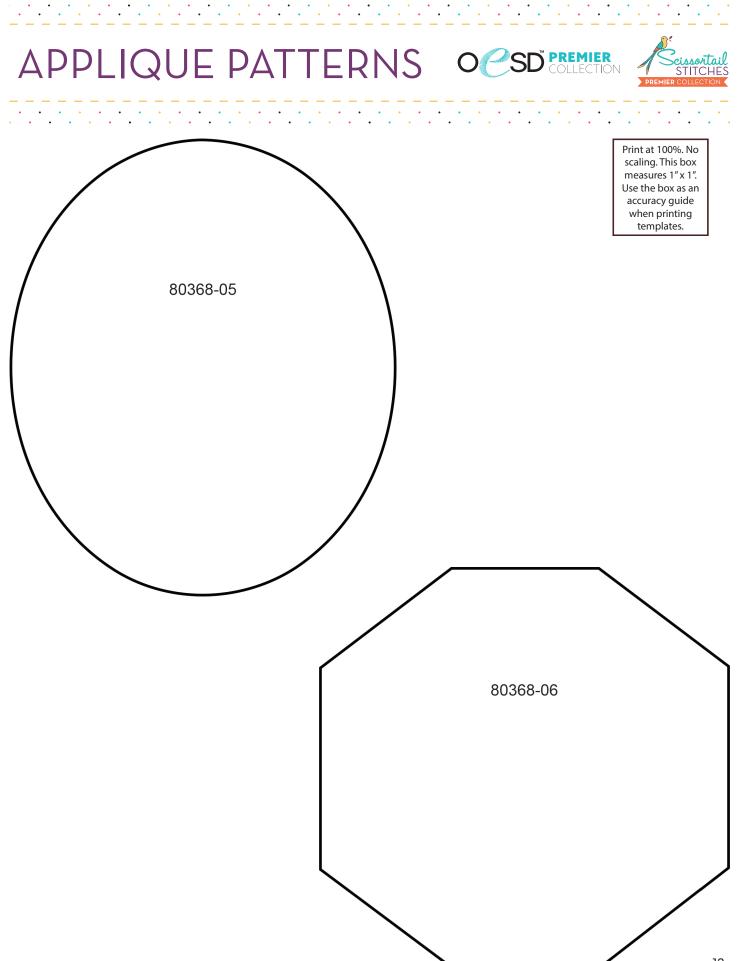


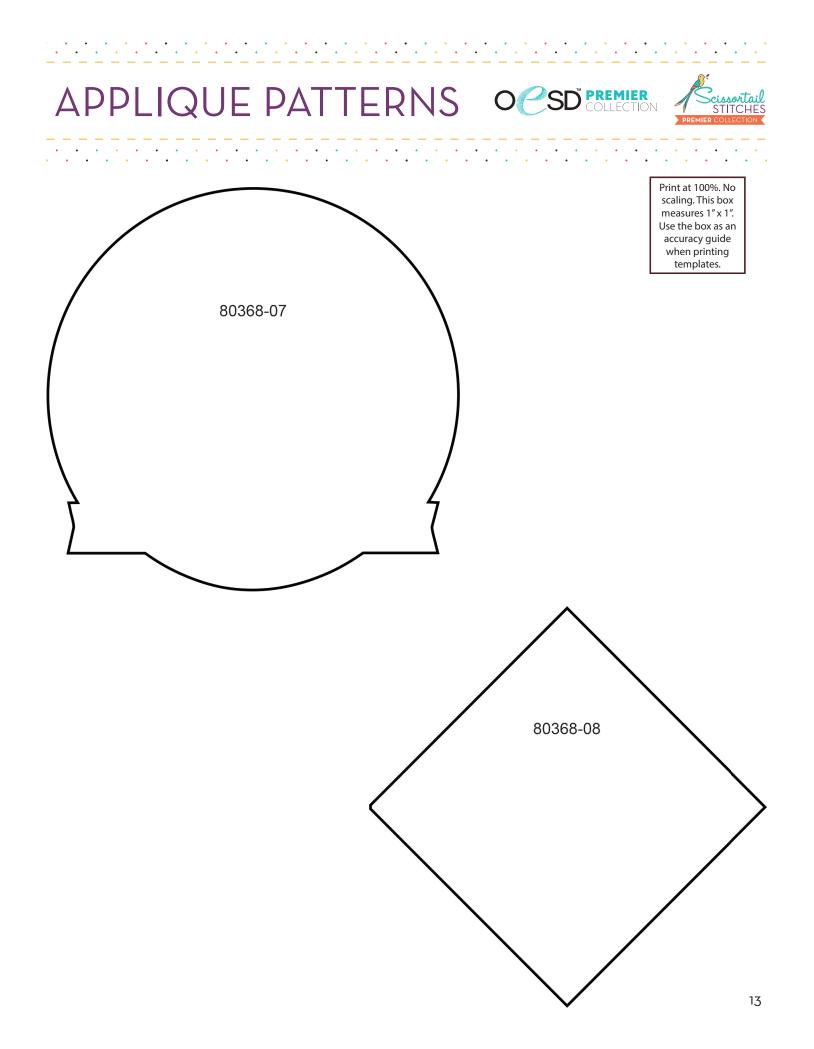





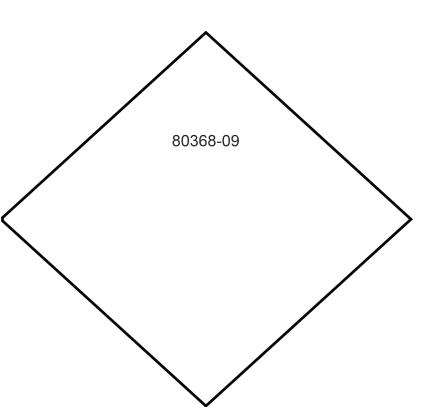



Use the box as an accuracy guide when printing templates.

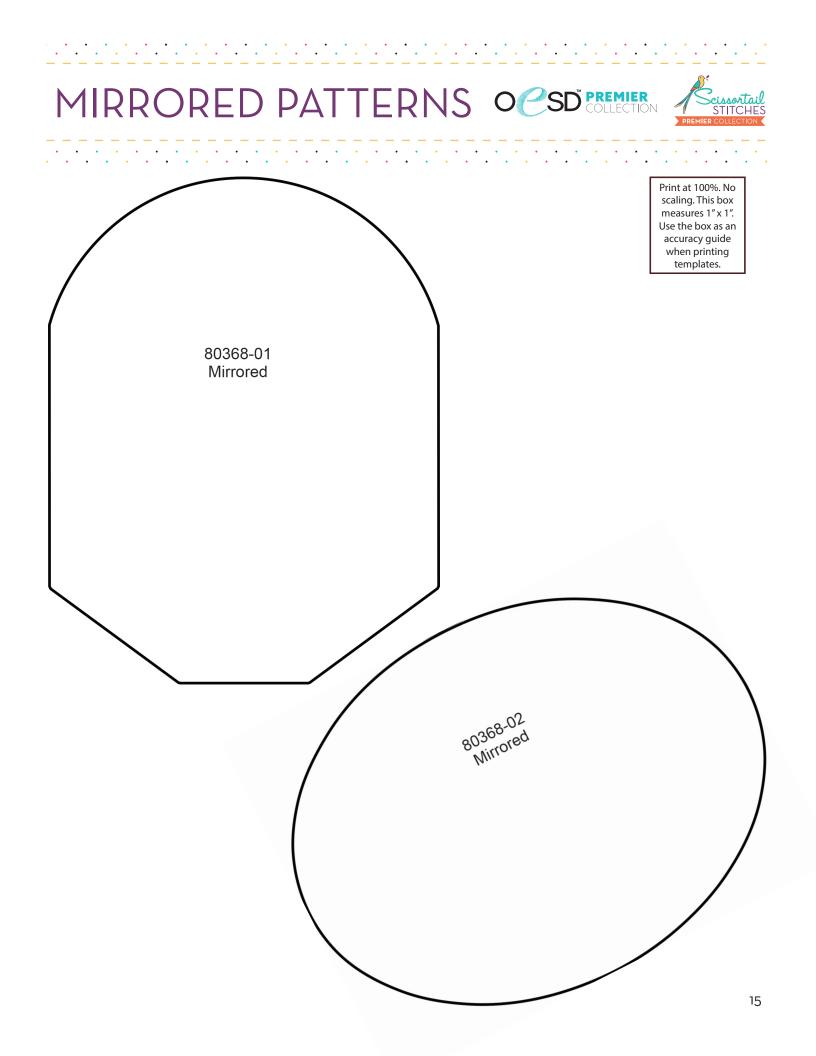


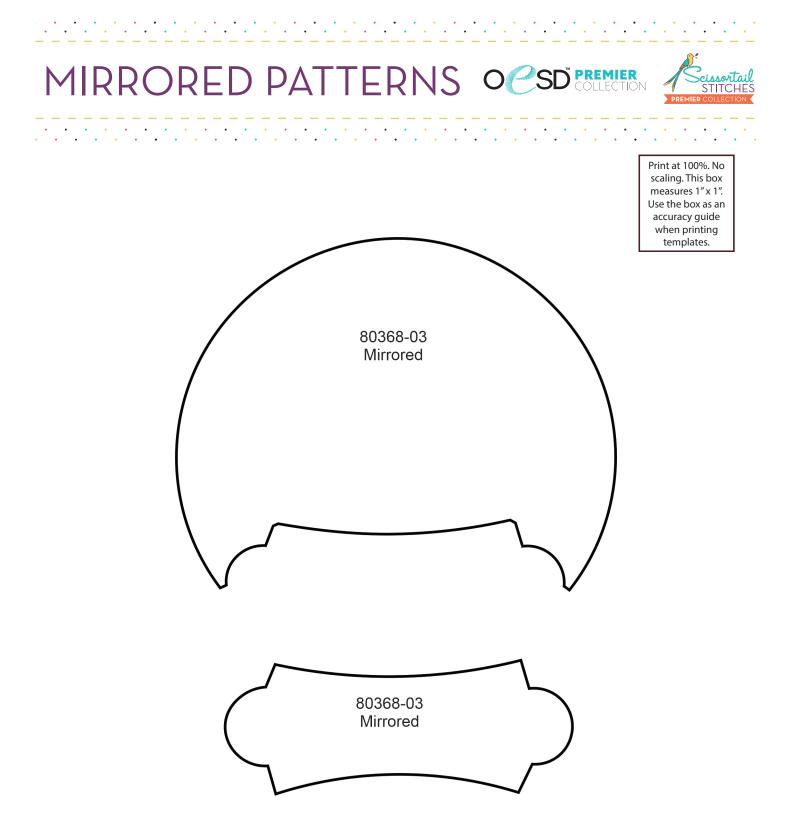

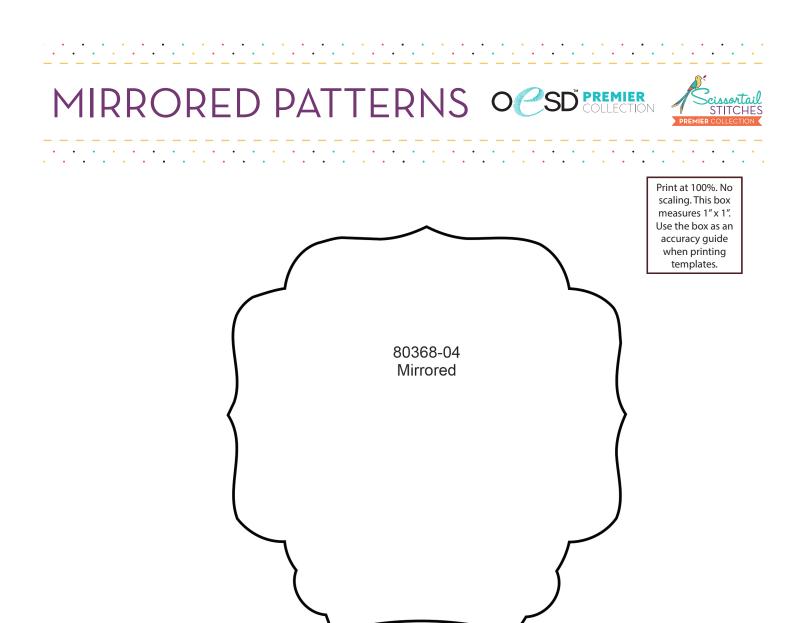

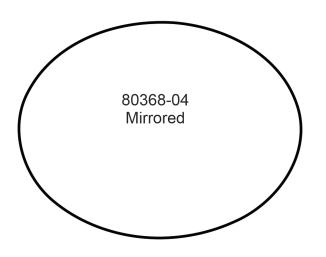

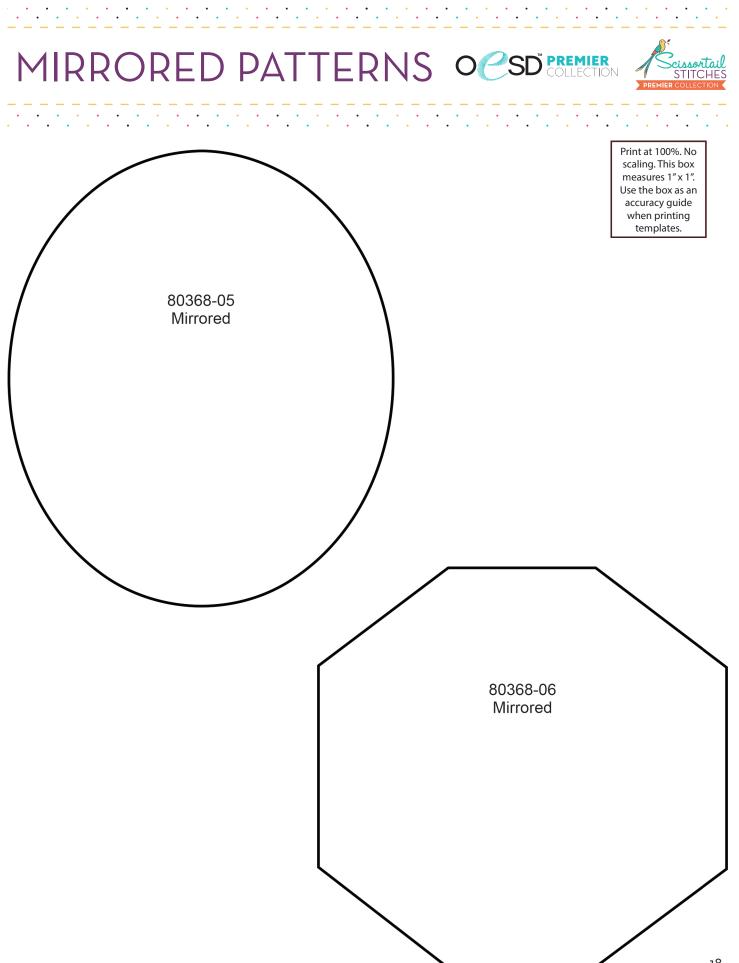

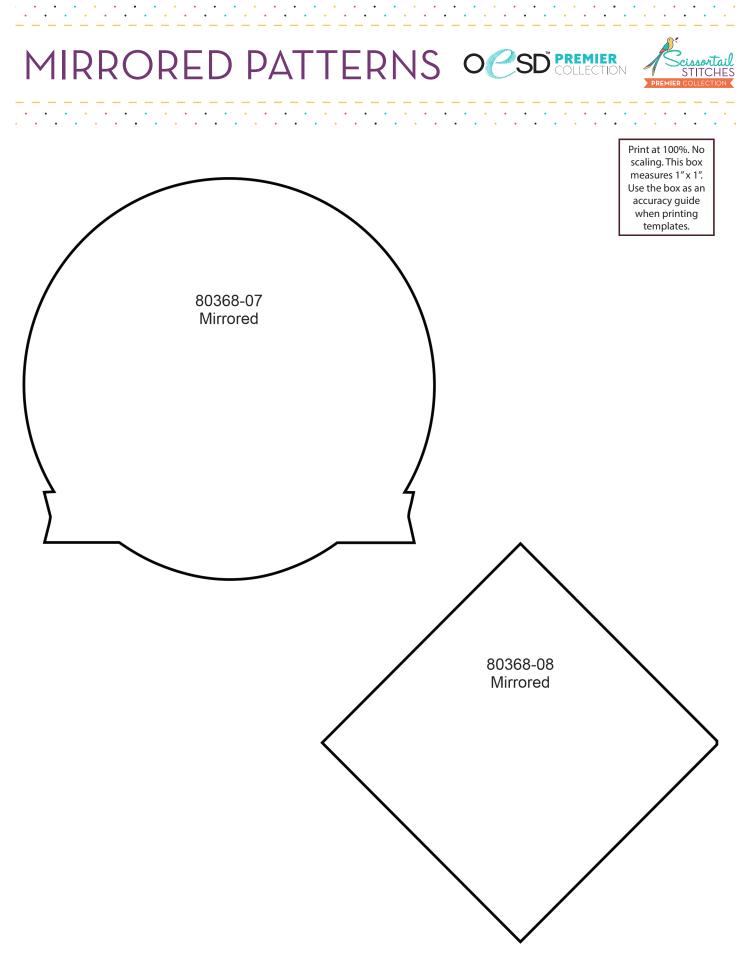






• • • •

••••

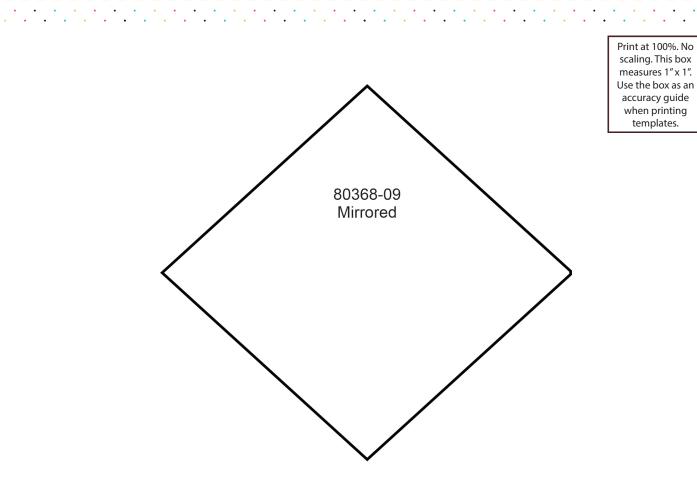

20