

Dona Gelsinger Tiled Stockings



Collection No. 80380
2 Designs/10 Files

MATERIALS



Isacord Thread Colors

0015 White	1776 Blackberry	5230 Bottle Green
0020 Black	1805 Strawberry	5643 Green Dust
0101 Eggshell	1840 Corsage	5722 Green Grass
0221 Light Brass	1904 Cardinal	5730 Apple Green
0232 Seaweed	1913 Cherry	5740 Birch Leaf
0776 Sage	1921 Blossom	
0874 Gravel	2101 Country Red	
0932 Nutmeg	2113 Cranberry	
0933 Redwood	2123 Bordeaux	
0970 Linen	3274 Battleship Gray	
1060 Shrimp Pink	3350 Lavender Whisper	
1332 Harvest	3450 Lavender	
1352 Salmon	3622 Imperial Blue	
1362 Shrimp	3631 Tufts Blue	
1720 Not Quite Red	4174 Charcoal	

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD Heavy Weight TearAway
- OESD Ultra Clean and Tear TearAway
- OESD Fuse and Fleece
- OESD Fusible Woven
- OESD Fuse and Seal

Fabrics/Textiles

- 1 1/2 yards of navy quilter's cotton for Santa stocking
- 1 1/2 yards of cream quilter's cotton for Poinsetta stocking
- 1/2 yard of quilter's cotton for lining per stocking
- 3" x 8" scrap for hanging loop

Notion & Tools

- OESD Button Clips
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- OESD Grippy GRID
- 505 Temporary Spray Adhesive
- Embroidery Needle Sharp 75/11
- Ruler, rotary cutter, mat
- Contrasting bobbin thread (seam stitch only)
- Fabric marking pen
- Walking foot or Dual feed foot

Isacord Thread Colors

- Per the thread chart




SUMMARY

Completed Size:
15.5" H x 9.75" W



Requires 1 Design

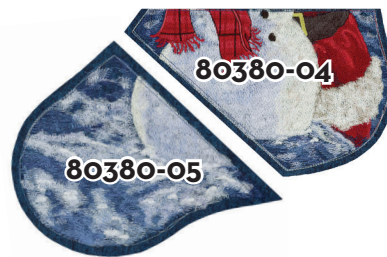

FABRICS REQUIRED

1 1/2 yards of navy quilter's cotton
1/2 yard of quilter's cotton for lining

Completed Size:
15.5" H x 9.75" W



Requires 1 Design



FABRICS REQUIRED

1 1/2 yards of cream quilter's cotton
1/2 yard of quilter's cotton for lining

General Instructions

Embroider one of each design file 80380-01 through 80380-05 for the Santa stocking or 80380-06 through 80380-10 for the Poinsettia stocking. For each hooping, cut the following 11" x 15", or large enough to hoop:

1 layer of background fabric

1 layer of Fusible Woven

1 layer of Heavy Weight TearAway


1 layer of Ultra Clean and Tear TearAway

Note: To economize on fabric, cut the fabric 15" wide (or the height of the hoop plus 2") by the width of the fabric. Apply the stabilizers. Move the hoop

down the length of the fabric as each tile is stitched. Leave a minimum of 1.5" between the tiles.

Step 1

- Apply Fusible Woven to the back of the background fabric, per the product directions.
- Apply one layer of Heavyweight and one layer of Ultra Clean and Tear to the wrong side of the background fabric with temporary spray adhesive.
- Hoop fabric and stabilizer.

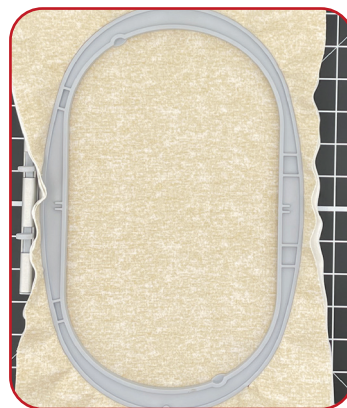

EMBROIDERY

□ Step 2

- For each tile, stitch the colors per the thread chart.
- The last color change in each tile is called "Seam".
- This line is the guide when trimming and stitching the tiles together and needs to be highly visible on the back side of the tile. Stitch the top color in a thread that blends with the fabric, invisible thread, or water-soluble thread.
- For the bobbin, use a color which contrasts sharply with the back of the tile.

Note: Since the bobbin color doesn't have to be the same on each tile, this is a great time to use up partially wound bobbins.



ASSEMBLY


□ Step 3

- After embroidery is complete, press each tile face down on a Perfect Embroidery Press Cloth.
- Write the number of the tile on the back so it is easily identified during construction! Use a pen or pencil that will not bleed through to the front side.



□ Step 4

- At the cutting mat, place the tile right side down.
- Identify the "seam" stitch. Trim a 1/2" seam allowance out from the seam stitch, only on the straight edges that will be sewn together.
Note: Accuracy here will greatly facilitate the construction of the project.

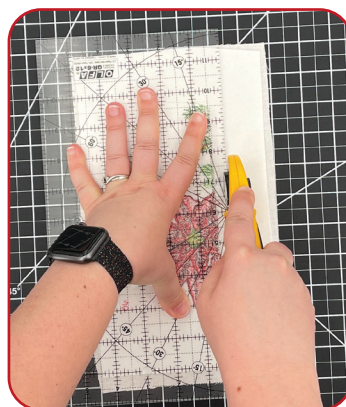

ASSEMBLY

□ Step 5

- Lay out in the order the tiles will be stitched.
- Use OESD Button Clips to clip the tiles together to align the matching edges.



□ Step 6

- Using a 1/2" seam allowance, stitch Tile 1 to Tile 2. Stitch just to the inside of the seam as shown.
- Repeat for remaining tiles until the front of the stocking is complete.



ASSEMBLY

Step 9

- Trim along the markings.



Step 10

- Use the pieced front of the stocking as a template for the back and two lining pieces.
- Fold the lining fabric right sides together.
- Place the fabric for the stocking back on top with the right side of the fabric facing up.
- Place the stocking front right side down, on top of the 3 layers of fabric.



Step 11

- Trace the outline onto the fabric.
- Cut out.



ASSEMBLY

Step 12

- Use the back stocking piece as a template and cut Fuse and Fleece to fit.
- Press to the wrong side of the back stocking piece.
Note: Do not add Fuse and Fleece to the lining pieces.



Step 13


- Cut one scrap piece of fabric for the hanging loop 3" x 8".
- Press in half length wise, wrong sides together.



ASSEMBLY

□ Step 14

- Open and press the long edges inward meeting at the center pressed line.

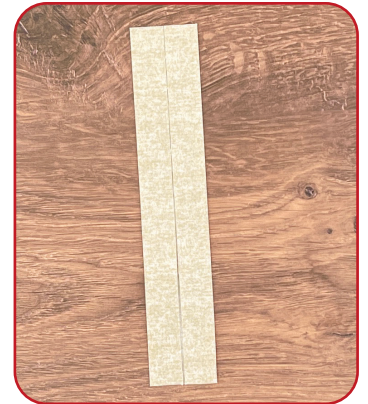

□ Step 15

- Fold in half lengthwise.
- Top stitch 1/8" from each long edge.



□ Step 16

- Fold in half so that raw, short ends are together and it measures 4" long.
- Press.



ASSEMBLY

□ Step 17

- Place the two raw, short ends along the upper edge of the back stocking piece.
- Align the right side of the hanging loop 1" in from the left edge.
- Use an OESD Button Clip to hold in place.
- Stitch across the hanging loop with a 1/4" seam.



□ Step 18

- Place one lining piece right sides together with the stocking front.
- Sew across the top edge with a 1/2" seam allowance.
- Repeat for the stocking back.



ASSEMBLY

□ Step 19

- Press both seam allowances open.
- Place both pieces right sides together and use Button clips to hold in place.



□ Step 20

- Stitch a 1/2" seam around the stocking outside and lining.
- Leave a 3" - 4" opening in the straight edge of the lining.
- Trim the seam allowance to approximately 1/4" and clip the curves.



ASSEMBLY

□ Step 21

- Pull the stocking through the opening.
- Pull the lining through the opening.
- Use the Expert Point and Press Tool to smooth out the seams.



□ Step 22

- Press the stocking.



□ Step 23

- Using a small strip of Fuse and Seal, approximately 3" x 1/4", close the opening following the product instructions.



ASSEMBLY

□ Step 24

- Push the lining down into the stocking and smooth into place.
- Press the upper edge of the stocking.
- Top stitch 1/8" around the upper edge.



□ Step 25

- Press the completed stocking embroidery side down on a Perfect Embroidery Press Cloth.



□ Step 26

- Your stocking is complete. Enjoy!

