

Cynthia Frenette Tiled Stockings



Collection No. 80381
2 Designs/10 Files

MATERIALS



Isacord Thread Colors

0015 White	1921 Blossom	4430 Island Waters
0020 Black	2113 Cranberry	4610 Deep Aqua
0151 Cloud	2508 Hot Pink	5326 Evergreen
0310 Yellow	2912 Sugar Plum	5422 Swiss Ivy
0352 Marsh	3713 Cornflower Blue	5513 Ming
0731 Applesauce	3743 Harbor	5531 Pear
0873 Stone	3750 Winter Frost	5643 Green Dust
0940 Autumn Leaf	3810 Laguna	5730 Apple Green
1060 Shrimp Pink	3820 Celestial	5830 Chartreuse
1351 Starfish	3840 Oxford	5912 Erin Green
1430 Melon	3963 Hint of Blue	
1600 Spanish Tile	4111 Turquoise	
1730 Persimmon	4113 Alexis Blue	
1755 Hyacinth	4174 Charcoal	
1900 Geranium	4220 Island Green	

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD Applique Fuse and Fix
- OESD Ultra Clean and Tear TearAway
- OESD Fuse and Fleece
- OESD Fusible Woven
- OESD Fuse and Seal

Fabrics/Textiles

- 1 1/2 yards of green quilter's cotton for the Peace on Earth stocking.
- 1 1/2 yards of red quilter's cotton for the Merry and Bright stocking.
- 1/2 yard of quilter's cotton for lining per stocking
- 1 fat quarter of each of the following fabrics: Blue, Green, White
- 3" x 8" scrap for hanging loop

Notion & Tools

- OESD Button Clips
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- OESD Grippy GRID
- 505 Temporary Spray Adhesive
- Embroidery Needle Sharp 75/11
- Ruler, rotary cutter, mat
- Contrasting bobbin thread (seam stitch only)
- Fabric marking pen
- Walking foot or Dual feed foot

Isacord Thread Colors

- Per the thread chart



SUMMARY

Completed Size:
15.5" H x 9.75" W



Requires 1 Design



80381-05

FABRICS REQUIRED

1 1/2 yards of red quilter's cotton
1/2 yard of quilter's cotton for lining
1 fat quarter- green
1 fat quarter- white

Completed Size:
15.5" H x 9.75" W



Requires 1 Design



80381-10

FABRICS REQUIRED

1 1/2 yards of green quilter's cotton
1/2 yard of quilter's cotton for lining
1 fat quarter- blue



General Instructions

Embroider one of each design file 80381-01 through 80381-05 for the Merry and Bright stocking or 80381-06 through 80381-10 for the Peace on Earth stocking.

For each hooping, cut the following 11" x 15", or large enough to hoop:

1 layer of background fabric

2 layers of Ultra Clean and Tear TearAway

Note: To economize on fabric, cut the fabric 15" wide (or the height of the hoop plus 2") by the width of the fabric. Apply the stabilizers. Move the hoop down the length of the fabric as each tile is stitched. Leave a minimum of 1.5" between the tiles.

Step 1

- Print the mirrored version of the templates (at 100% scale or 1:1 ratio) onto the paper side of the Applique Fuse and Fix.
- Cut approximately 1/4" - 1/2" outside the printed applique templates.



EMBROIDERY

□ Step 2

- Cut the applique fabric 1/4" - 1/2" larger than the applique templates that are included at the end of the instructions.
- Fuse the trimmed templates to the back of the fabric with the paper side of the printed templates up. Hold the iron on the templates for 10-15 seconds for a secure fuse.



□ Step 3

- Trim the appliques on the edge of the black outline.
- Set aside.



EMBROIDERY


Step 4

- Apply Fusible Woven to the back of the background fabric, per the product directions.
- Apply one layer of Heavyweight and one layer of Ultra Clean and Tear to the wrong side of the background fabric with temporary spray adhesive.
- Hoop fabric and stabilizer.




Step 5

- Load the selected design into the machine.
- Example design is 80381-03.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, White Fabric Placement Stitch.

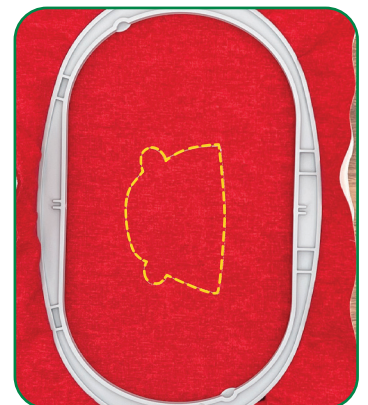


Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the white fabric, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the white fabric within the placement stitching.
- Finger press to secure.

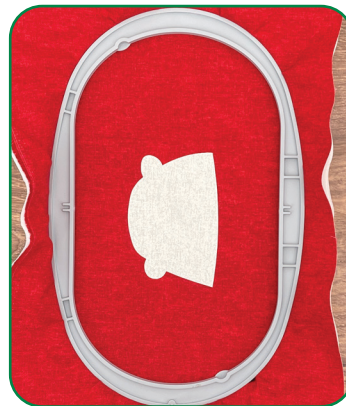

Step 7

- Return the hoop to the machine.
- Stitch Machine Step 2, Tackdown and Fur.
- Stitch Machine Step 3, Green Fabric Placement Stitch.

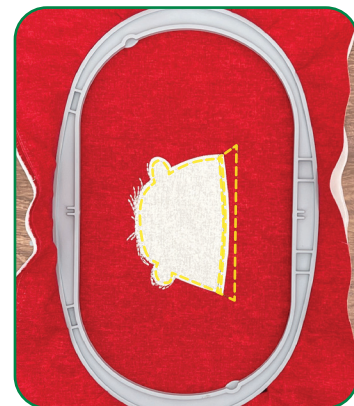

ASSEMBLY



□ Step 11

- Press each tile face down on a Perfect Embroidery Press Cloth.
- Write the number of the tile on the back so it is easily identified during construction! Use a pen or pencil that will not bleed through to the front side.



□ Step 12

- At the cutting mat, place the tile right side down.
 - Identify the “seam” stitch. Trim a 1/2” seam allowance out from the seam stitch, only on the straight edges that will be sewn together.
- Note: Accuracy here will greatly facilitate the construction of the project.

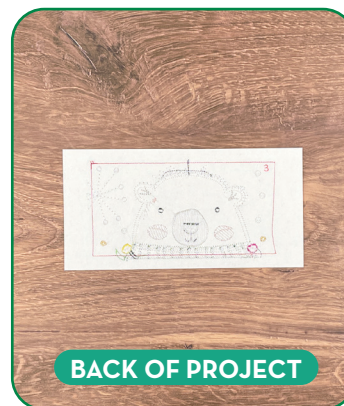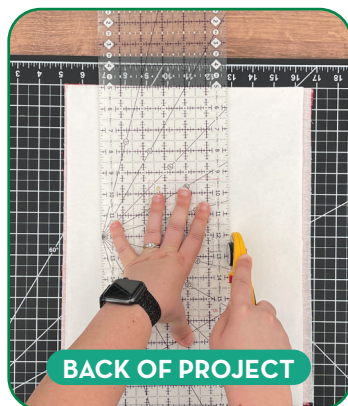

ASSEMBLY


□ Step 13

- Layout in the order the tiles will be stitched.
- Use OESD Button Clips to clip the tiles together to align the matching edges.



□ Step 14

- Using a 1/2" seam allowance, stitch Tile 1 to Tile 2. Stitch just to the inside of the seam as shown.
- Repeat for remaining tiles until the front of the stocking is complete.

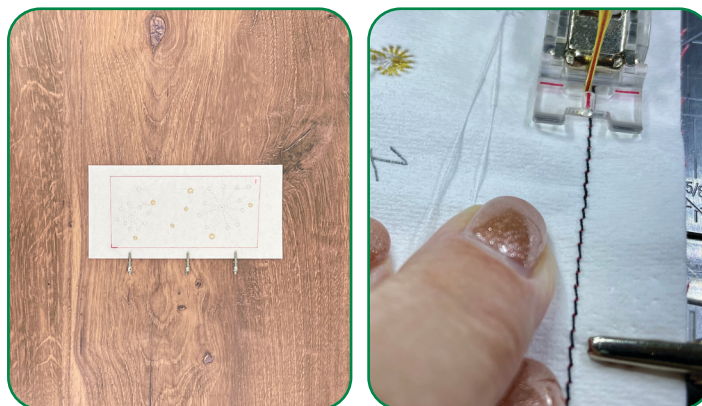

ASSEMBLY


□ Step 15

- Press each seam open.
Note: If the seams do not come apart easily, press both seam allowances to one side using steam and a cotton or linen setting.
- While warm, open the seam allowance with the large ball of the Expert Point and Press Tool.
- Press again and allow to cool.
- Once cool, remove the excess stabilizer from the seam allowance.
- Do not remove excess stabilizer from inside the seam line.



□ Step 16

- After all seams are sewn and pressed, use a ruler to mark a 1/2" seam allowance all the way around the outer seam line of the stocking.

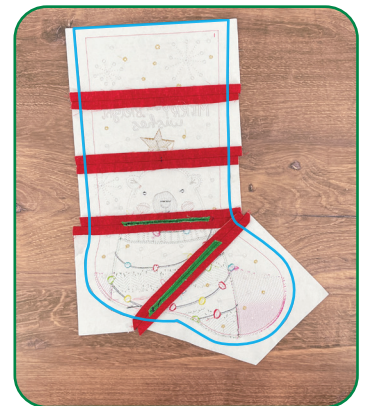

ASSEMBLY

□ Step 17

- Trim along the markings.



□ Step 18

- Use the pieced front of the stocking as a template for the back and two lining pieces.
 - Fold the lining fabric right sides together.
 - Place the fabric for the stocking back on top with the right side of the fabric facing up.
 - Place the stocking front right side down, on top of the 3 layers of fabric.



□ Step 19

- Trace the outline onto the fabric.
- Cut out.



ASSEMBLY


□ Step 20

- Use the back stocking piece as a template and cut Fuse and Fleece to fit.
- Press to the wrong side of the back stocking piece.
Note: Do not add Fuse and Fleece to the lining pieces.



□ Step 21

- Cut one scrap piece of fabric for the hanging loop 3" x 8".
- Press in half length wise, wrong sides together.

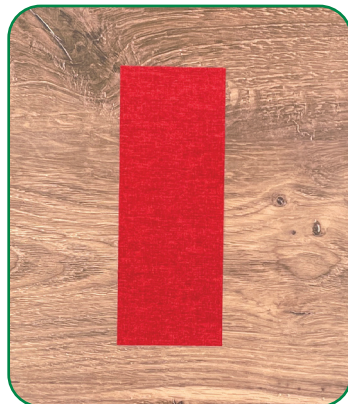

ASSEMBLY


□ Step 22

- Open and press the long edges inward meeting at the center pressed line.



□ Step 23


- Fold in half lengthwise.
- Top stitch 1/8" from each long edge.

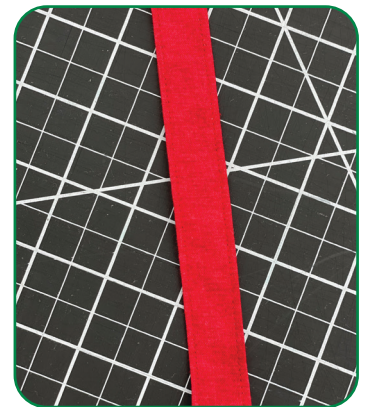

ASSEMBLY

□ Step 24

- Fold in half so that raw, short ends are together and it measures 4" long.
- Press.

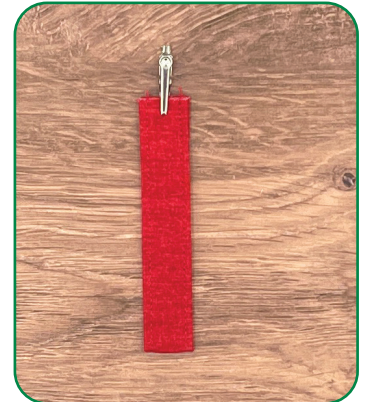

□ Step 25

- Place the two raw, short ends along the upper edge of the back stocking piece.
- Align the right side of the hanging loop 1" in from the left edge.
- Use an OESD Button Clip to hold in place.
- Stitch across the hanging loop with a 1/4" seam.



ASSEMBLY


Step 26

- Place one lining piece right sides together with the stocking front.
- Sew across the top edge with a 1/2" seam allowance.
- Repeat for the stocking back.



Step 27

- Press both seam allowances open.
- Place both pieces right sides together and use Button Clips to hold in place.

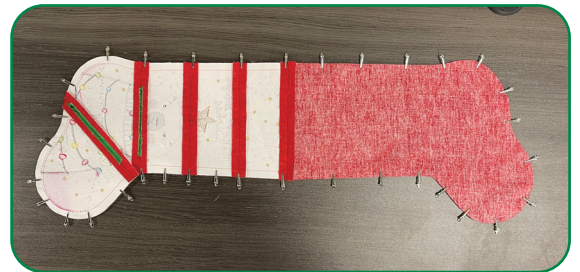

ASSEMBLY

□ Step 28

- Stitch a 1/2" seam around the stocking outside and lining.
- Leave a 3" - 4" opening in the straight edge of the lining.
- Trim the seam allowance to approximately 1/4" and clip the curves.



□ Step 29

- Pull the stocking through the opening.
- Pull the lining through the opening.
- Use the Expert Point and Press Tool to smooth out the seams.



□ Step 30

- Press the stocking.



ASSEMBLY

Step 31

- Using a small strip of Fuse and Seal, approximately 3" x 1/4", close the opening following the product instructions.



Step 32

- Push the lining down into the stocking and smooth into place.
- Press the upper edge of the stocking.
- Top stitch 1/8" around the upper edge.



Step 33

- Press the completed stocking embroidery side down on a Perfect Embroidery Press Cloth.



ASSEMBLY


□ Step 34

- Your stocking is complete. Enjoy!




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

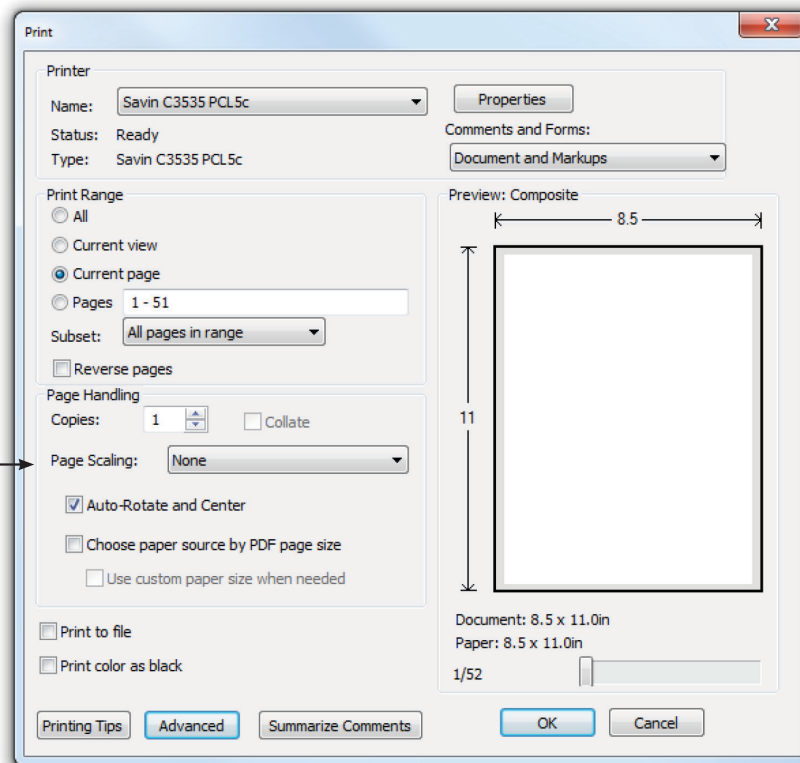

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

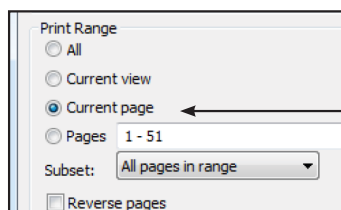





APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



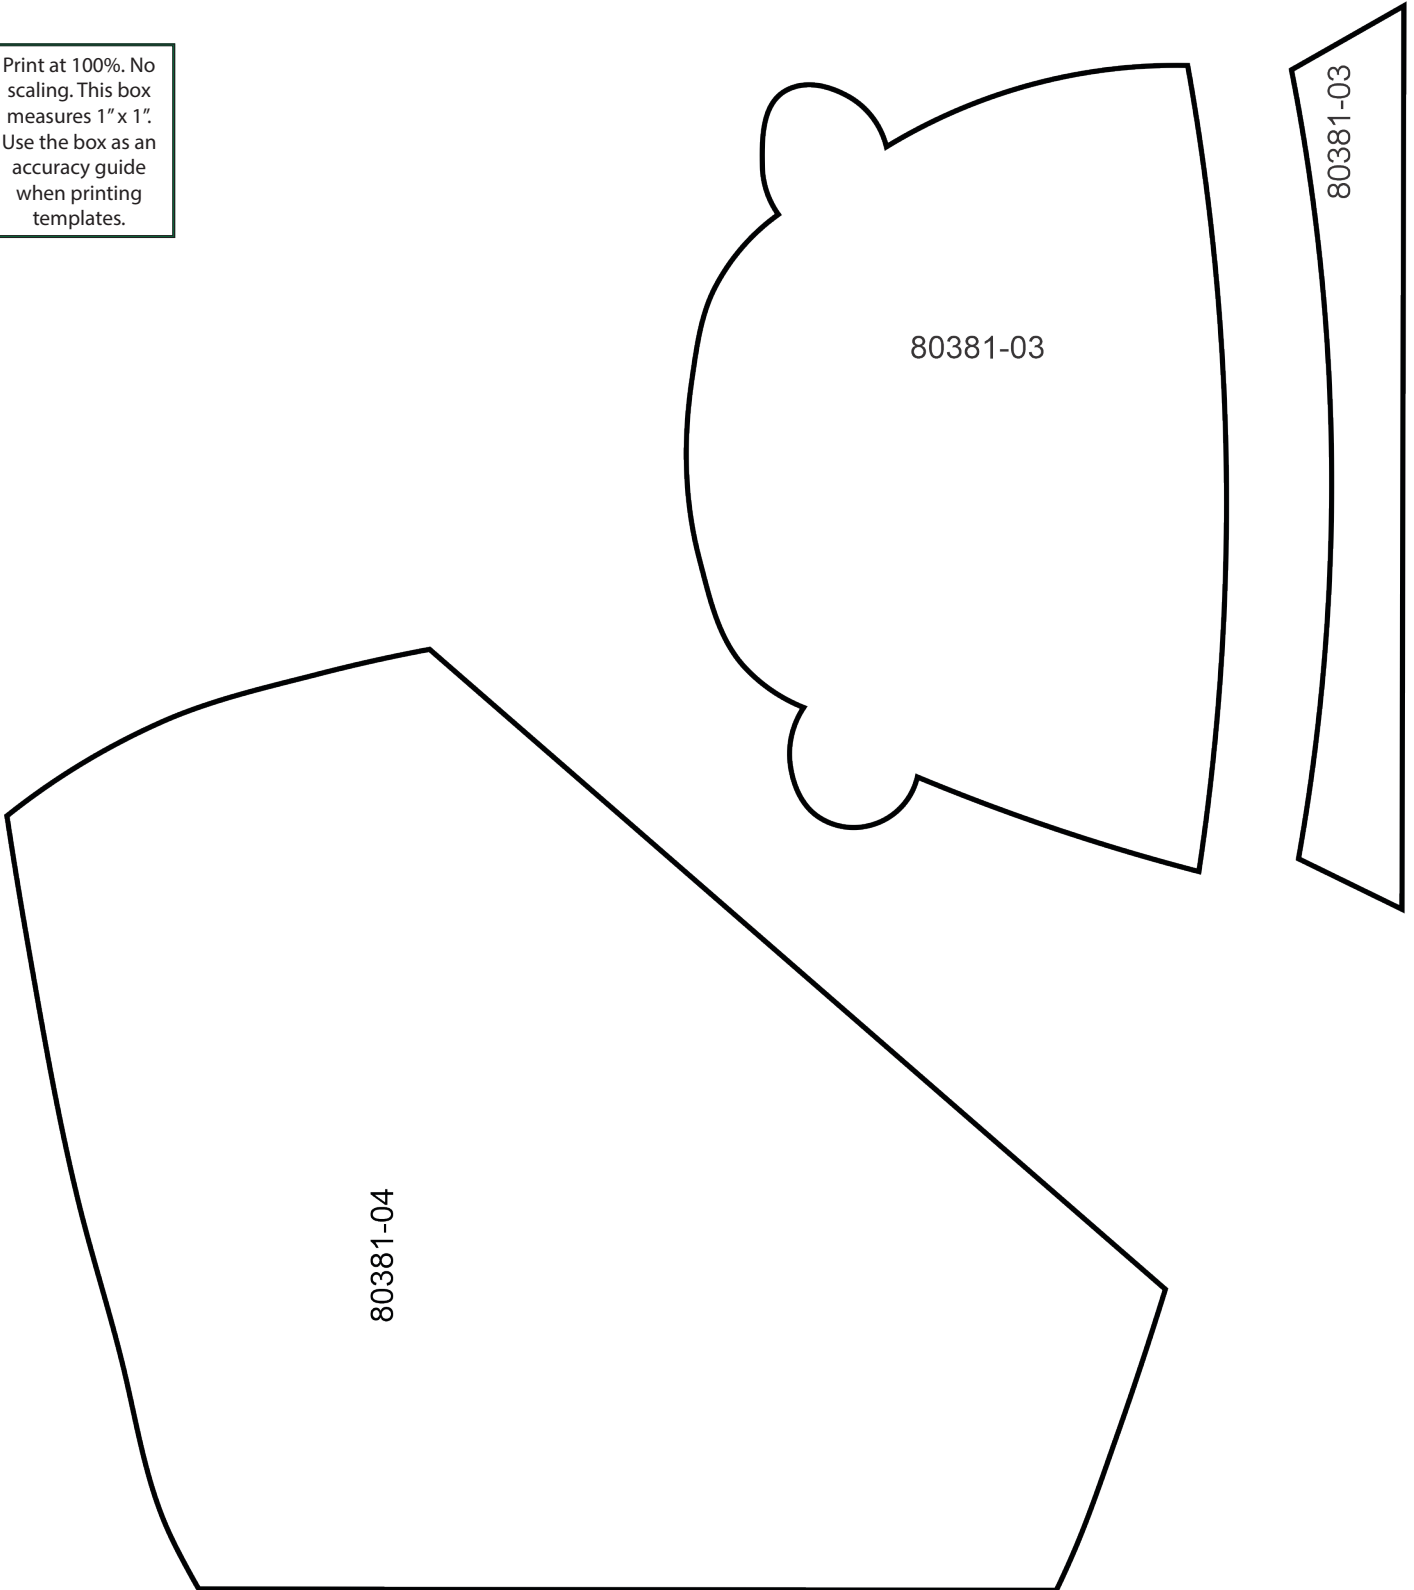


APPLIQUE PATTERNS

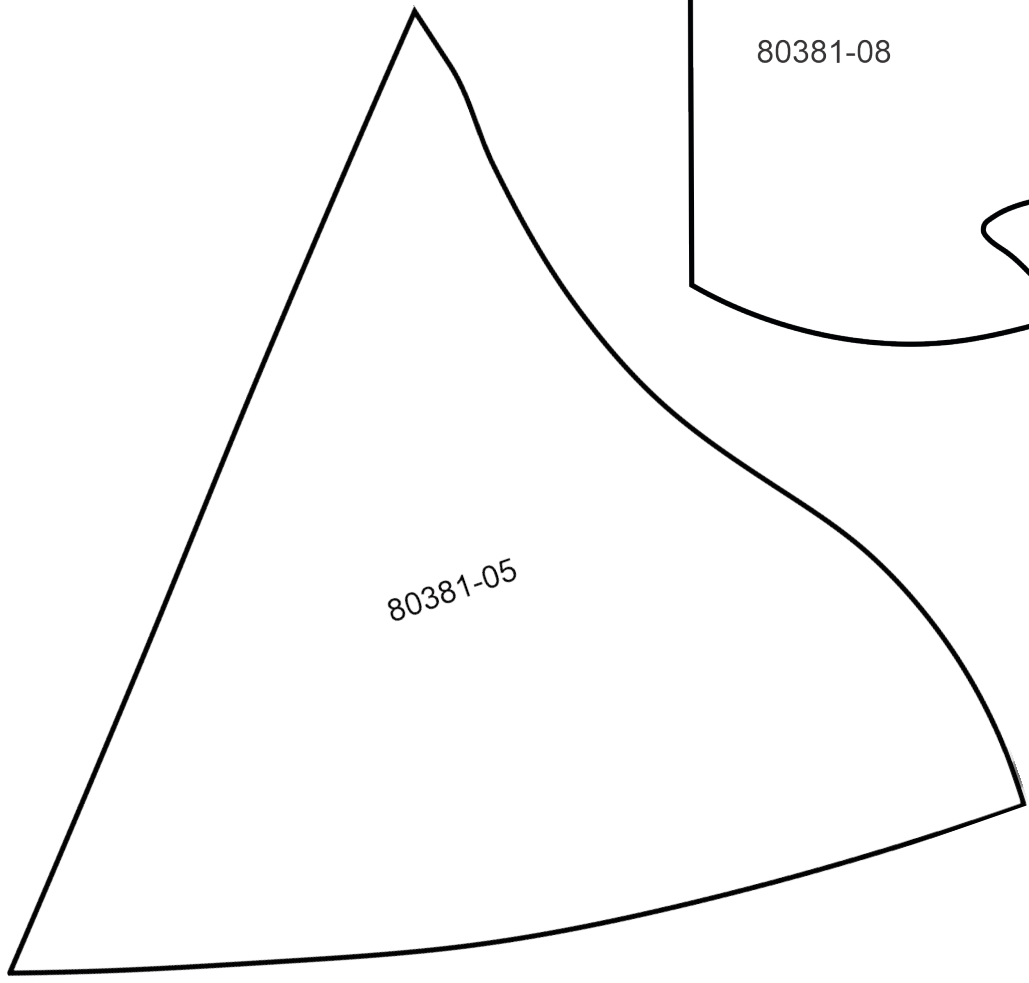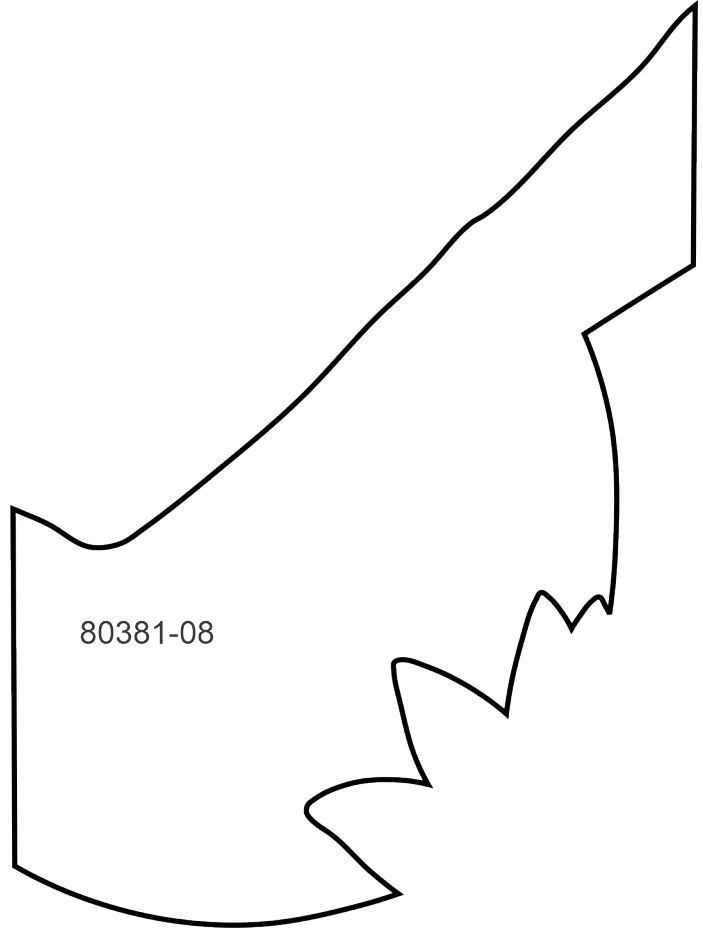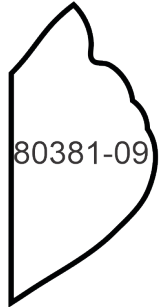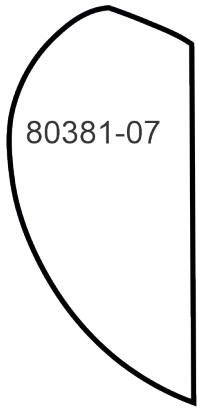

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

MIRRORED PATTERNS

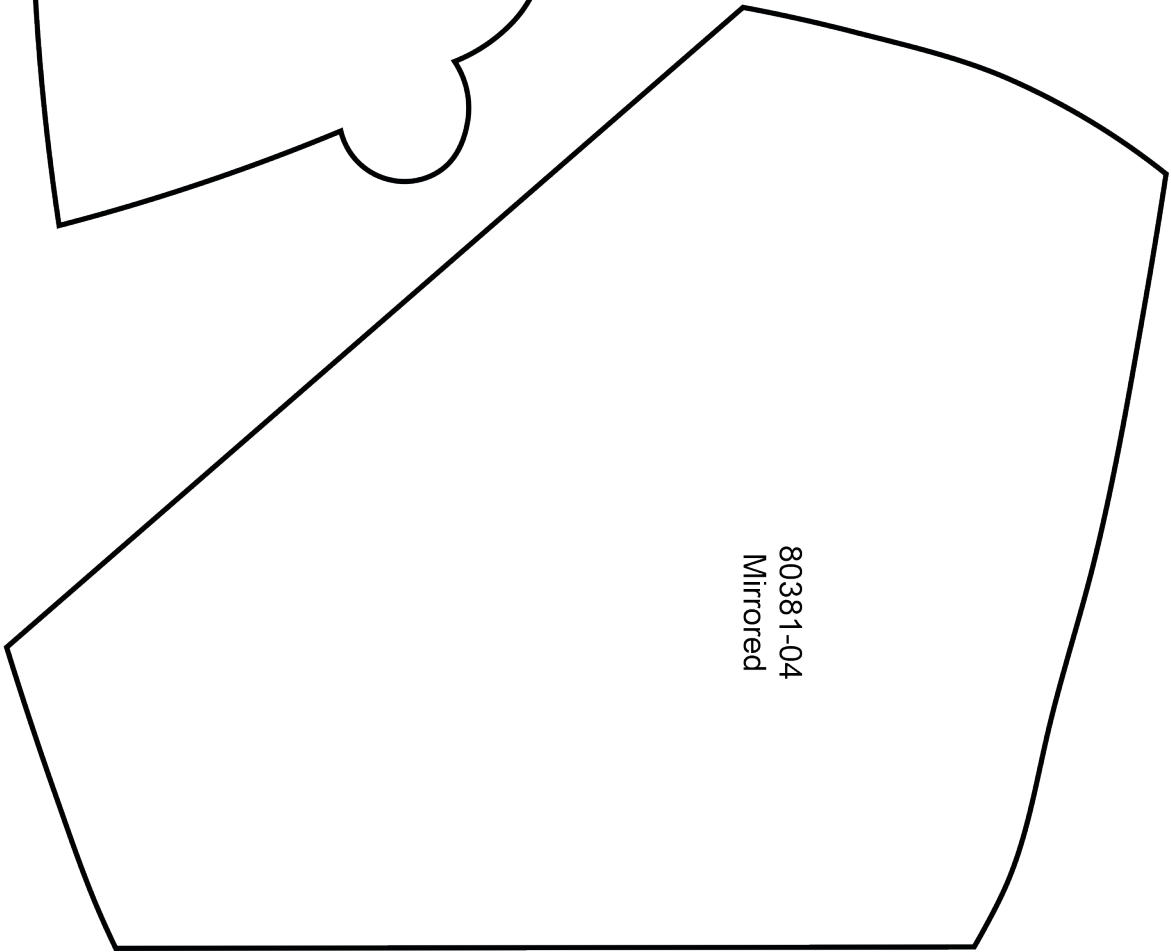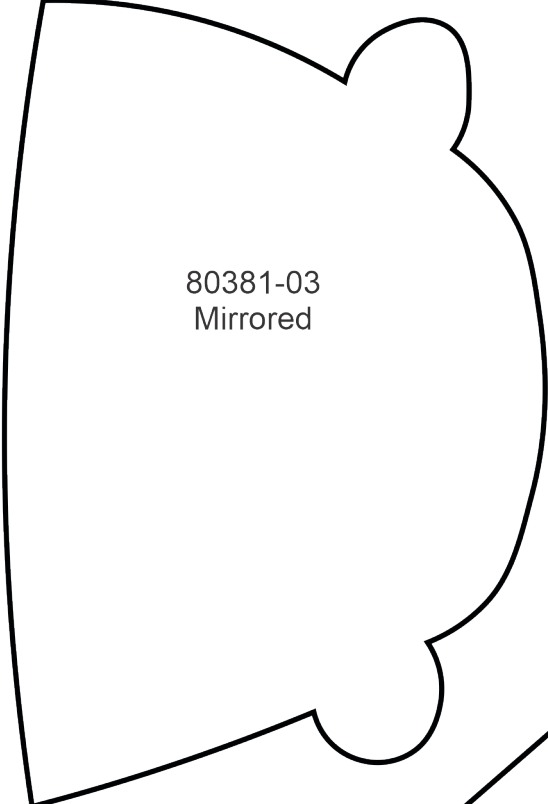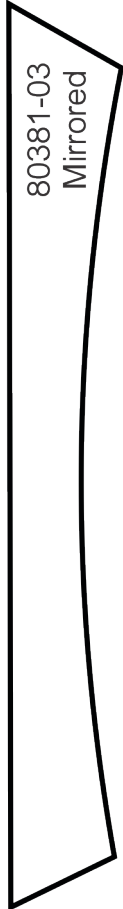

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

