

Little Darlings by the Artists of Ruby Star Society



Collection No. 80402
31 Designs

MATERIALS



Isacord Thread Colors

0010	Silky White	1352	Salmon
0020	Black	1701	Red Berry
0101	Eggshell	1720	Not Quite Red
0221	Light Brass	1876	Chocolate
0232	Seaweed	2152	Heather Pink
0504	Mimosa	2250	Petal Pink
0552	Flax	2532	Pretty in Pink
0600	Citrus	2550	Soft Pink
0608	Sunshine	2711	Dark Current
0670	Cream	3363	Midnight Blue
0672	Baquette	3713	Cornflower Blue
0776	Sage	3743	Harbor
0870	Muslin	4423	Marine Aqua
0922	Ashley Gold	4952	Mystic Ocean
1010	Toast	5515	Kelly
1060	Shrimp Pink	5643	Green Dust
1140	Meringue	5933	Grasshopper
1172	Ivory	6031	Limelight
1321	Dark Orange		
1335	Dark Rust		

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
- OESD Fuse and Seal

Fabrics/Textiles

- Assorted Quilter's Cotton

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per thread chart

SUMMARY

OESD™ PREMIER COLLECTION




80402-01



Design Size:
.96" H X 1.01" W

80402-02

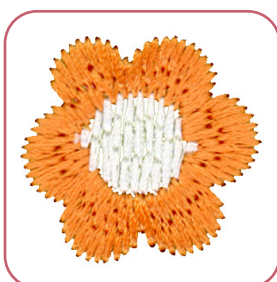

Design Size:
.97" H X 1.01" W

80402-03



Design Size:
1.20" H X 1.08" W

80402-04




Design Size:
1.09" H X 1.10" W

80402-05



Design Size:
1.32" H X 1.11" W

80402-06

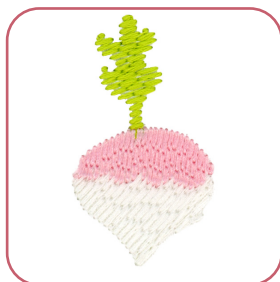

Design Size:
1.91" H X 1.06" W

80402-07



Design Size:
1.03" H X 1.06" W

80402-08



Design Size:
1.03" H X .84" W

SUMMARY


OESD™ PREMIER COLLECTION

80402-09



Design Size:
.52" H X 1.00" W

80402-10

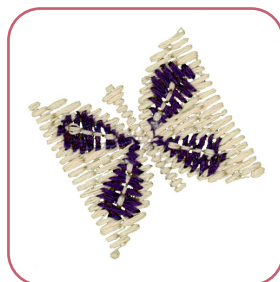

Design Size:
1.43" H X 1.51" W

80402-11



Design Size:
1.17" H X 2.17" W

80402-12



Design Size:
1.41" H X 2.25" W

80402-13



Design Size:
1.72" H X 2.08" W

80402-14




Design Size:
2.08" H X 1.16" W

80402-15



Design Size:
2.09" H X 1.42" W

80402-16

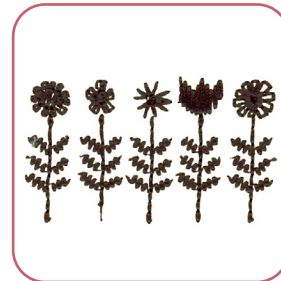

Design Size:
1.23" H X 2.09" W

80402-17




Design Size:
1.22" H X 2.51" W

80402-18




Design Size:
1.29" H X 2.00" W

80402-19

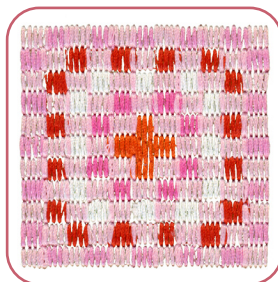

Design Size:
2.05" H X 2.04" W

80402-20

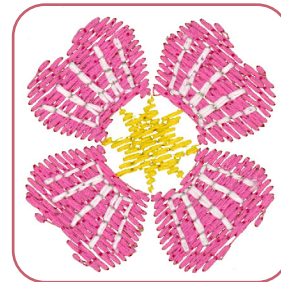


Design Size:
2.01" H X 2.01" W

SUMMARY

OESD™ PREMIER COLLECTION

80402-21

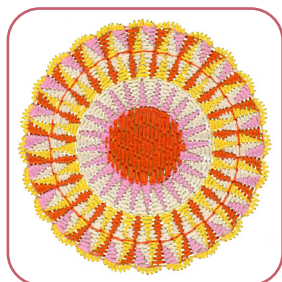


Design Size:
2.96" H X 2.96" W

80402-22



Design Size:
2.06" H X 2.94" W

80402-23

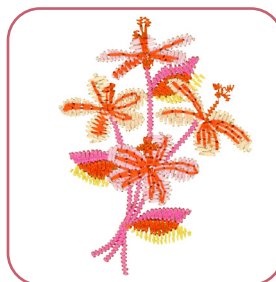

Design Size:
3.00" H X 2.31" W

80402-24




Design Size:
2.98" H X 2.90" W

80402-25




Design Size:
2.87" H X 2.93" W

80402-26

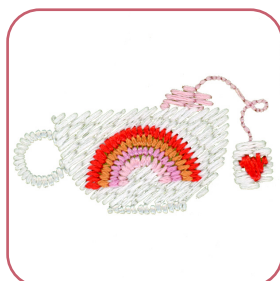

Design Size:
1.06" H X 1.99" W

80402-27

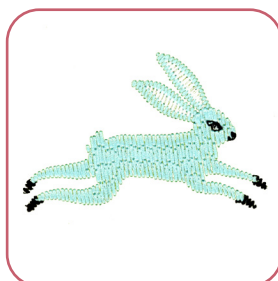


Design Size:
1.95" H X 2.91" W

80402-28



Design Size:
3.01" H X 3.01" W

80402-29

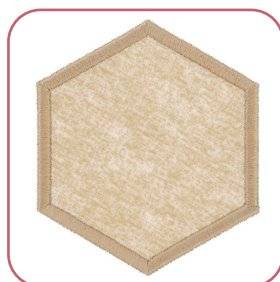

Design Size:
3.55" H X 3.08" W

80402-30



Design Size:
1.51" H X 1.51" W

80402-31



Design Size:
1.78" H X 1.55" W

General Instructions

The patch instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design 80402-29 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same.


Designs 80402-01 through 80402-27 are embroidery motifs that can be used individually or placed on the patches (80402-28 through 80402-31) depending on sizing.

If using an embroidery motif on a patch, use machine features to place the motif within the patch. For best results, stitch the motif before the cover stitch, but after trimming the applique (background) fabric.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.


Step 1

- Cut the applique (background) fabric 1/4" – 1/2" larger than the applique pattern. The applique patterns are included at the end of the instructions.
- Adhere two layers of StabilStick CutAway to the wrong side of the applique fabric to provide stiffness to the finished patch.

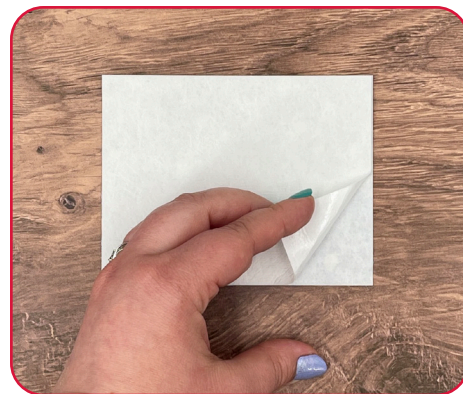


Step 2

- Using the OESD Grippy Grid, hoop two layers of BadgeMaster for all designs.

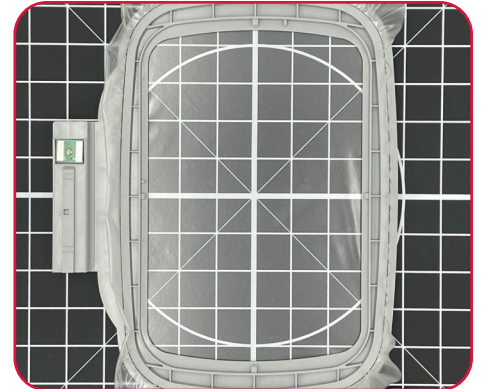


Step 3

- Load the selected design into the machine.
- Example design is 80402-29.
- Thread the machine with a color that coordinates with the applique fabric.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fabric Placement Stitch.
- Tip: The same thread color is used for the three machine steps to complete a blank patch.**

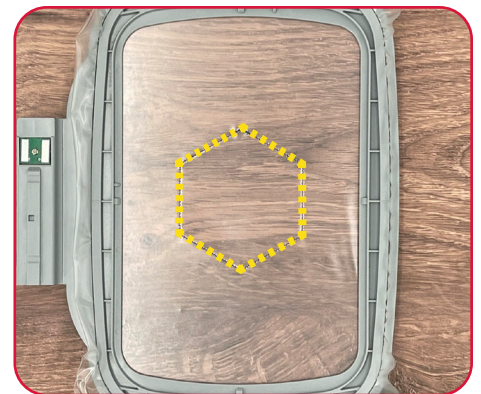


Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

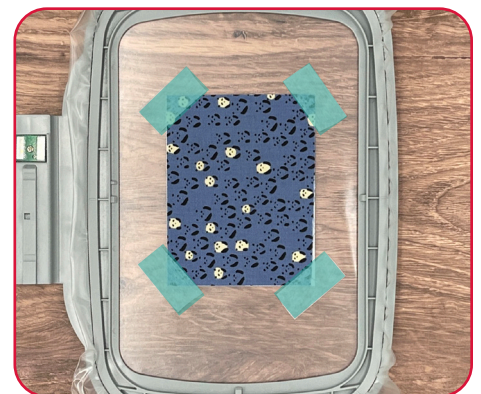


□ Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

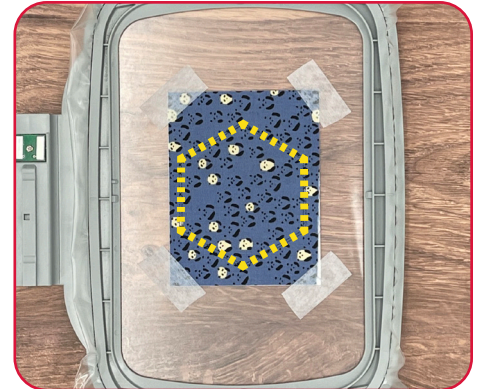


□ Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- **Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.**

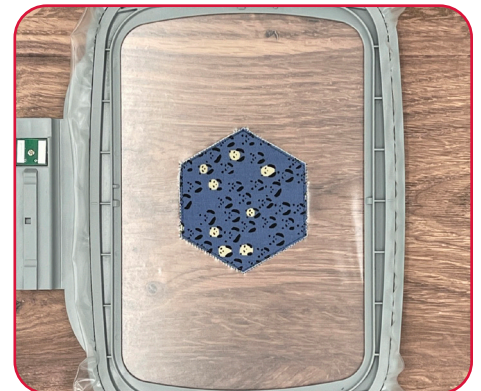


□ Step 7

- Return the hoop to the machine.
- Stitch the remaining machine step with matching bobbin thread.
- **Tip: If not already done, choose a thread color that coordinates with the applique fabric.**

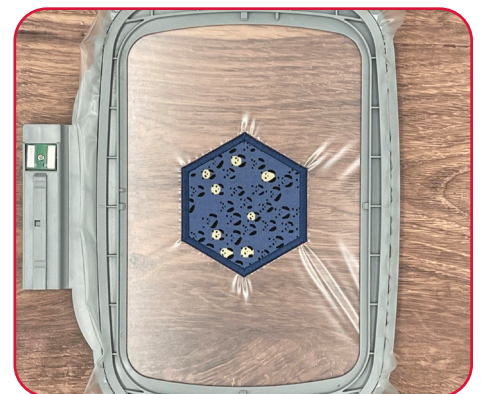

□ Step 8

- When the design is complete, remove the project from the hoop.
- Tear away the BadgeMaster from the edge, one layer at a time.

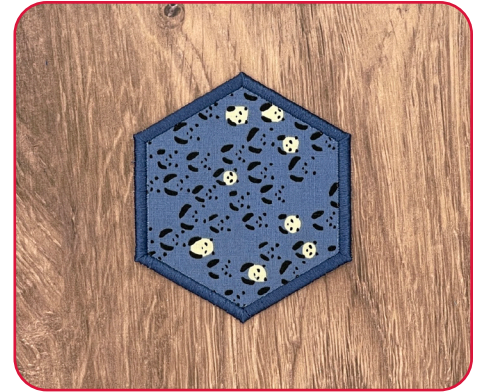

FINISHING TOUCHES



□ Step 9

- Rinse in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



□ Step 10

- Trace the along the edge of the patch, wrong side up, on the paper side of Fuse and Seal.
- Cut inside the outline.

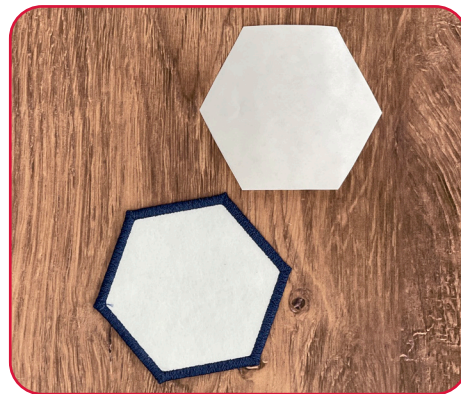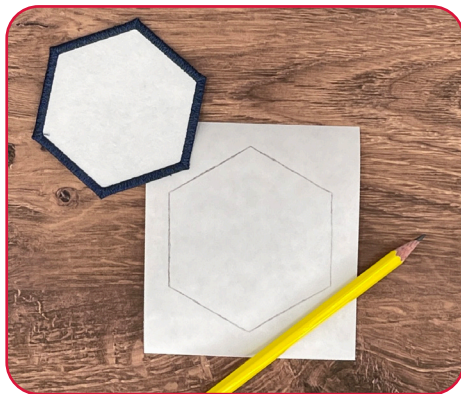

FINISHING TOUCHES

□ Step 11

- Following the package instructions, iron the Fuse and Seal to the wrong side of the applique.
- Cool completely.



□ Step 12

- When ready to apply the patch to a project, remove the paper from the Fuse and Seal.
- Place the patch on the project as desired.
- Press to adhere.



□ Step 13

- The project is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

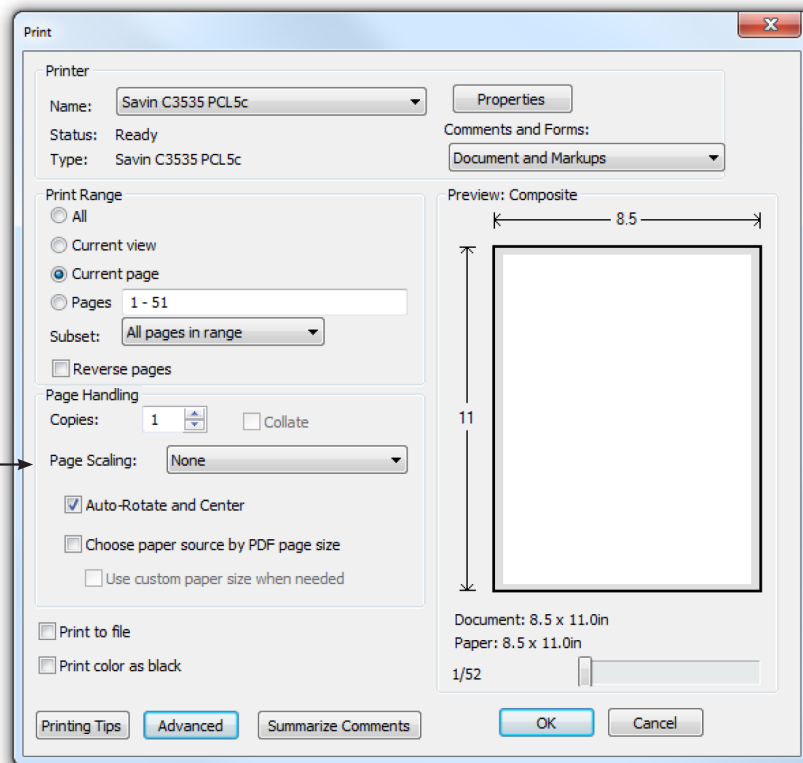

TO SAVE PAPER





Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

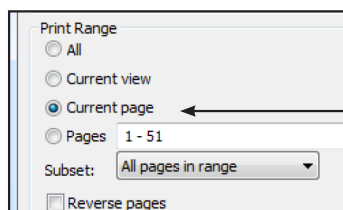

APPLIQUE PATTERNS

OESDTM **PREMIER**
COLLECTION

Print at 100%. No
scaling. This box
measures 1" x 1".
Use the box as an
accuracy guide
when printing
templates.

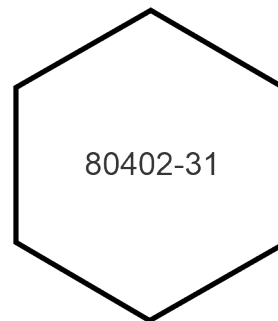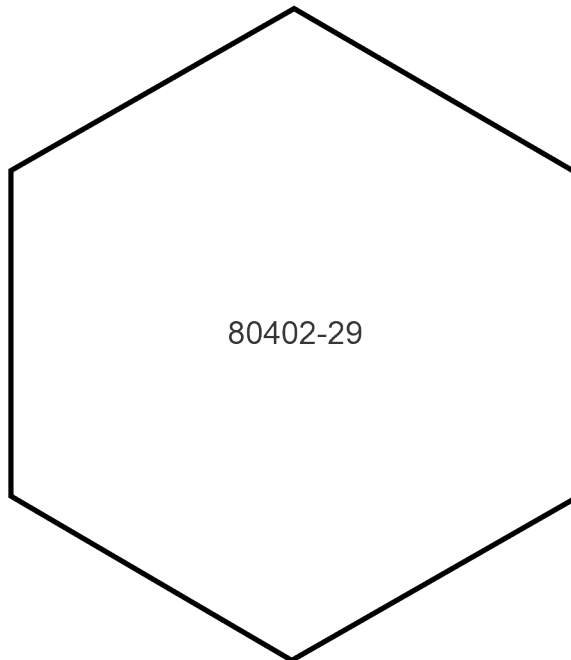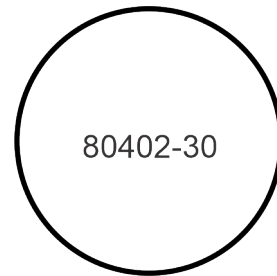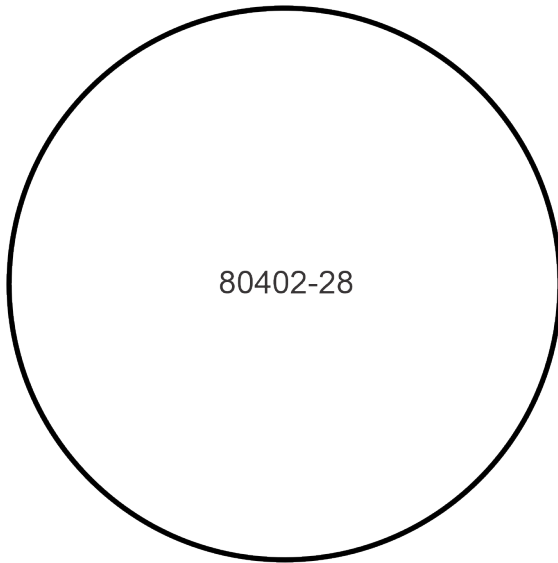

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

