Stitch Count:


S


1218

1218



PETALS & POSIES

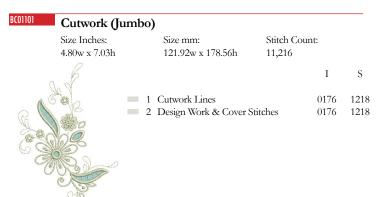

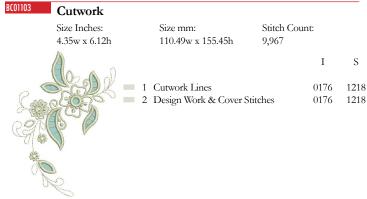

For use with the BERNINA CutWork Accessory (Jumbo) Size Inches: Stitch Count: Size mm: 4.80w x 7.03h 121.92w x 178.56h 12,591 S 1 Cutwork Tackdown 0176 1218 BERNINA CutWork Accessory Setting 1 Cut 1 1001 BERNINA CutWork Accessory Setting 2 Cut 2 1001 BERNINA CutWork Accessory 1001 Setting 3 Cut 3 BERNINA CutWork Accessory Setting 4 Cut 4 1001 6 Design Work & Cover Stitches 0176 1218 Cutwork

For use with t	the BERNINA CutWor	k Accessory	
Size Inches: 4.35w x 6.12h	Size mm: 110.49w x 155.45h	Stitch Count: 12,394	
A		I	S
	Cutwork Tackdown	0176	1218
	 2 BERNINA CutWork Acc 	cessory	
	Setting 1 Cut 1	1001	
-	 3 BERNINA CutWork Acc 	cessory	
98	Setting 2 Cut 2	1001	
-	 4 BERNINA CutWork Acc 	cessory	
	Setting 3 Cut 3	1001	
_	 5 BERNINA CutWork Acc 	cessory	
045	Setting 4 Cut 4	1001	
	6 Design Work & Cover Sti	tches 0176	1218
BC01104 Cutwork			

Size Inches: 4.09w x 5.48h	Size mm: 103.89w x 139.19h	Stitch Count: 9,739		
Q			I	S
	1 Cutwork Lines	()176	1218
83	2 Design Work & Cover Stit	ches ()176	1218

4.33w x 5.31h 109.98w x 134.87h 8,257 Ι S 1 Cutwork Lines 0176 1218 2 Design Work & Cover Stitches 0176 1218

Size mm:

Size Inches:

00	Vaa		
	0000		
9			
400	0 500		
	000000000000000000000000000000000000000		
	00		
	0		
DC01103 CWC			
DCUTTUZ_CWC	For use with th	ne BERNINA CutWo	ork Accessory
	Size Inches:	Size mm:	Stitch Count:
	4.09w x 5.48h	103.89w x 139.19h	11,272
	1.05 W A 5. 1011	105.07 W X 137.1711	11,272
0			
Candy			
C	1		

	101
	Size 1 4.33v
S 1218	
1218	ę

BOOTION For use with the BERNINA CutWork Accessory Inches: Size mm: Stitch Count: w x 5.31h 109.98w x 134.87h 9.533 I

1 Cutwork Tackdown 0176 1 Cutwork Tackdown 0176 BERNINA CutWork Accessory 2 BERNINA CutWork Accessory Setting 1 Cut 1 1001 Setting 1 Cut 1 1001 BERNINA CutWork Accessory BERNINA CutWork Accessory Setting 2 Cut 2 1001 Setting 2 Cut 2 1001 BERNINA CutWork Accessory 4 BERNINA CutWork Accessory Setting 3 Cut 3 1001 1001 Setting 3 Cut 3 BERNINA CutWork Accessory BERNINA CutWork Accessory Setting 4 Cut 4 1001 Setting 4 Cut 4 1001 6 Design Work & Cover Stitches 0176 6 Design Work & Cover Stitches 0176

Some designs in this collection were created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

I = Isacord® thread color number S = Sulky® thread color number

Isacord® is a registered trademark of Ackermann, A Division of the Amann Group Sulky® is a registered trademark of Sulky of America

Color crossovers from Isacord® to Sulky® are the closest possible match. Not responsible for oversights, errors, or omissions. To ensure accuracy, sew a test piece first.



BC01105 Cutwork				
Size Inches:	Size mm:	Stitch Co	ount:	
2.93w x 4.28h	74.42w x 108.71h	5,048		
2			I	S
1 de	1 Cutwork Lines		0176	1218
	2 Design Work & Cover	Stitches	0176	1218

C01107	Cutwork							
	Size Inches: 2.54w x 5.87h		Size mm: 64.52w x 149.10h	n	Stitch 9,061	Count	:	
	Ja						I	S
e(1	Cutwork Lines				0176	1218
		_ 2	Design Work & Co	over Stit	ches		0176	1218

BC01105_CWC F	or use with t	he I	BERNINA CutWo	rk Access	ory	
	ze Inches:		Size mm:	Stitch Co		
2.9	3w x 4.28h		74.42w x 108.71h	5,624		
	2)				Ι	S
	15	1	Cutwork Tackdown		0176	1218
j.	A =	2	BERNINA CutWork Ac	ccessory		
6			Setting 1 Cut 1		1001	
Care /		3	BERNINA CutWork Ac	ccessory		
300	//		Setting 2 Cut 2		1001	
	-	4	BERNINA CutWork Ac	ccessory		
495			Setting 3 Cut 3		1001	
		5	BERNINA CutWork Ac	ccessory		
,	(0)(0)		Setting 4 Cut 4		1001	
		6	Design Work & Cover S	titches	0176	1218

Size Inches:		Size mm:	Stitch Co	unt:	
2.54w x 5.87h		64.52w x 149.10h	10,464		
and the second				Ι	S
@()d	= 1	Cutwork Tackdown		0176	1218
72162	2	BERNINA CutWork	Accessory		
		Setting 1 Cut 1	,	1001	
	3	BERNINA CutWork A	Accessory		
# 250		Setting 2 Cut 2		1001	
d SAPE	4	BERNINA CutWork	Accessory		
COALD.		Setting 3 Cut 3		1001	
4/3/	5	BERNINA CutWork	Accessory		
		Setting 4 Cut 4		1001	
O .	6	Design Work & Cover	Stitches	0176	1218

Size Inches: 2.79w x 3.00h	Size mm: 70.87w x 76.20h	Stitch Cour 3,109	ıt:	
			Ι	S
(0)=	1 Cutwork Lines		0176	1218
(9)	2 Design Work & Cove	r Stitches	0176	1218



BC01106_CWC	For use with the l	BERNINA CutWo	rk Accesso	ry	
	Size Inches: 2.79w x 3.00h	Size mm: 70.87w x 76.20h	Stitch Cour 3,248		
				I	S
(1	Cutwork Tackdown BERNINA CutWork Ac	ccessorv	0176	1218
7	$\bigcirc \bigcirc $	Setting 1 Cut 1 BERNINA CutWork Ac	·	1001	
0	4 - 4 - S	Setting 2 Cut 2 BERNINA CutWork Ac	ccessory	1001	
CO.	= 5	Setting 3 Cut 3 BERNINA CutWork Ac	ccessory	1001	
		Setting 4 Cut 4		1001	
	6	Design Work & Cover S	titches	0176	1218



Cutwork

Stitch Count:

7,768



PETALS & POSIES

Cutwork Size Inches: Size mm: Stitch Count: $1.27w \times 6.18h$ 32.26w x 156.97h 5,360 S 1 Cutwork Lines 0176 1218 2 Design Work & Cover Stitches 0176 1218

C01111	Cutwork				
	Size Inches:	Size mm:	Stitch Coun	ıt:	
	3.66w x 3.66h	92.96w x 92.96h	6,297		
	6			I	S
	1 0	Cutwork Lines		0176	1218
52 4		Design Work & Cover Sti	tches	0176	1218

For use with the BERNINA CutWork Accessory

Size mm:

92.96w x 92.96h

Size Inches:

3.66w x 3.66h

U					
BC01109_CWC For use wit	h the	BERNINA CutWo	ork Access	sory	
Size Inches:		Size mm:	Stitch Co		
1.27w x 6.18h		32.26w x 156.97h	6,226		
95				I	S
A	1	Cutwork Tackdown		0176	1218
211	= 2	BERNINA CutWork A	ccessory		
		Setting 1 Cut 1		1001	
	= 3	BERNINA CutWork A	ccessory		
The state of the s		Setting 2 Cut 2		1001	
913	4	BERNINA CutWork A	ccessory		
		Setting 3 Cut 3		1001	
	= 5	BERNINA CutWork A	ccessory		
J.		Setting 4 Cut 4	•	1001	
90	6	Design Work & Cover S	Stitches	0176	1218

2		I	S
	1 Cutwork Tackdown	0176	121
	2 BERNINA CutWork Accessory		
10	Setting 1 Cut 1	1001	
58	3 BERNINA CutWork Accessory		
165	Setting 2 Cut 2	1001	
	 4 BERNINA CutWork Accessory 		
1	Setting 3 Cut 3	1001	
	■ 5 BERNINA CutWork Accessory		
\$P	Setting 4 Cut 4	1001	
U	6 Design Work & Cover Stitches	0176	121
utwork			

Size mm:	Stitch Coun	t:	
18.80w x 130.05h	3,023		
		Ι	S
1 Cutwork Lines		0176	1218
2 Design Work & Cover	Stitches	0176	1218
	18.80w x 130.05h 1 Cutwork Lines	18.80w x 130.05h 3,023	18.80w x 130.05h 3,023 I 1 Cutwork Lines 0176

Ι S 1 Cutwork Tackdown 0176 1218 2 BERNINA CutWork Accessory Setting 1 Cut 1 1001 BERNINA CutWork Accessory Setting 2 Cut 2 1001 BERNINA CutWork Accessory Setting 3 Cut 3 1001 ■ 5 BERNINA CutWork Accessory Setting 4 Cut 4 1001 6 Design Work & Cover Stitches 0176 1218 BC01112 Cutwork Size Inches: Size mm: Stitch Count: 41.66w x 95.25h 6,040 1.64w x 3.75h S Ι 1 Cutwork Lines 0176 1218 2 Design Work & Cover Stitches 0176 1218

Size Inches:	Size mm:	Stitch Count:	
.74w x 5.12h	18.80w x 130.05h	3,735	
A		I	S
	1 Cutwork Tackdown	0176	1218
	2 BERNINA CutWork Acc	essory	
STÓ	Setting 1 Cut 1	1001	
000	3 BERNINA CutWork Acc	essory	
E.S.	Setting 2 Cut 2	1001	
and the second	4 BERNINA CutWork Acc	essory	
	Setting 3 Cut 3	1001	
13	5 BERNINA CutWork Acc	essory	

Setting 4 Cut 4

6 Design Work & Cover Stitches

For use with the BERNINA CutWork Accessory

Size Inches:	the BERNINA CutW	Stitch Co		
1.64w x 3.75h	41.66w x 95.25h	7,175		
489			I	S
393	1 Cutwork Tackdown		0176	1218
- 60	 2 BERNINA CutWork A 	Accessory		
S S S S S S S S S S S S S S S S S S S	Setting 1 Cut 1		1001	
	 3 BERNINA CutWork A 	Accessory		
	Setting 2 Cut 2	_	1001	
	 4 BERNINA CutWork A 	Accessory		
	Setting 3 Cut 3	_	1001	
746	 5 BERNINA CutWork A 	Accessory		
	Setting 4 Cut 4	Ž	1001	
	 6 Design Work & Cover 	Stitches	0176	1218

1001

0176

1218

I = Isacord® thread color number S = Sulky® thread color number



Cutwork

Size Inches: Size mm: Stitch Count: $3.21\mathrm{w} \ge 3.20 h$ 81.53w x 81.28h 7,476

Cutwork Lines

2 Design Work & Cover Stitches



0176	1218
0176	1218

Ι S

S

1218



For use with the BERNINA CutWork Accessory

Size Inches: Size mm: Stitch Count: 3.21w x 3.20h 81.53w x 81.28h 9,512



	1	Cutwork Tackdown	0176	1218
	2	BERNINA CutWork Accessory		
		Setting 1 Cut 1	1001	
	3	BERNINA CutWork Accessory		
1		Setting 2 Cut 2	1001	
	4	BERNINA CutWork Accessory		
/		Setting 3 Cut 3	1001	

5 BERNINA CutWork Accessory 1001 Setting 4 Cut 4 6 Design Work & Cover Stitches 0176


Cutwork

Size Inches: Stitch Count: Size mm: 4.81w x 4.87h 122.17w x 123.70h 15,976



1	Cutwork Lines	0176	1218
2	Design Work & Cover Stitches	0176	1218

For use with the BERNINA CutWork Accessory Size Inches: Stitch Count: Size mm: 4.73w x 4.77h 120.14w x 121.16h 14,671 Ι 1 Cutwork Tackdown 0176

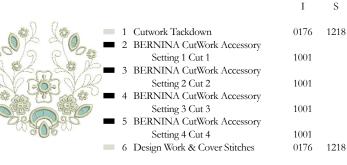

Cutwork

Size Inches: Stitch Count: Size mm: 2.15w x 3.86h 54.61w x 98.04h 5,585



1	Cutwork Lines	0176	1218
2	Design Work & Cover Stitches	0176	1218

For use with the BERNINA CutWork Accessory

Size Inches: Stitch Count: Size mm: 122.17w x 123.70h 18,090 4.81w x 4.87h



			I	S
) ===	1	Cutwork Tackdown	0176	1218
	2	BERNINA CutWork Accessory		
		Setting 1 Cut 1	1001	
	3	BERNINA CutWork Accessory		
		Setting 2 Cut 2	1001	
_	4	BERNINA CutWork Accessory		
		Setting 3 Cut 3	1001	
	5	BERNINA CutWork Accessory		
		Setting 4 Cut 4	1001	
	6	Design Work & Cover Stitches	0176	1218

BC01116_CWC	For use with the BERNINA CutWork Acc		
	Size Inches:	Size mm:	Stitch Count:
	2.45 2.07	E4.61 00.041	(100

2.15w x 3.86h

54.61w x 98.04h 6,108		
	I	S
1 Cutwork Tackdown	0176	1218
2 BERNINA CutWork Accessory		
Setting 1 Cut 1	1001	
3 BERNINA CutWork Accessory		
Setting 2 Cut 2	1001	
4 BERNINA CutWork Accessory		
Setting 3 Cut 3	1001	
 5 BERNINA CutWork Accessory 		
Setting 4 Cut 4	1001	
6 Design Work & Cover Stitches	0176	1218

I = Isacord® thread color number S = Sulky® thread color number

Isacord® is a registered trademark of Ackermann, A Division of the Amann Group Sulky® is a registered trademark of Sulky of America

Color crossovers from Isacord® to Sulky® are the closest possible match. Not responsible for oversights, errors, or omissions. To ensure accuracy, sew a test piece first.



S

Cutwork

Size Inches: Size mm: Stitch Count: $1.53 w \times 4.53 h$ 38.86w x 115.06h 14,814




Cutwork Lines 0176 1218

2 Design Work & Cover Stitches 0176 1218



For use with the BERNINA CutWork Accessory

Size Inches: Size mm: Stitch Count: 115.06w x 115.06h 18,805 4.53w x 4.53h

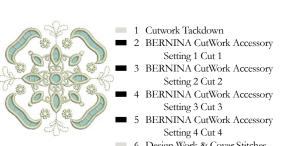

	1	Cutwork Tackdown	0176	1218
	2	BERNINA CutWork Accessory		
		Setting 1 Cut 1	1001	
) =	3	BERNINA CutWork Accessory		
9		Setting 2 Cut 2	1001	
_	4	BERNINA CutWork Accessory		
		Setting 3 Cut 3	1001	
	5	BERNINA CutWork Accessory		
		Setting 4 Cut 4	1001	
	6	Design Work & Cover Stitches	0176	1218

Cutwork

Size Inches: Stitch Count: Size mm: 4.53w x 4.53h 115.06w x 115.06h 18,362






BC01121	Size Inches: 1.68w x 6.46h	Size mm: 42.67w x 164.08h	Stitch Coun 3,563	t:	
	9			Ι	S
		1 Single Color Design		0176	1218
	- €8 \				
	39 p				

For use with the BERNINA CutWork Accessory

Size Inches: Size mm: Stitch Count: 4.53w x 4.53h 115.06w x 115.06h 22,763

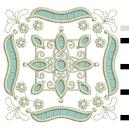

Cutwork Tackdown 0176 1218 BERNINA CutWork Accessory Setting 1 Cut 1 1001

BERNINA CutWork Accessory Setting 2 Cut 2 1001 BERNINA CutWork Accessory Setting 3 Cut 3 1001

BERNINA CutWork Accessory Setting 4 Cut 4 1001 6 Design Work & Cover Stitches 0176

1218 Isacord® is a registered trademark of Ackermann, A Division of the Amann Group Sulky® is a registered trademark of Sulky of America

Ι

BC01122 Size Inches: Size mm: Stitch Count: 1.04w x 1.18h 26.42w x 29.97h 615 S 1 Single Color Design 0176 1218

> Color crossovers from Isacord® to Sulky® are the closest possible match. Not responsible for oversights, errors, or omissions. To ensure accuracy, sew a test piece first.

©2011 OESD, LLC. All rights reserved.

I = Isacord® thread color number

S = Sulky® thread color number




For use with the BERNINA CutWork Accessory (Jumbo)

Size Inches: 6.87w x 10.30h	Size mm: 174.50w x 261.62h	Stitch Count 20,052	: :	
Do			I	S
	1 Cutwork Tackdown		0176	1218
	2 BERNINA CutWork A	Accessory		
	Setting 1 Cut 1	·	1001	
To see -	1 3 BERNINA CutWork A	Accessory		
	Setting 2 Cut 2	•	1001	
	4 BERNINA CutWork A	Accessory		
-00	Setting 3 Cut 3		1001	
	5 BERNINA CutWork A	Accessory		
The same of the sa	Setting 4 Cut 4		1001	
	6 Design Work & Cover	Stitches	0176	1218

Cutwork (Jumbo)


Size Inches:	Size mm:	St	itch Count:
9.55w x 9.57h	242.57w x 243.08h	46,355	
		Ι	S

1 Cutwork Lines 0176 1218 2 Design Work & Cover Stitch 0176 1218

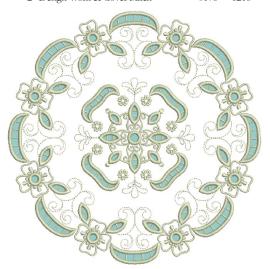

For use with the BERNINA CutWork Accessory (Jumbo)

Size Inc. 9.55w x		Size mm: 242.57w x 243.08h	Stitch Count: 60,225	
			I	S
= 1 (Cutwork Tac	ckdown	0176	1218
■ 2 H	BERNINA (CutWork Accessory		
	Setting 1	1 Cut 1	1001	
■ 3 H	BERNINA (CutWork Accessory		
	Setting 2	2 Cut 2	1001	
■ 4 H	BERNINA (CutWork Accessory		
	Setting 3	3 Cut 3	1001	
= 5 I	BERNINA (CutWork Accessory		
	Setting 4	4 Cut 4	1001	
= 6 I	Design Work	x & Cover Stitch	0176	1218

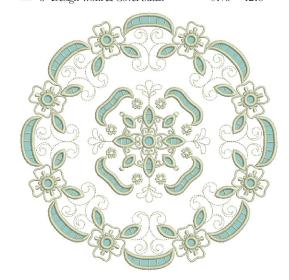

Stitch Count:



PETALS & POSIES

Size Inches:

Cutwork (Jumbo)

Size Inches: Stitch Count: Size mm: 7.96w x 12.76h 202.18w x 324.10h 43,521 T 1 Cutwork Lines 0176 1218 2 Design Work & Cover Stitches 0176 1218



For use with the BERNINA CutWork Accessory (Jumbo) Size mm:

7.96w x 12.76h	202.18w x 324.10h	51,117	
		I	S
1 Cutwork Tackdov	wn	0176	1218
■ 2 BERNINA CutW	•	1001	
Setting 1 Cut 3 BERNINA CutW		1001	
Setting 2 Cut	t 2	1001	
■ 4 BERNINA CutV	,	1001	
Setting 3 Cut		1001	
5 BERNINA CutV Setting 4 Cut	,	1001	
6 Design Work & C		0176	1218



Using the BERNINA® CutWork Accessory

SUPPLIES

- OESD Heavy Weight CutAway or Tear Away Stabilizer
- OESD AquaMesh Plus Water Soluble Stabilizer
- 101 Temporary Spray Adhesive
- Isacord Polyester Embroidery Thread
- **BERNINA CutWork Accessory**
- Embroidery foot #44 or #15

NOTE: Refer to manufacturer's documentation for further in-depth instructions on using the CutWork Accessory. All fabric, designs and stabilizer combinations should be tested first. Proper preparation of the fabric, design and stabilizer are required to achieve the best results and may require adjustment based on combinations used. OESD is not responsible for final results.


PREPARE FABRIC

- Starch fabric 2-3 times following manufacturer's instructions.
- Fabric to be cut should be crisp.

- Use two layers of Heavy Weight CutAway or TearAway; spray to adhere to wrong side of your fabric.
- Hoop stabilizer and fabric.

EMBROIDER AND CUT

- Send desired design to the embroidery machine . 1.
- Designs enhanced to work with the CutWork tool will end in CWC.
- Replace normal stitch plate with the CutWork stitch plate 3.
- Attach the hoop to the machine.
- Stitch the design as normal until the machine shows 5. "Cut". PHOTO 1

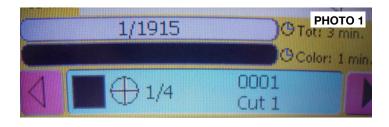









- 6. When the machine calls for cut 1, 2, 3 or 4 you must replace embroidery foot with foot #44 and replace your embroidery needle with the CutWork tool. (If you do not have foot #44 you can leave foot #15 on the machine). **PHOTO 02**
- 7. Unthread the machine.
- 8. Follow the "thread changes" on your machine screen and turn the dial on the CutWork tool as required.
- 9. After cuts are complete, remove hoop from machine but do not remove the fabric from the hoop.
- 10. Gently remove cut fabic piece. Do not force pull the fabric to separate. Trim any areas not completely cut to help prevent frizzy ends.
- 11. Apply a piece of AquaMesh Plus Stabilizer over the cut pieces on the backside of the hoop, making sure to completely cover cut areas. **PHOTO 03**
- 12. When the machine calls for threads again, replace the needle and foot, rethread the machine and stitch as normal.
- 13. Repeat as required, until design is completed. PHOTO 04
- 14. Remove hoop from machine and fabric and stabilizer from hoop.
- 15. Carefully cut away excess stabilizer.
- 16. Follow instructions printed on stabilizer packaging to remove remaining stabilizer.

NOTE: Designs shown in pictures are for instructional purpose only and may not be included in your collection.

Traditional Cutwork Instructions

SUPPLIES:

- Fabric
- Any firmly woven high quality fabric.
- Thread
- Isacord Polyester Embroidery Thread
- Stabilizer
- OESD Badgemaster or OESD Aqua Mesh Stabilizer
- Optional Notions
- Embroiders' Wand
- 505 Temporary Adhesive Spray

INSTRUCTIONS:

- 1. Lightly spray the top of a hoop sized piece of OESD Badgemaster or AquaMesh Stabilizer with 505 Temporary Adhesive Spray.
- 2. Place the sprayed stabilizer onto the wrong side of the fabric in the design area and hoop.
- 3. Place the hoop on the machine and begin stitching the design.
- 4. AFTER the "cutwork guide stitch" has been stitched, remove the hoop from the machine. DO NOT remove the fabric from the hoop. **PHOTO A**
- Use the sharp point of an Embroidery Wand to gently pull the fabric apart from the stabilizer. Any enclosed area that is created by the first color of the design can be trimmed away to create the open work. **PHOTO B**
- 6. Use a small sharp pair of scissors to clip away ONLY the fabric inside the guide stitches. Leave the stabilizer intact.
- 7. Place the hoop on the machine again and continue stitching the remainder of the embroidery design.
- 8. Refer to steps 14-16 above for how to remove the stabilizer.





NOTE: Designs shown in pictures are for instructional purpose only and may not be included in your collection.