

SPREE Badge 9



Collection No. D90088
1 Design/1 File

MATERIALS



Thread Colors

0010 Silky White
0105 Ash Mist
0310 Yellow
0504 Mimosa
2320 Raspberry
2560 Azalea Pink
2702 Grape Jelly
4410 Aqua Velva
4952 Mystic Ocean

 **Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**



MATERIALS



Stabilizers

- OESD BadgeMaster WashAway
- OESD Fuse and Seal
- OESD Top Cover

Note: For best results, place Top Cover down before the white stitching.

Fabrics/Textiles

Poly Patch Twill Fabric, Purple

- 4" x 4"

Poly Patch Twill Fabric, White

- 2 3/4" x 2 3/4"

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth

Isacord Thread Colors

- Per thread chart




SUMMARY



Completed Design Size: 3.01 X 3.01 in.

D90088

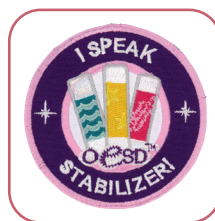

Design Size:
3.01 X 3.01 in.




General Instructions

The patch instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design D90080 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique technique shown is cut in place. Pre-cut applique patterns are included at the end of the instructions.

 **Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.**

Step 1

- Cut the Poly Patch Twill Fabric 1/4" – 1/2" larger than the applique patterns or as indicated in the supply list. The applique patterns are included at the end of the instructions.

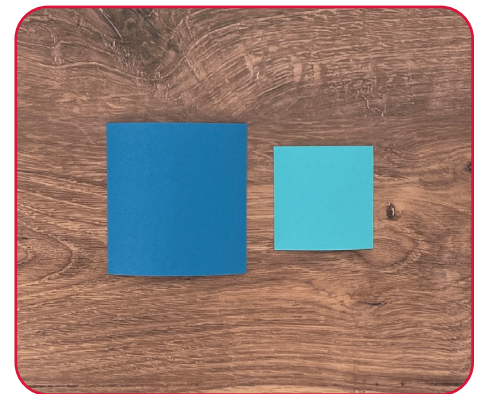


EMBROIDERY- PATCH



□ Step 5


- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

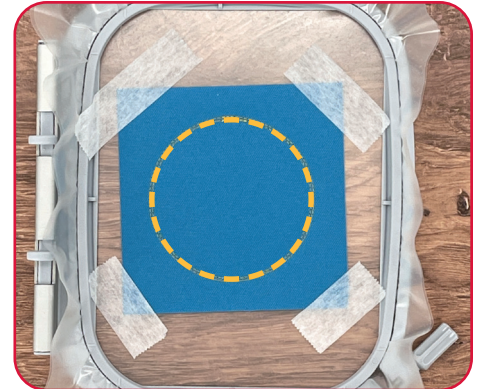

□ Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.

 **Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.**

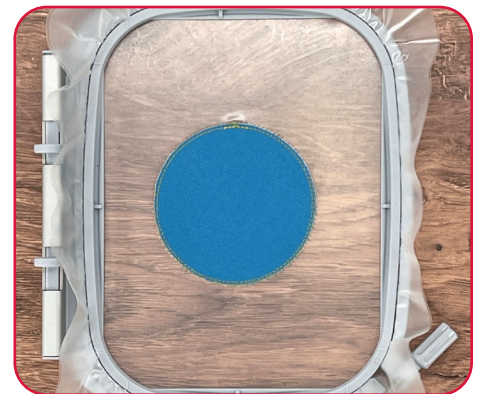


EMBROIDERY- PATCH




□ Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.

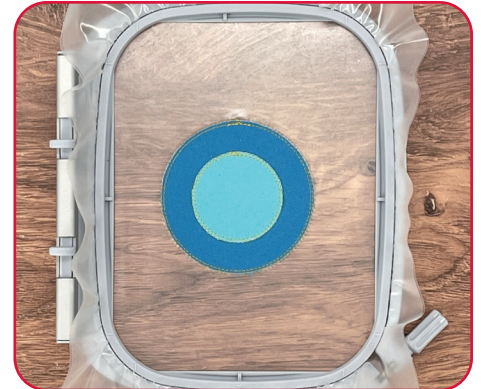

□ Step 11

- Return the hoop to the machine.
- Stitch Machine Step 5, Cover Stitch **with matching bobbin thread.**

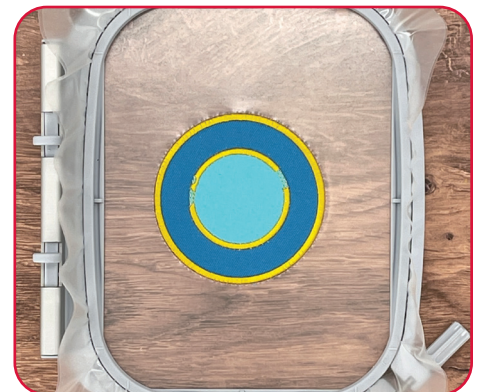

□ Step 12

- Stitch the remaining machine steps per the thread chart with standard bobbin thread.



- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" – 1/2" outside the design or if perforated enough, BadgeMaster can be gently torn away from the design, one layer at a time.



- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



- Trace the outline of the patch or print the mirrored version of the applique pattern on the paper side of Fuse and Seal.



FINISHING TOUCHES



Step 16

- Trim the Fuse and Seal just inside the outline.
- Iron the Fuse and Seal to the wrong side of the patch, following the package instructions.
- Cool completely.



Step 17

- When ready to apply the patch, remove the paper backing from the Fuse and Seal.
- Place the patch on the project and press to adhere.



ASSEMBLY



☐ Step 18

- The project is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

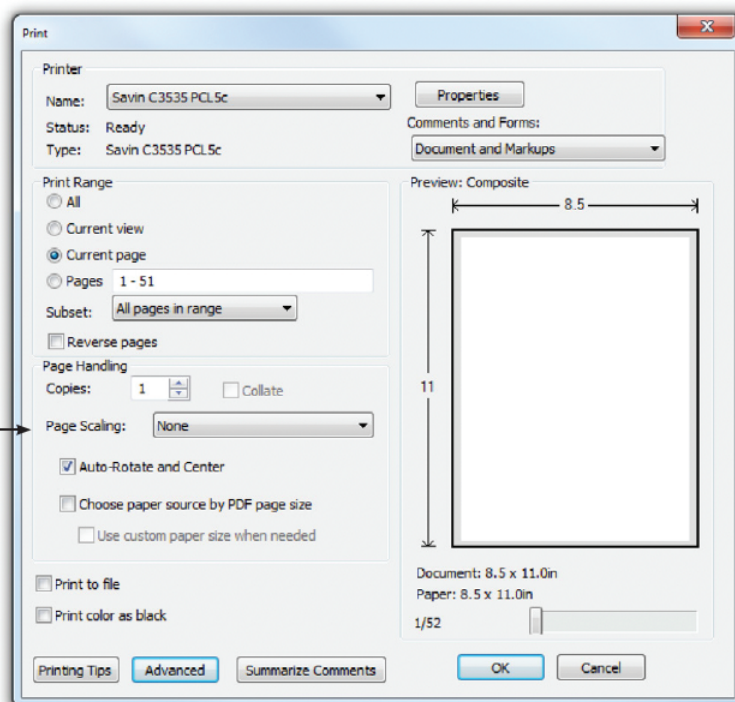

TO SAVE PAPER



Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

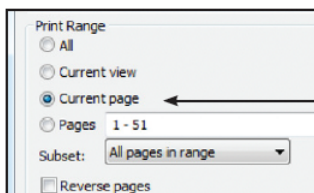

APPLIQUE PATTERNS



Print at 100%. No
scaling. This box
measures 1"x 1".
Use the box as an
accuracy guide
when printing
templates.

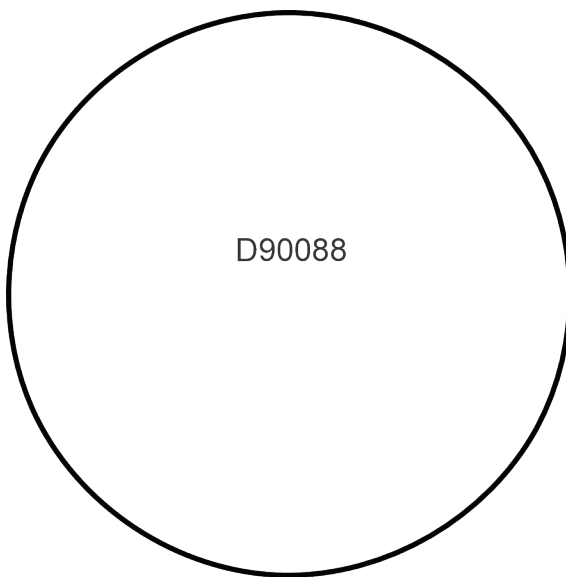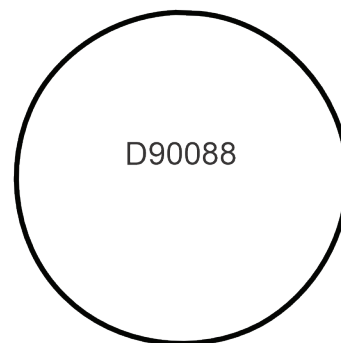

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

