



# Trapunto Quilting

#Pk10010  
4 DESIGNS

## MATERIALS

OESD™ DESIGN  
PACK

### Isacord Thread Colors

0771 Rattan

**\* Project instructions included after design list.**

**Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**

# MATERIALS



## Stabilizers

- OESD Fusible Fleece

## Fabrics/Textiles

- 1/4 yard- quilter's cotton for background and backing
  - High loft batting
- Note: Fabric sizes are estimates and may result in overage.

## Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Perfect Embroidery Press Cloth
- OESD Grippy GRID
- Embroidery Needle Titanium Sharp 75/11

## Isacord Thread Colors

- Per the thread chart
- Bobbin with matching thread

## General Instructions


For demonstration purposes, a sample design that best represents the entire collection is shown. Fabric and thread requirements will vary by design, but the general technique will be the same.

### □ Step 1

- Cut 2 squares of fabric 8" x 8".
- Cut 1 square of high loft batting 8" x 8".
- Cut 1 square of Fuse and Fleece 8" x 8".
- Cut 1 piece of Fuse and Fleece large enough for the hoop.

### □ Step 2


- Hoop 1 layer of Fusible Fleece.
- Load the selected design into the machine.
- Example design is PK10010-02.
- Thread the machine per the thread chart.

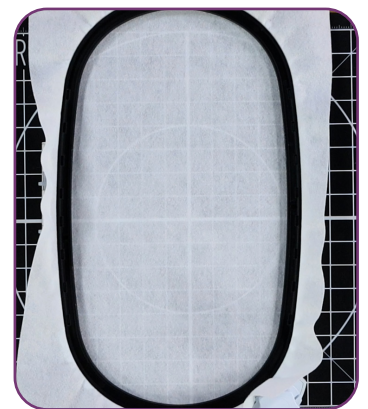

# EMBROIDERY

## □ Step 3

- Place the hoop on the machine.
- Stitch Machine Step 1, Placement Stitch.

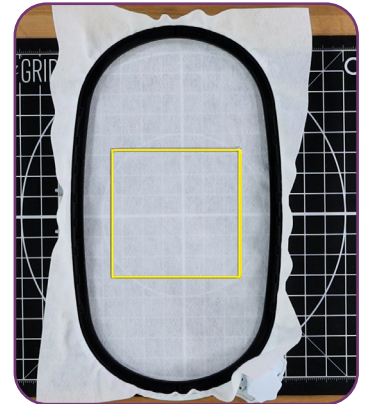


## □ Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the batting over the design, completely covering the placement stitch.
- Tape in place to secure.



## □ Step 5

- Place the 8" x 8" piece of Fuse and Fleece over the batting.
- Tape in place to secure.

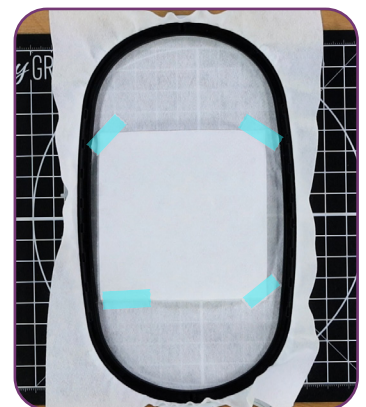

# EMBROIDERY

## □ Step 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



## □ Step 6- Optional

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim the excess batting as close to the tackdown stitching as possible.
- Note: If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the batting in place.



## □ Step 7

- Turn the hoop over and place one square of fabric over the design, right side facing up, completely covering the design.
- Tape to secure.



# EMBROIDERY



## Step 8

- Turn the hoop over to the front and place the remaining square of fabric over the design, right side up, completely covering the design.
- Tape to secure.



## Step 9

- Return the hoop to the machine.
- Stitch Machine Step 3, Basting Stitch.



## Step 10

- Stitch Machine Step 4, Design Detail.
- When the design is complete, remove the hoop from the machine and the project from the hoop.
- Press each block face down on a Perfect Embroidery Press Cloth.



## □ Step 11

- Trim excess batting from the seam allowance.
- Place the block right side down on a cutting mat.
- Trim 1/2" away from the basting stitch.

