



Occasions Quilt Labels

#PK10013
6 DESIGNS

MATERIALS



Isacord Thread Colors

0010 Silky White	0842 Toffee	2530 Rose
0020 Black	0941 Golden Grain	2723 Peony
0138 Heavy Storm	1061 Taupe	3332 Forget Me Not
0182 Saturn Grey	1514 Brick	3622 Imperial Blue
0504 Mimosa	1921 Blossom	3732 Slate Blue
0520 Daffodil	1972 Silvery Grey	3820 Celestial
0721 Antique	2363 Carnation	3842 Copenhagen
0761 Oat	2508 Hot Pink	5822 Kiwi

*** Project instructions included after design list.**

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD PolyMesh CutAway
- OESD Fuse and Seal
- OESD Fusible Woven

Fabrics/Textiles

- Quilter's Cotton 8" x 5.5" (2)

Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Perfect Embroidery Press Cloth
- OESD Grippy Grid
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per thread chart

General Instructions


The instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown.

Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.


□ Step 1

- Hoop one layer of PolyMesh CutAway.
- Apply one layer of Fusible Woven to the wrong side of one piece of quilter's cotton.

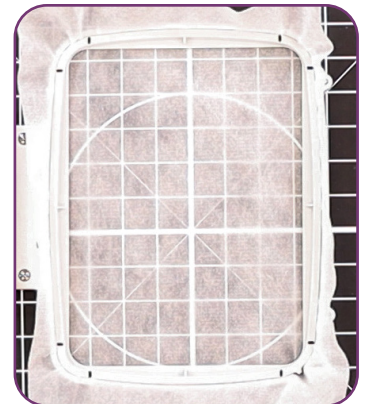

□ Step 2

- Load selected design into the machine.
- Design in the example is PK10013-05.
- Thread the machine per the thread chart.
- Place hoop on the machine.
- Stitch Machine Step 1, Front Fabric Placement Stitch.

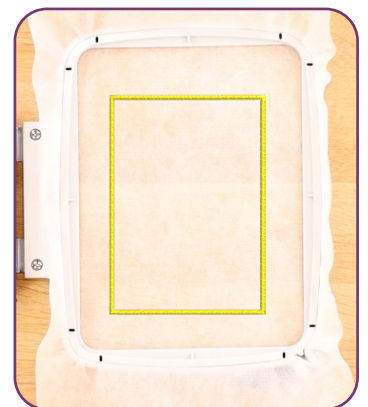

EMBROIDERY




□ Step 3

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the prepared fabric, right side up, completely covering the placement stitch.
- Tape in place to secure.



□ Step 4

- Return the hoop to the machine.
- Stitch Machine Step 2, Tackdown.

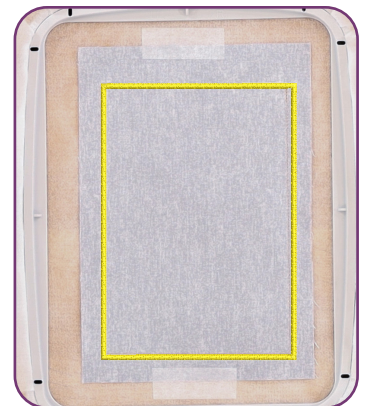

□ Step 5

- Stitch the machine steps, per thread chart.
- STOP before stitching the last machine step, Seam Stitch.



EMBROIDERY


□ Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the second piece of fabric, right side down, completely covering the placement stitch.
- Tape in place to secure.




□ Step 7

- Return the hoop to the machine.
- Stitch the last Machine Step, Seam Stitch.

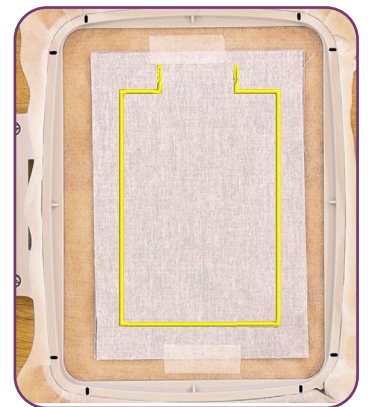

□ Step 7

- Remove the hoop from the machine and the project from the hoop.
 - Trim the seams approximately 1/4" from the Seam Stitch.
 - DO NOT cut off the "neck" opening. Trim across the opening above the vertical lines of stitching.
 - Clip each inner corner of the neck to, but not through, the corner stitch.
 - Trim the outer corners at a 45 degree angle.
- Note: Be sure to leave the seam allowance in the "neck" area.

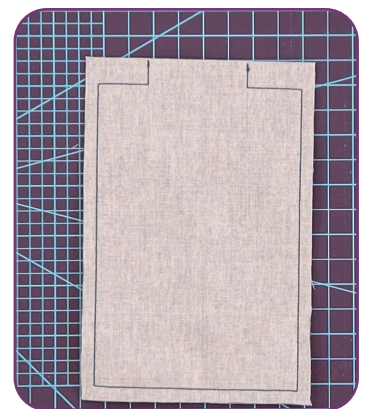

EMBROIDERY




□ Step 8

- Turn the project right side out.
- Use the large end of the Expert Point and Press tool to push out the corners and edges.
- Press right side down on the Perfect Embroidery Press Cloth.



□ Step 9

- Press the seam allowance into the opening.
- Place a small piece of Fuse and Seal inside and press to seal the opening, following the manufacturer's instructions.

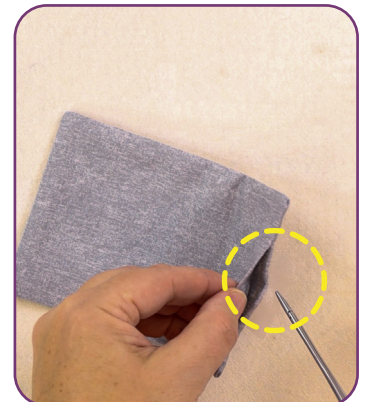

EMBROIDERY

□ Step 10

- The project is complete. Enjoy.

