



Oak Leaf Trapunto

#Pk10030
4 DESIGNS

MATERIALS



Isacord Thread Colors

Choose coordinating Isacord thread to match fabric.

*** Project instructions included after design list.**

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD Fuse and Fleece
- OESD Ultra Clean and Tear

Fabrics/Textiles

- 1/4 yard Quilter's cotton for background and backing
 - High loft batting
- Note: Fabric sizes are estimates and may result in overage.

Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Perfect Embroidery Press Cloth
- OESD Grippy GRID
- Embroidery Needle Titanium Sharp 75/11

Isacord Thread Colors

- Per the thread chart
- Match the bobbin thread to top thread

EMBROIDERY



General Instructions

For demonstration purposes, a sample design that best represents the entire collection is shown. Fabric and thread requirements will vary by design, but the general technique will be the same.


Design shown is from collection **PK10010 Trapunto Quilting**.

Step 1

- Cut 2 squares of fabric 8" x 8".
- Cut 1 square of high loft batting 8" x 8".
- Cut 1 square of Fuse and Fleece 8" x 8".
- Cut 1 piece of Fuse and Fleece large enough for the hoop.
- Cut 1 piece of Ultra Clean and Tear large enough for the hoop.

Step 2

- Hoop 1 layer of Fuse and Fleece and 1 layer of Ultra Clean and Tear, fusible side down. Fuse and Fleece should be the top layer.
- Load the selected design into the machine.
- Example design is PK10010-02.

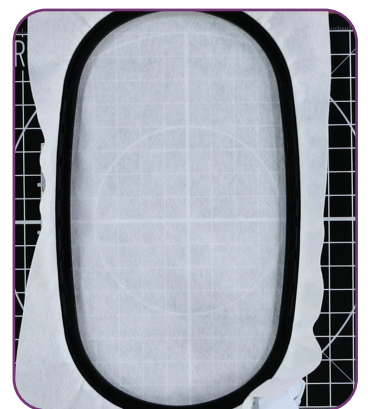


EMBROIDERY



Step 3

- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Placement Stitch.

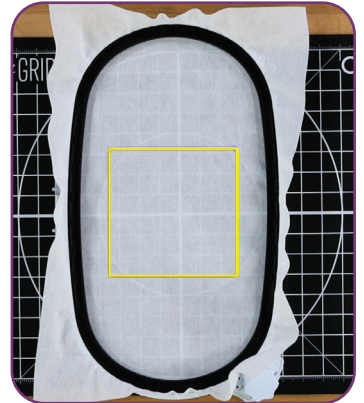


Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the batting over the design, completely covering the placement stitch.
- Tape in place to secure.



Step 5

- Place the 8" x 8" piece of Fuse and Fleece over the batting, fusible side down.
- Tape in place to secure.

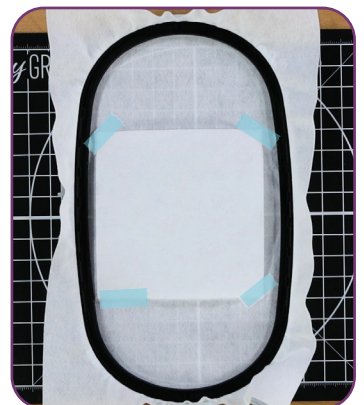

EMBROIDERY



Step 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.
- Remove the hoop from the machine, but NOT the project from the hoop.



Step 6- Optional

- Place the hoop on a flat surface.
- Trim the excess Fuse and Fleece and batting as close to the tackdown stitching as possible.
- Note: If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the Fuse and Fleece and batting in place.



Step 7

- Turn the hoop over and place one square of fabric over the design, right side facing up, completely covering the design.
- Tape to secure.



EMBROIDERY



Step 8

- Turn the hoop over to the front and place the remaining square of fabric, right side up, completely covering the design.
- Tape to secure.



Step 9

- Return the hoop to the machine.
- Stitch Machine Step 3, Basting Stitch.



Step 10

- Stitch Machine Step 4, Design Detail.
- When the design is complete, remove the hoop from the machine and the project from the hoop.
- Press each block face down on a Perfect Embroidery Press Cloth.



EMBROIDERY



Step 11

- Trim excess batting from the seam allowance.
- Place the block right side down on a cutting mat.
- Trim 1/2" away from the basting stitch.

