

MATERIALS



Isacord Thread Colors

0020 Black

0352 Marsh

0454 Olive Drab

0630 Buttercup

0704 Gold

0771 Rattan

0862 Wild Rice

0941 Golden Grain

1141 Tan

1154 Penny

1200 Sunset Orange

1321 Dark Orange

1600 Spanish Tile

3810 Laguna

3820 Celestial

3840 Oxford

4620 Jade

4625 Seagreen

4740 Aquamarine

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway

Fabrics/Textiles

- OESD Clear Vinyl- 1 roll
- Organza 1/4 yard

Note: Fabric sizes are estimates and may result in overage.

Notion & Tools

- Expert Embroidery Tape TearAway
- Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- Grippy GRID

- Embroidery Needle Sharp 75/11
- Suction cup hooks for hanging

Isacord Thread Colors

- Per thread chart
- All designs are stitched with matching thread, top and bobbin.



General Instructions

The freestanding applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same. The design used in the embroidery instructions are from PK10018, Stain Glass Folk Flowers, which used the same applique technique. All designs are stitched with matching thread in the top and bobbin. Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

Step 1

 Hoop one layer of AquaMesh and one layer of BadgeMaster for all designs.



Step 2

- · Load selected design into the machine.
- Example design is PK10018-01.
- Thread the machine per the thread chart.
- · Place hoop on the machine.
- Stitch Machine Step 1, Clear Vinyl Placement Stitch.





Step 3

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the clear vinyl, completely covering the placement stitch.
- Tape in place to secure.



Step 4

- Place the organza, completely covering the placement stitch.
- Tape in place to secure.



Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



5



Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim the excess organza as close to the cut line stitching as possible.
- Trim the excess vinyl as close to the cut line stitching as possible.
- If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
 Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use Expert Embroidery Tape WashAway as a patch.



Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Clear Vinyl Placement Stitch.





Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the clear vinyl, completely covering the placement stitch.
- Tape in place to secure.



Step 9

- Place the organza, completely covering the placement stitch.
- Tape in place to secure.



Step 10

- · Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.





Step 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim the excess organza as close to the cut line stitching as possible.
- Trim the excess vinyl as close to the cut line stitching as possible.



Step 12

- · Return the hoop to the machine.
- Stitch the design per the thread chart with matching bobbin thread.



___ Step 13

 When the design is complete, remove the project from the hoop and trim the stabilizer 1/4"- 1/2" outside the design.



ASSEMBLY



Step 14

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry.
 Parchment paper or a cooling rack work well to prevent curling. Dry completely.
- Once dry, press right side down on a Perfect Embroidery Press Cloth.
- Tip: Clear vinyl is safe to press on low heat.



Step 15

 Before assembly, use the OESD Mini MAT and Punch Tool with the 3 mm attachment to create the eyelets indicated in the Punch Tool Guide on page 10.



Step 16

• Slide the suction cup hooks through the eyelets and attach to a window.



PUNCH TOOL GUIDES O




PK10058-01



PK10058-02



PK10058-03

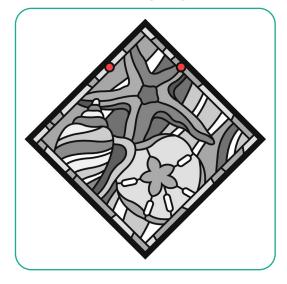

PK10058-04




- = 2 MM
- = 3 MM
- = 4 MM

PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

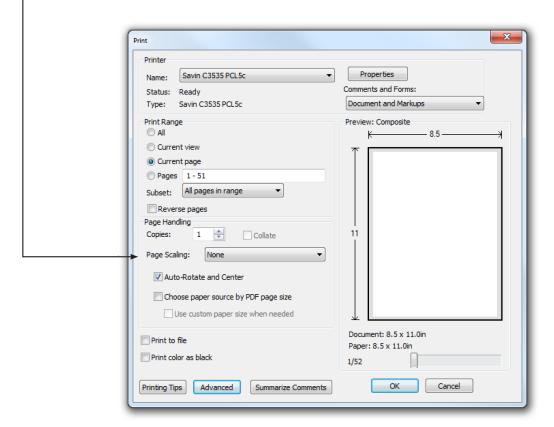

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.





PK10058-01




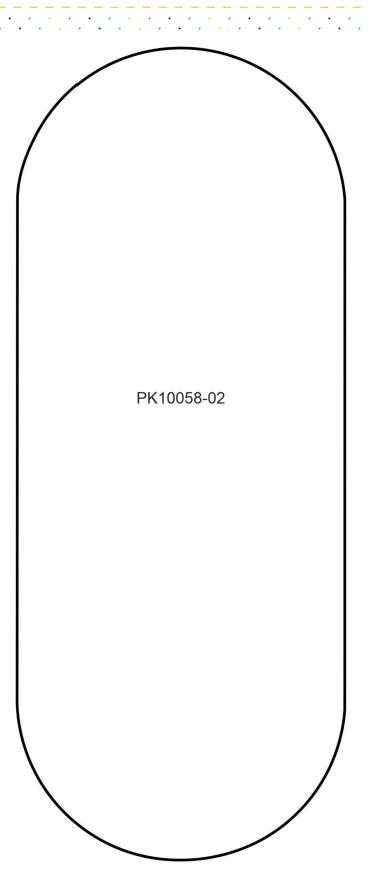



PK10058-03




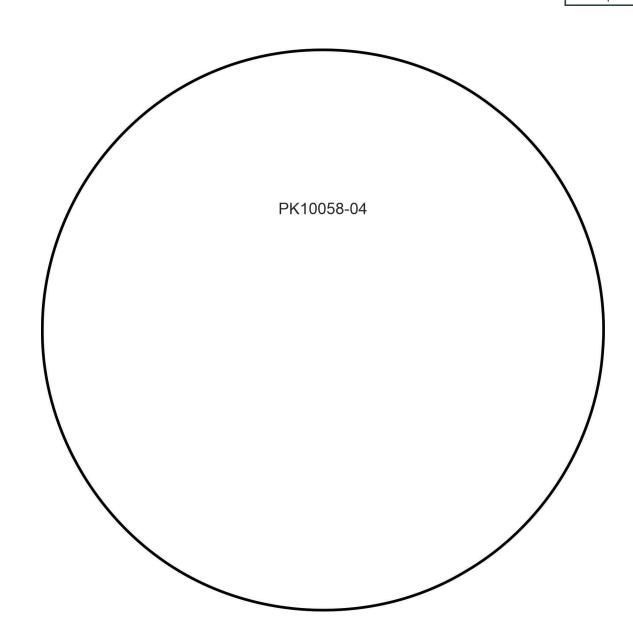



PK10058-01 Mirrored



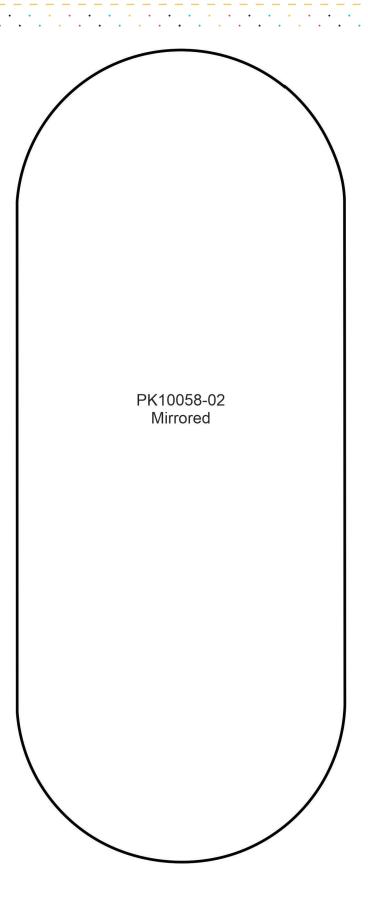



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

PK10058-03 Mirrored



