



MATERIALS



Isacord Thread Colors

0010 Silky White

0020 Black

0520 Daffodil

0700 Bright Yellow

0904 Spanish Gold

1521 Flamingo

1532 Coral

1921 Blossom

3622 Imperial Blue

4103 California Blue

4122 Peacock

4240 Spearmint

5531 Pear

5722 Green Grass

5740 Mint

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS



Stabilizers

- OESD Ultra Clean and Tear
- OESD Fusible Woven CutAway White

Fabrics/Textiles

- Assorted colors of Quilter's cotton for bags
 Quilter's Cotton: (2) 6.75" x 14.5"
- Fusible Woven: (2) 5.75" x 14.5"

Notion & Tools

- OESD Grippy GRID
- OESD Expert Embroidery Tape TearAway
- OESD Expert Point and Press Tool
- OESD Alligator Clamps
- Embroidery Needle Sharp Size 75/11
- OESD Perfect Embroidery Press Cloth
- (2) 24" of 1/8" or 1/4" Ribbons

Isacord Thread Colors

Per the thread chart

SUMMARY





Completed Size: 5" x 6.75"



Requires 1 Design

FRONT: PK10060-02



Requires 1 Design

BACK:



PK10060-03

Requires 1 Design

FRONT:





Requires 1 Design

BACK: PK10060-05



Requires 1 Design

FRONT:

PK10060-06



Requires 1 Design

BACK:

PK10060-07



Requires 1 Design

FRONT:

PK10060-08



Requires 1 Design



General Instructions

These instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

This bag requires two designs (front and back of bag) to complete. Make sure you embroider the **back** of the bag first!

Step 1

- Apply Fusible Woven, centered, to the wrong side of the fabric. On the long edges, 1/2" of the fabric on both sides will not have Fusible Woven on it.
- · Repeat for second piece of fabric.





EMBROIDER'



Step 2

- Press a 1/2" hem on each side of the long sides of the fabric. The fold line will be at the edge of the Fusible Woven.
- Repeat for second piece of fabric.





Step 3

- Press the fabric in half, widthwise. The fabric will now measure 5.75" x 7.25".
- Repeat for second fabric.








Step 4

Hoop one layer of OESD Ultra Clean and Tear.

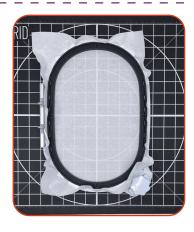

Step 5

- Load the 1st design (Back) into the machine.
- Example design is PK10060-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fabric Placement Guide.



Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- · Place the hoop on a flat surface.
- Place the first prepared fabric, right side up, with the center fold along the TOP sewn line. The fabric will line up with the left and right sides of the placement line.
- Tape to secure.
- **Note:** You will be sewing through **all** layers of the fabric to form the casing.





Step 7

- · Return the hoop to the machine.
- Stitch Machine Step 2, Casing and Tackdown.



Step 8

- Remove the hoop from the machine and the project from the hoop.
- · Carefully tear away the stabilizer.
- · Set aside.



Step 9

Hoop one layer of OESD Ultra Clean and Tear.





Step 10

- Load the 2nd design (Front) into the machine.
- Example design is PK10060-02.
- · Thread the machine per the thread chart.
- Place the hoop on the machine.
- · Stitch Machine Step 1, Fabric Placement Guide.




Step 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- · Place the hoop on a flat surface.
- Place the remaining prepared fabric, right side up, with the center fold along the TOP sewn line. The fabric will line up with the left and right sides of the placement line.
- · Tape to secure.



___ Step 12

- Return the hoop to the machine.
- Stitch Machine Step 2, Casing and Tackdown.

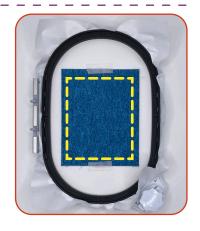



Step 13

Stitch the remaining steps per the thread chart, stopping before the last machine step.




Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the first embroidered fabric, right side DOWN, with the center fold at the TOP. The fabric will line up with the left and right sides.
- Tape to secure.



Step 15

- Return the hoop to the machine.
- Stitch Machine Step 6, Seam/Match Fabric.

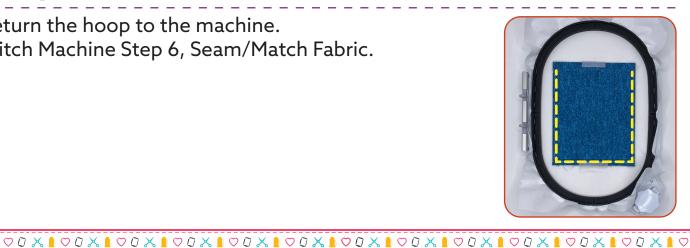

ASSEMBLY



Step 16

- Remove the hoop from the machine and the project from the hoop.
- Trim approximately 1/8" from the seam stitch, only along the curves and bottom.
- Clip curves as needed for easier turning.





Step 17

- Turn the project right side out.
- Use the large end of the Expert Point and Press Tool to help push out the corners and sides.
- · Press right side down on the Perfect Embroidery Press Cloth.





ASSEMBLY



Step 18

Use OESD Alligator Clamps to pull one ribbon through the casings. The
ribbon will go through the front and back casings until the ends are next to
each other. Tie the ribbon ends together with an overhand knot.





Step 19

 Repeat so the second ribbon enters and ends on the opposite side.



ASSEMBLY



Step 20

• The project is complete. Enjoy!

