

Turkey Time Utensil Holders



Collection No. PK10072
2 Designs/4 Files

MATERIALS



Isacord Thread Colors

- 1010 Toast
- 1055 Bark
- 1060 Shrimp Pink
- 1805 Strawberry

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD Medium Weight TearAway
- OESD Applique Fuse and Fix

Fabrics/Textiles

- OESD Favorite FELT Brown
 - (1) 5" x 4" PK10072-01 and PK10072-03
 - (2) 7" x 8" PK10072-02 and PK10072-04
- Orange Quilter's Fabric
 - (1) 6 1/2" x 6"
- Red Quilter's Fabric
 - (1) 6 1/2" x 6"

Notion & Tools

- OESD Perfect Scoring Tool
- OESD Expert Embroidery Tape TearAway
- OESD Perfect Embroidery Press Cloth
- OESD Grippy GRID
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per the thread chart



SUMMARY



Completed Size: 6" H x 6" W




Completed Size: 6" H x 6" W

PK10072-01



Requires 1 Design

PK10072-02

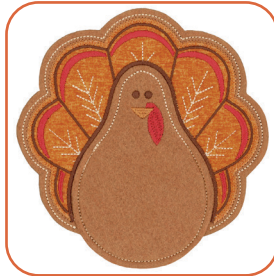

Requires 1 Design

PK10072-03



Requires 1 Design

PK10072-04



Requires 1 Design


Step 3

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the 5" x 4" felt.
- Tape in place to secure.



Step 4

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line.

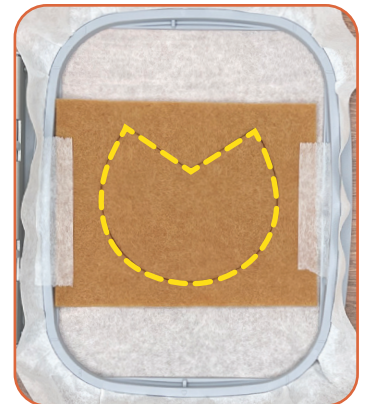

Step 5

- Stitch Machine Step 3, Wings.



Step 6

- When the design is complete, remove the project from the hoop and trim just inside of the Cut Line.
- Gently remove the remaining tear away stabilizer.



Step 7

- Press right side down on a Perfect Embroidery Press Cloth with a cool iron.



Step 8

- The first part of the turkey is complete.



Step 9

- Print the mirrored version of the templates (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately 1/4" - 1/2" outside the printed applique templates.



Step 10

- Cut the applique fabric 1/4" - 1/2" larger than the applique templates that are included at the end of the instructions.
- Fuse the trimmed template to the back of the applique fabric with the paper side of the printed template up. Hold the iron on the template for 10 - 15 seconds for a secure fuse.




Step 11

- Trim the applique fabric on the edge of the black outline.
- Set aside.



Step 12

- Hoop one layer of Medium Weight TearAway for all designs.

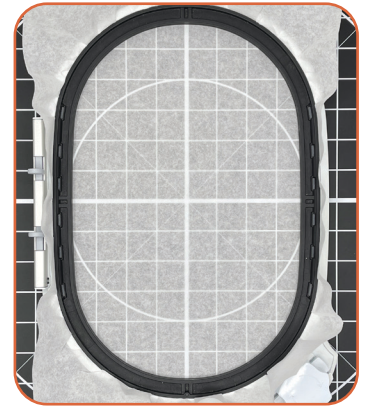


Step 13

- Load selected design into the machine.
- Example design is PK10072-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Brown Felt Placement Stitch.




Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with a 7" x 8" piece of felt.
- Tape in place to secure.

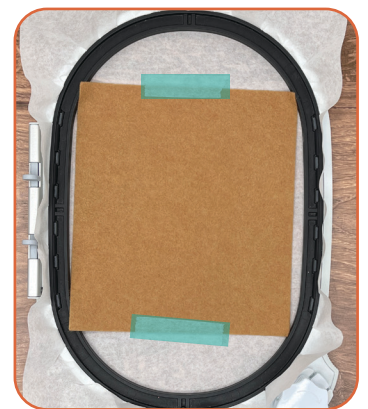

Step 15

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line/Tackdown.

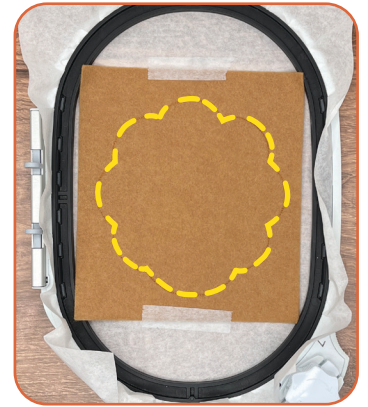

Step 16

- Stitch Machine Step 3, Orange Fabric Placement Stitch.



Step 17

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the applique fabric, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the applique fabric within the placement stitching.
- Finger press to secure.



Step 18

- Return the hoop to the machine.
- Stitch Machine Step 4, Tackdown.



□ Step 19

- Stitch Machine Steps 5 – 10.



□ Step 20

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place the stitched pocket, right side up.
- Align the bottom with the Cut Line/Tackdown and the sides with the brown satin stitches.
- Tape in place to secure.



Step 21

- Turn the hoop over and place the 7" x 8" felt, right side up, completely covering the placement stitch.
- Carefully tape to secure.
Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 22

- Return the hoop to the machine.
- Match the bobbin thread to the top thread.
- Stitch Machine Step 11, Seam.



Step 23

- When the design is complete, remove the project from the hoop.
- Trim just inside of the Cut Line/Tackdown.



Step 24

- Press right side down on a Perfect Embroidery Press Cloth.




Step 25

- The project is complete. Enjoy!




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

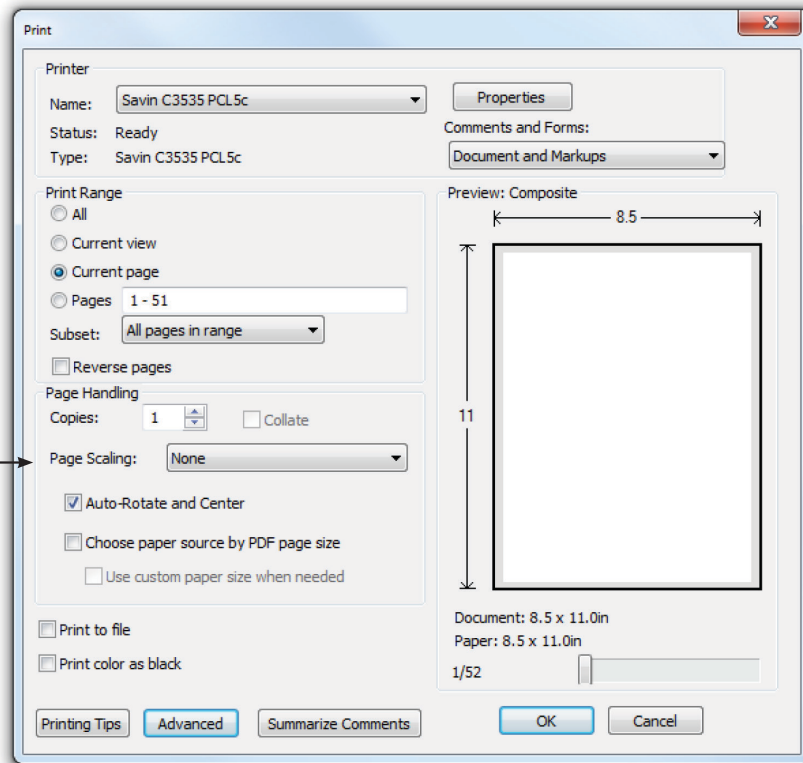

TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

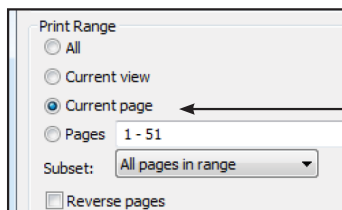

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

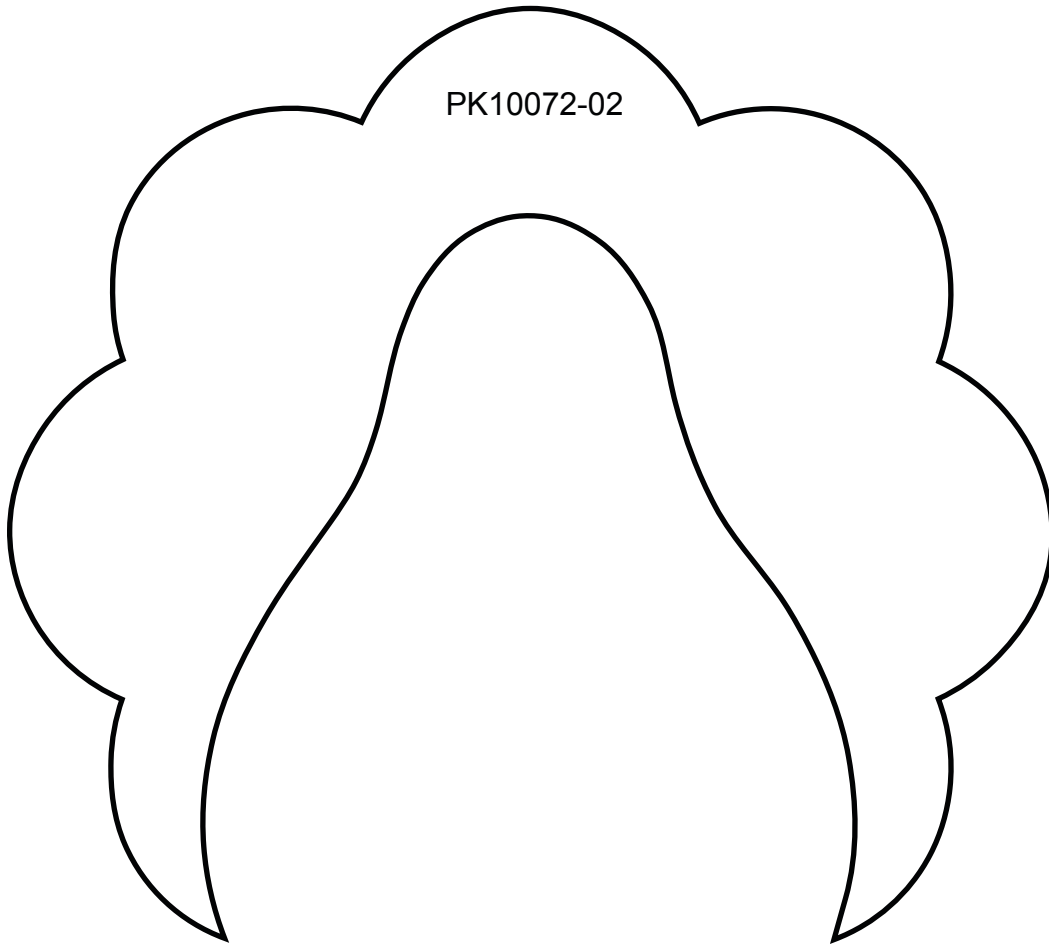

APPLIQUE PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

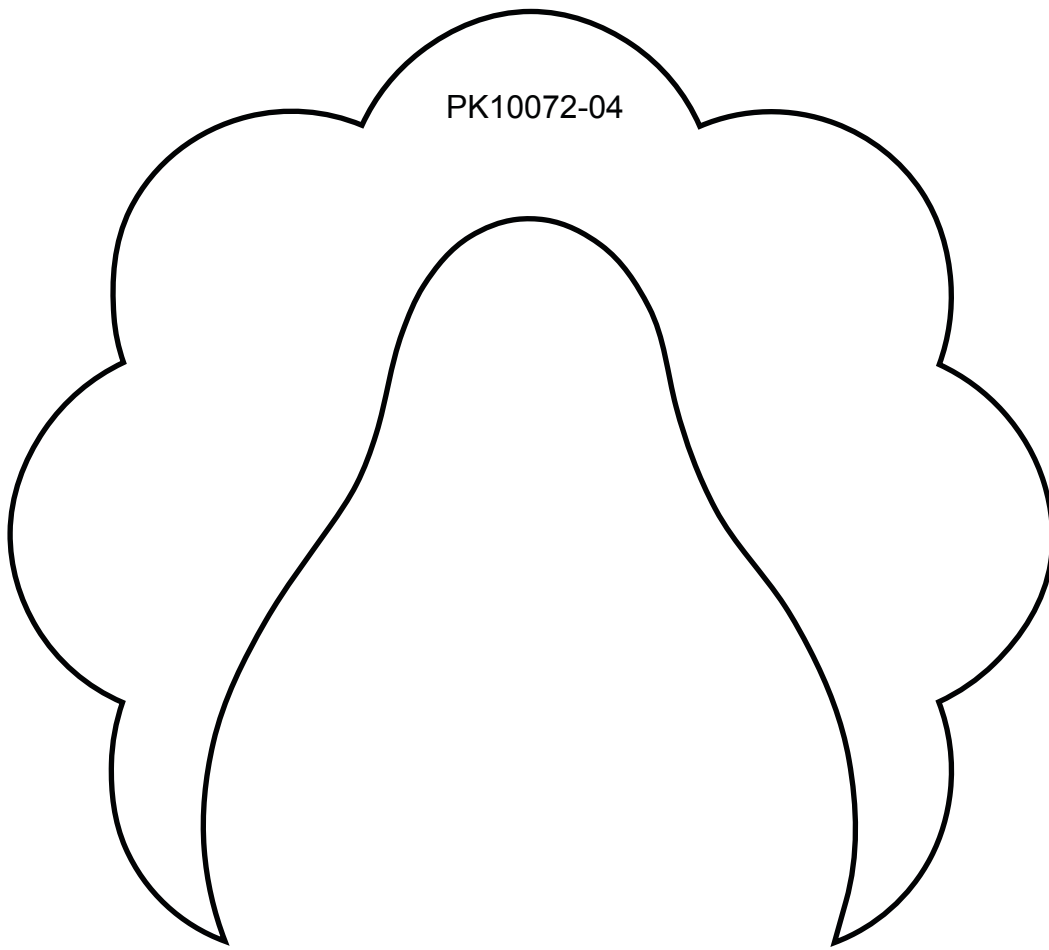

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

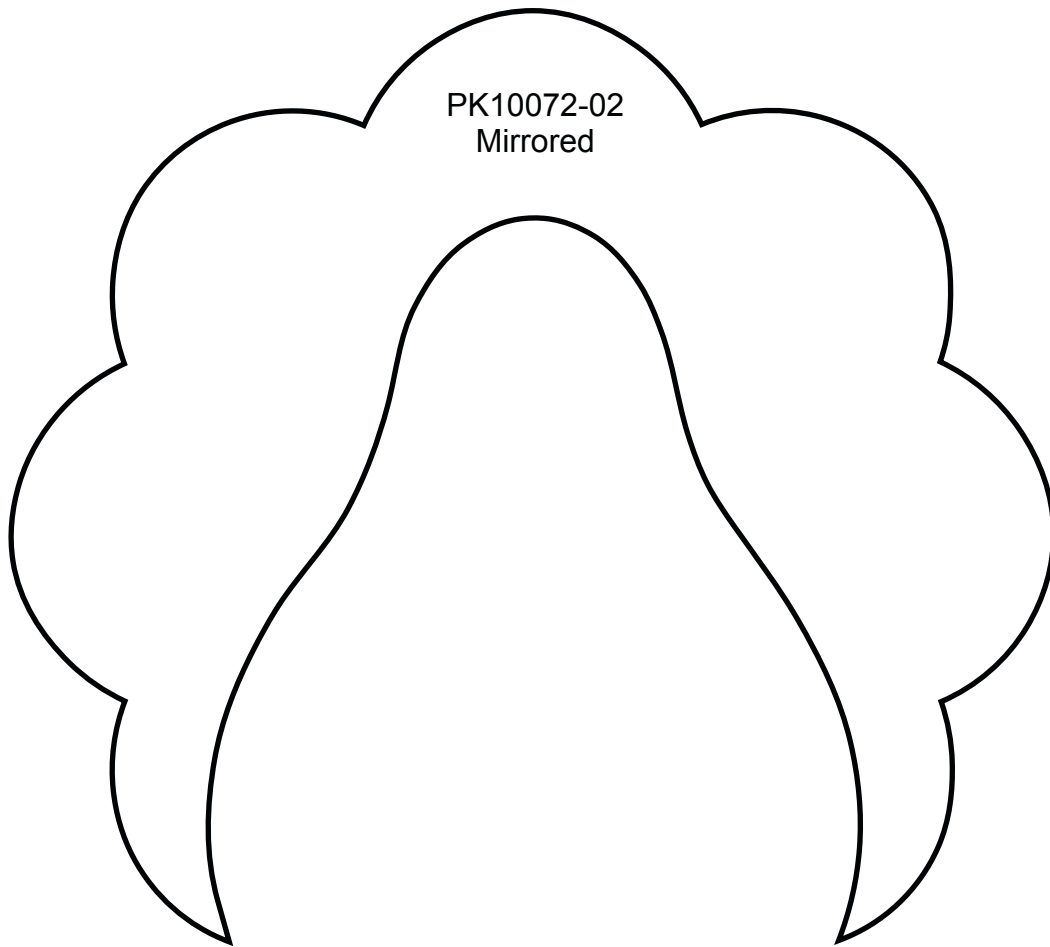

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

