

Freestanding Holiday Gift Boxes



Collection No. PK10075
2 Designs/6 Files

MATERIALS



Isacord Thread Colors

- 0101 Eggshell
- 0352 Marsh
- 0934 Fawn
- 1900 Geranium
- 2152 Heather Pink
- 6151 Lemongrass

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
- OESD Fiber Form
- OESD Applique Fuse and Fix

Fabrics/Textiles

- Red Quilter's Cotton
(4) 4 1/2" x 6 1/2" for (2) PK10075-01
- Green Quilter's Cotton
(4) 6 1/2" x 5" for (2) PK10075-01
(4) 7 1/2" x 5" for (2) PK10075-02
(2) 5" x 5" for (1) PK10075-03
- Brown Quilter's Cotton
(4) 3 1/2" x 5 1/2" for (2) PK10075-04
- Pink Quilter's Cotton
(4) 6" x 5" for (2) PK10075-04
(4) 7 1/2" x 5" for (2) PK10075-05
(2) 5" x 5" for (1) PK10075-06

Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Alligator Clamps
- OESD Button Clips
- OESD Perfect Embroidery Press Cloth
- OESD Grippy GRID
- Embroidery Needle Sharp 75/11

Isacord Thread Colors

- Per the thread chart
- Match bobbin thread to top thread



SUMMARY



Completed Size:
5 1/2" L x 5 3/4" W x 3 1/2" T




Completed Size:
4 1/2" L x 5" W x 3 1/2" T

PK10075-01




Requires 2 Designs

PK10075-02

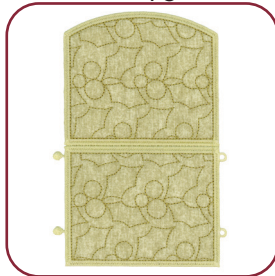

Requires 2 Designs

PK10075-04

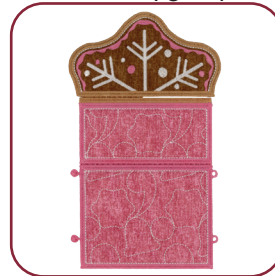

Requires 2 Designs

PK10075-05



Requires 2 Designs

PK10075-03



Requires 1 Design

PK10075-06



Requires 1 Design

General Instructions

The freestanding applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same. All designs are stitched with matching thread, top and bottom.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.


Step 1

- Print the mirrored version of the templates (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately 1/4" - 1/2" outside the printed applique templates.



Step 2

- Cut the Fiber Form 1/4" - 1/2" larger than the applique templates that are included at the end of the instructions.
- Fuse the trimmed templates to the back of the Fiber Form with the paper side of the printed template up. Hold the iron on the template for 10 - 15 seconds for a secure fuse.

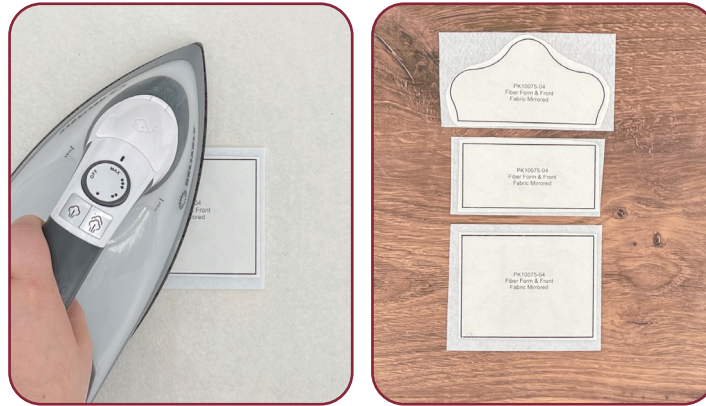

Step 3

- Trim the Fiber Form on the edge of the black outline.
- Set aside.




Step 4

- Cut the applique fabrics 1/4" - 1/2" larger than the templates that are included at the end of the instructions.
- Adhere one layer of StabilStick CutAway to the wrong side of the applique fabrics to provide stiffness to the finished sign.




Step 5

- Hoop one layer of AquaMesh and one layer of BadgeMaster for all designs.

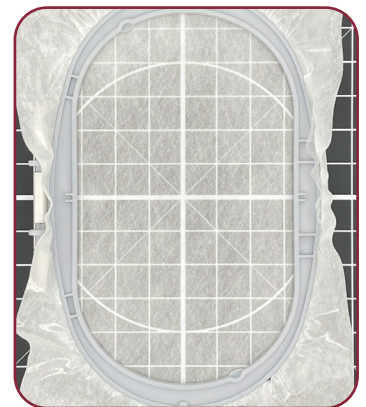


Step 6

- Load selected design into the machine.
- Example design is PK10075-04.
- Thread the machine per the thread chart.
- Match the bobbin thread to the top thread.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Front and Back Brown Fabric Placement Stitch.

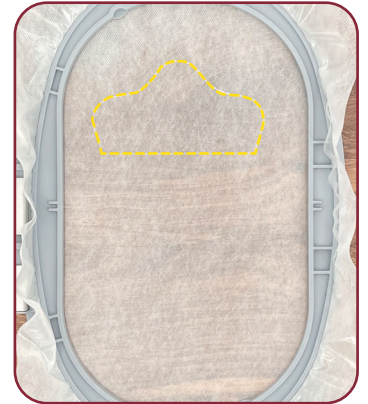


Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
 - Place the hoop on a flat surface.
 - On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
 - Place the Fiber Form within the placement stitching.
 - Finger press to secure.
- Tip: Applique Fuse and Fix is repositionable.

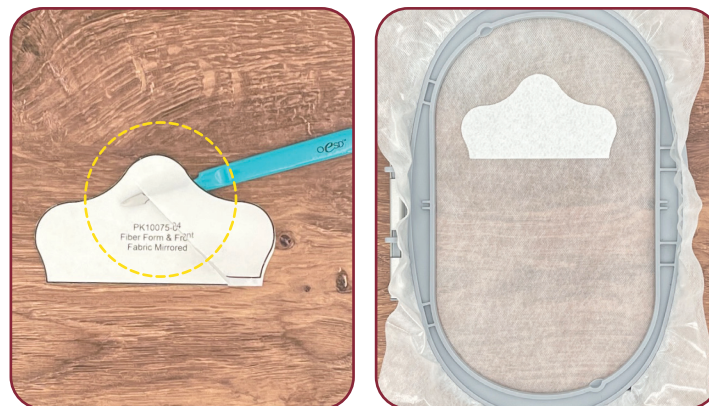

Step 8

- Completely cover the Fiber Form with the prepared brown applique fabric.
- Tape in place to secure.

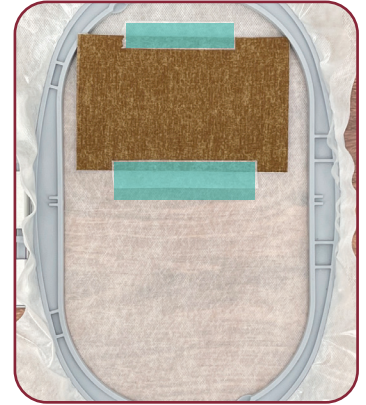

Step 9

- Turn the hoop over and place the prepared brown applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



Step 10

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



Step 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim the excess fabric as close to the cut line stitching as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.




Step 12

- Turn the hoop over and trim the excess fabric as close to the cut line as possible.




Step 13

- Return the hoop to the machine.
- Stitch Machine Step 3, Fiber Form/Front and Back Pink Fabric Placement Stitch.

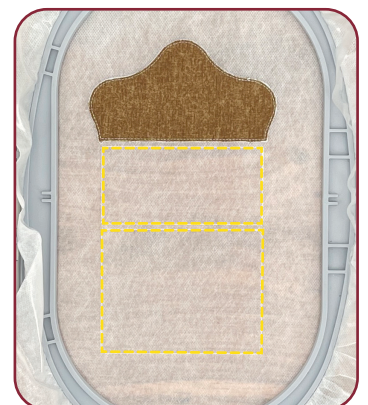


Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.

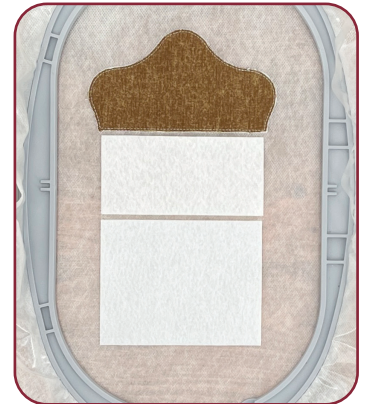

Step 15

- Completely cover the placement stitch with the prepared pink applique fabric.
- Tape in place to secure.

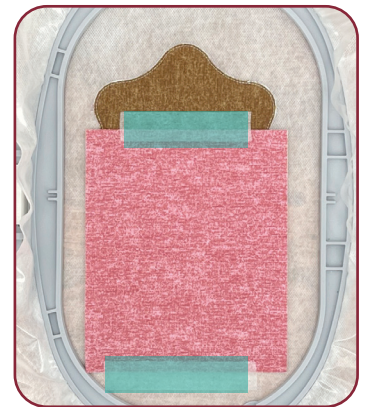


Step 16

- Turn the hoop over and place the prepared pink applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.




Step 17

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown

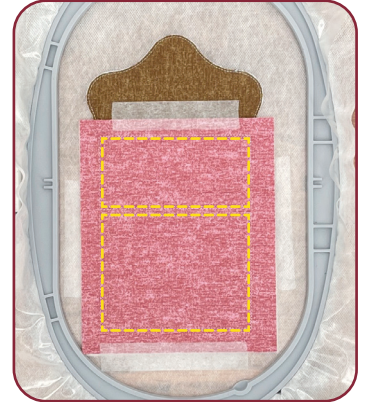

Step 18

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Trim the excess fabric as close to the cut line as possible.

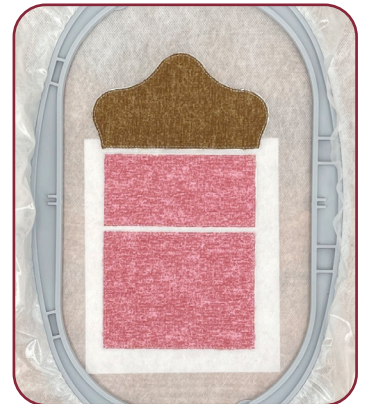

Step 19


- Turn the hoop over and trim the excess fabric as close to the cut line as possible.



ASSEMBLY


Step 25

- Match the eyelets on the Cookie Box Right & Left Sides to the buttonettes on the Cookie Box Front & Back. Pull each buttonette through the corresponding eyelet. If needed, attach a button clip to temporarily hold the buttonette in place.

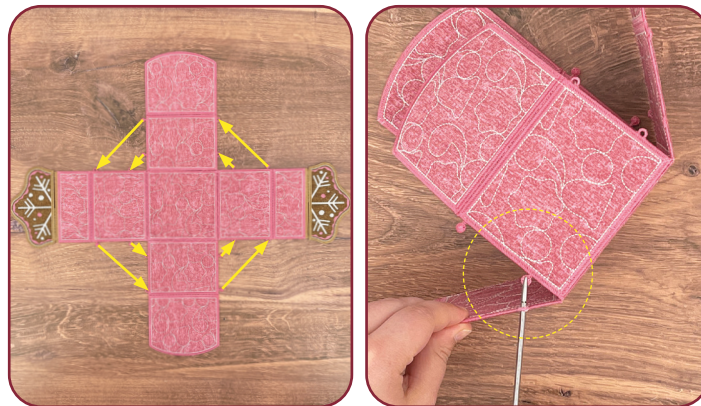

Step 26


- To close the lid, fold the two rounded tops of the Cookie Box Front & Back inward.

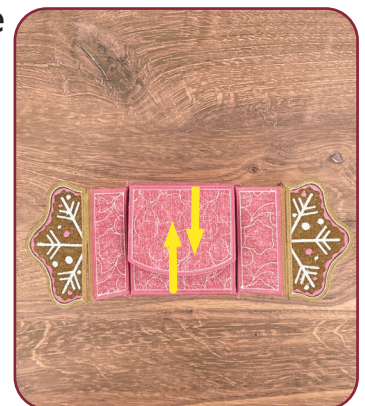

ASSEMBLY

Step 27

- Fold the two cookie halves of the Cookie Box Right & Left Sides inward, bending slightly to slide the pair together.

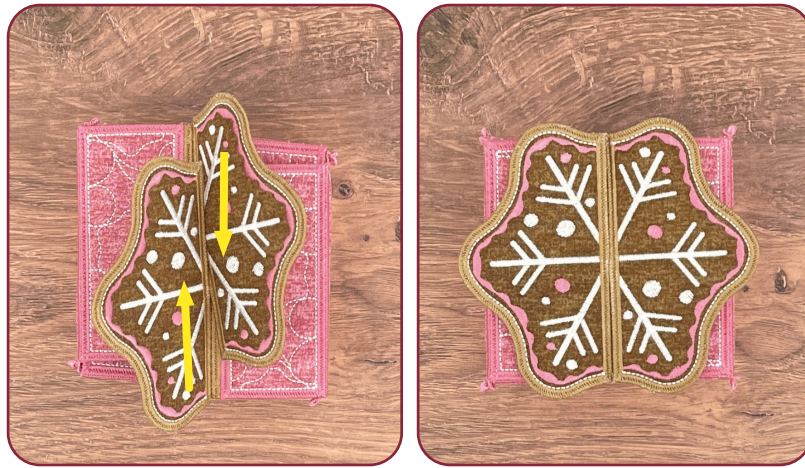


Step 28

- The project is complete. Enjoy!




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

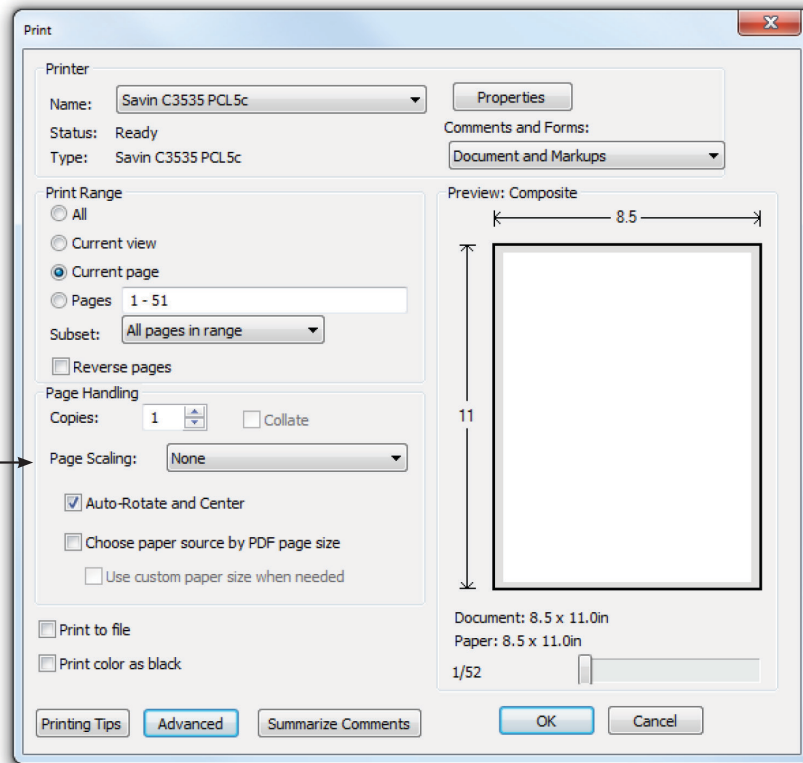


TO SAVE PAPER


Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

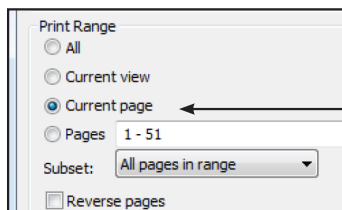


APPLIQUE PATTERNS

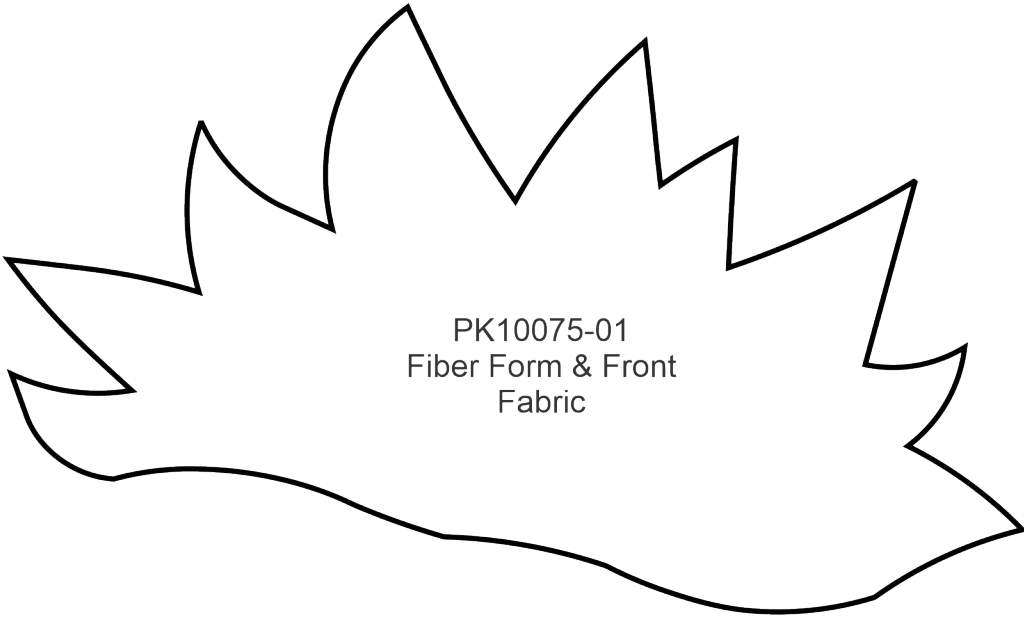

PK10075-01
Fiber Form & Front
Fabric

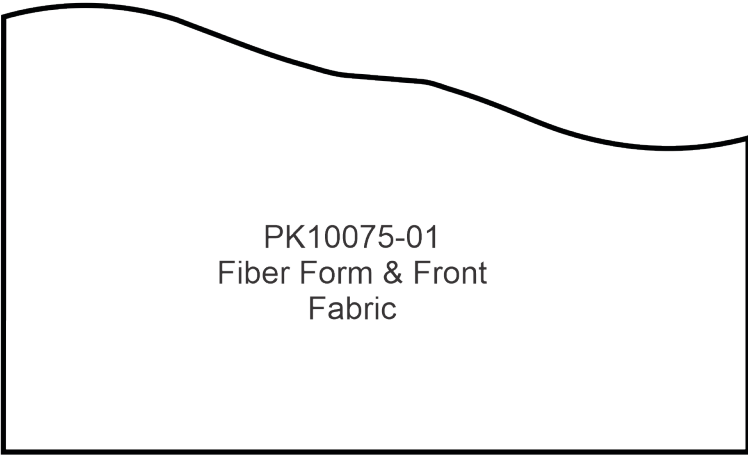

PK10075-01
Fiber Form & Front
Fabric

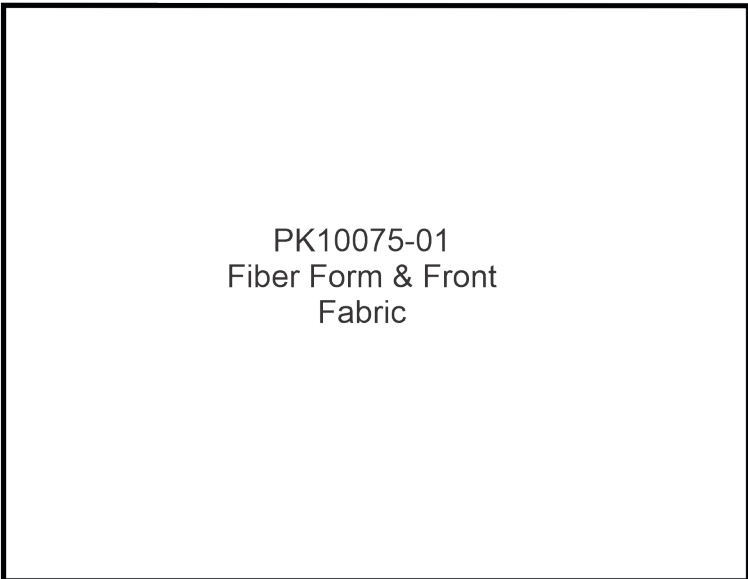


PK10075-01
Fiber Form & Front
Fabric

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

APPLIQUE PATTERNS



PK10075-01
Back Fabric

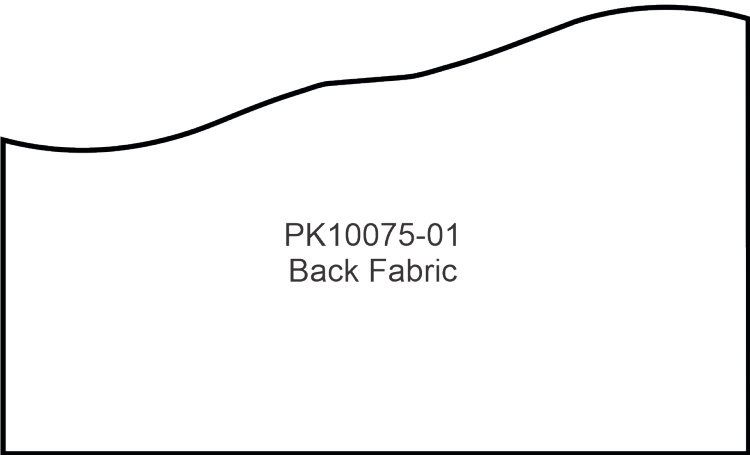





PK10075-01
Back Fabric



PK10075-01
Back Fabric

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

APPLIQUE PATTERNS

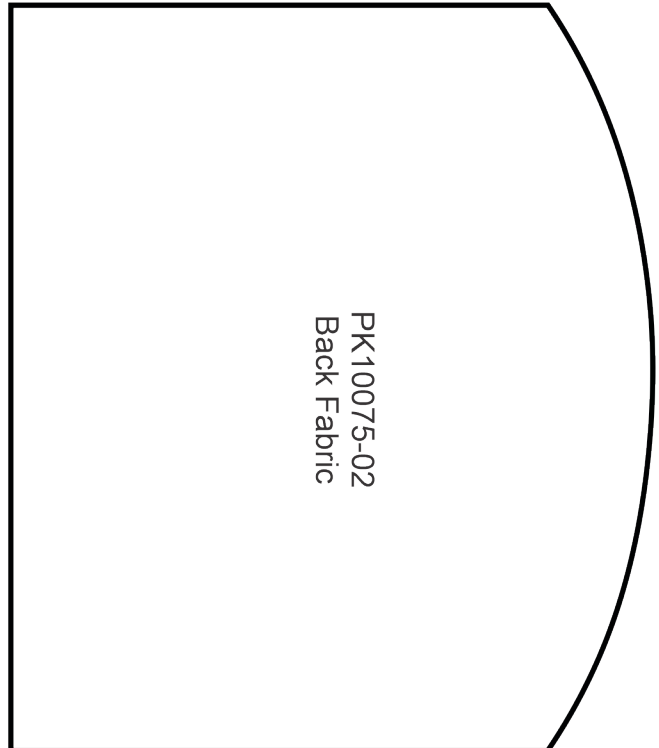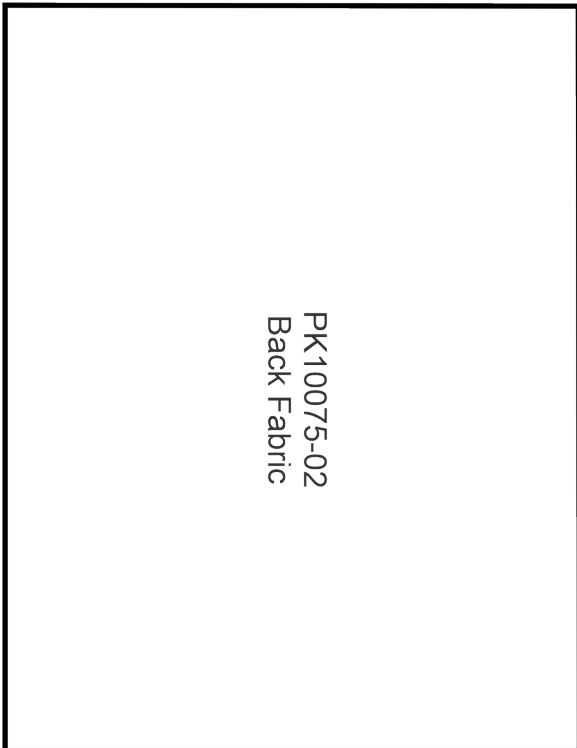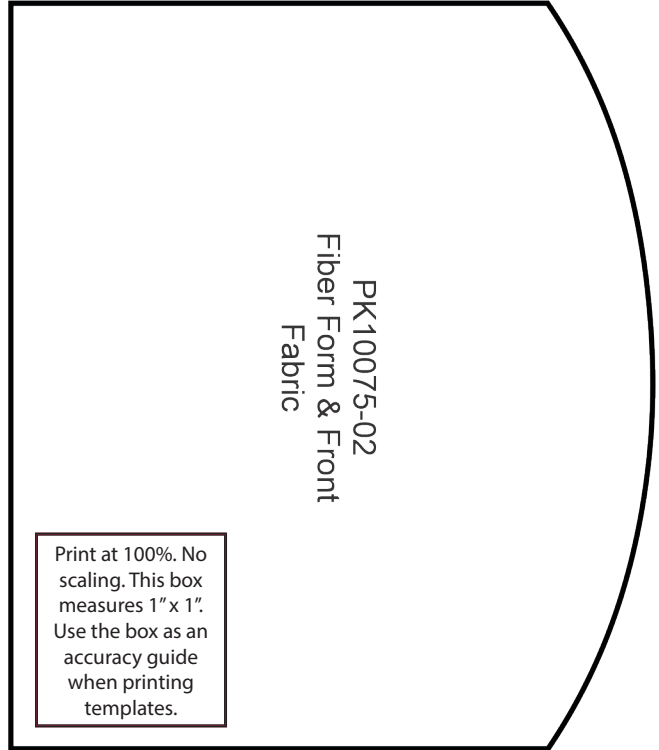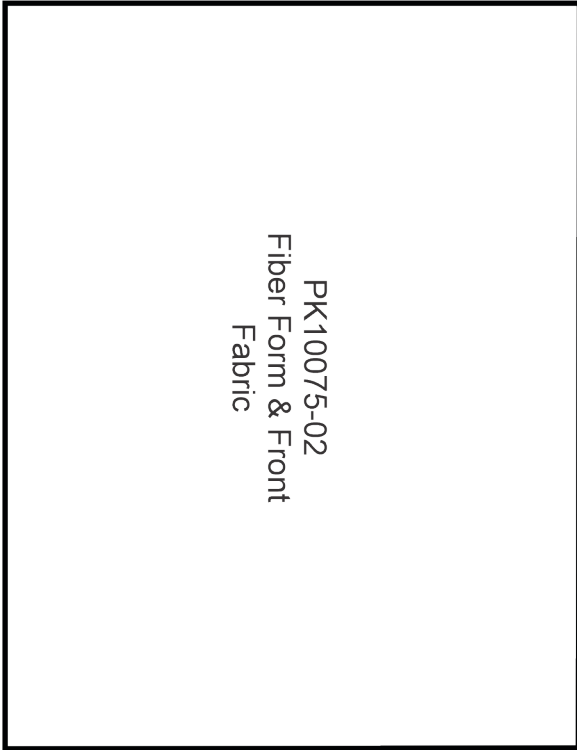




APPLIQUE PATTERNS






Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10075-03
Fiber Form & Front
Fabric

PK10075-03
Back Fabric

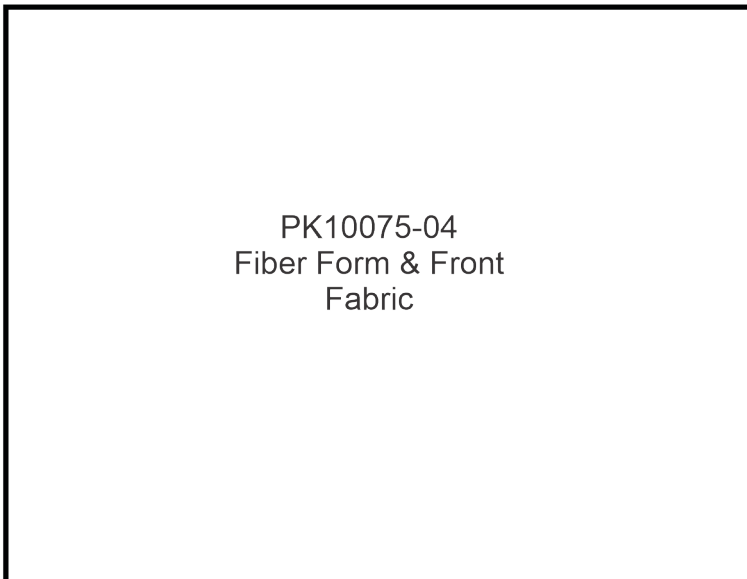
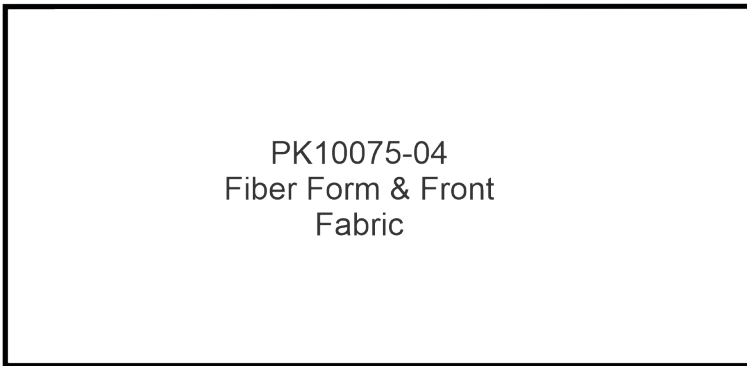
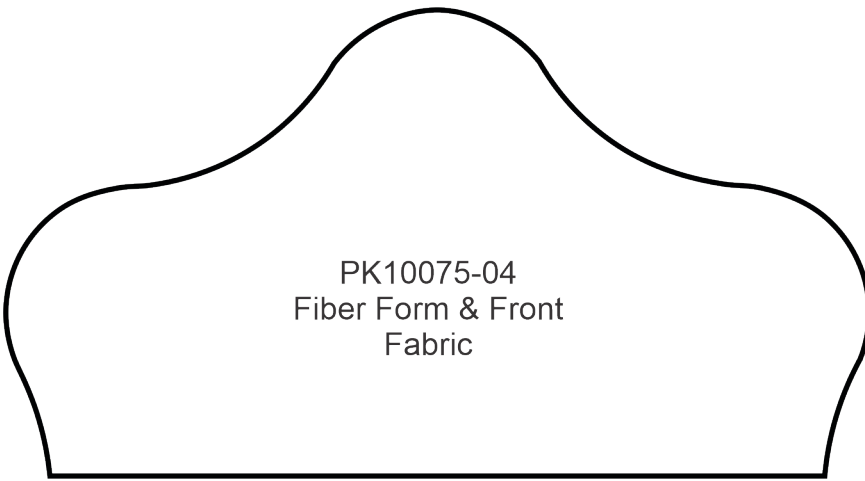


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

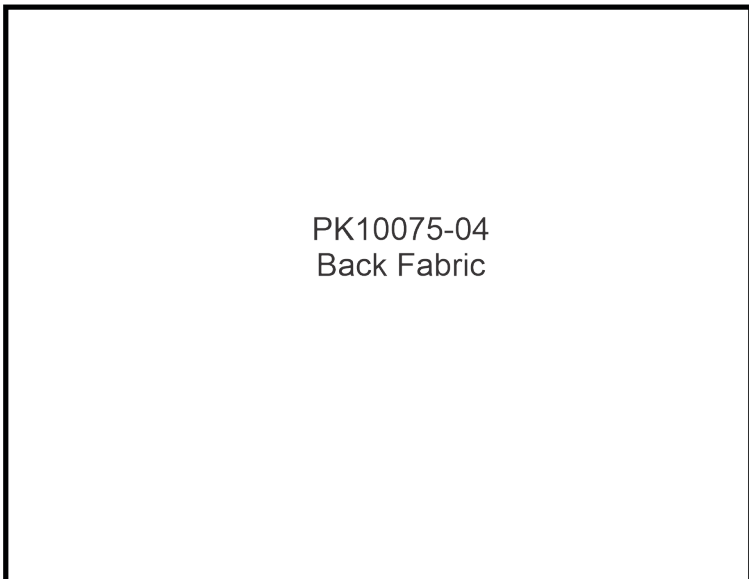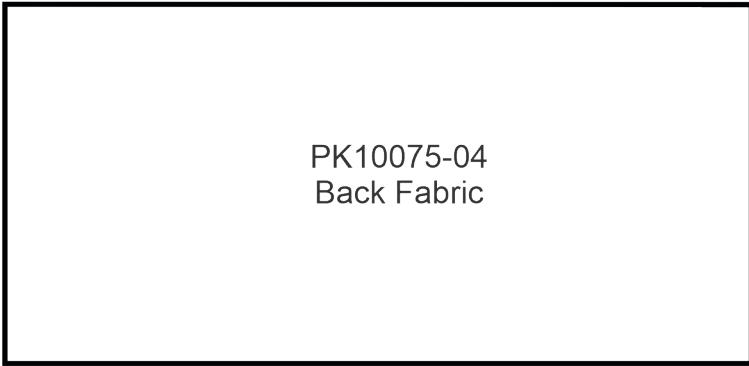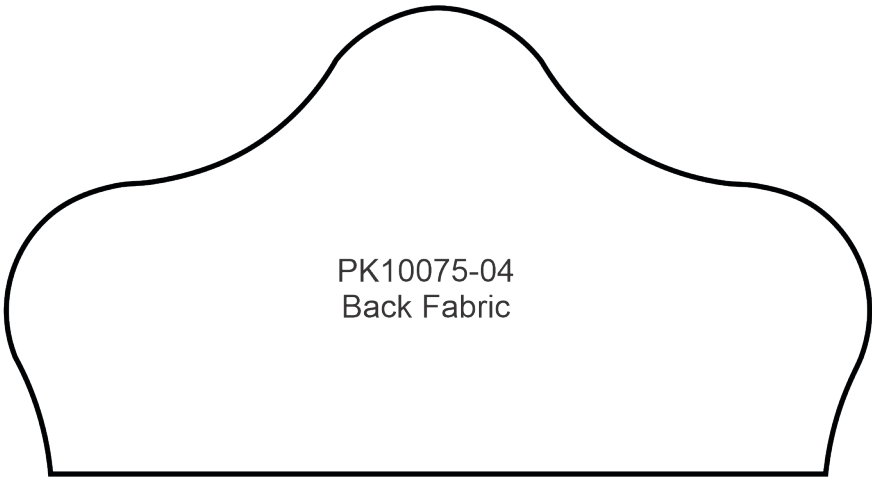

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

APPLIQUE PATTERNS

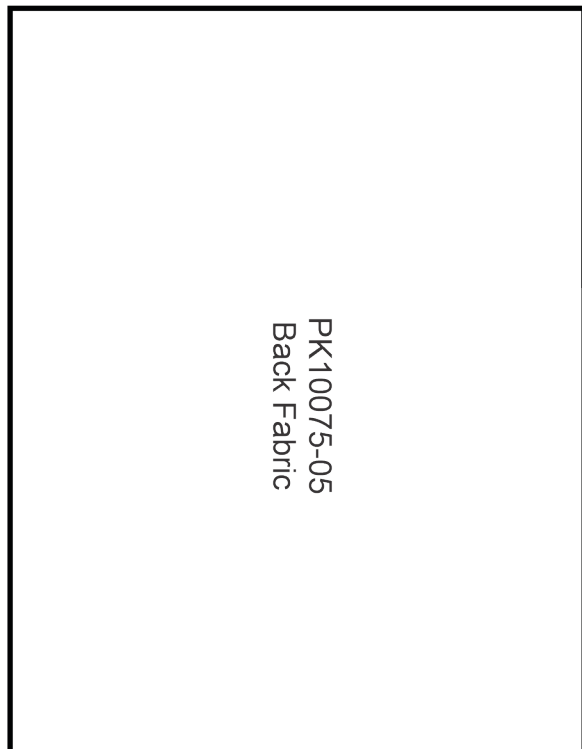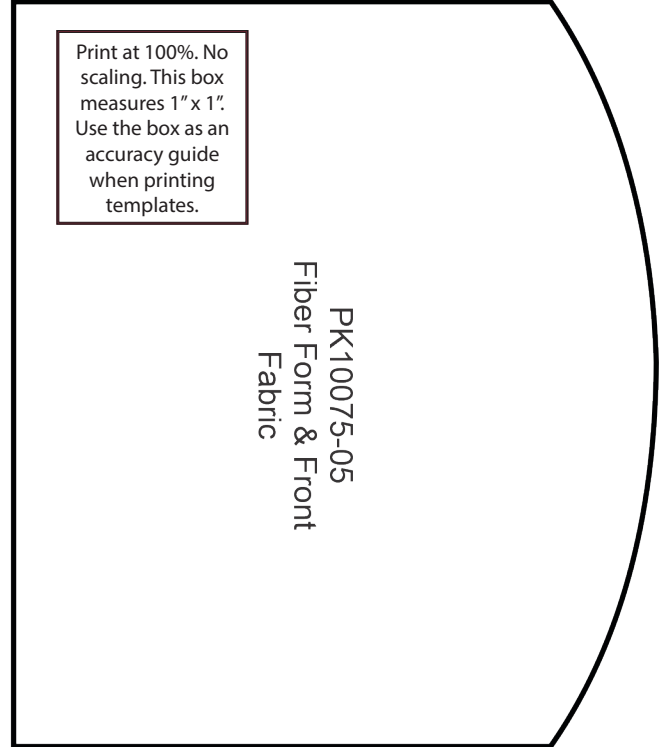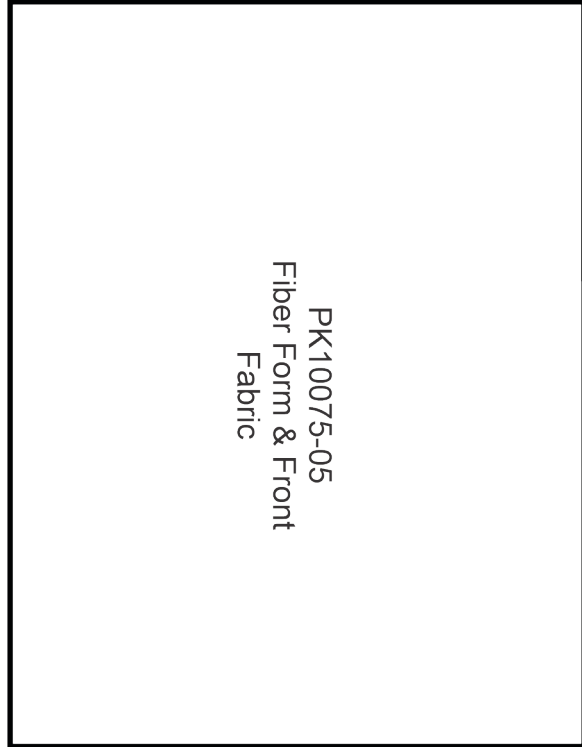

APPLIQUE PATTERNS






Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10075-06
Fiber Form & Front
Fabric



PK10075-06
Back Fabric

MIRRORED PATTERNS

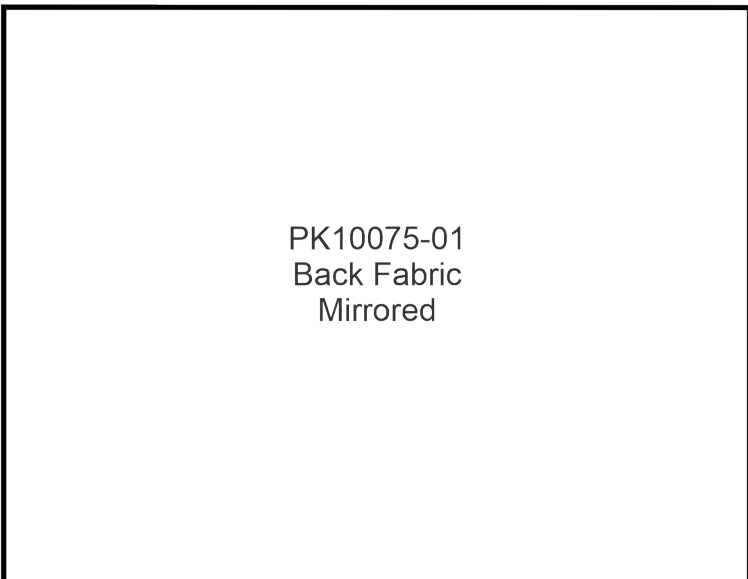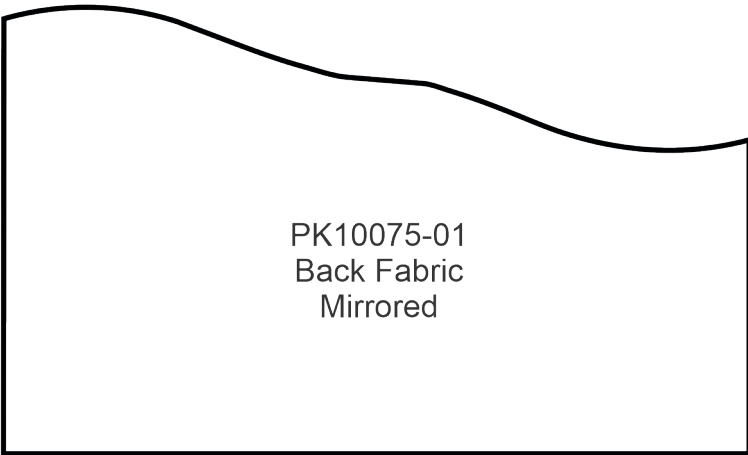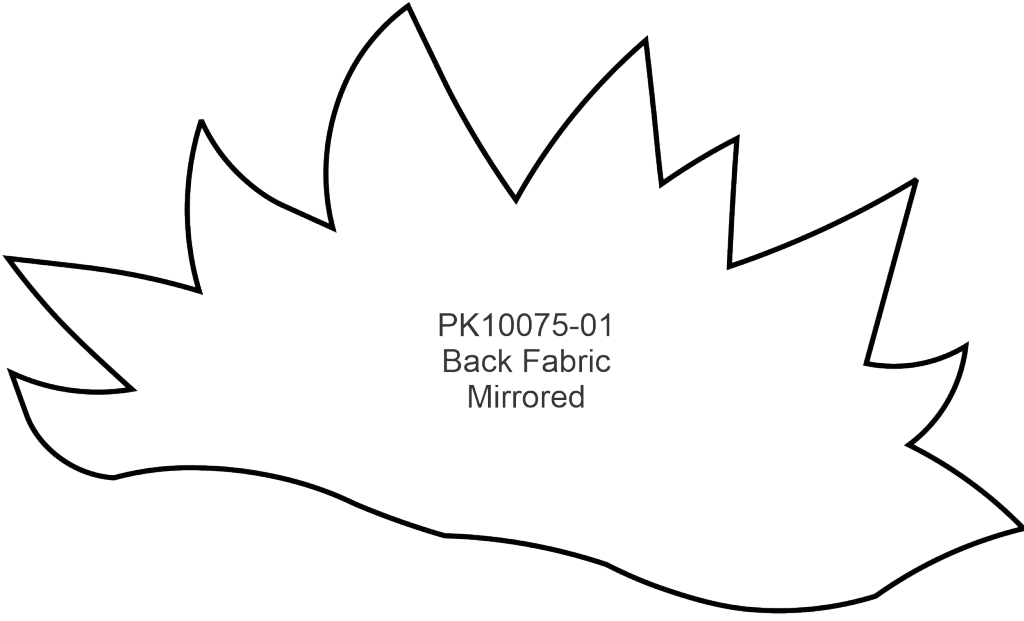




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

MIRRORED PATTERNS

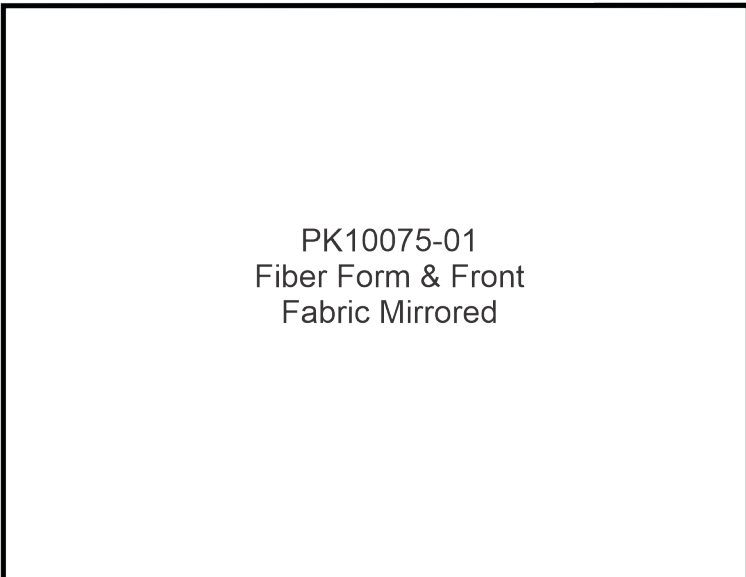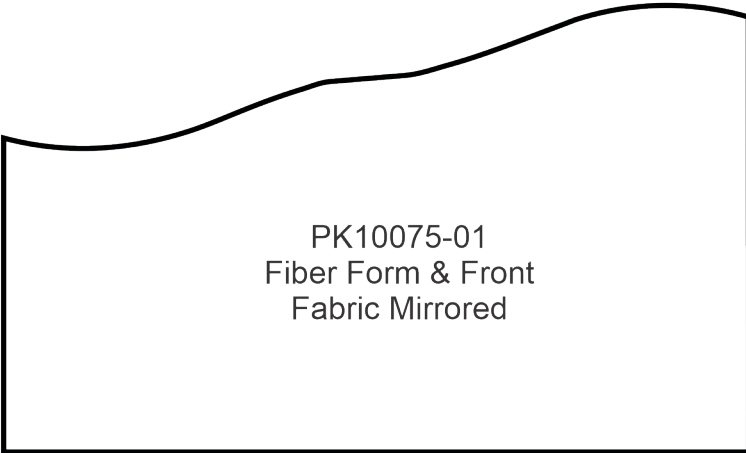

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

MIRRORED PATTERNS

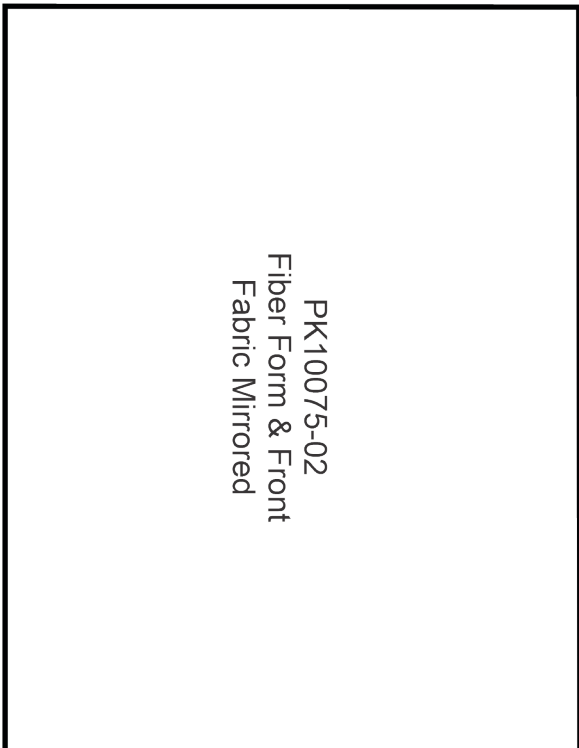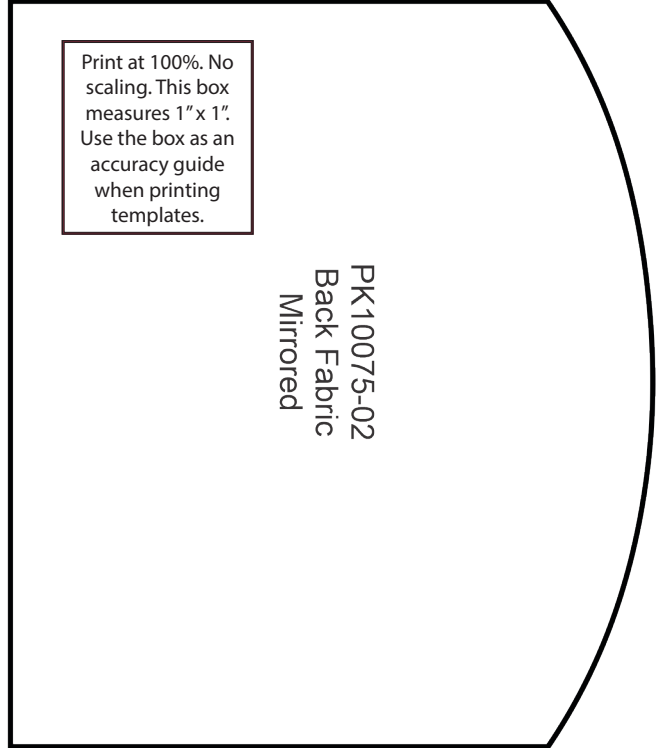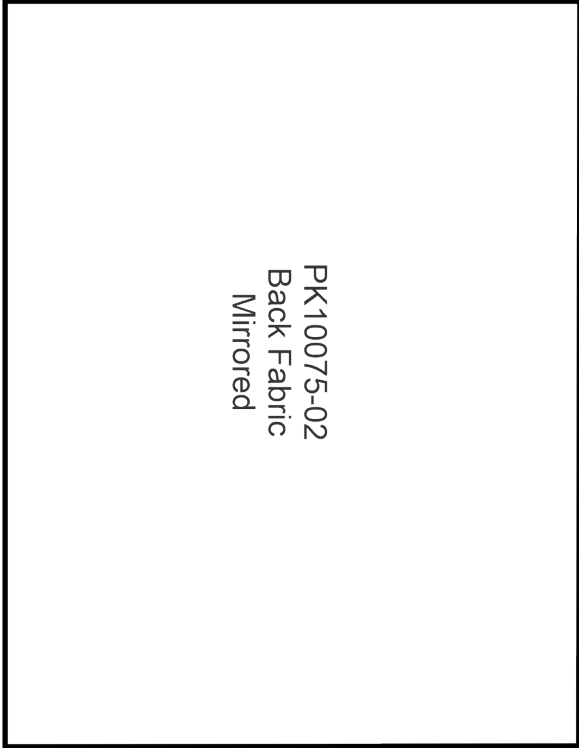

MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



PK10075-03
Back Fabric
Mirrored

PK10075-03
Fiber Form & Front
Fabric Mirrored

MIRRORED PATTERNS

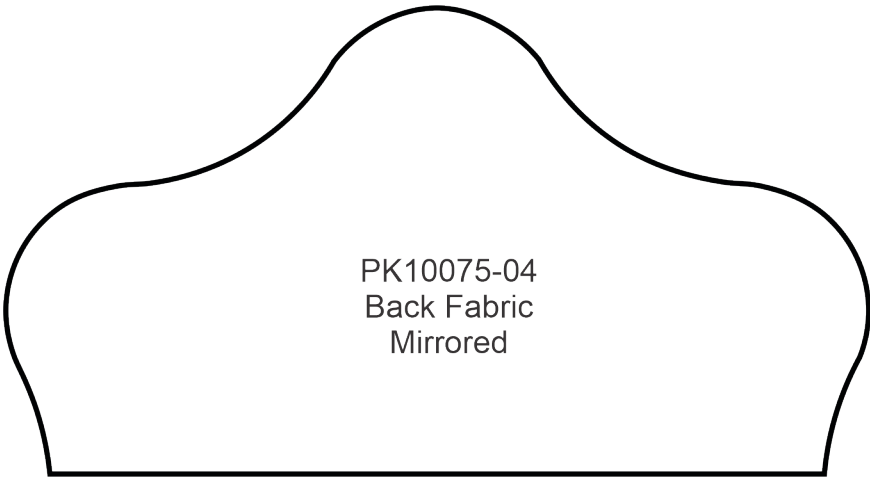


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

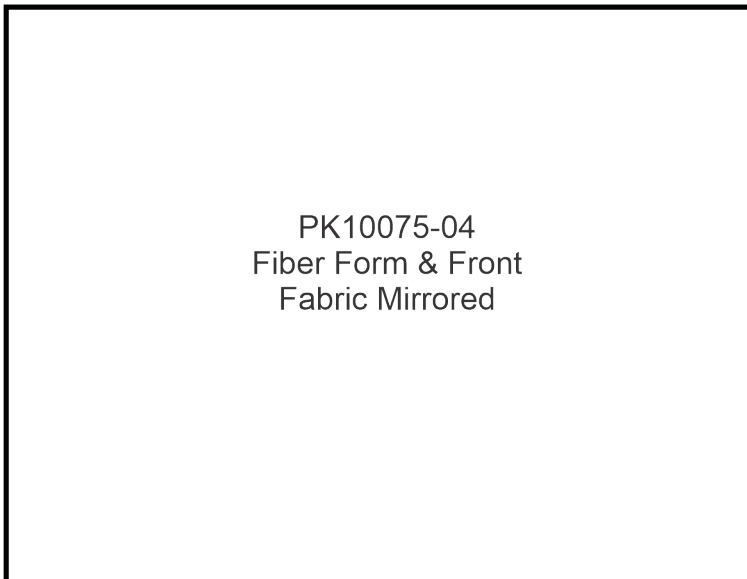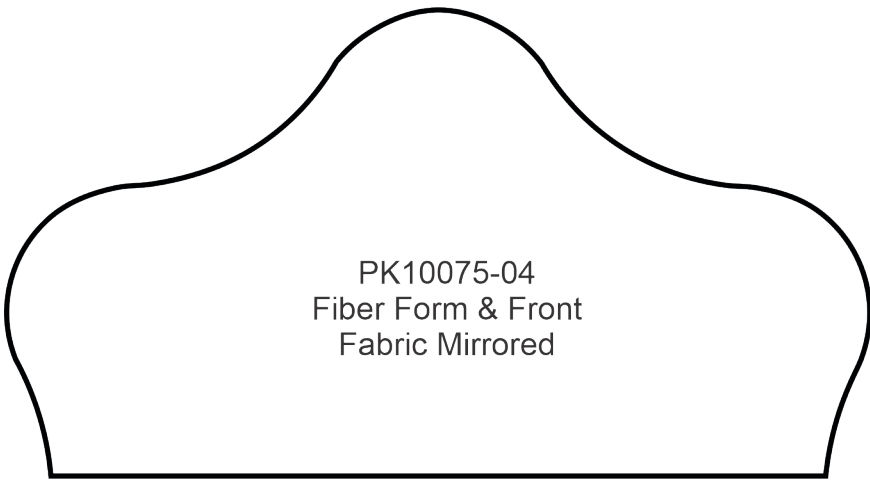


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

MIRRORED PATTERNS

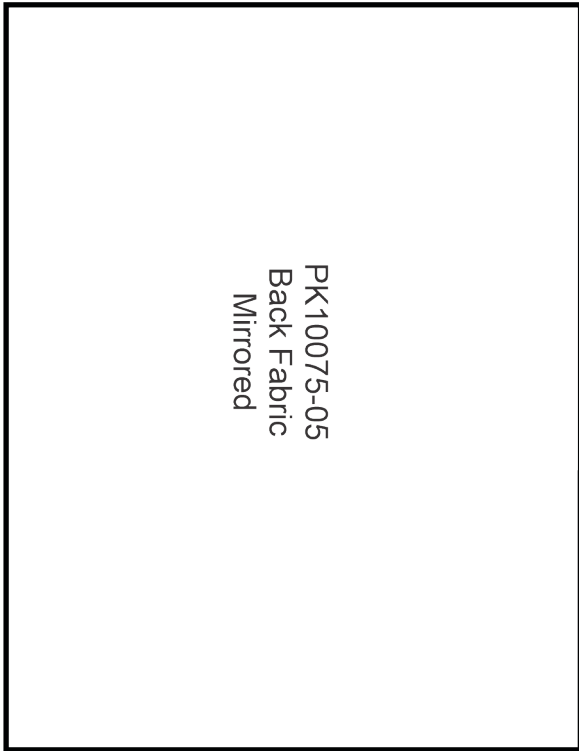


PK10075-05
Back Fabric
Mirrored

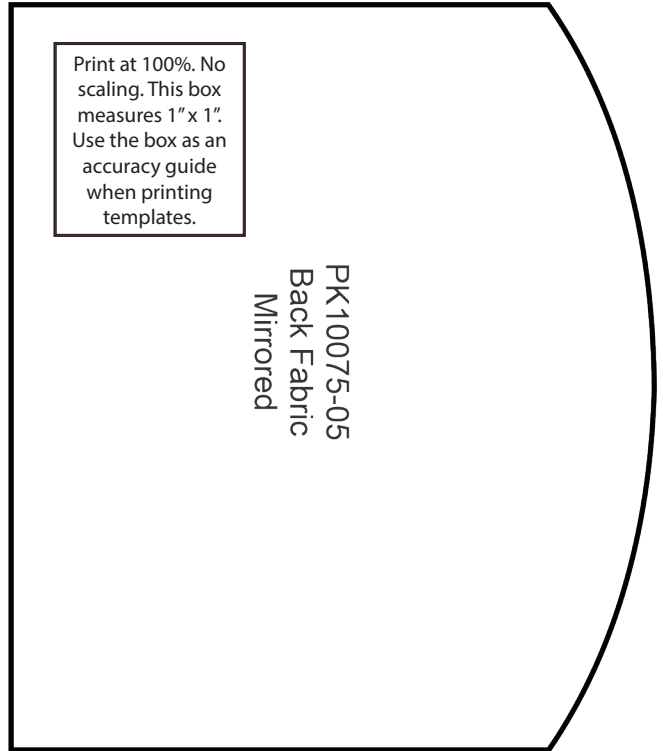

Print at 100%. No
scaling. This box
measures 1" x 1".
Use the box as an
accuracy guide
when printing
templates.

PK10075-05
Back Fabric
Mirrored

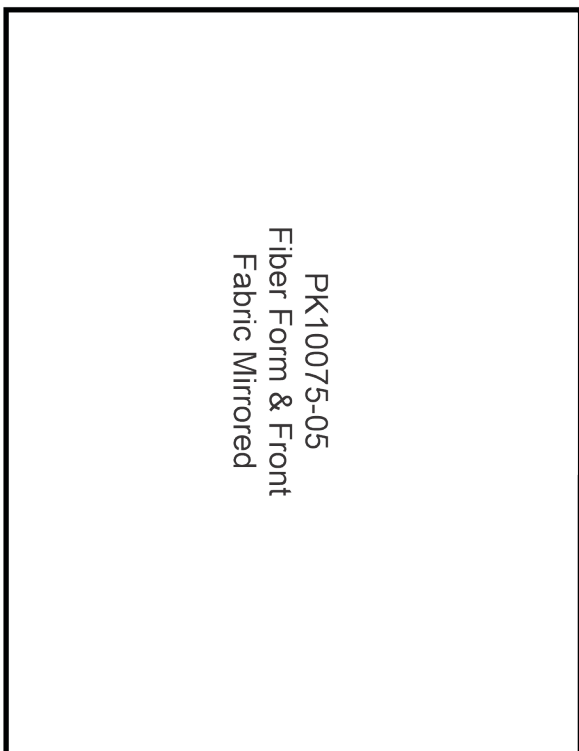


PK10075-05
Fiber Form & Front
Fabric Mirrored




PK10075-05
Fiber Form & Front
Fabric Mirrored

MIRRORED PATTERNS

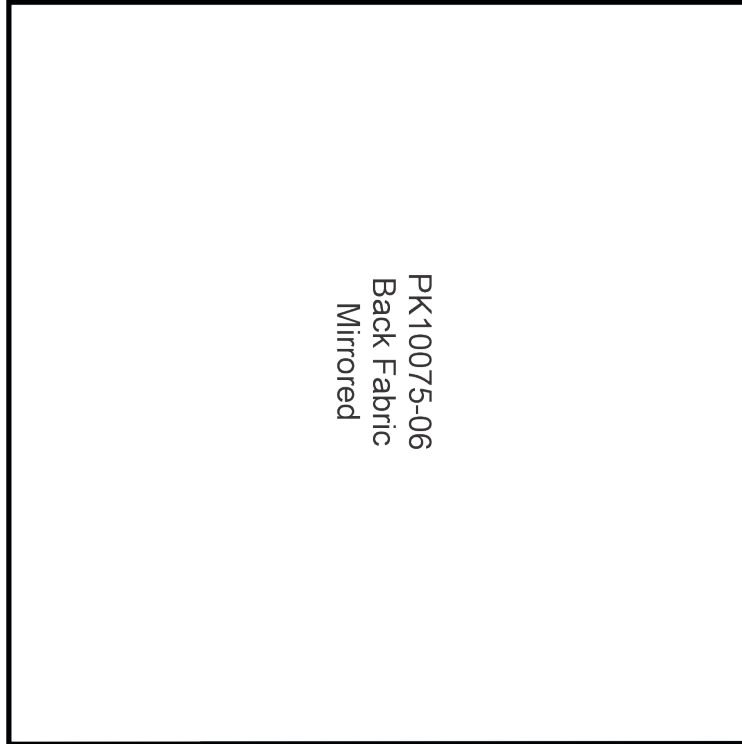

PK10075-06
Back Fabric
Mirrored

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

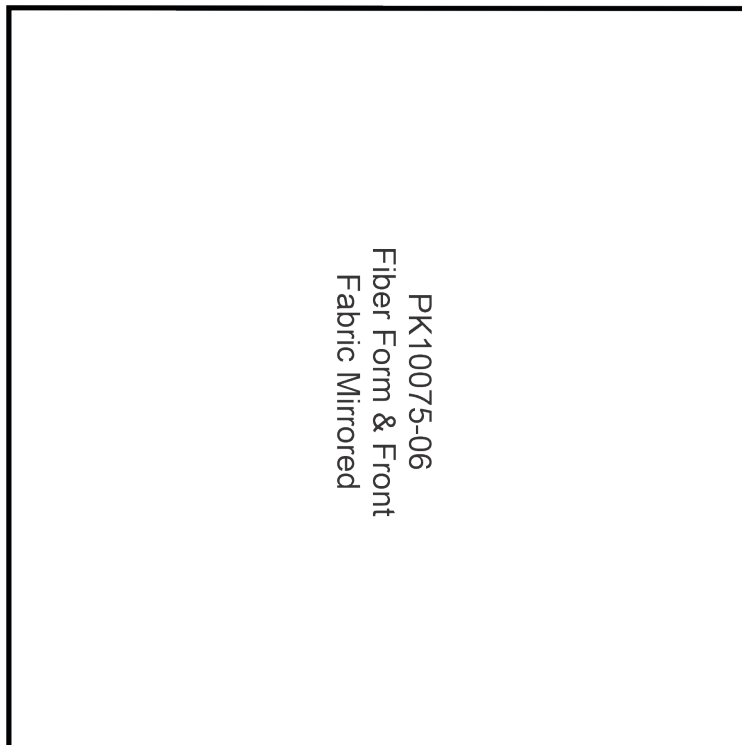

PK10075-06
Fiber Form & Front
Fabric Mirrored