

# Christmas Cheer Sign



Collection No. PK10076  
1 Design/3 Files



# MATERIALS



## Isacord Thread Colors

- 0010 Silky White
- 1900 Geranium
- 2022 Rio Red
- 5944 Backyard Green
- 6051 Jalapeno

**Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.**



# MATERIALS



## Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
- OESD Fiber Form
- OESD Applique Fuse and Fix

## Fabrics/Textiles

- 1/4 yard Red Quilter's Cotton
- 1/4 yard Light Green Quilter's Cotton
- 1/4 yard Dark Green Quilter's Cotton
- Note: Fabric amounts are estimates and may result in overages. Prewash red fabric to reduce the possibility of the dye running after the project is embroidered.

## Notion & Tools

- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Punch Tool
- OESD MiniMAT
- OESD Alligator Clamps
- OESD Perfect Embroidery Press Cloth
- OESD Grippy GRID
- OESD Top Cover Permanent Topping
- Embroidery Needle Sharp 75/11
- 24" of 3/8" ribbon
- 15mm jump rings
- Pliers

## Isacord Thread Colors

- Per the thread chart



# SUMMARY



Finished project size:  
17.75" H x 14.75" W

PK10076-01



Requires 1 Design

PK10076-02



Requires 1 Design

PK10076-03



Requires 1 Design




## General Instructions

The freestanding applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.



### Step 1

- Print the mirrored version of the templates (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately 1/4" - 1/2" outside the printed applique templates.
- Trim the partial templates on the edge of the black line where they join.
- Use OESD Expert Embroidery Tape TearAway to join the partial templates.

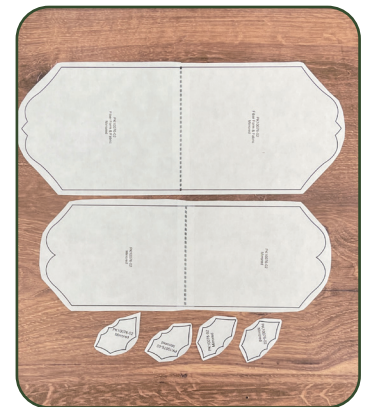


## Step 2

- Cut the Fiber Form and applique fabric 1/4" - 1/2" larger than the applique templates that are included at the end of the instructions.
- Fuse the trimmed templates to the back of the Fiber Form and inner appliques with the paper side of the printed template up. Hold the iron on the template for 10 - 15 seconds for a secure fuse.

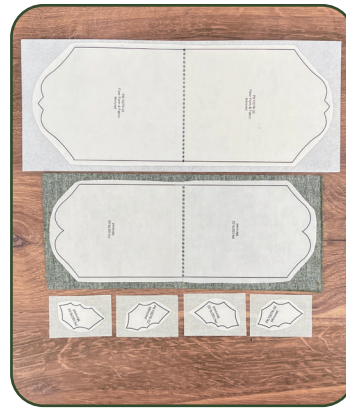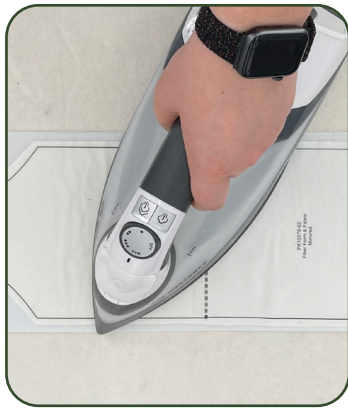

## Step 3


- Trim the Fiber Form and inner fabric appliques on the edge of the black outline.
- Set aside.

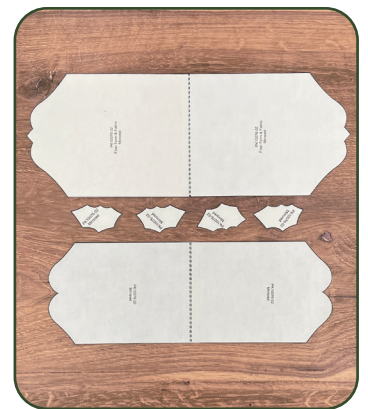




## Step 4

- Adhere one layer of StabilStick CutAway to the wrong side of the background applique fabric to provide stiffness to the finished sign.

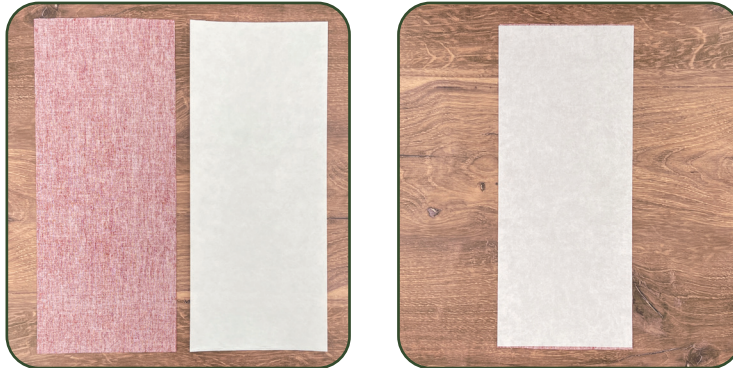


## Step 5

- Hoop one layer of AquaMesh and one layer of BadgeMaster for all designs.

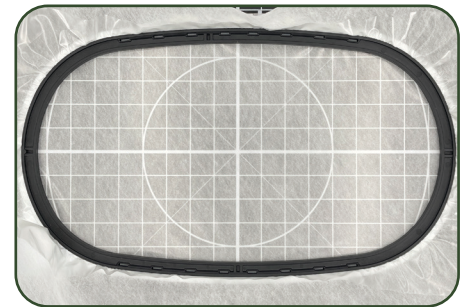


## Step 6

- Load selected design into the machine.
- Example design is PK10076-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form/Red Fabric Placement Stitch.

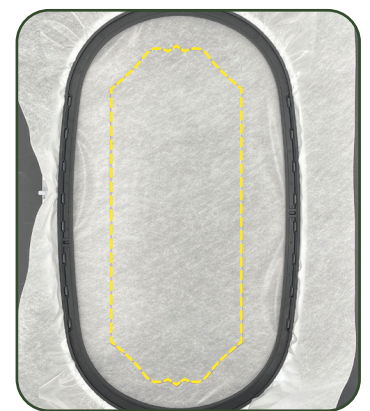


## Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
  - Place the hoop on a flat surface.
  - On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
  - Place the Fiber Form within the placement stitching.
  - Finger press to secure.
- Tip: Applique Fuse and Fix is repositionable.

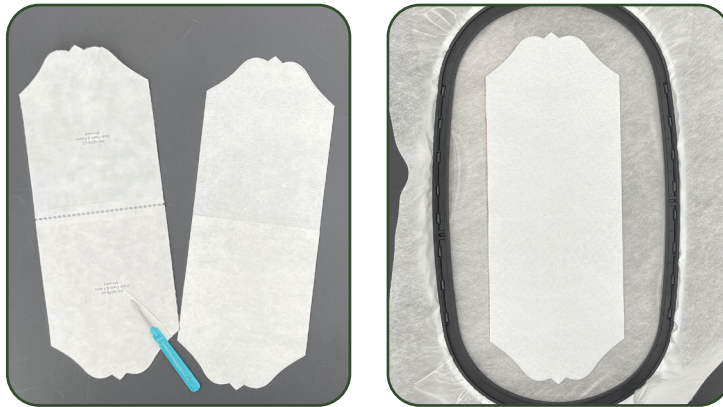

## Step 8


- Completely cover the Fiber Form with the prepared background fabric.
- Tape in place to secure.

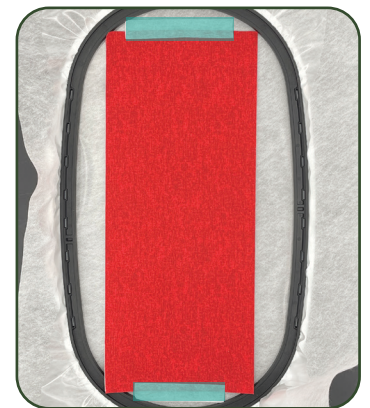




## □ Step 9

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

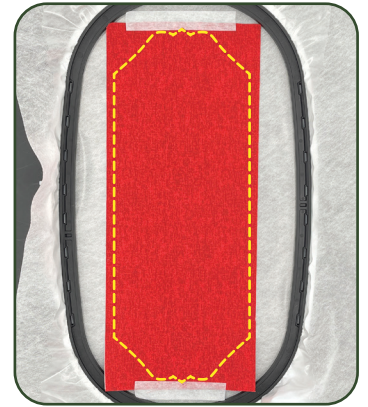


## □ Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
  - Place the hoop on a flat surface.
  - Trim the excess fabric as close to the cut line stitching as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.

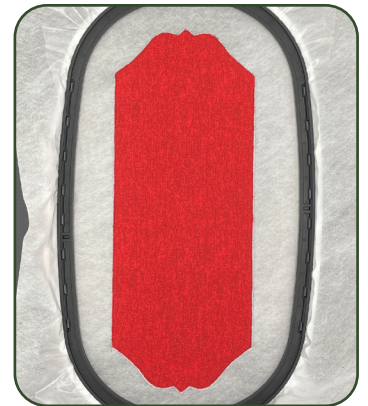


## □ Step 11

- Return the hoop to the machine.
- Stitch Machine Step 3, Cover Stitch and Punch Guides.
- Stitch Machine Step 4, Dark Green Placement Stitch.

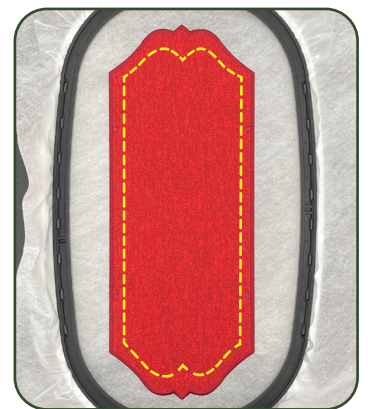


## □ Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the dark green fabric, score and remove the paper backing to reveal the adhesive surface.
- Place the dark green fabric within the placement stitching.
- Finger press to secure.

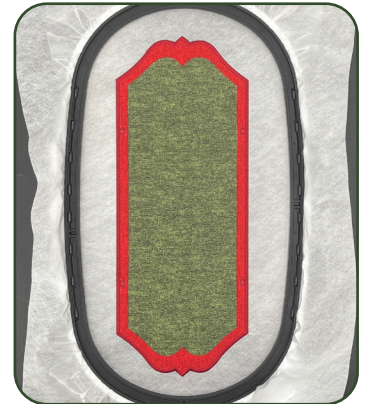


## □ Step 13

- Return the hoop to the machine.
- Stitch Machine Step 5, Tackdown and Linework.

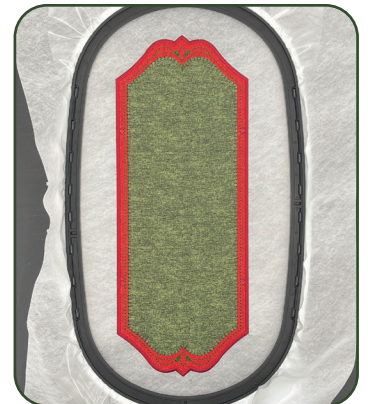

## □ Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
  - Place the hoop on a flat surface.
  - Tape 2 pieces of White Top Cover over the center of the design.
- Note: Top Cover helps prevent the dark green fabric showing through the white stitches.

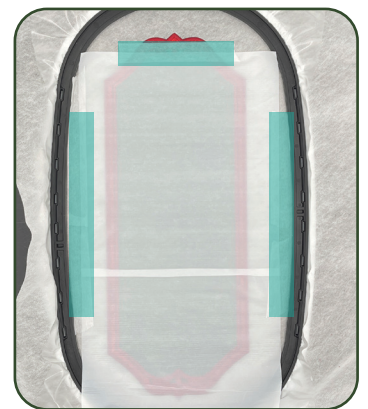



## Step 15

- Return the hoop to the machine.
- Stitch Machine Step 6, Lettering.



## Step 16

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Tear away the excess top cover from the lettering.



## Step 17

- Return the hoop to the machine.
- Stitch Machine Steps 7-8.
- Stitch Machine Step 9, Light Green Fabric Placement Stitch.



## Step 18

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the light green fabric, score and remove the paper backing to reveal the adhesive surface.
- Place the light green fabric within the placement stitching.
- Finger press to secure.



## Step 19

- Return the hoop to the machine.
- Stitch Machine Step 10, Tackdown and Detail.



## Step 20

- When the design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.





# ASSEMBLY

## □ Step 21

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. This will help prevent curling.
- Parchment paper or a cooling rack work well to keep the design from sticking to the surface.
- Dry completely.
- Once dry, press right side down on a Perfect Embroidery Press Cloth.



## □ Step 22


- Before assembly, use the OESD Mini MAT and Punch Tool with the 3mm attachment to create the eyelets indicated in the diagram.  
Tip: Take care not to cut the satin stitching.
- Reference the Punch Tool Guide on page 16.



# ASSEMBLY

## Step 23

- Align the eyelets of each design.
- Use pliers to open jump rings.
- Thread the jump ring through the corresponding eyelets to attach the sign pieces together.
- Close the jump ring with the pliers.
- Repeat for the remaining eyelets.

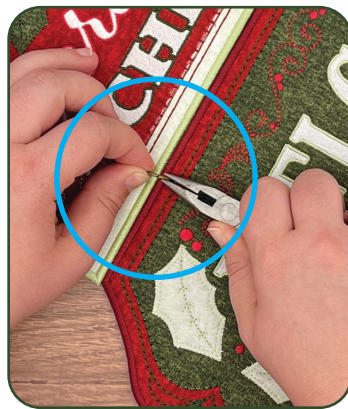

## Step 24

- Cut a 24" length of ribbon.
- Use OESD Alligator Clamps to pull the ribbon through the top eyelet holes and tie to create a ribbon hanger.



# ASSEMBLY

## □ Step 25

- The sign is now complete. Enjoy!






# PUNCH TOOL GUIDES



PK10076-01



PK10076-02

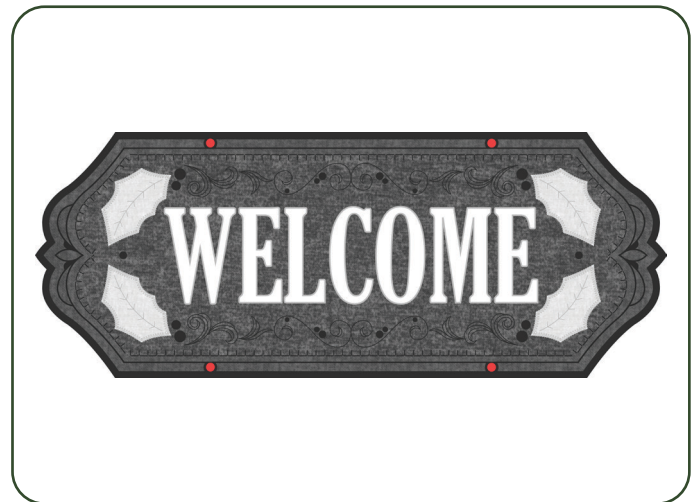

PK10076-03




● = 2 MM

● = 3 MM

● = 4 MM


## ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

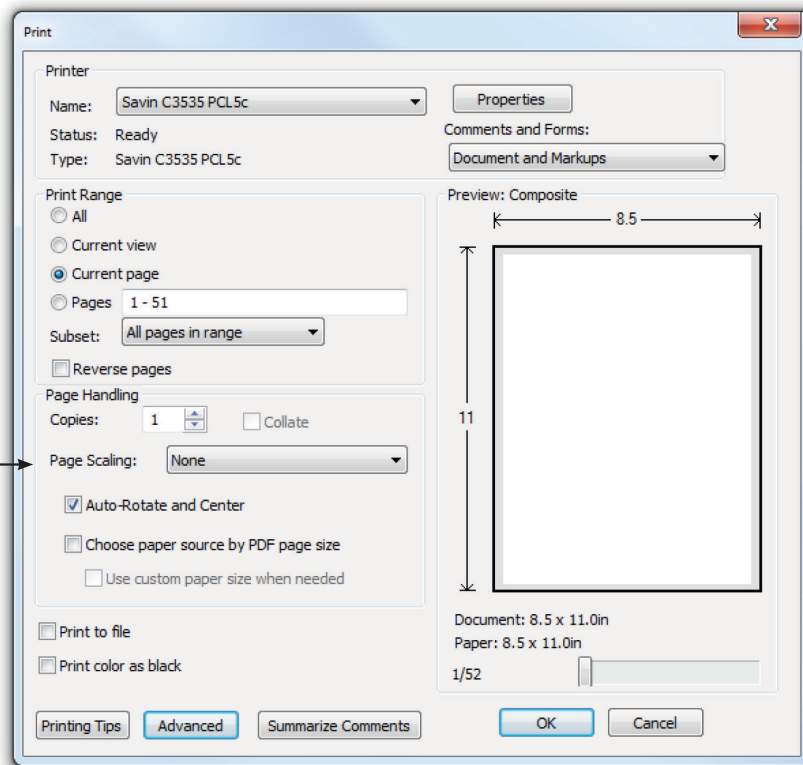


## TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

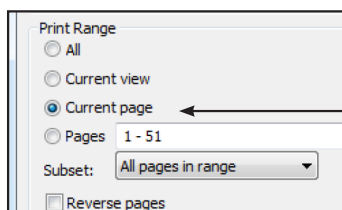


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

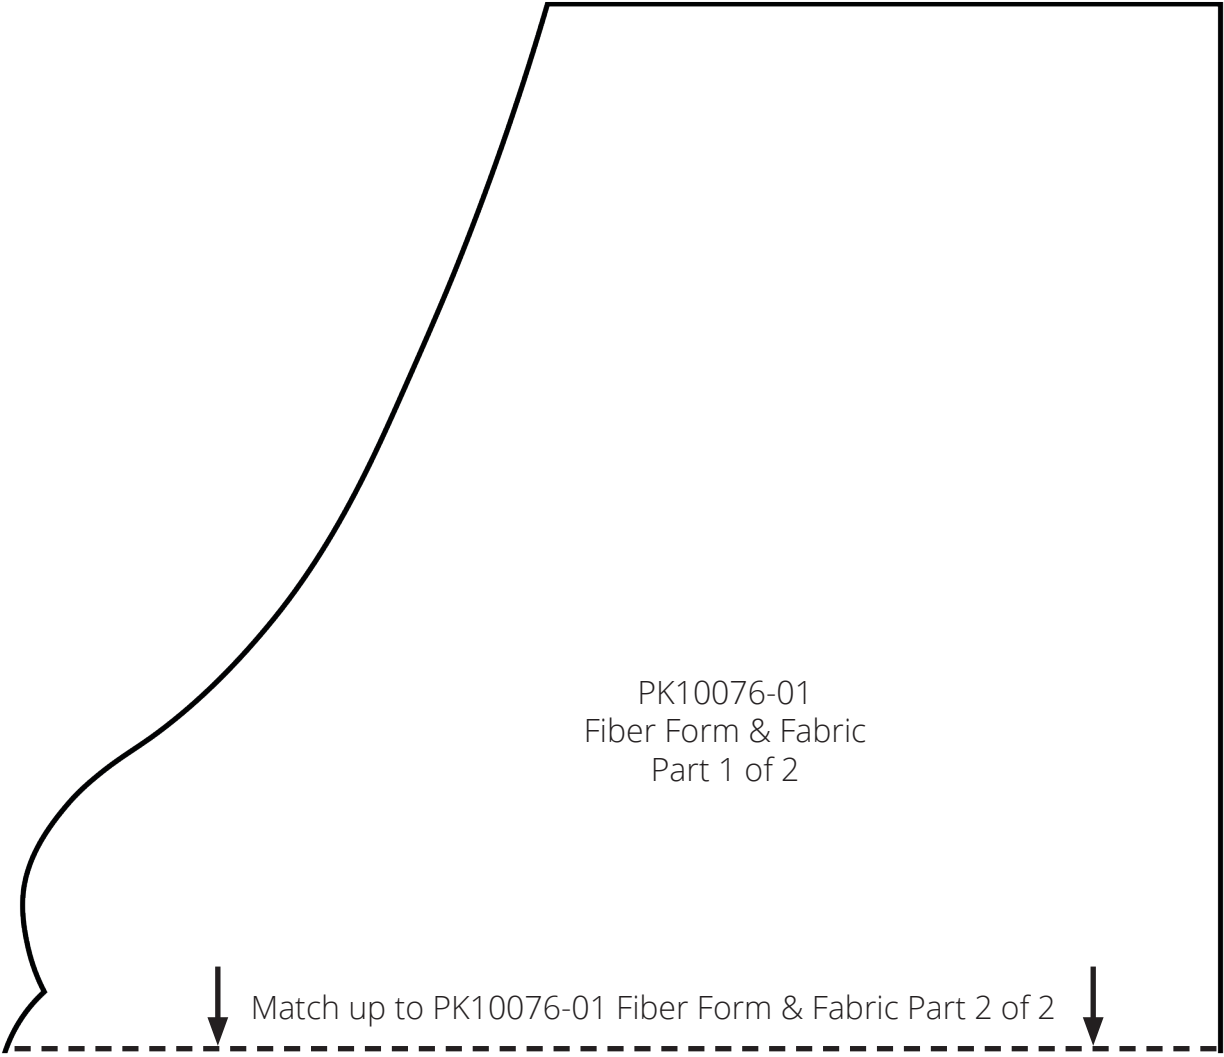



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

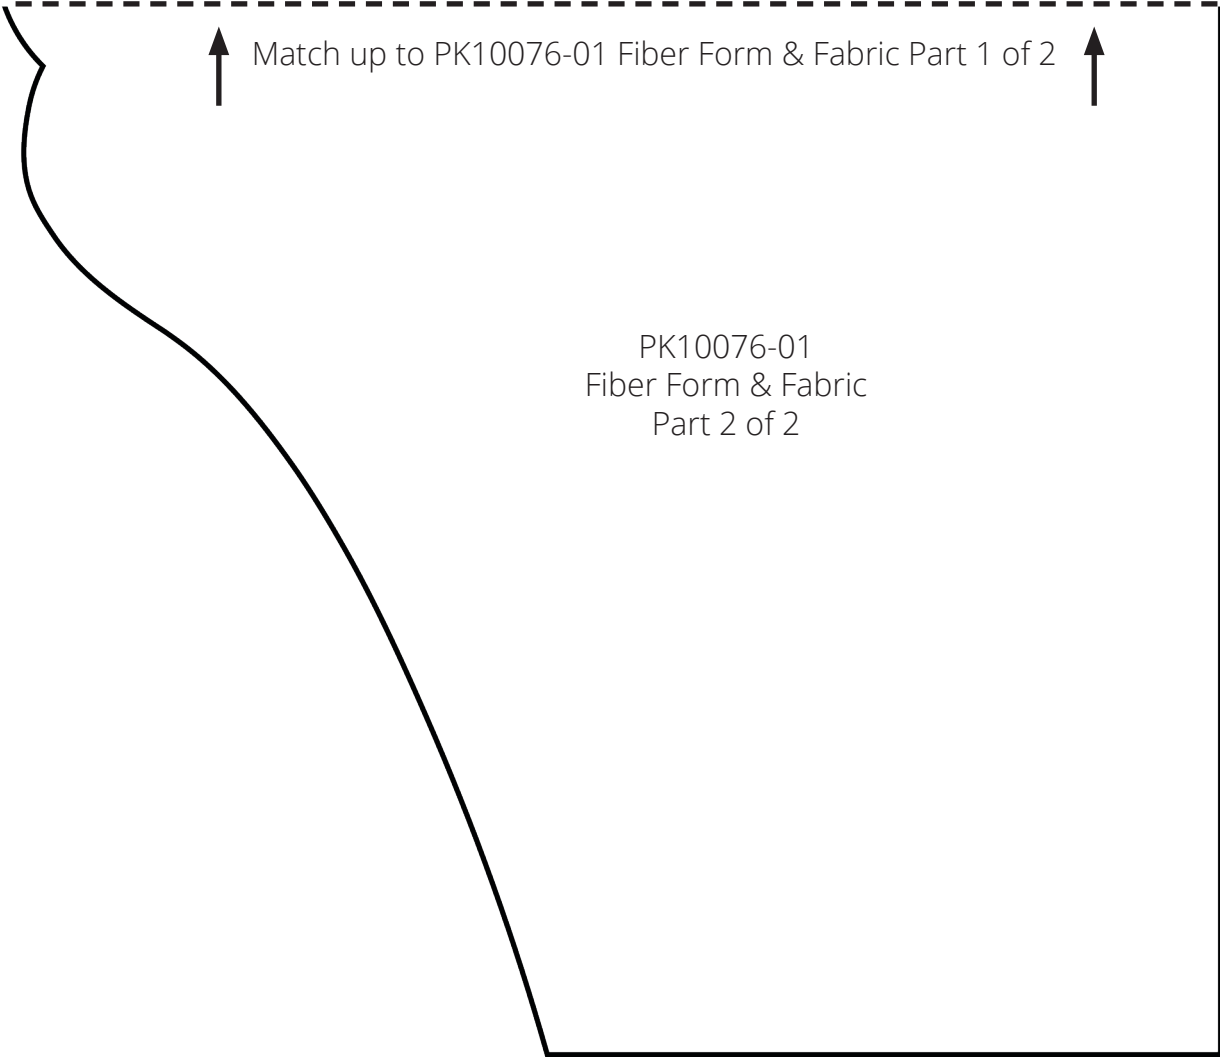

# APPLIQUE PATTERNS






PK10076-01

PK10076-01


PK10076-01

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

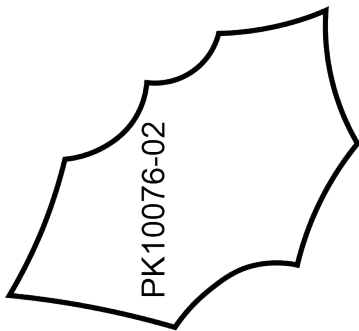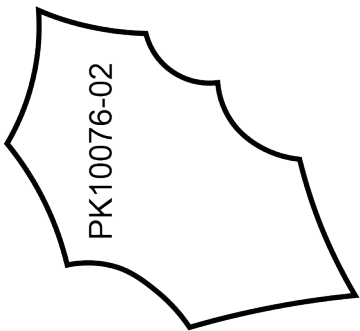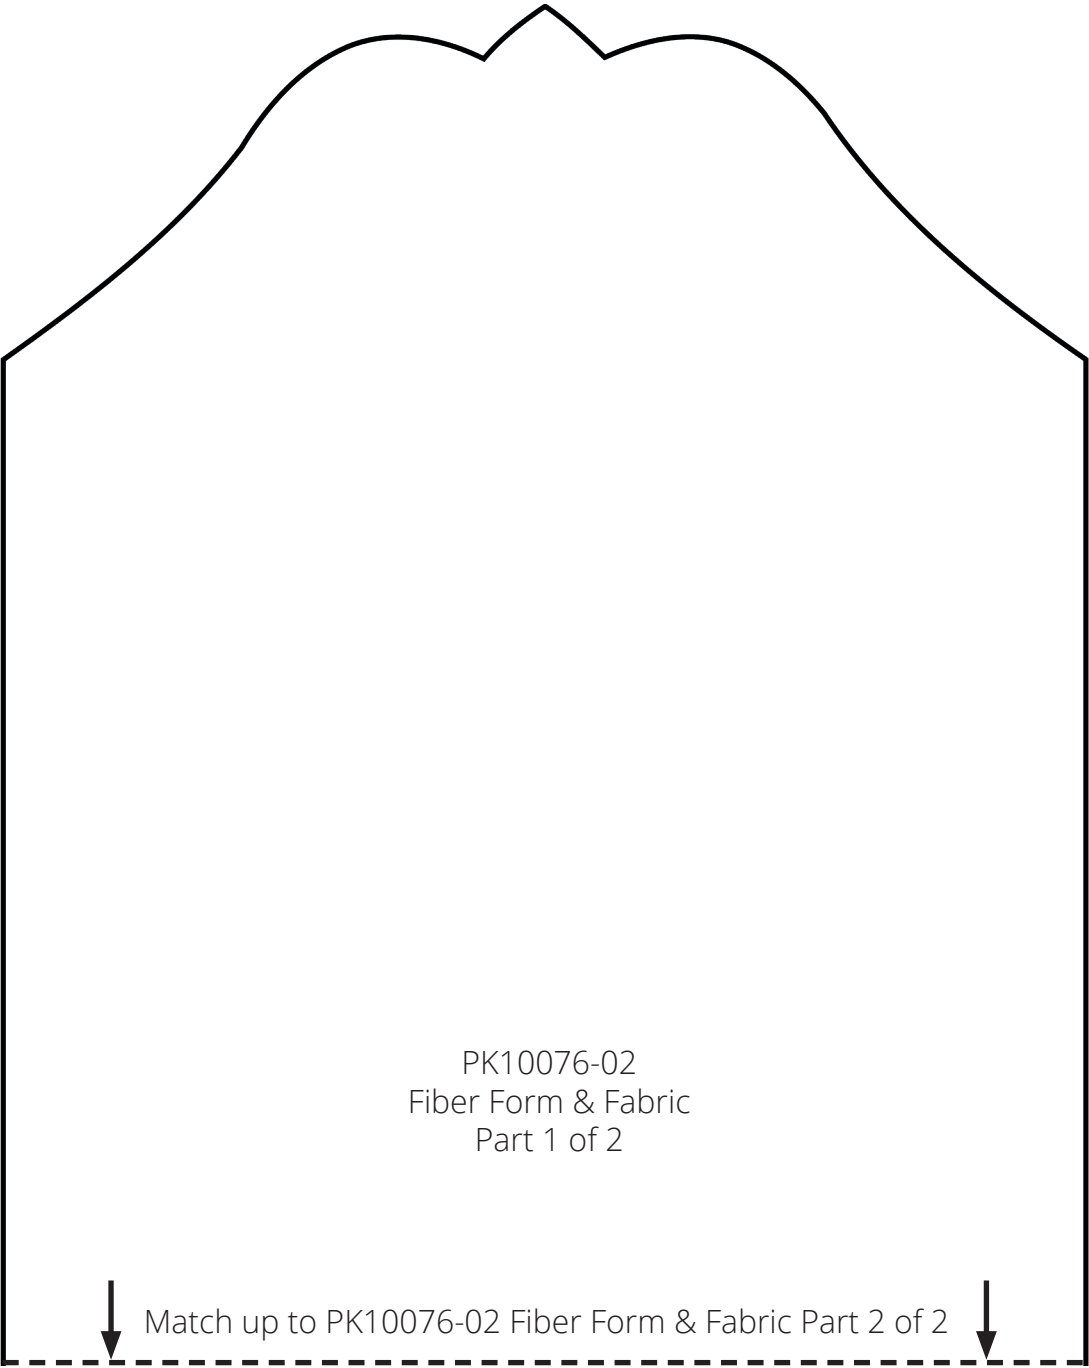





# APPLIQUE PATTERNS

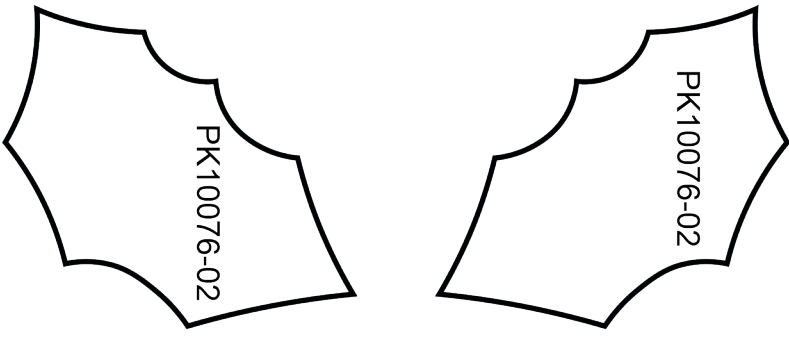


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

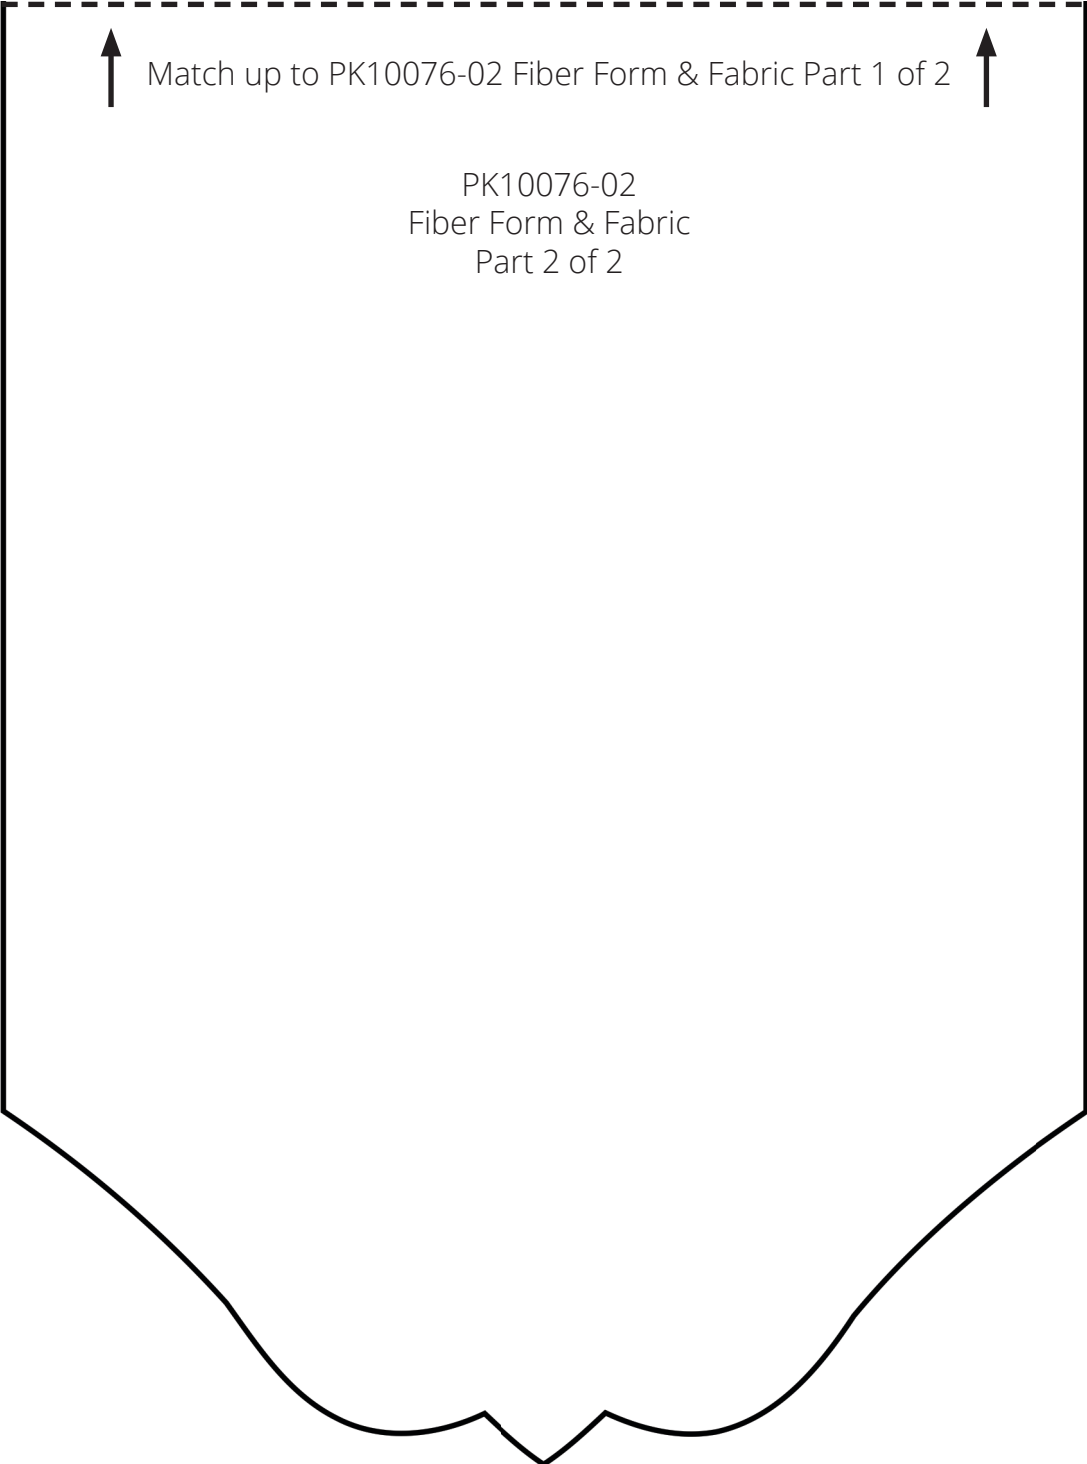

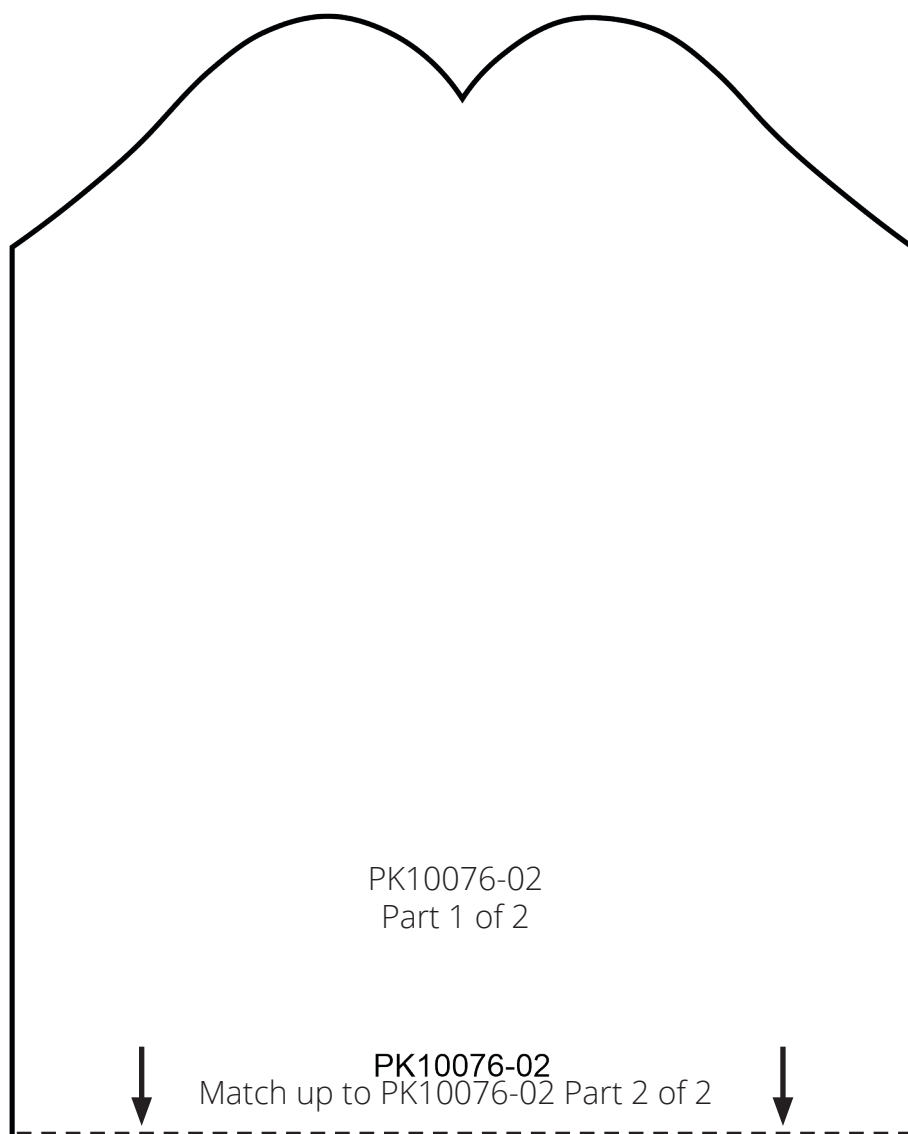


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

# APPLIQUE PATTERNS

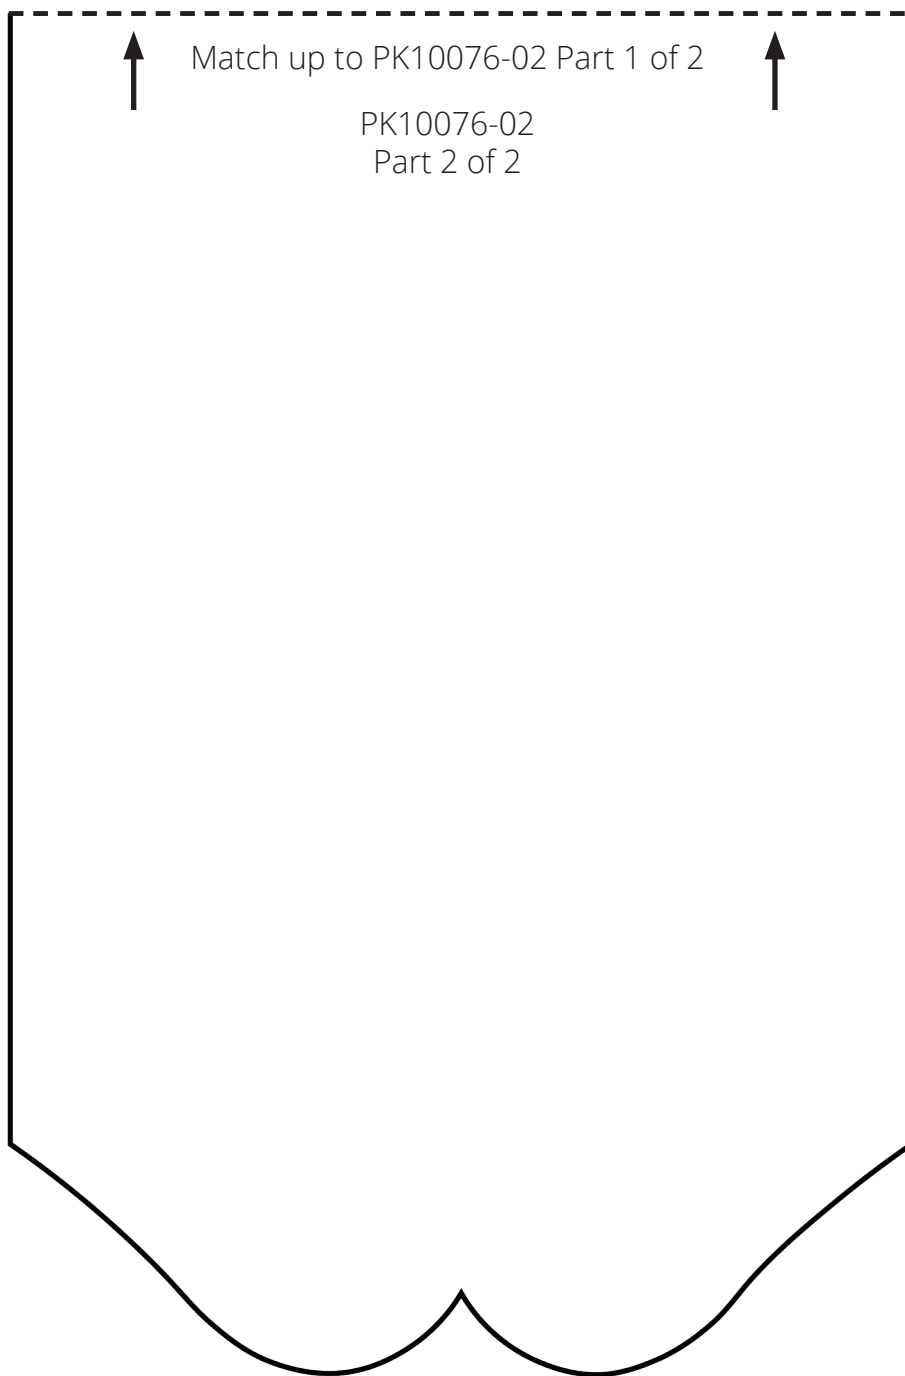


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.





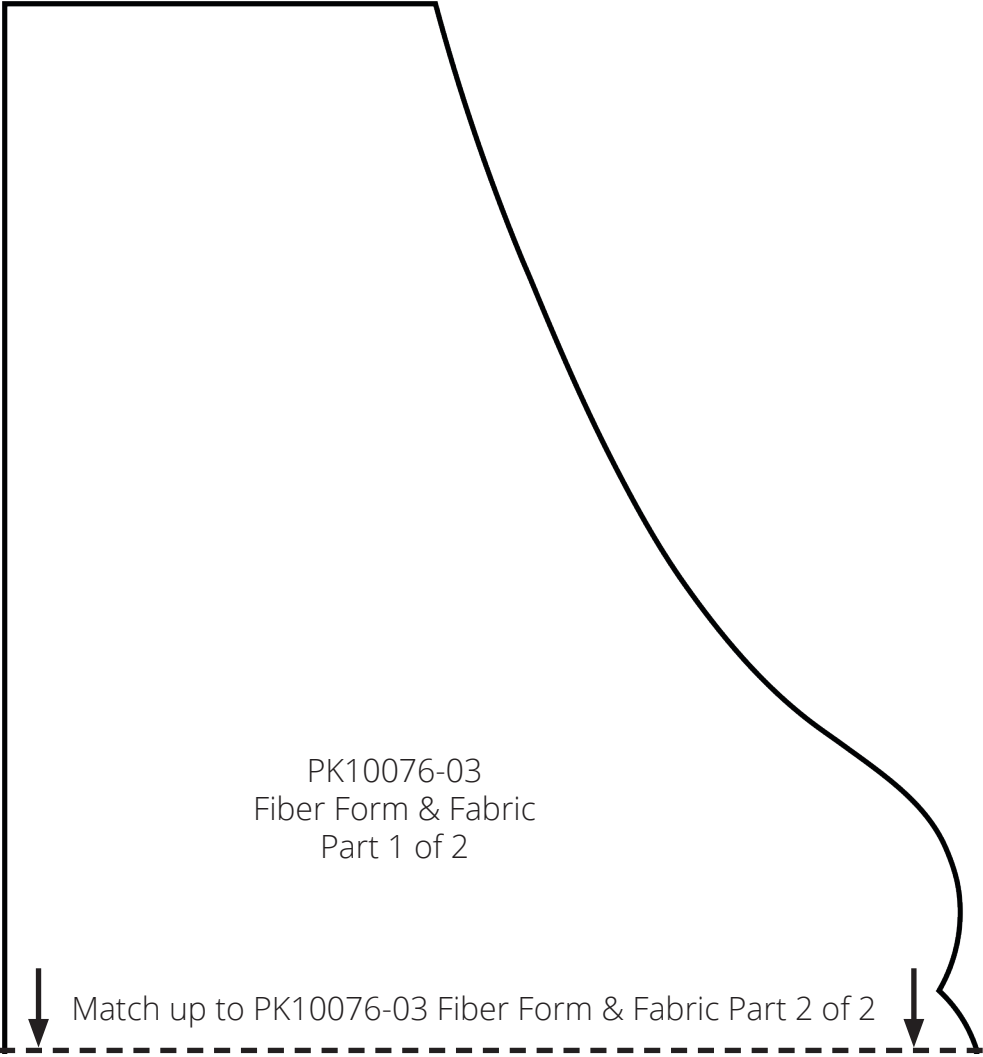


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

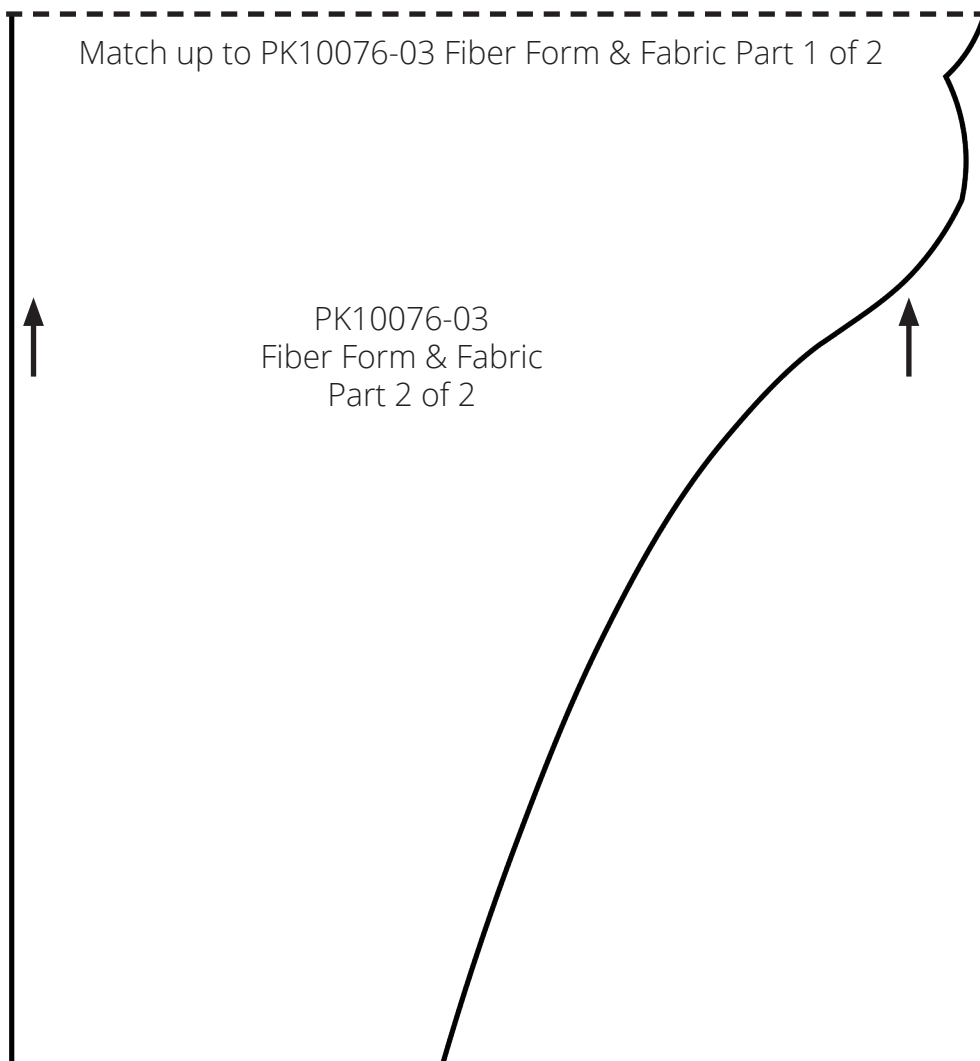

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

# APPLIQUE PATTERNS

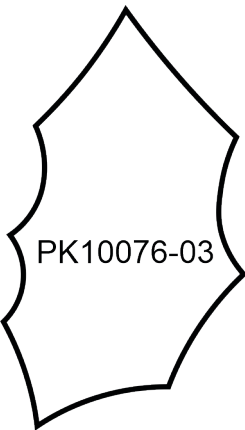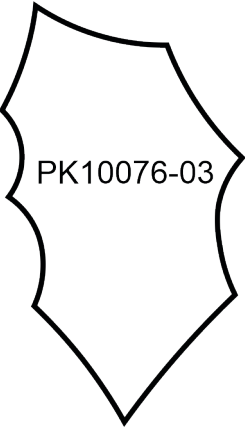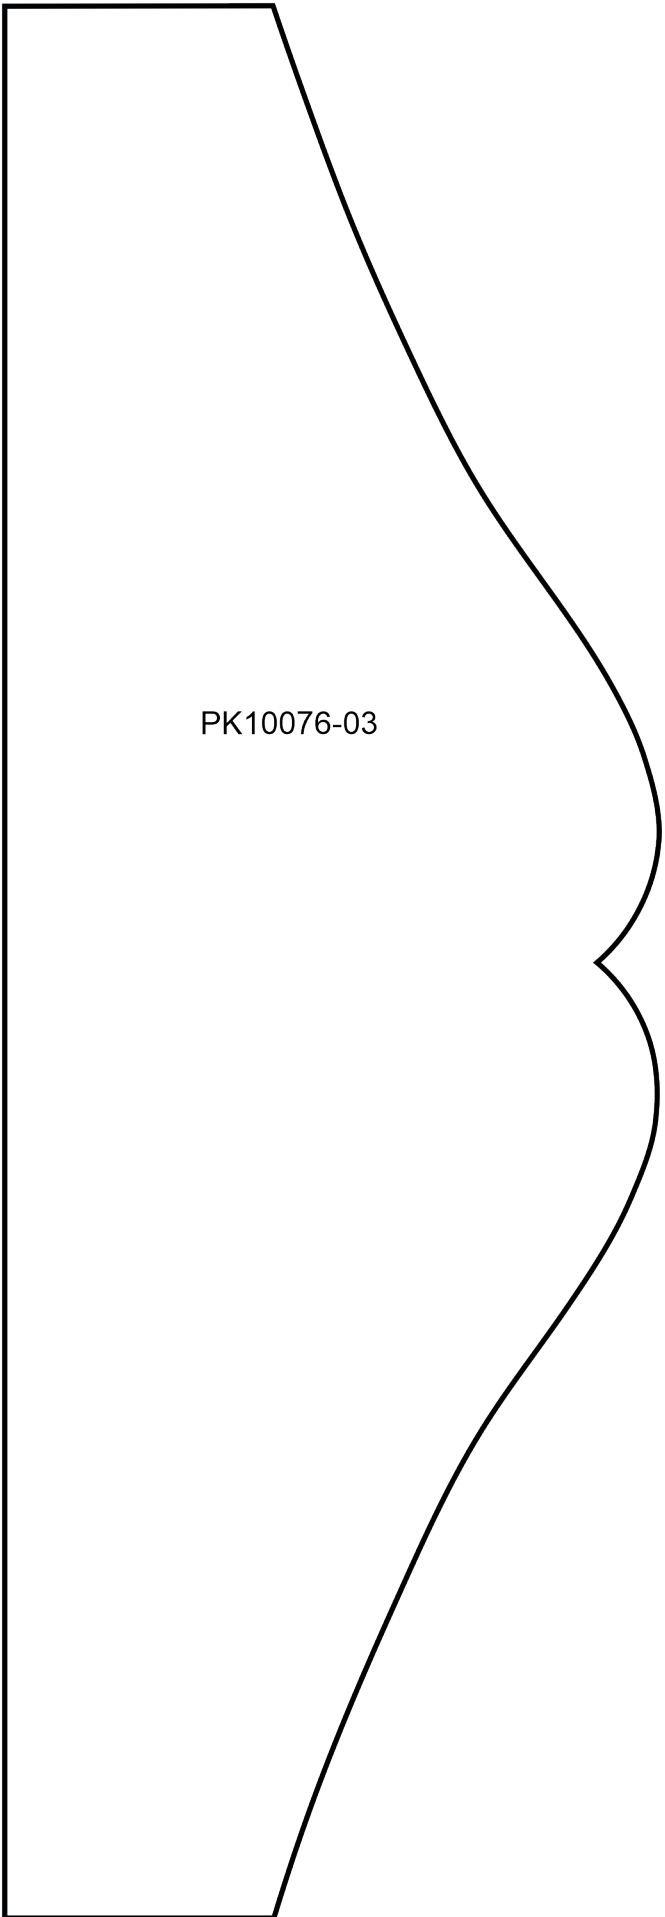

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

# MIRRORED PATTERNS

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10076-01  
Fiber Form & Fabric  
Mirrored  
Part 1 of 2


Match up to PK10076-01 Fiber Form & Fabric Mirrored Part 2 of 2



# MIRRORED PATTERNS




Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

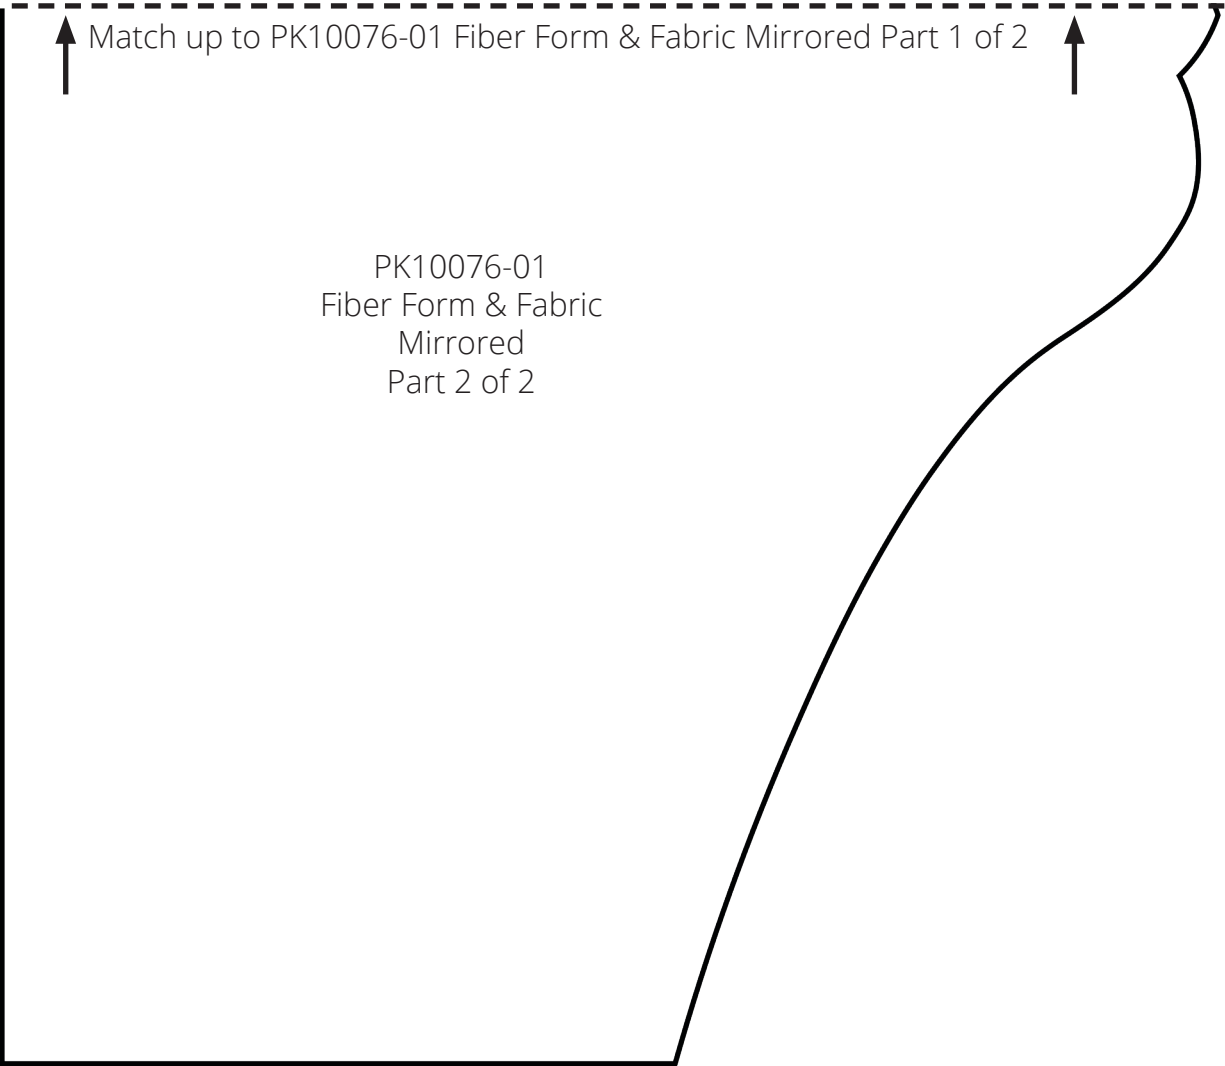


Match up to PK10076-01 Fiber Form & Fabric Mirrored Part 1 of 2

PK10076-01  
Fiber Form & Fabric  
Mirrored  
Part 2 of 2

# MIRRORED PATTERNS

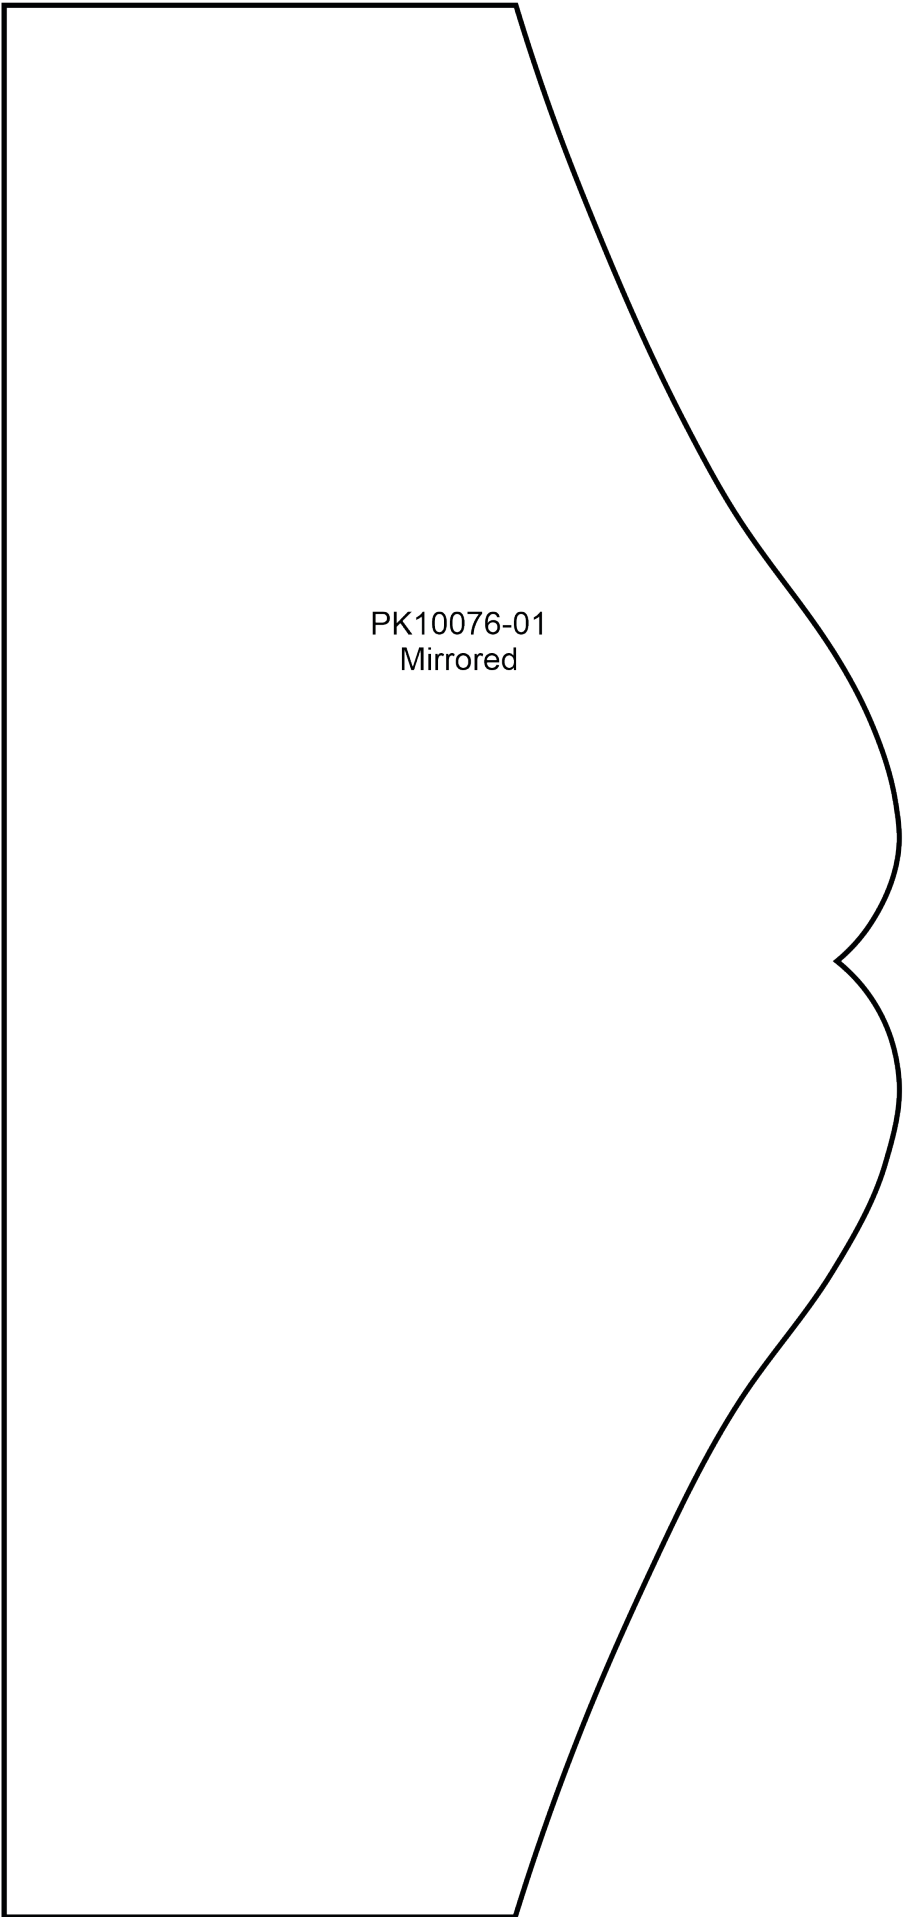


PK10076-01  
Mirrored

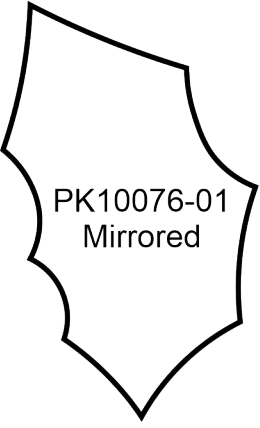



PK10076-01  
Mirrored

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

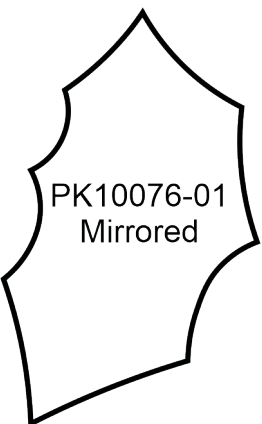


PK10076-01  
Mirrored


# MIRRORED PATTERNS

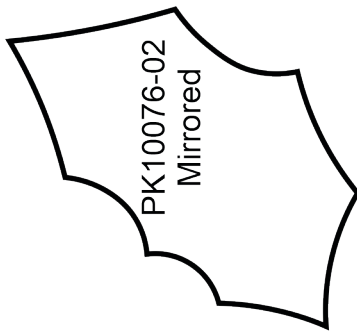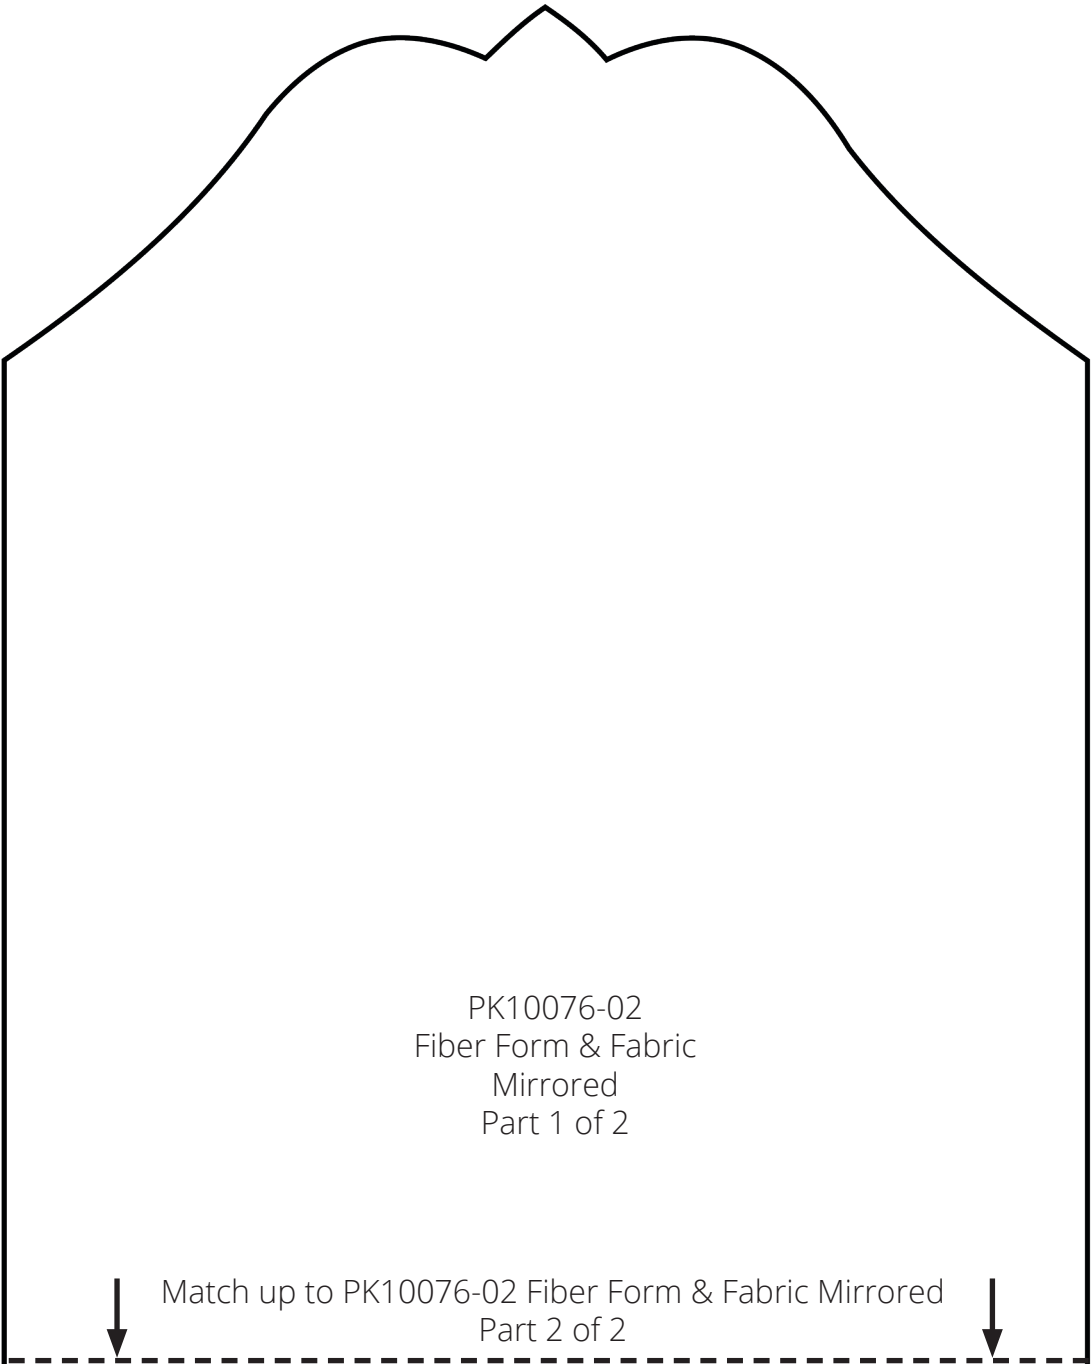


# MIRRORED PATTERNS

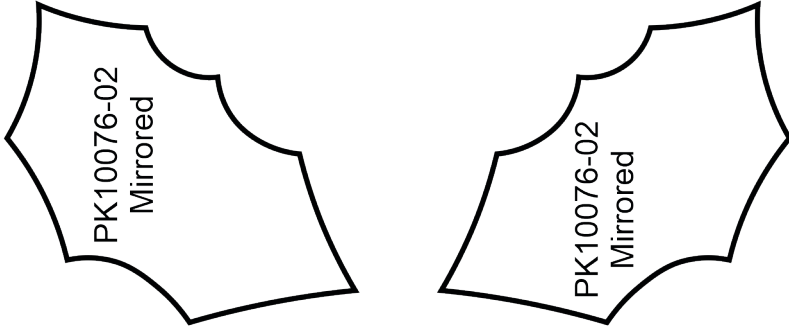

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

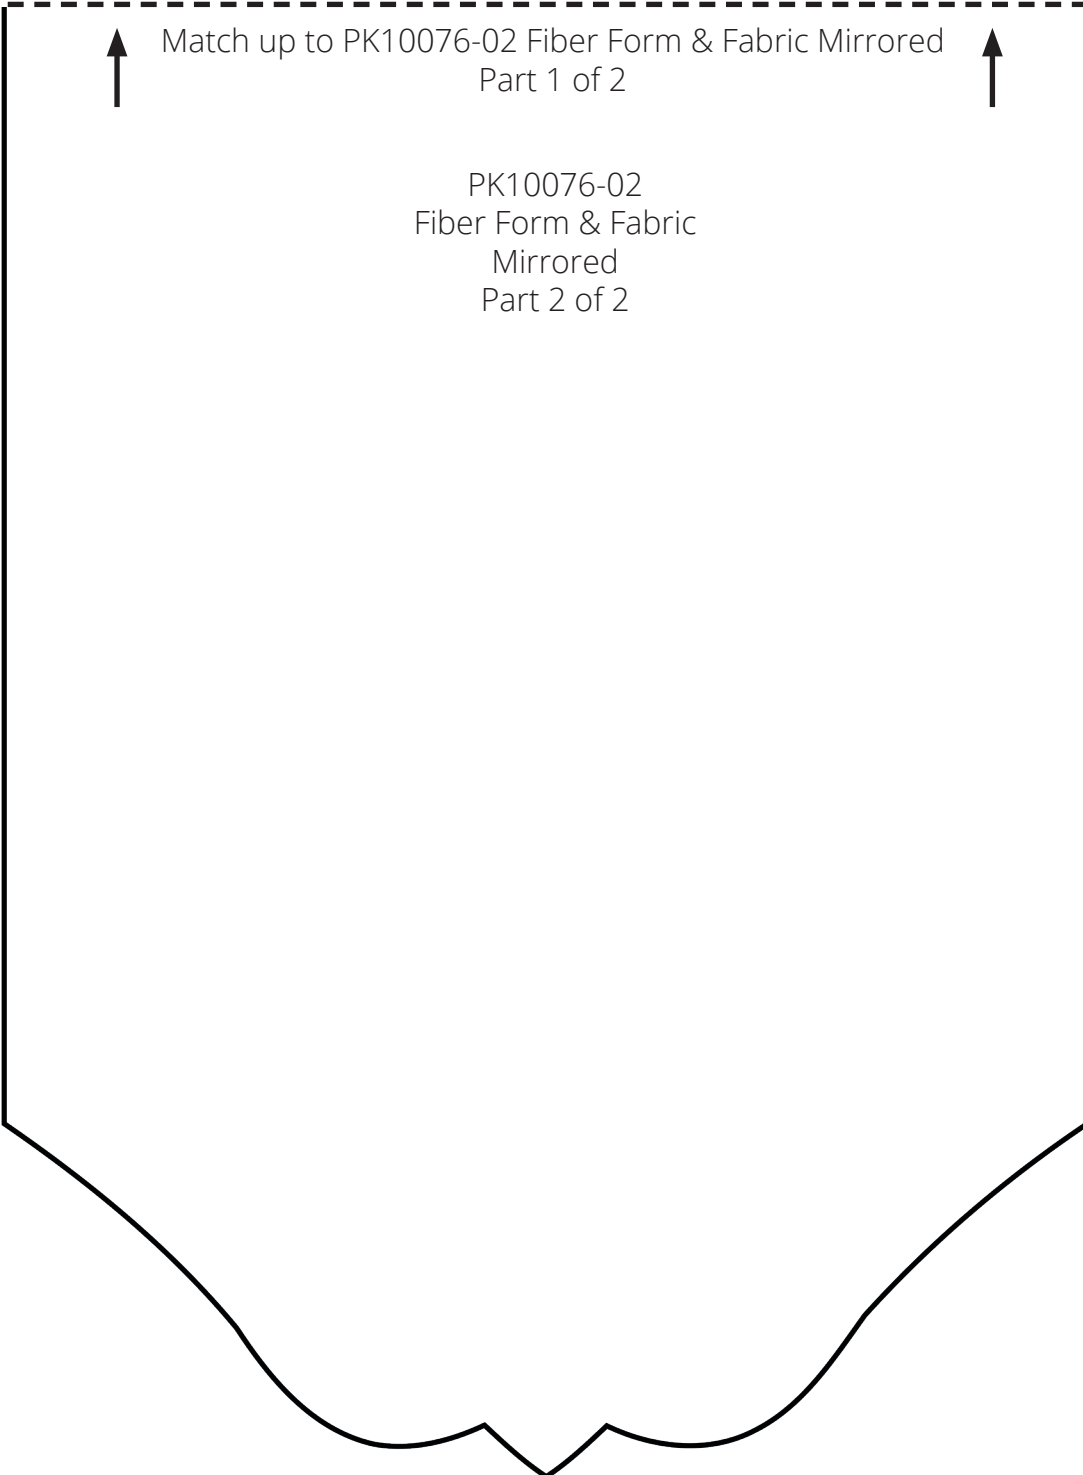


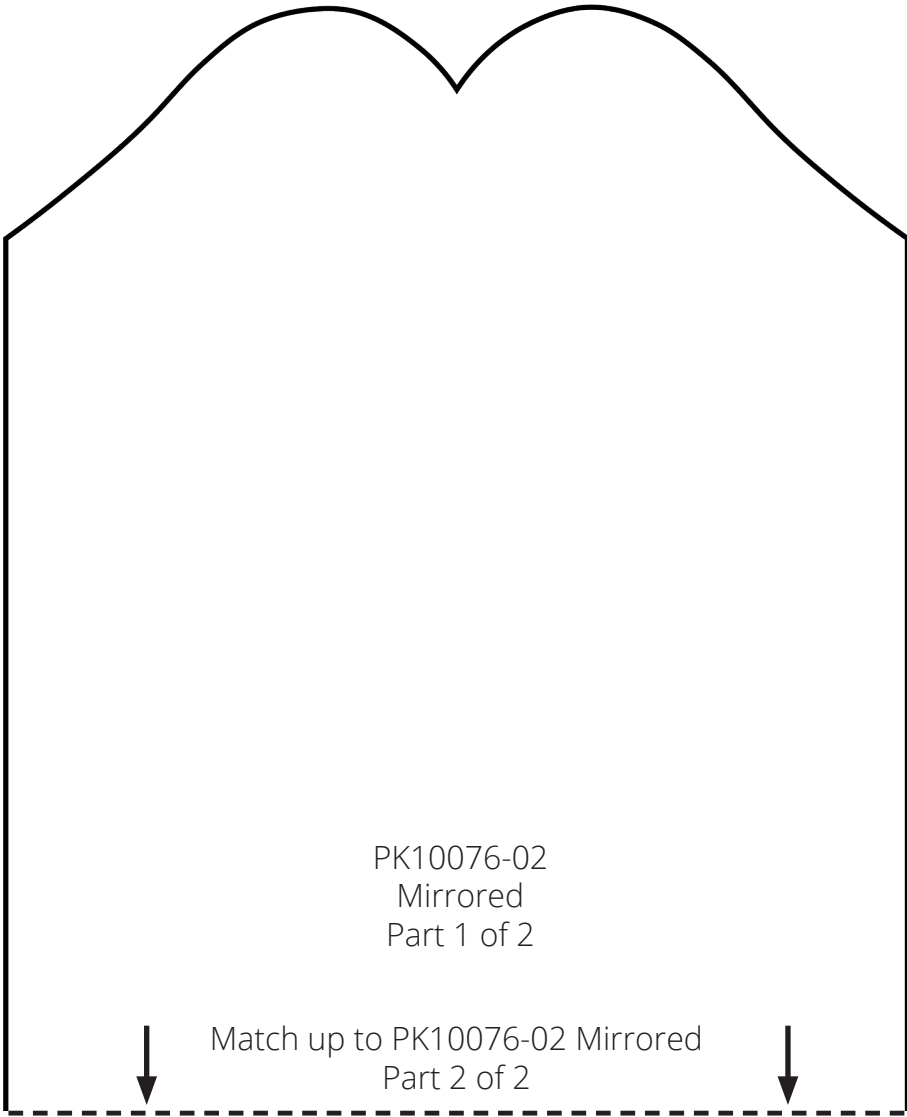


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



# MIRRORED PATTERNS

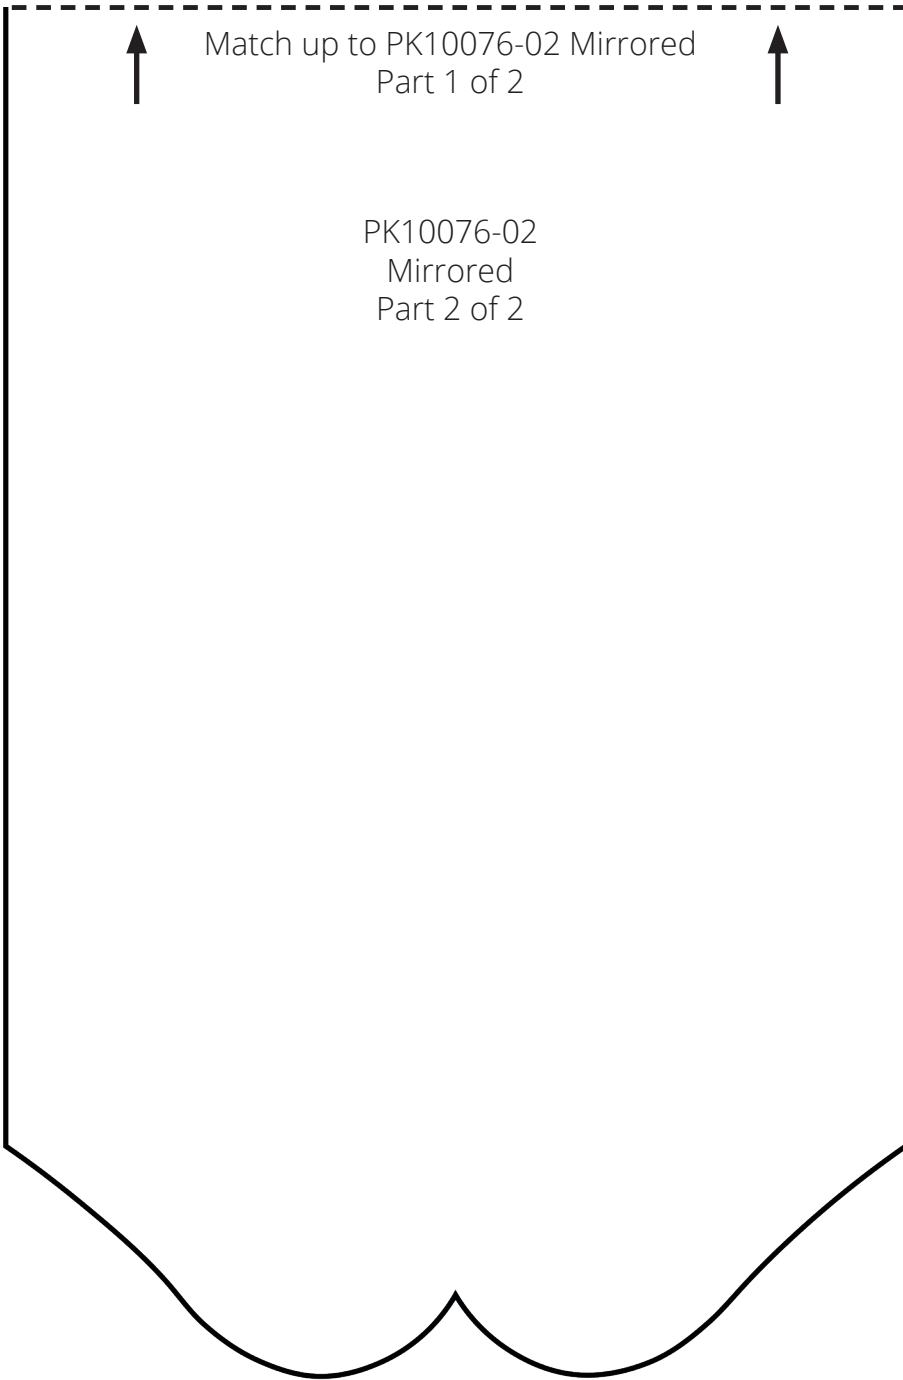


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

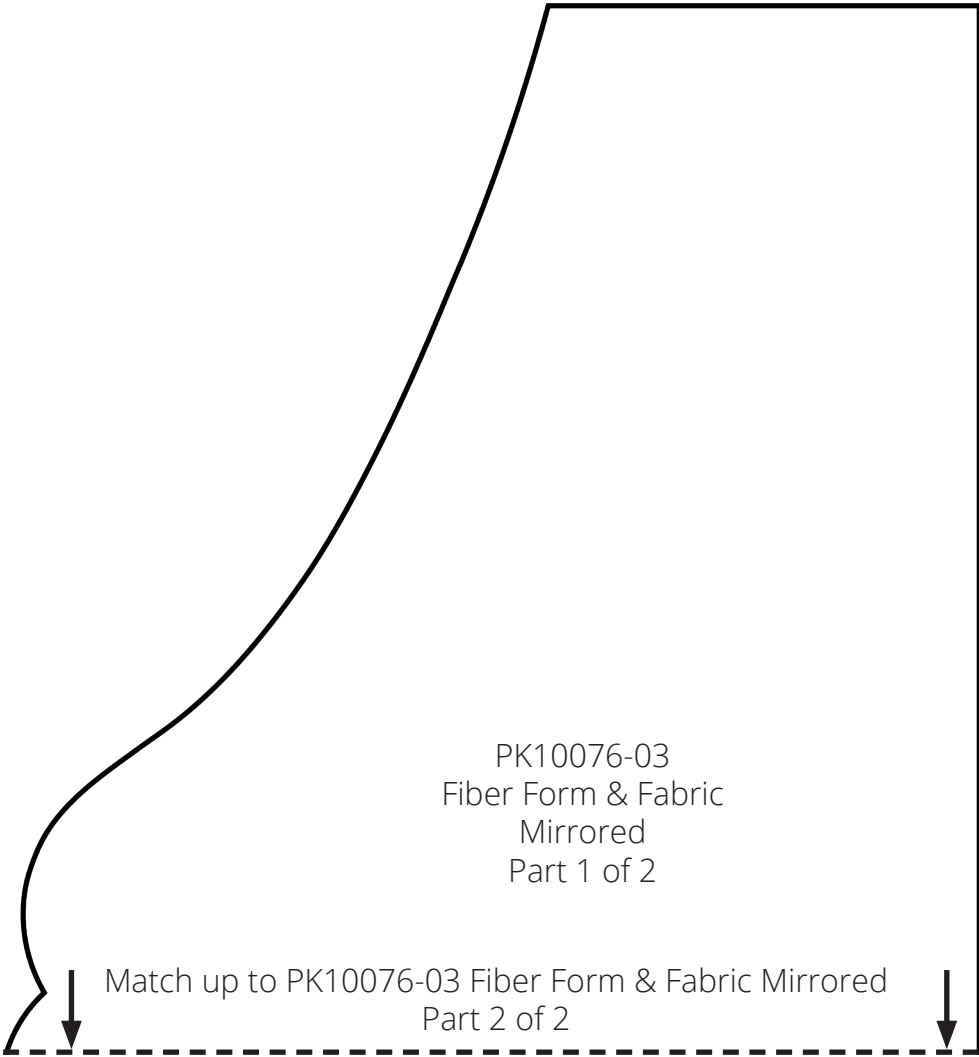


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

# MIRRORED PATTERNS

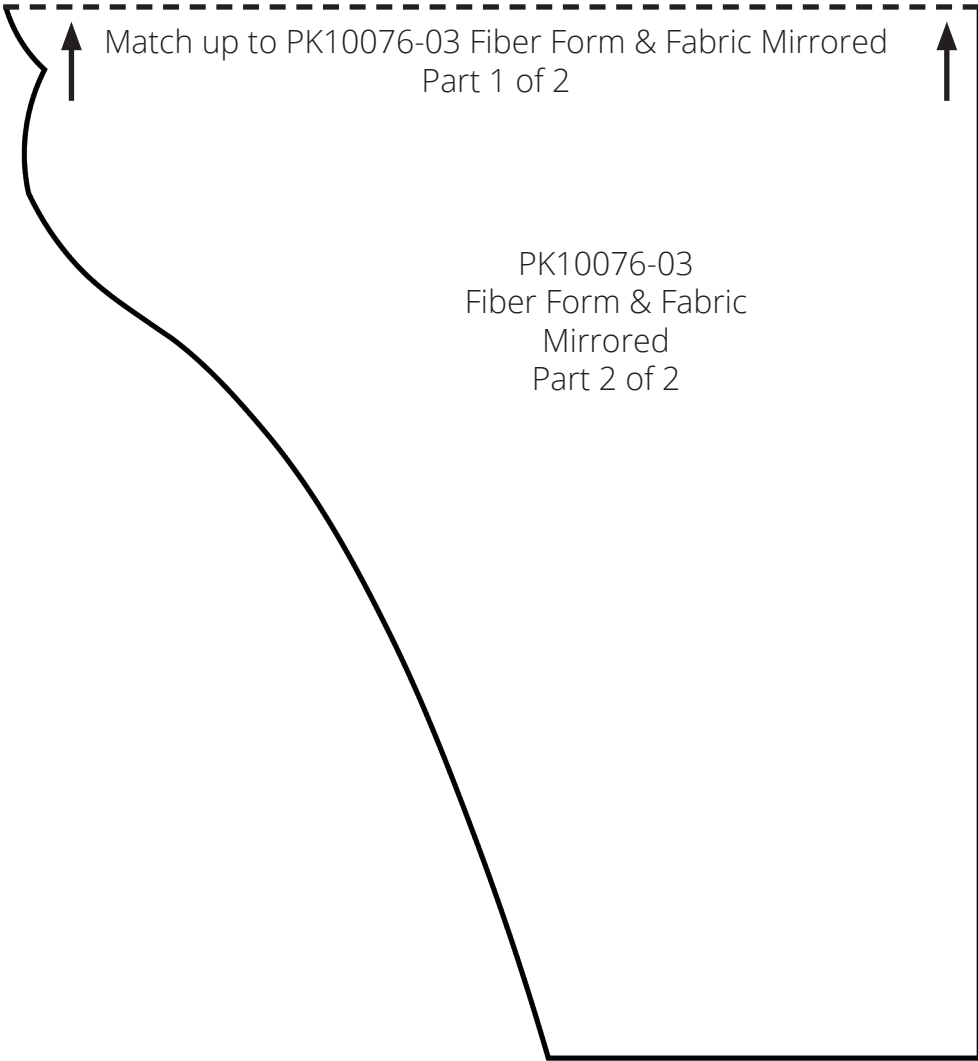

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

# MIRRORED PATTERNS

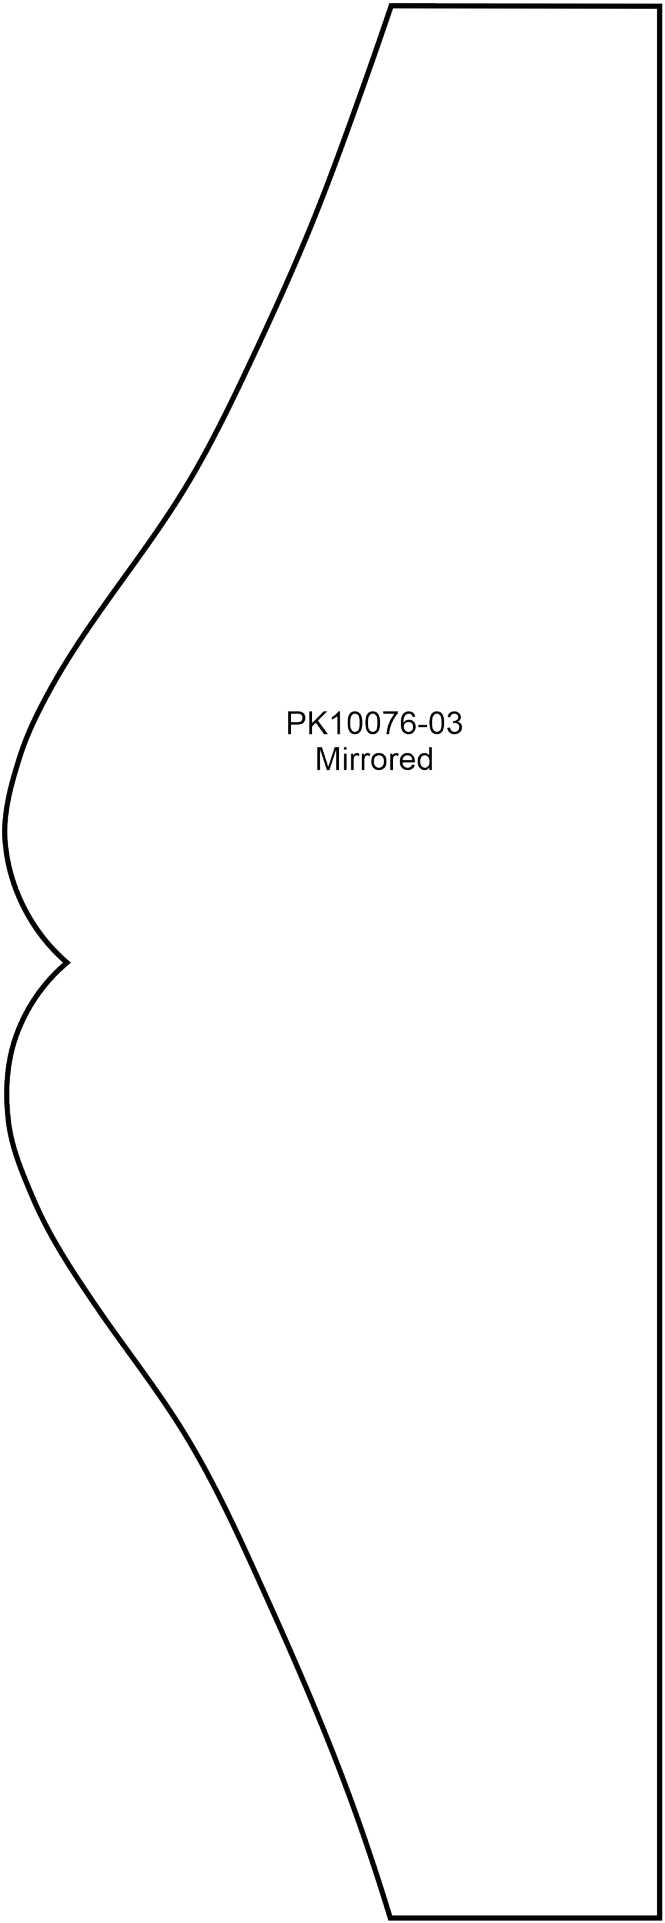


PK10076-03  
Mirrored



PK10076-03  
Mirrored

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

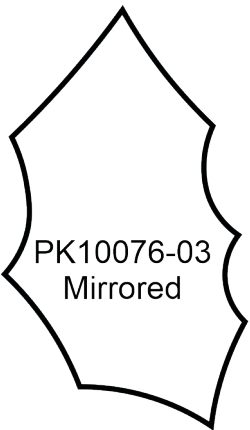

PK10076-03  
Mirrored