

Christmas Tree Cutwork



Collection No. PK10080
4 Designs

MATERIALS



Isacord Thread Colors

0010 Silky White
5531 Pear

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESESD AquaMesh Plus WashAway

Fabrics/Textiles

Suggested Materials:

- Start Here by OESESD Tea Towel Grey
- Napkins

Notion & Tools

- OESESD Grippy GRID
- OESESD Perfect Scoring Tool
- OESESD Expert Embroidery Tape WashAway
- OESESD Perfect Embroidery Press Cloth
- Embroidery Needle Ballpoint 80/12

Isacord Thread Colors

- Per the thread chart
- Match bobbin thread to top thread



SUMMARY

PK10080-01



Requires 1 Design

PK10080-02



Requires 1 Design

PK10080-03



Requires 1 Design

PK10080-04



Requires 1 Design



General Instructions

The cutwork instructions included in the collection are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown.


Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

Example uses 12965-01



Step 1

- Hoop one layer of AquaMesh Plus with the paper (shiny) side up.
- Use the OESD Perfect Scoring Tool to score the paper.
- Remove the paper to reveal the adhesive surface.

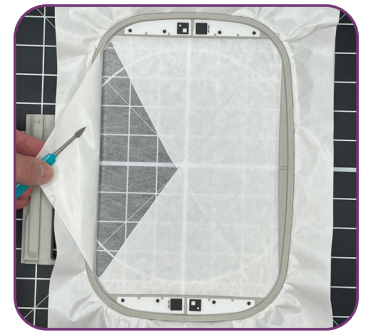

Step 2


- Fold the towel in half lengthwise, right sides together.
- Position the towel on the hooped stabilizer with the vertical fold aligned with the vertical center markings on the hoop.
- Finger press to secure.
- Unfold the towel.
- Finger press to secure.

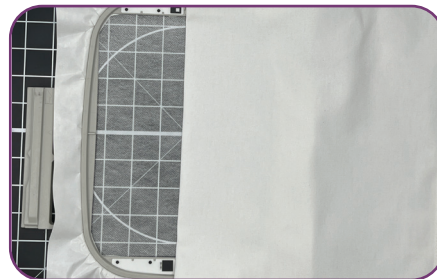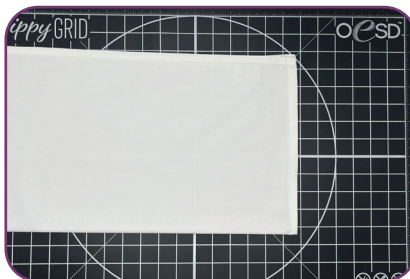

EMBROIDERY

Step 3

- Load selected design into the machine.
- Example design is 12965-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Cut Line.

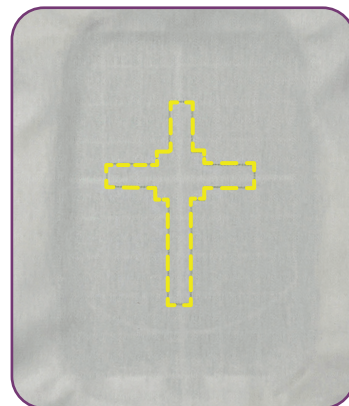


Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Carefully trim the fabric inside the Cut Line stitching.
Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use Expert Embroidery Tape WashAway as a patch.



Step 5

- Return the hoop to the machine.
- Stitch the remaining machine steps, per the thread chart.
- Match the bobbin thread to the upper thread.

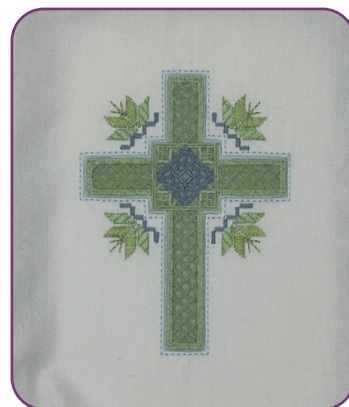

EMBROIDERY

□ Step 6

- When the design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.
- Rinse in warm running water to remove the remaining AquaMesh Plus.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on a Perfect Embroidery Press Cloth.



□ Step 7

- The project is complete. Enjoy!



General Instructions

The instructions included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

Example uses PK10017-02.

Step 8

- Hoop one layer of AquaMesh Plus with the paper (shiny) side up.
- Score and remove paper to reveal the adhesive surface.



Step 9

- Stitch Machine Step 1, Corner Placement Stitch.



□ Step 10

- Place the napkin so the edges of one corner align with the placement line.



□ Step 11

- Stitch Machine Step 2, Cut Line and Tackdown.



□ Step 12

- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the napkin in place.

IMPORTANT: Be sure to trim on the side that will cut away the corner and leave the body intact.

Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use Expert Embroidery Tape WashAway as a patch.



Step 13

- Stitch the remaining machine steps, per thread chart.
- Match the bobbin thread to the upper thread.



Step 14

- When the design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.




Step 15

- Rinse in warm running water to remove the remaining AquaMesh Plus.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on a Perfect Embroidery Press Cloth.
- ENJOY!




CUTTING GUIDES

PK10080-01

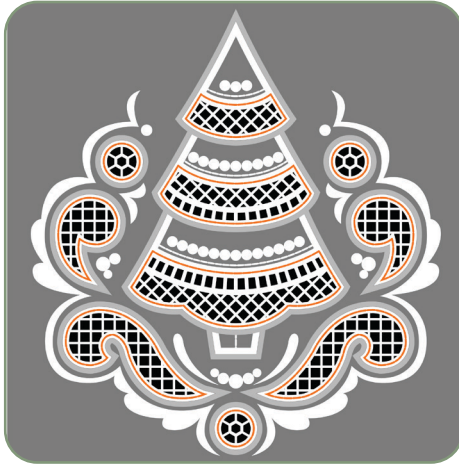

PK10080-02

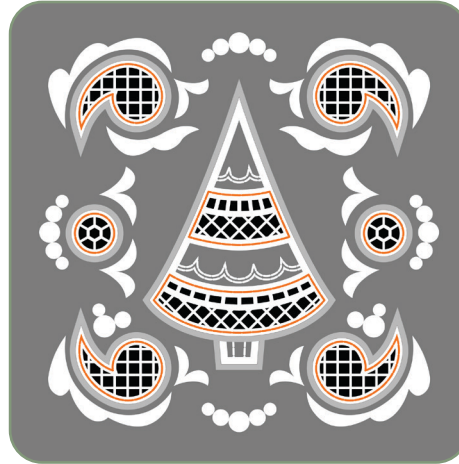

PK10080-03



PK10080-04



CUT OUT