

# MATERIALS



#### **Isacord Thread Colors**

0010 Silky White

0442 Tarnished Gold

0542 Ochre

3840 Oxford

3901 Tropical Blue

4423 Marine Aqua

5832 Celery

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

# MATERIALS



#### **Stabilizers**

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway
- OESD Fiber Form
- OESD Applique Fuse and Fix

#### Fabrics/Textiles

- Navy Quilter's Cotton
  - (2) 9" x 9" PK10091-01
  - (2) 8" x 8" PK10091-02

#### **Notion & Tools**

- OESD Grippy GRID
- OESD Perfect Scoring Tool
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Punch Tool
- OESD Mini MAT
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Sharp 75/11
- (4) Size 20 (T5) plastic snaps


#### Isacord Thread Colors

Per the thread chart

# SUMMARY



#### PK10091-01

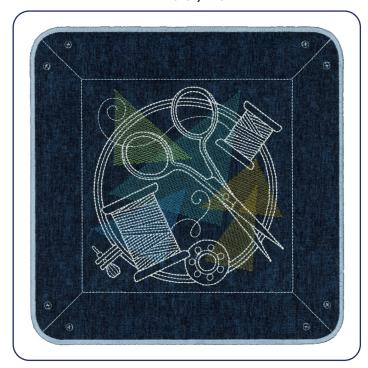

7"x 7"x 1.25" Requires 1 Design

#### PK10091-02



6" x 6"x 1.25" Requires 1 Design



#### **General Instructions**

The instructions included in the collection are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same. Design PK10063-01 from Enchanted Trinket Trays is shown here.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

### Step 1

- Print the mirrored version of the patterns (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately 1/4" 1/2" outside the printed applique patterns.



### Step 2

- Cut the Fiber Form 1/4"-1/2" larger than the applique patterns.
- Fuse the trimmed pattern to the back of the Fiber Form with the paper side of the printed pattern up. Hold the iron on the pattern for 10-15 seconds for a secure fuse.





#### Step 3

- Trim the Fiber Form on the edge of the black outline.
  Note: Fiber form is only used in base of project.
- · Set aside.



#### Step 4

 Adhere one layer of StabilStick CutAway to the wrong side of all fabrics to provide stiffness to the finished tray.

Note: StabilStick CutAway is sufficient reinforcement for sides of project. No fiber form is required in these pieces.



### Step 5

 Hoop one layer of AquaMesh and one layer of BadgeMaster.





#### Step 6

- Load selected design into the machine.
- Example design is PK10063-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Fiber Form Placement Stitch.



### Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- On the back of the Fiber Form, use the OESD Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- Place the Fiber Form within the placement stitching.
- Finger press to secure.








## Step 8

- · Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



### Step 9

Stitch Machine Step 3, Front Fabric Placement Stitch.

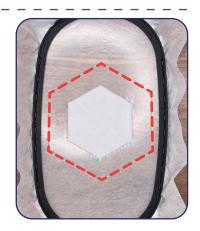

### Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared fabric.
- Tape in place to secure.





## Step 11

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.



#### Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



## Step 13

- Return the hoop to the machine.
- · Stitch Machine Step 5, Tray Detail.
- Stitch Machine Step 6, Tray Detail.





## Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the prepared fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



### Step 15

- Return the hoop to the machine.
- Match the bobbin thread to the top thread.
- Stitch Machine Step 7, Back Fabric Cut Line and Tackdown.



### Step 16

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and trim the excess fabric as close to the cut line as possible.





## Step 17

- Return the hoop to the machine.
- Stitch remaining machine steps, changing threads per the thread chart.



## Step 18

When the design is complete, remove the project from the hoop and trim the stabilizer 1/4" - 1/2" outside the design.



## **ASSEMBLY**



#### Step 19

- Rinse the tray in warm running water until the design is only slightly tacky. To prevent curling, place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on a Perfect Embroidery Press Cloth.



#### Step 20

Press the sides into the center along the center fold lines using steam.
 While the tray is warm, pinch the side fold lines to give shape to the tray.





# **ASSEMBLY**



## Step 21

- Use OESD MiniMAT and Punch Tool with the 2mm attachment to create the eyelets indicated in the diagram.
- Reference Punch Tool Guide on page 15.





## Step 22

 Attach plastic snaps according to the manufacturer's instructions in the eyelet holes.





# **ASSEMBLY**



Step 23

Close the snaps to form the tray.



Step 24


The project is complete. Enjoy!



## PUNCH TOOL GUIDES O



#### PK10091-01

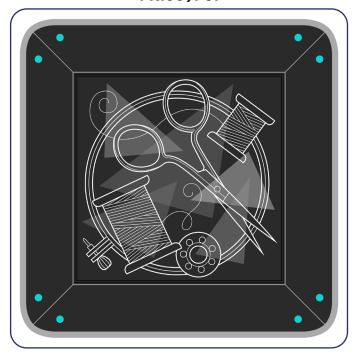

#### PK10091-02








= 4 MM

**CRAFT KNIFE** 




#### ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

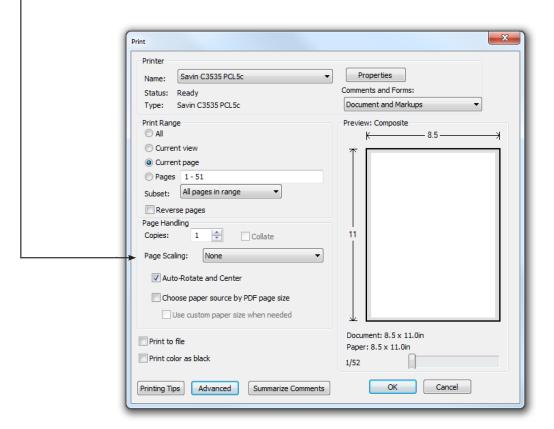

#### **TO SAVE PAPER**

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

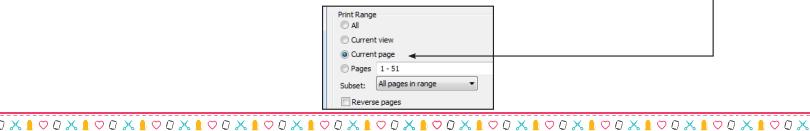




Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.


PK10091-01 Fiber Form



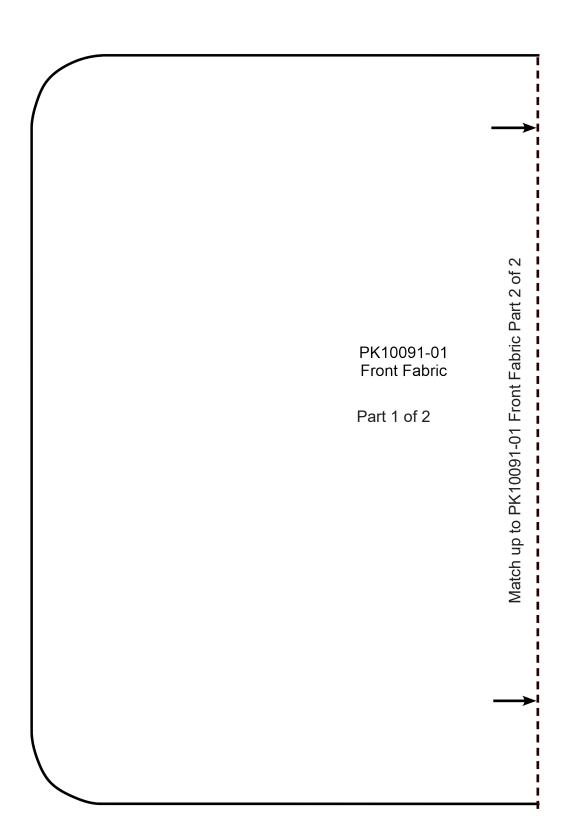


Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



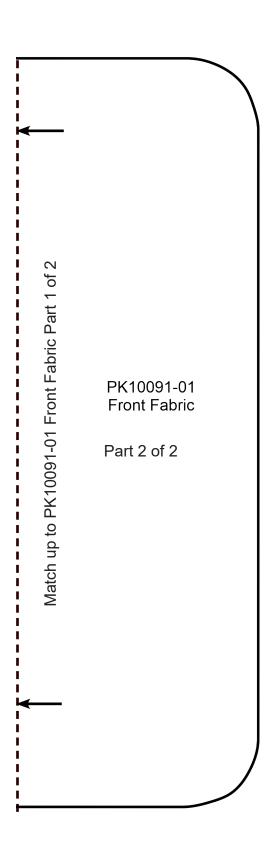


Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.



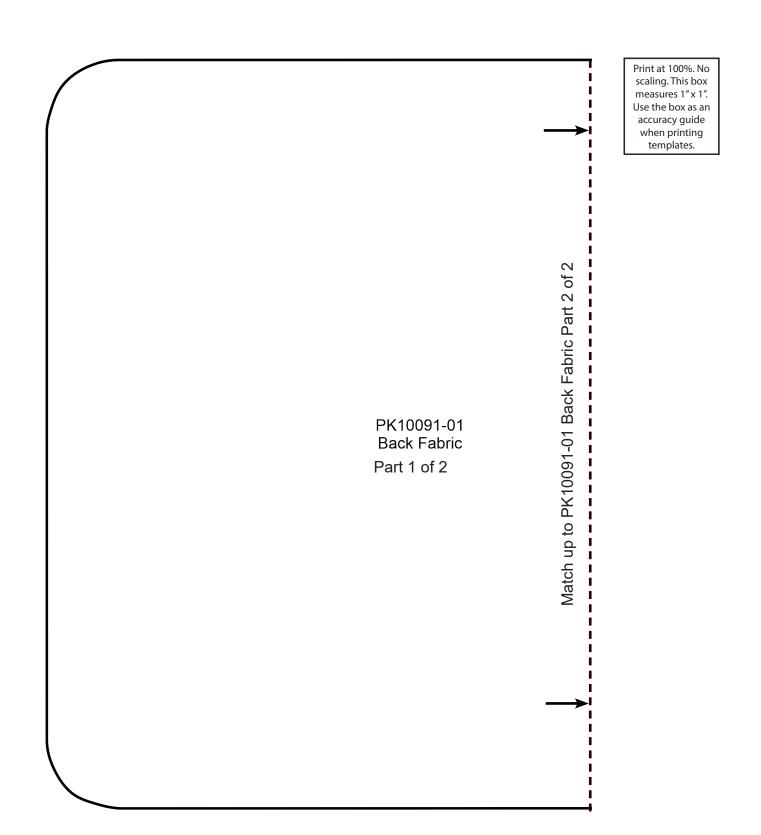



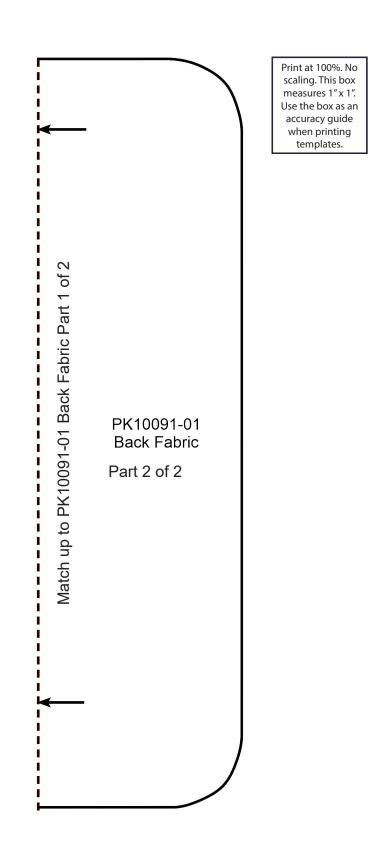



PK10091-02 Fiber Form



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

	PK10091-02	
	Front Fabric	



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

PK10091-02 Back Fabric






PK10091-01 Fiber Form Mirrored	


# MIRRORED PATTERNS O SD PACKS



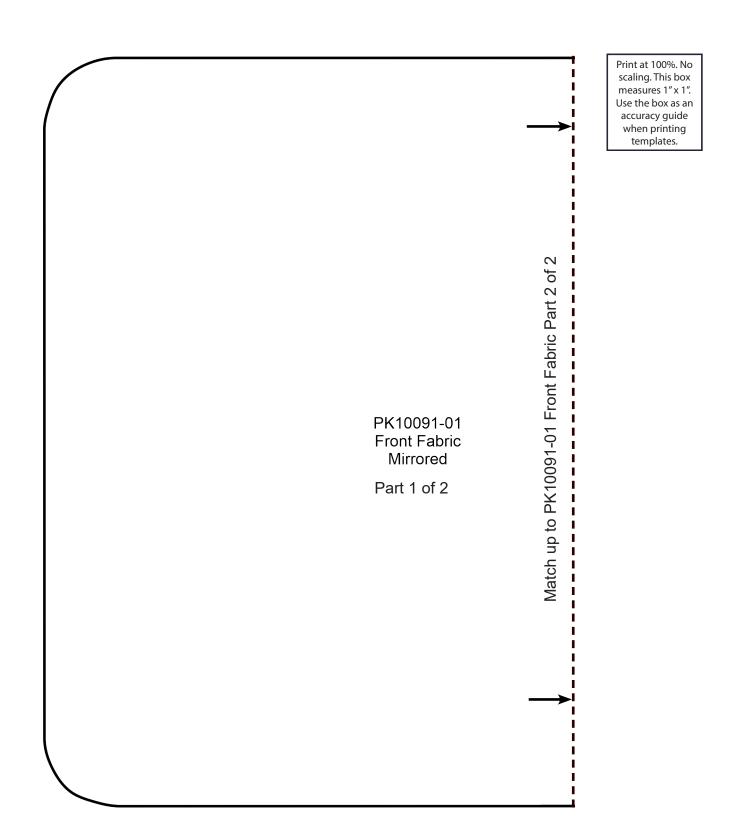

# MIRRORED PATTERNS O SD DESIGN PACKS




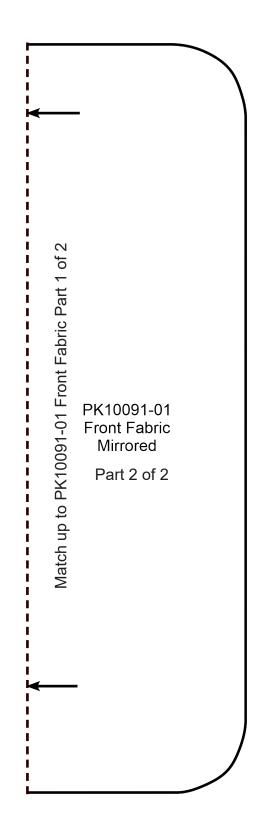

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.


# MIRRORED PATTERNS O SD PACKS



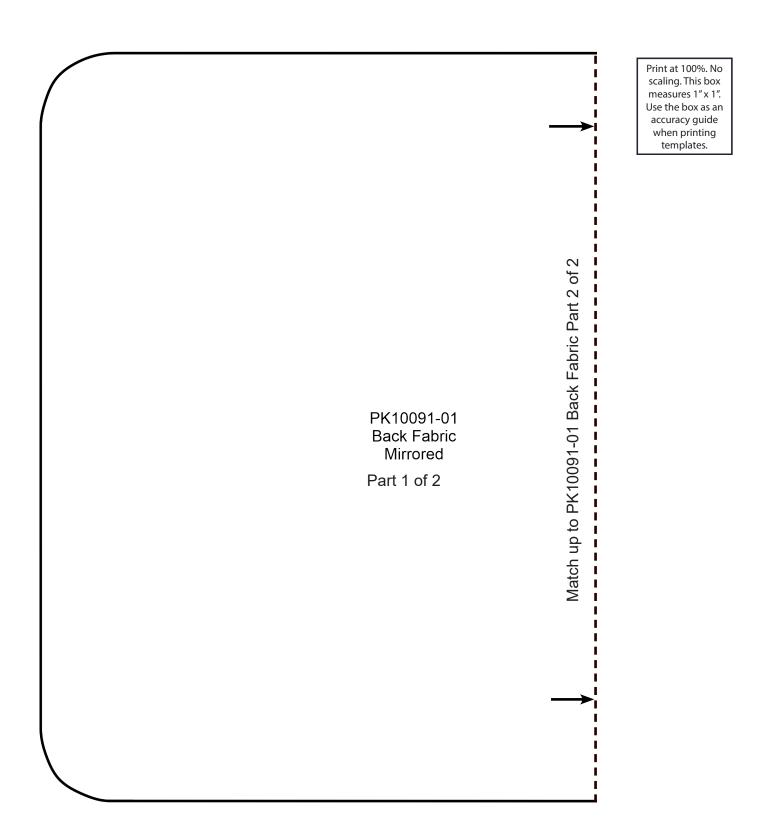

# MIRRORED PATTERNS O SD PACKS



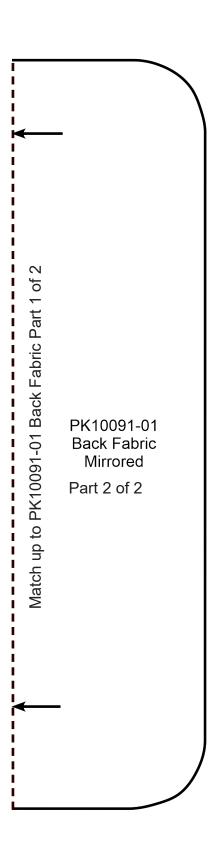

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.





PK10091-02 Fiber Form Mirrored



PK10091-02 Front Fabric Mirrored



PK10091-02 Back Fabric Mirrored