



# MATERIALS



#### **Isacord Thread Colors**

0643 Barewood

1800 Wildfire

2155 Pink Tulip

3274 Battleship Gray

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

# MATERIALS



#### **Stabilizers**

- OESD AquaMesh Plus WashAway
- OESD Applique Fuse and Fix

#### Fabrics/Textiles

- · OESD Luxe Sparkle Vinyl, Red
- OESD Luxe Sparkle Vinyl, Steel Gray
- · OESD Luxe Sparkle Vinyl, Gold
- OESD Luxe Sparkle Vinyl, Pink

#### **Notion & Tools**

- OESD Grippy Grid
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- Embroidery Needle Ballpoint 80/12
- Sweatshirt or garment

#### **Isacord Thread Colors**

Per the thread chart

# SUMMARY



PK10094-01



PK10094-03



PK10094-02



PK10094-04





#### General Instructions

The applique instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design PK10094-02 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

All designs are stitched with matching thread, top and bobbin.

NOTE: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

#### Step 1

- Print the mirrored version of the templates (at 100% scale or 1:1 ratio) onto the paper side of Applique Fuse and Fix.
- Cut approximately 1/4" 1/2" outside the printed applique templates.





- Cut the OESD Sparkle Vinyl 1/4" 1/2" larger than the applique templates.
- Fuse the trimmed templates to the **back** of the Sparkle Vinyl with the paper side of the printed templates up. Hold the iron on the template for 10–15 seconds for a secure fuse.






- Trim the Sparkle Vinyl on the outer edges of the black outline.
- Set aside.






- Using the OESD Grippy Grid, hoop one layer of Aquamesh Plus paper (shiny) side up for all designs.
- Use the OESD Perfect Scoring Tool to score the paper.
- · Remove the paper to reveal the adhesive surface.



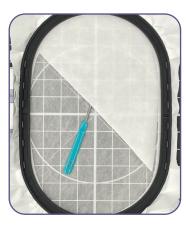


- · Load the selected design into the machine.
- Example design is PK10094-02.
- Thread the machine per the thread chart.
- · Place the hoop on the machine.
- · Stitch Machine Step 1, Garment Placement Guide.

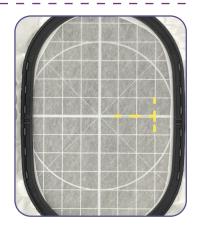



- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- · Align the side seam of the garment with the horizontal placement line.
- Align the hem of the garment with the vertical placement line.
- Finger press to secure.
- Use OESD Expert Embroidery Tape WashAway to tape down the hem. This
  allows the presser foot to glide over the hem easier.
   Tip: The Grippy Grid lines assist with centering the garment.

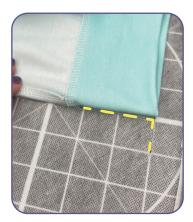



- Return the hoop to the machine.
- Stitch Machine Step 2, Seam Cut Line and Tackdown.





- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the garment as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Note: Be sure to trim on the side that will cut away just a small portion of garment and leave the body of the garment intact.

Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use Embroidery Tape WashAway as a patch.



- Return the hoop to the machine.
- Stitch Machine Step 3, Vinyl Placement Stitch.





- Remove the hoop from the machine, but NOT the project from the hoop.
- · Place the hoop on a flat surface.
- On the back of the Sparkle Vinyl, use the Perfect Scoring Tool to score and remove the paper backing to reveal the adhesive surface.
- · Place the Sparkle Vinyl within the placement stitching.
- Finger press to secure.
  - Tip: Applique Fuse and Fix is repositionable.





- · Return the hoop to the machine.
- · Stitch Machine Step 4, Cutline and Tackdown.





Stitch Machine Step 5, Cover Stitch and Detail.



- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.



# **ASSEMBLY**



#### Step 14

- Rinse in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry.
   Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



#### Step 15


• The project is complete. Enjoy!






#### **ATTENTION**

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

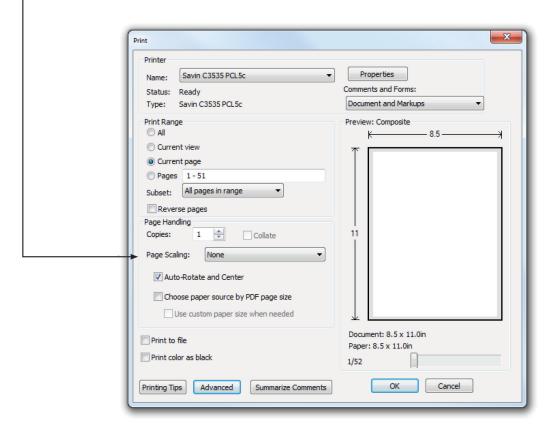


#### **TO SAVE PAPER**

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.




## APPLIQUE PATTERNS



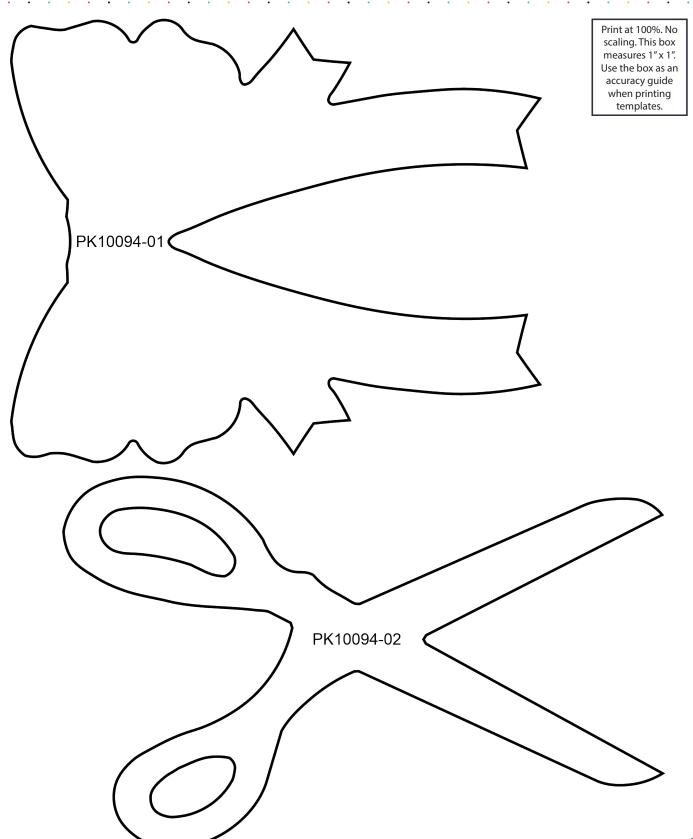


## APPLIQUE PATTERNS



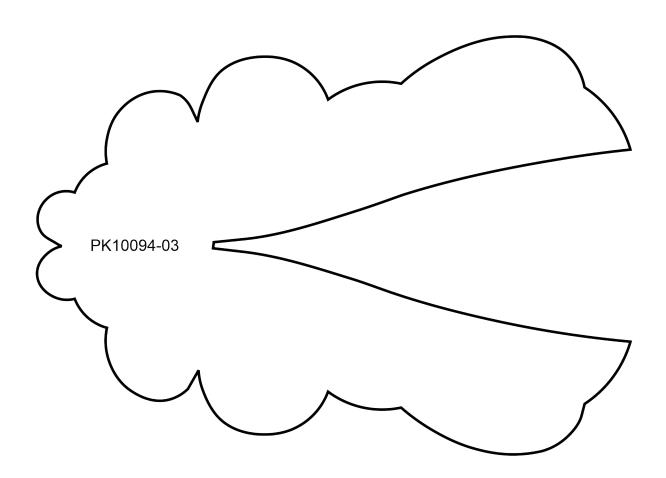


## APPLIQUE PATTERNS



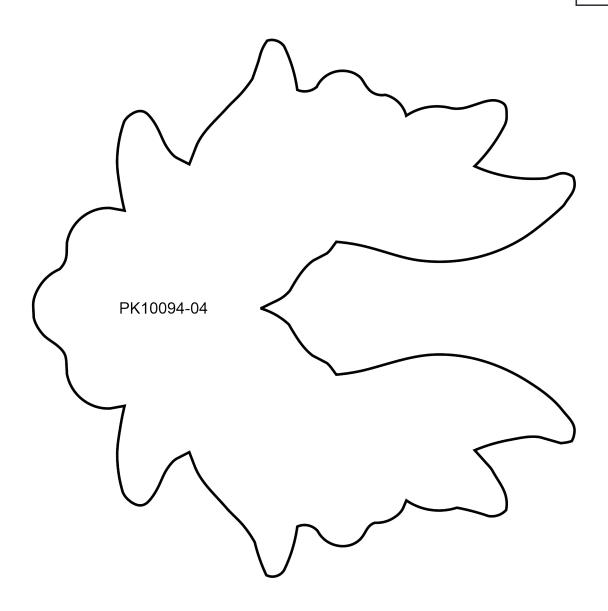


# MIRRORED PATTERNS O



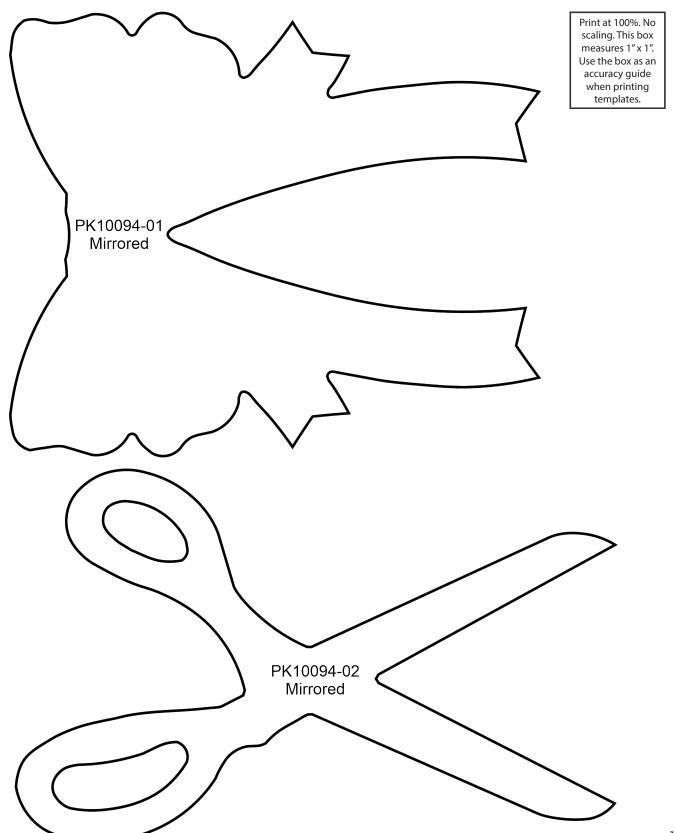

# MIRRORED PATTERNS C



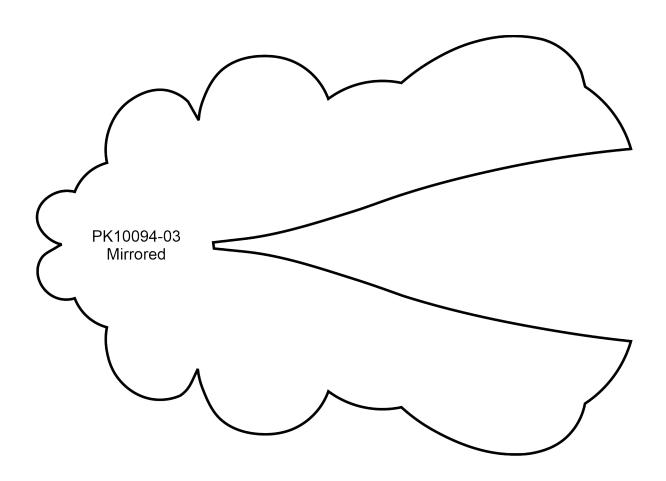

## MIRRORED PATTERNS



