

Tapestry Cord Keepers



Collection No. PK10097
3 Designs/3 Files

MATERIALS



Isacord Thread Colors

- 0010 Silky White
- 0822 Palomino
- 2250 Petal Pink
- 2508 Hot Pink
- 2530 Rose
- 2640 Frosted Plum
- 2655 Aura
- 2912 Sugar Plum
- 4620 Jade

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.

Electronic designs are licensed to the original purchaser for use at one location. ©2025 OESD, LLC. All rights reserved.

MATERIALS



Stabilizers

- OESD Light Weight TearAway
- OESD Applique Fuse and Fix

Fabrics/Textiles

Cork or OESD Luxe Sparkle Vinyl

- PK10097-01 (2) 6" x 6"
- PK10097-02 (2) 6" x 5"
- PK10097-03 (2) 6 1/2" x 4 1/2"

Notion & Tools

- OESD Perfect Punch Tool with 2mm tip
- OESD Perfect Scoring Tool
- 2 Plastic snaps
- Craft knife

Isacord Thread Colors

- Per thread chart




SUMMARY


**oESD™ DESIGN
PACK**



PK10097-01

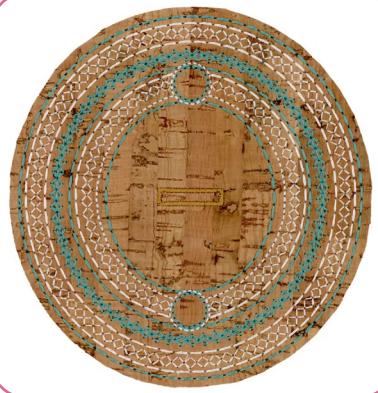

PK10097-02

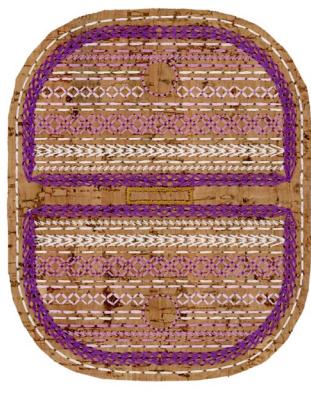

PK10097-03



General Instructions


The instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown.

Fabric and thread requirements will vary by design, but the general technique is the same. Design 12915-02 from Cord Keepers is shown.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.

Step 1

- Press the Applique Fuse and Fix to the wrong side of each piece of OESD Luxe Sparkle Vinyl.
- **Tip: Press with a medium iron for 10-15 seconds for a secure fuse.**
- Set aside.

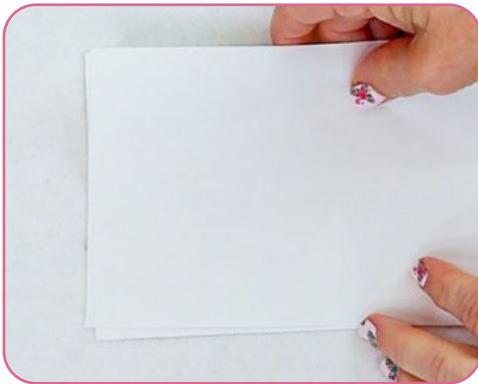


Step 2

- Hoop 1 layer of Light Weight TearAway.
- Load selected design into the machine.
- Example design is 12915-02.
- Thread the machine per the thread chart.
- Place hoop on the machine.



Step 3

- Stitch Machine Step 1, Front Vinyl Placement Stitch.
- Remove the hoop from the machine, but **NOT** the project from the hoop.
- Place the hoop on a flat surface.

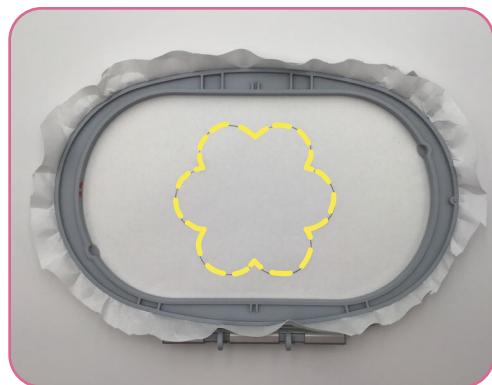

Step 4

- Using the OESD Perfect Scoring Tool, score the back of one prepared piece of Luxe Sparkle Vinyl and remove the paper.
- Place the prepared Luxe Sparkle Vinyl right side up, completely covering the placement stitch.
- Finger press to secure.
- Return the hoop to the machine.



Step 5

- Stitch machine steps 2-7 per the thread chart.



Step 6

- Stitch Machine Step 8, Back Vinyl Placement Stitch.



Step 7

- **STOP!**

- Remove the hoop from the machine, but **NOT** the project from the hoop.
- With the OESD Perfect Scoring Tool, score the back of the second prepared piece of Luxe Sparkle Vinyl and remove the paper.
- Turn the hoop over and position the Luxe Sparkle Vinyl, right side up, completely covering the placement stitch.
- Gently finger press. Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.
- Turn hoop right side up and set on a flat surface.
- Finger press on the design to firmly adhere the back to the stabilizer.
- Return the hoop to the machine.



Step 8

- Thread the machine per the thread chart.
- Stitch Machine Step 9, Tackdown Stitch.



BACK OF HOOP

Step 9

- Stitch Machine Step 10, Buttonhole.




ASSEMBLY

OESDTM DESIGN
PACK

Step 10

- Remove the hoop from the machine and the project from the hoop.
- With a sharp pair of scissors, trim just inside the outer tackdown stitch.

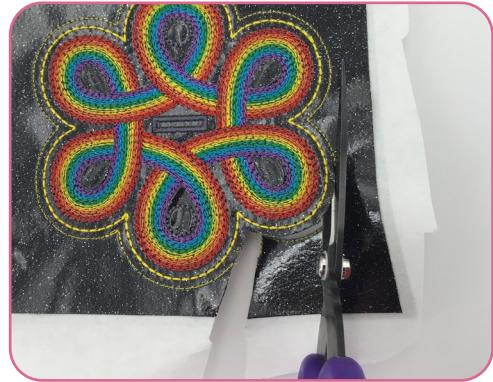

Step 11

- Use a craft knife to slice open the buttonhole.



Step 12

- Using the OESD Perfect Punch Tool fitted with the 2mm tip, punch out the eyelets in the center of each circle. **(See Punch Tool Guide on page 12.)**



ASSEMBLY

OESDTM DESIGN
PACK


Step 13

- Attach the snaps within the center of each circle, following manufacturer's instructions.



Step 13


- Thread the phone cord through the buttonhole, wrap the cord keeper around the cord and snap together.
- The project is complete. Enjoy!

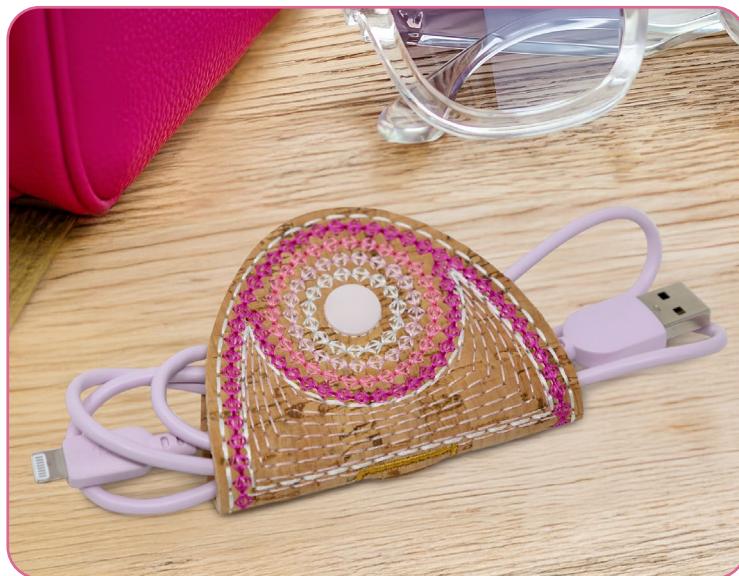


PUNCH TOOL GUIDES

OESDTM DESIGN
PACK


PK10097-01

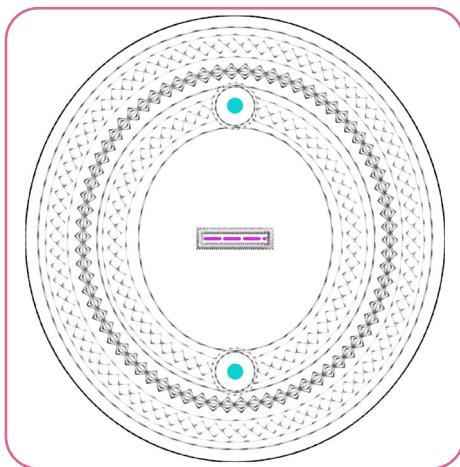

PK10097-02

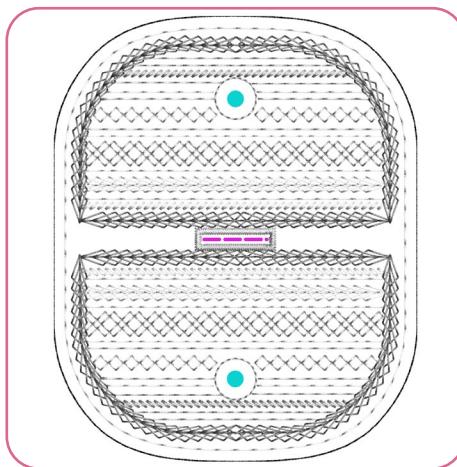

PK10097-03

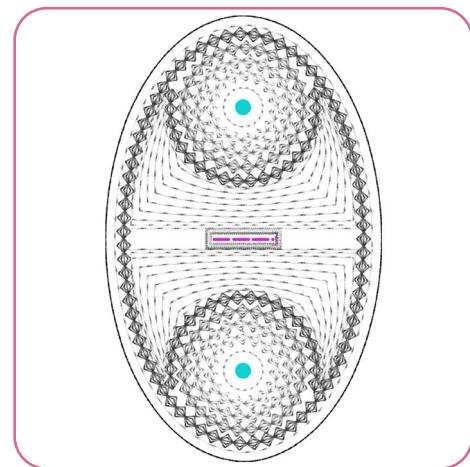

● = 2 MM

● = 3 MM

CRAFT KNIFE

● = 4 MM