Citrus Coasters

MATERIALS

OeSD™ DESIGN PACK

Isacord Thread Colors

0101   Eggshell
0230   Easter Dress
0811   Candlelight
0904   Spanish Gold
0931   Honey
1321   Dark Orange
1521   Flamingo
1532   Coral
1805   Strawberry
5633   Lime
5643   Green Dust
5912   Erin Green

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

MATERIALS

Stabilizers

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway

Fabrics/Textiles

- See Summary

Notion & Tools

- OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
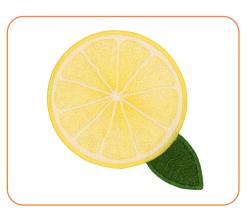
Isacord Thread Colors

- Per the thread chart

SUMMARY

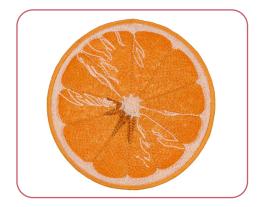**Finished Size: 5" W x 5" H**

PK10100-01

- Green 3 1/2" x 3 1/2"
- Light Green 5" x 5"
- Back Green 6 1/2" x 5 1/2"

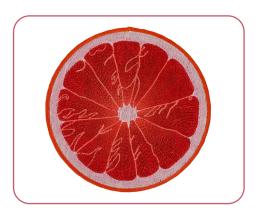**Finished Size: 4 1/2" W x 4 1/2" H**

PK10100-02

- Green 2 3/4" x 2 1/2"
- Yellow 5" x 5"
- Back Green 2 3/4" x 2 1/2"
- Back Yellow 5" x 5"

Finished Size: 4 1/2" W x 4 1/2" H

PK10100-03

- Orange 5 1/2" x 5 1/2"
- Back Orange 5 1/2" x 5 1/2"

Finished Size: 5" W x 5" H

PK10100-04
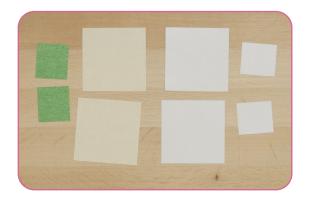
- Red 6" x 6"
- Back Orange 6" x 6"
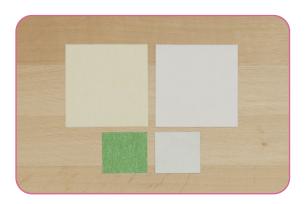
EMMBROIDERY

General Instructions

The coaster instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Design PK10100-02 is shown here. Fabric and thread requirements will vary by design, but the general technique is the same.

NOTE: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.

☐ Step 1

- Cut the applique fabrics 1/4" – 1/2" larger than the applique patterns or as listed in the cutting summary. The applique patterns are included at the end of the instructions.
- Adhere one layer of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished coaster.

EMBROIDERY

Step 2

- Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.
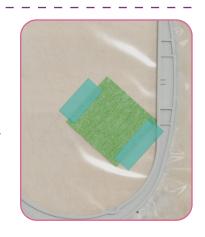
Step 3

- Load the selected design into the machine.
- Example design is PK10100-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Green Fabric Placement Stitch.

Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared green applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.

Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- **Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.**

Step 7

- Return the hoop to the machine.
- Stitch Machine Step 3, Yellow Fabric Placement Stitch.

EMBROIDERY

OESD™ DESIGN **PACK**

☐ Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared yellow applique fabric.
- Tape in place to secure.

☐ Step 9

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.

☐ Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.

OeSD™ DESIGN PACK

☐ Step 11

- Return the hoop to the machine.
- Stitch Machine Steps 5 – 9.

☐ Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the prepared green applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- **Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.**

BACK OF HOOP

☐ Step 13

- Return the hoop to the machine.
- Stitch Machine Step 10, Cut Line and Tackdown.

☐ Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over.
- Trim the excess fabric as close to the cut line as possible.

BACK OF HOOP

☐ Step 15

- Return the hoop to the machine.
- Match the bobbin thread to the top thread.
- Stitch Machine Step 11, Cover Stitch.

☐ Step 16

- Match the bobbin thread to the top thread.
- Stitch Machine Step 12, Yellow Fabric Placement Stitch.

OESD™ DESIGN **PACK**

☐ Step 17

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over and place the prepared yellow applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- **Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.**

BACK OF HOOP

☐ Step 18

- Return the hoop to the machine.
- Stitch Machine Step 13, Cut Line and Tackdown.

BACK OF HOOP

☐ Step 19

- Remove the hoop from the machine, but NOT the project from the hoop.
- Turn the hoop over.
- Trim the excess fabric as close to the cut line as possible.

BACK OF HOOP

EMBROIDERY

☐ Step 20

- Return the hoop to the machine.
- Match the bobbin thread to the top thread.
- Stitch Machine Step 14, Cover Stitch.

☐ Step 21

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" – 1/2" outside the design.

OESD™ DESIGN PACK

☐ Step 22

- Rinse the coaster in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry. Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.

☐ Step 23
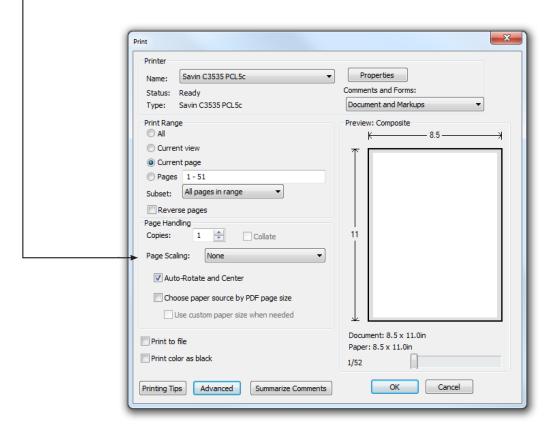
- The project is complete. Enjoy!

PRINTING INSTRUCTIONS

OESD™ DESIGN PACK
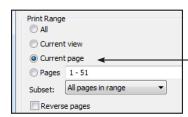
ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.
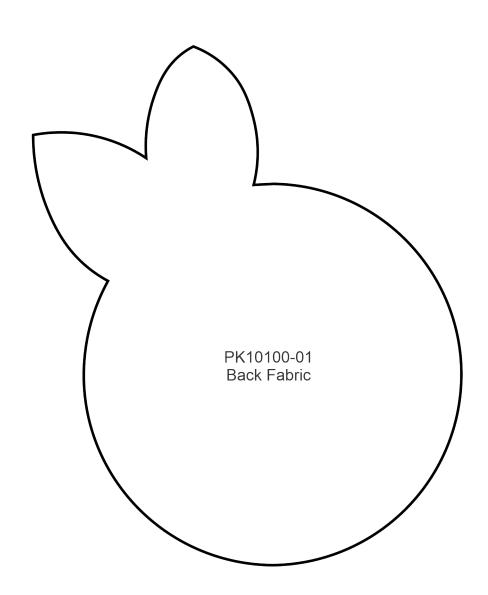
TO SAVE PAPER
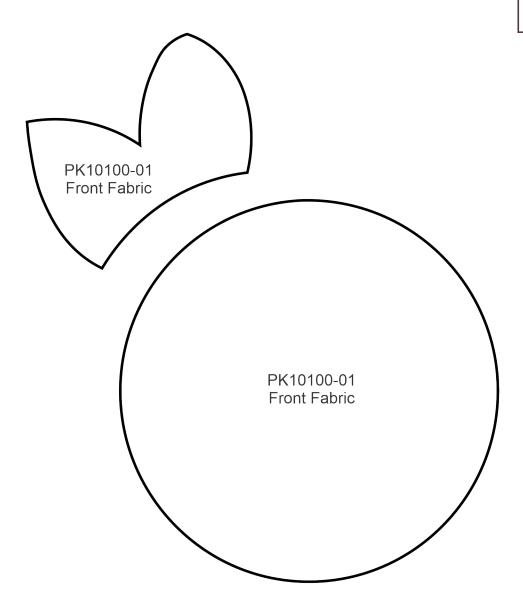
Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

APPLIQUE PATTERNS

PK10100-01
Back Fabric

PK10100-01
Front Fabric

PK10100-01
Front Fabric

OeSD™ DESIGN PACK

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

PK10100-02
Front Fabric

PK10100-02
Front Fabric

PK10100-02
Back Fabric

APPLIQUE PATTERNS

OeSD™ DESIGN PACK

PK10100-02
Back Fabric

PK10100-03
Front Fabric

APPLIQUE PATTERNS

OeSD™ DESIGN PACK

PK10100-03
Back Fabric

APPLIQUE PATTERNS

OeSD™ DESIGN PACK

PK10100-04
Front Fabric

OESD™ DESIGN PACK

PK10100-04
Back Fabric

MIRRORED PATTERNS

OESD™ DESIGN PACK

PK10100-01
Front Fabric
Mirrored

PK10100-01
Front Fabric
Mirrored

OESD™ DESIGN PACK

Print at 100%. No scaling. This box measures 1″ x 1″. Use the box as an accuracy guide when printing templates.

PK10100-01
Back Fabric
Mirrored

MIRRORED PATTERNS

OeSD™ DESIGN **PACK**

PK10100-02
Front Fabric
Mirrored

PK10100-02
Back Fabric
Mirrored

PK10100-02
Front Fabric
Mirrored

OeSD ™ DESIGN **PACK**

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10100-02
Back Fabric
Mirrored

PK10100-03
Back Fabric
Mirrored

OESD™ DESIGN PACK

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10100-03
Front Fabric
Mirrored

MIRRORED PATTERNS

OESD™ DESIGN **PACK**

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10100-04
Front Fabric
Mirrored

OESD™ DESIGN **PACK**

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10100-04
Back Fabric
Mirrored