

### **OESD Ornament 2025**



MATERIALS



#### **Isacord Thread Colors**

0010 Silky White

Meringue 1140

1900 Geranium

2532 Pretty in Pink

4952 Mystic Ocean

5450 Basic Seafoam

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

# MATERIALS



#### **Stabilizers**

- OESD AquaMesh WashAway
- OESD BadgeMaster WashAway
- OESD StabilStick CutAway

#### Fabrics/Textiles

- Pink Quilter's Cotton
- Gold Quilter's Cotton
- White Quilter's Cotton

#### **Notion & Tools**

- · OESD Grippy Grid
- OESD Expert Embroidery Tape TearAway
- OESD Expert Embroidery Tape WashAway
- OESD Perfect Embroidery Press Cloth
- OESD Perfect Punch Tool

- OESD MiniMat
- OESD Alligator Clamps
- OESD Button Clips
- Embroidery Needle Sharp 75/11
- 1/4" or 3/8" ribbon for hanging the ornament

#### **Isacord Thread Colors**

Per the thread chart

# SUMMARY





Completed Size:  $3 \frac{3}{4}$ " L x  $1 \frac{1}{2}$ " W x 5" H

PK10134-01



Requires 1 Design

PK10134-02



Requires 1 Design

#### PK10134-03



Requires 1 Design



#### General Instructions

The freestanding applique (FSA) instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Designs PK10134-01 and PK10134-02 are shown here. Fabric and thread requirements will vary by design, but the general technique is the same. Applique technique shown is cut in place. Pre-cut applique patterns are included at the end of the instructions.

For this ornament, Fiber Form is omitted because it is not necessary for the structural integrity of the ornament.

Note: Some thread colors in the instructions have been changed or digitally enhanced for better visibility.


#### Design - Single Sided Applique

Ornament Walls FSA

PK10134-01

### Step 1

- Cut the applique fabrics 1/4" 1/2" larger than the applique patterns. The applique patterns are included at the end of the instructions.
- Adhere two layers of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished structure.

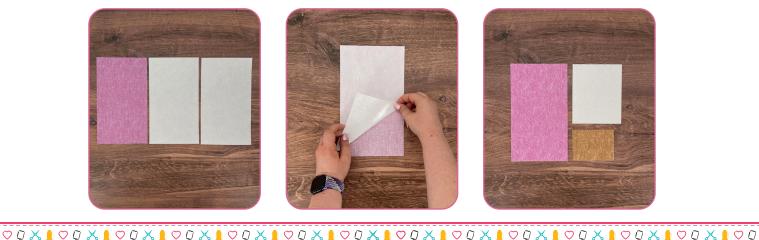







#### Step 2

 Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.



#### Step 3

- Load the selected design into the machine.
- Example design is PK10134-01.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Pink Fabric Placement Stitch.



### Step 4

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement line with the prepared pink applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.





#### Step 5

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



#### Step 6

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



### Step 7

- · Return the hoop to the machine.
- Stitch Machine Step 3, Gold Fabric Placement Stitch.





#### Step 8

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement line with the prepared gold applique fabric.
- Tape in place to secure.



#### Step 9

- Return the hoop to the machine.
- Stitch Machine Step 4, Cut Line and Tackdown.



#### Step 10

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.





#### Step 11

- Return the hoop to the machine.
- Stitch Machine Step 5, White Fabric Placement Stitch.



#### Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement line with the prepared white applique fabric.
- Tape in place to secure.



#### Step 13

- Return the hoop to the machine.
- Stitch Machine Step 6, Cut Line and Tackdown.





#### Step 14

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible.



#### Step 15

- Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.



#### Step 16

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.



# EMBROIDERY-DOUBLE SIDED APPLIQUE



### **Designs - Double Sided Applique**

Ornament Roof & Floor FSA
Ornament Snow FSA

PK10134-02 PK10134-03

### Step 17

- Cut the prepared applique fabrics 1/4" 1/2" larger than the applique patterns. The applique patterns are included at the end of the instructions.
- Adhere one layer of StabilStick CutAway to the wrong side of all applique fabrics to provide stiffness to the finished structure.







#### Step 18

 Using the OESD Grippy Grid, hoop one layer of Aquamesh and one layer of BadgeMaster for all designs.




# EMBROIDERY- DOUBLE SIDED APPLIQUE



#### Step 19

- · Load the selected design into the machine.
- Example design is PK10134-02.
- Thread the machine per the thread chart.
- Place the hoop on the machine.
- Stitch Machine Step 1, Front and Back Gold Fabric Placement Stitch.

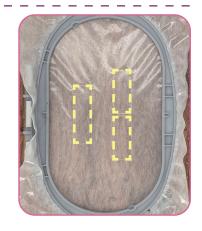

#### Step 20

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the prepared gold applique fabric.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.



#### Step 21

- Turn the hoop over and place the prepared gold applique fabric, right side up, completely covering the placement stitch.
- Carefully tape to secure.
- Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.



# EMBROIDERY- DOUBLE SIDED APPLIQUE



#### Step 22

- Return the hoop to the machine.
- Stitch Machine Step 2, Cut Line and Tackdown.



#### \_\_\_ Step 23

- Remove the hoop from the machine, but NOT the project from the hoop.
- Trim the excess fabric as close to the cut line as possible. If the outermost stitches (cut line) are cut, the inner stitches (tackdown) will hold the applique in place.
- Tip: If the stabilizer is cut or a hole is created while trimming the fabric, use OESD Expert Embroidery Tape WashAway as a patch.



#### Step 24

• Turn the hoop over. Trim the excess fabric as close to the cut line as possible.



# EMBROIDERY-DOUBLE SIDED APPLIQUE



#### Step 25

- · Return the hoop to the machine.
- Stitch the remaining machine steps per the thread chart with matching bobbin thread.



#### Step 26

- When the design is complete, remove the project from the hoop.
- Trim the stabilizer 1/4" 1/2" outside the design.





### Step 27

- Rinse each piece in warm running water until the design is only slightly tacky.
- Place right side down on a non-stick surface to dry.
   Parchment paper or a cooling rack work well. Dry completely.
- Once dry, press right side down on an OESD Perfect Embroidery Press Cloth.



#### Step 28

- Before assembly, use the OESD MiniMAT and the OESD Perfect Punch Tool with the 3mm and 4mm attachments to create the eyelets indicated in the diagram.
- Reference the Punch Tool Guide on page 20.
- Tip: Take care to not cut the satin stitching.





### Step 29

- Match the buttonettes on the bottom of the Ornament Walls FSA (PK10134-01) to the eyelets of the Ornament Floor (PK10134-02). The right side of the Ornament Floor will face the Ornament Walls. The side of the Ornament Floor with two eyelets goes with the back of the Ornament Walls.
- Pull each buttonette through the corresponding eyelet with Alligator Clamps.
- Tip: Use OESD Button Clips to hold a buttonette in its eyelet while working with the other buttonettes and eyelets.







#### Step 30

- Match the buttonettes of the Ornament Floor to the eyelets of the Ornament Snow (PK10134-03) Base. The wrong side of the Ornament Snow Base will face the Ornament Floor.
- Pull each buttonette through the corresponding eyelet.





### Step 31

- Match the buttonettes on the top of the Ornament Walls to the eyelets of the Ornament Roof (PK10134-02). The wrong side of the Ornament Roof will face the Ornament Walls.
- · Pull each buttonette through the corresponding eyelet.







### Step 32

- Match the buttonettes on the Ornament Roof to the eyelets of the Ornament Snow (PK10134-03). The wrong side of the Ornament Snow will face the roof. Put the Snow on both sides of the Roof.
- · Pull each buttonette through the corresponding eyelet.





### Step 33

 Using Alligator Clamps, pull the ribbon through the two top middle eyelets. Tie the ribbon in a knot.






Step 34

• The ornament is complete. Enjoy!






PK10134-02

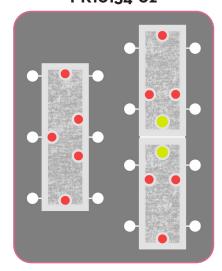

PK10134-03

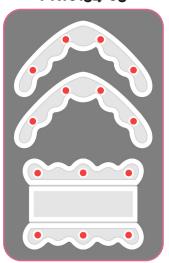






= 4 MM

CRAFT KNIFE




#### ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

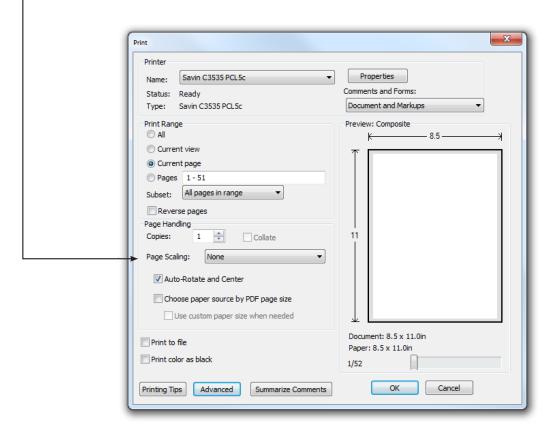


#### **TO SAVE PAPER**

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

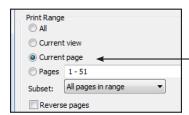



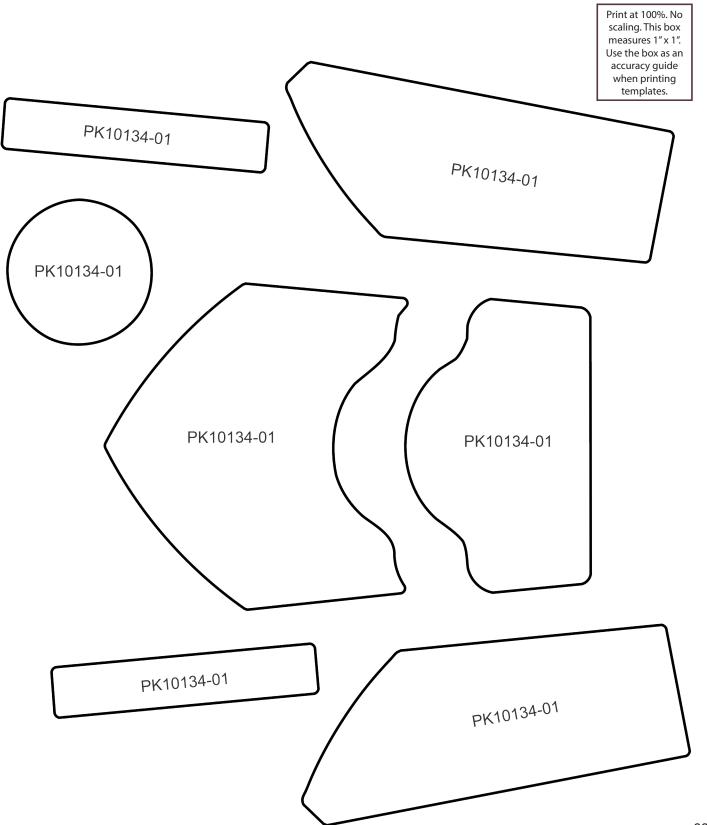



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.


PK10134-02 Front Fabric	PK10134-02 Front Fabric	PK10134-02 Back Fabric	PK10134-02
	PK10134-02 Front Fabric	PK10134-02 Back Fabric	Back Fabric




PK10134-03 Front Fabric PK10134-03 Front Fabric PK10134-03 Front Fabric PK10134-03 Front Fabric PK10134-03 Front Fabric

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



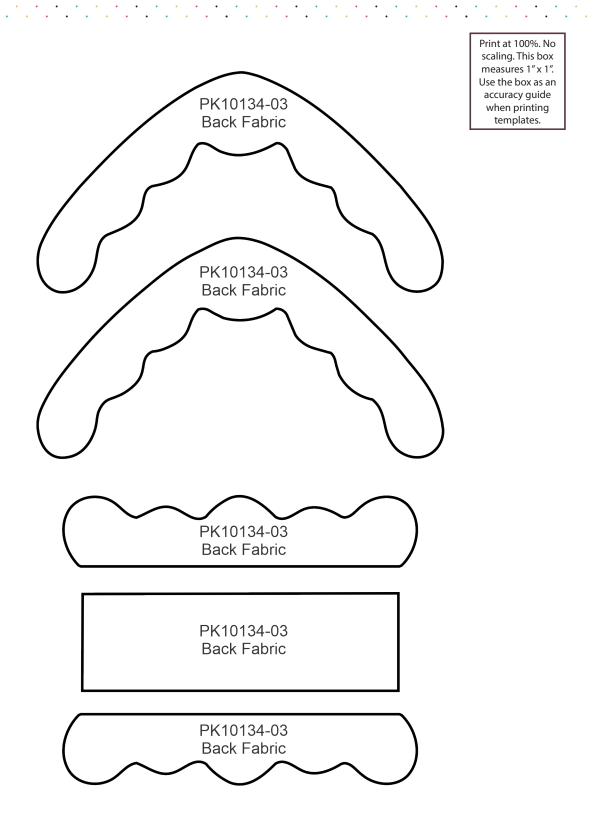



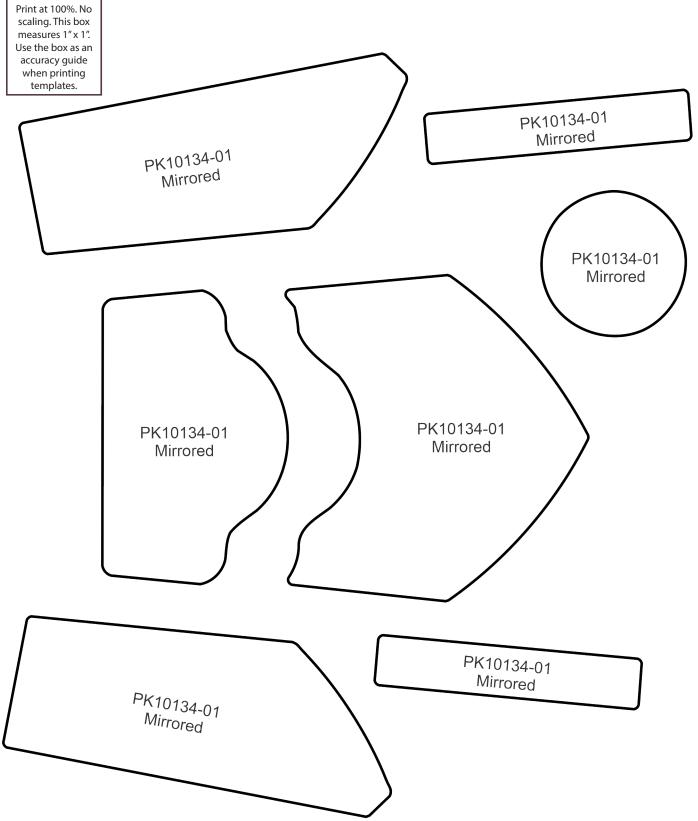



Print at 100%. No scaling. This box measures 1"x 1". Use the box as an accuracy guide when printing templates.

PK10134-02 PK10134-02 Back Fabric Front Fabric Mirrored Mirrored PK10134-02 PK10134-02 Back Fabric Front Fabric Mirrored Mirrored PK10134-02 PK10134-02 Back Fabric Front Fabric Mirrored Mirrored




PK10134-03 Back Fabric Mirrored PK10134-03 Back Fabric Mirrored PK10134-03 Back Fabric Mirrored PK10134-03 Back Fabric Mirrored

> PK10134-03 Back Fabric Mirrored

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.



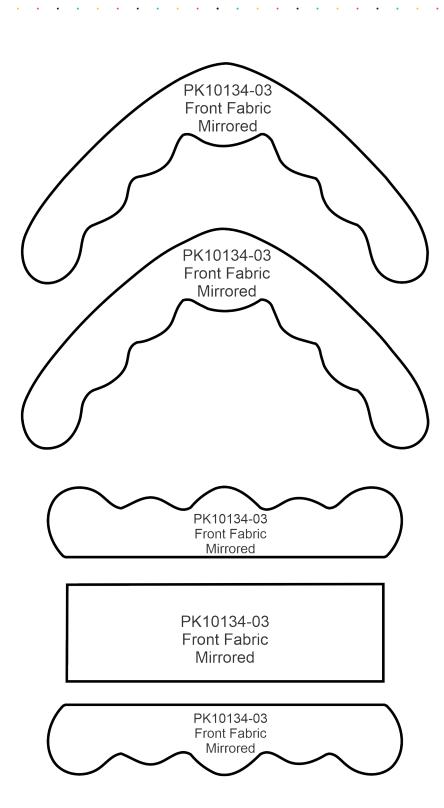

Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.