



In the Hoop USB Holder



Collection No. PK10140
1 Design

MATERIALS



Isacord Thread Colors

5830 Chartreuse

Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.



MATERIALS



Stabilizers

- OESD Fusible PolyMesh CutAway
- OESD Fiber Form
- OESD Fuse and Seal
 - 2 1/4" x 1/2"

Fabrics/Textiles

Green Quilter's Cotton

- (2) 8 1/2" x 6 1/2"

Purple Quilter's Cotton

- (2) 5" x 6 1/2"

Notions & Tools

- OESD Grippy Grid
- OESD Perfect Embroidery Press Cloth
- OESD Expert Embroidery Tape TearAway
- OESD Point and Press Tool
- 3/8" - 1/2" Ribbon: (1) 3"
- 3/8" - 1/2" Elastic (1) 6 1/2"

Isacord Thread Colors

- Per thread chart



SUMMARY



Completed Project Size:

4 3/4" L x 3 1/2" W x 1/2" H (Closed)

4 3/4" L x 7" W x 1/4" H (Open)

PK10140



Design Size:
7.19 X 6.10 in.

Cutting

Outside Fabric	(1) 8 1/2" x 6 1/2"
Inside Fabric	(1) 8 1/2" x 6 1/2"
Pockets	(2) 5" x 6 1/2"
Elastic	(1) 3/8" - 1/2" x 6 1/2"
Ribbon	(1) 3/8" - 1/2" x 3" (Optional)
Fuse and Seal	(1) 2 1/4" x 1/2"
Fiber Form	(2) 4 3/4" x 2 1/2"




EMBROIDERY



□ Step 3

- Using the OESD Grippy Grid, hoop one layer of Fusible PolyMesh CutAway, fusible (shiny) side down.


✓ **Note: The Fusible PolyMesh will be used to hold the Fiber Form inserts in place.**

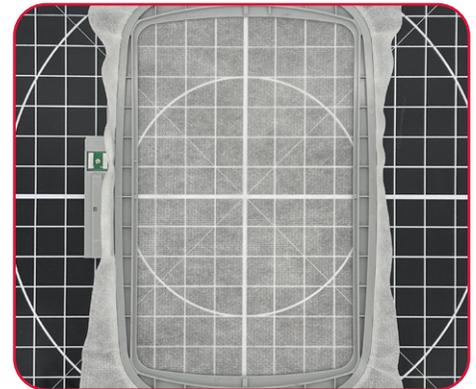

□ Step 4

- Load the selected design into the machine.
- Example design is PK10140.
- Thread the machine with a color that blends with the chosen fabrics.
- Place the hoop on the machine.
- Stitch Machine Step 1, Inside Fabric/Pocket Placement Guide.

✓ **Note: Thread color shown here is a green that coordinates with the main fabric.**

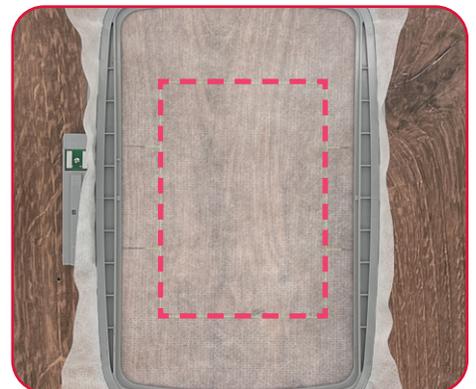


EMBROIDERY



Step 5


- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the Fabric Placement Guide with the inside fabric, right side up.
- Tape in place with OESD Expert Embroidery Tape TearAway to secure.

 **Tip: Use a pencil to extend the Pocket Placement Guides.**

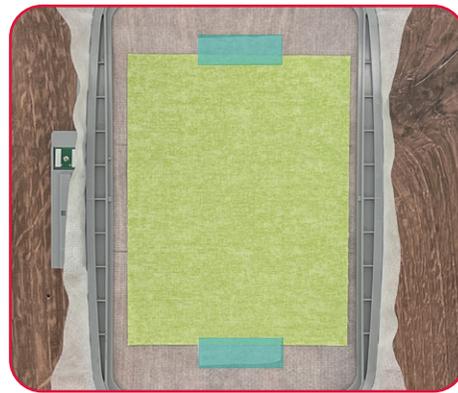

Step 6

- Return the hoop to the machine.
- Stitch Machine Step 2, Inside Fabric Tackdown.

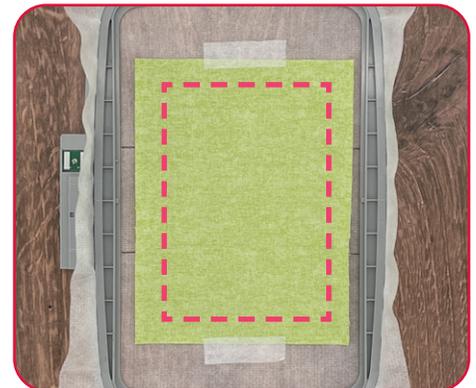



EMBROIDERY



Step 7

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Place a pocket over the bottom section of the inside fabric, aligning the folded edge with the bottom placement line as shown.
- Tape in place to secure.
- Place the other pocket over the top section of the inside fabric, aligning the folded edge with the top placement line as shown.
- Tape in place to secure.

Note: The folded edges of the pockets must face towards the center of the inside fabric.

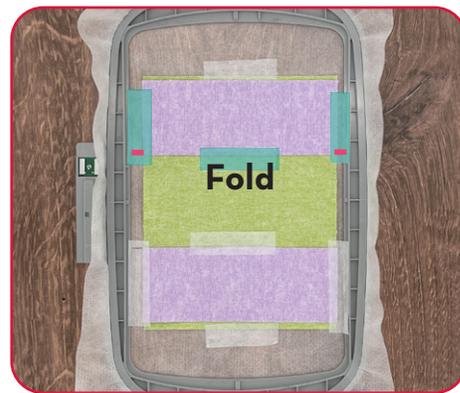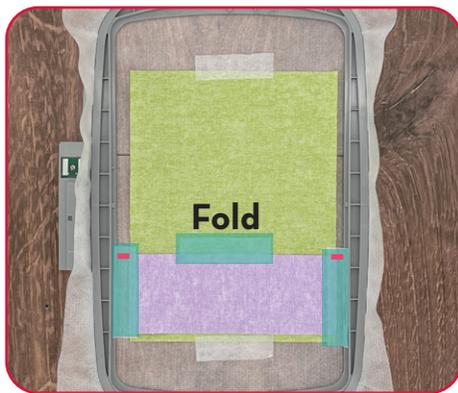


EMBROIDERY



Step 8

- Return the hoop to the machine.
- Stitch Machine Step 3, Pocket Tackdown/ Linework.
- Stitch Machine Step 4, Elastic Placement Stitch (Shown here in pink.)

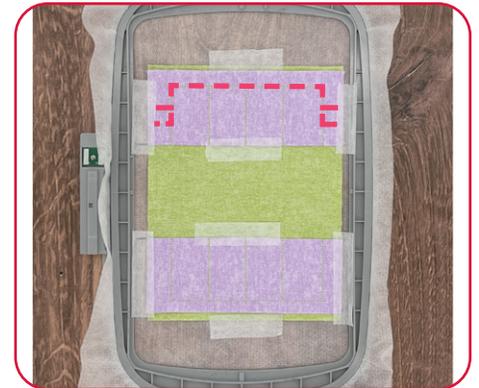

Step 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Align the 6 1/2" piece of elastic between the placement lines as shown.
- Place the Expert Embroidery Tape TearAway over the elastic with the stitched line in the middle of the tape to secure. This allows the presser foot to glide up and down the height change.




EMBROIDERY



□ Step 10


- Return the hoop to the machine.
- Stitch Machine Step 5, Elastic Tackdown.
- Stitch Machine Step 6, Loop Placement Stitch.

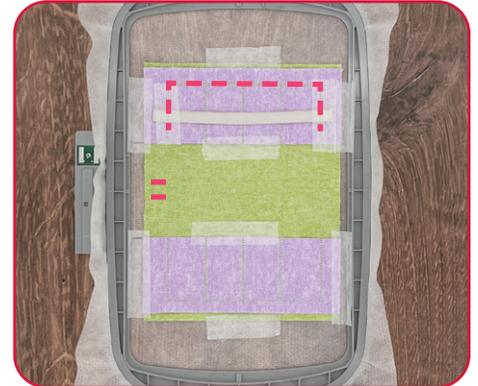

□ Step 11

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Fold the 3" piece of ribbon in half.
- Align the folded ribbon between the placement lines as shown.
- Tape in place to secure.

✓ **Note: The fold will be towards the inside of the design.**

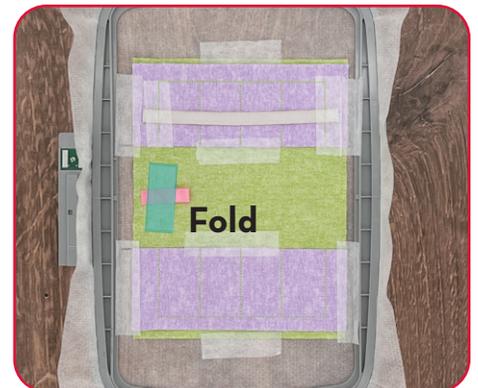

□ Step 12

- Return the hoop to the machine.
- Stitch Machine Step 7, Loop Tackdown.




EMBROIDERY



□ Step 13

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the design with the Outside Fabric, **right side down**.
- Tape in place to secure.

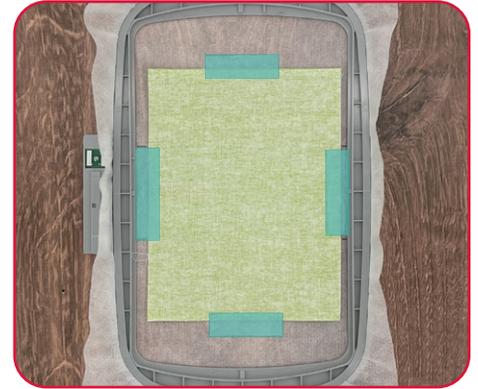

□ Step 14

- Return the hoop to the machine.
- Stitch Machine Step 8, Seam Stitch.



ASSEMBLY

Step 15

- Remove the hoop from the machine and the project from the hoop.
- Trim approximately 1/4" from the outermost stitching line.
- **DO NOT** cut the neck opening. Trim across the neck above the horizontal lines of stitching.
- Clip the corners, but do not cut through the seam stitch.



Step 16


- Turn the pouch right side out through the opening in the side.

Tip: Use the Point and Press Tool to turn the corners and edges.



Step 17

- Insert the Fiber Form pieces through the opening.
- Move them to both ends of the pouch to give more stability.

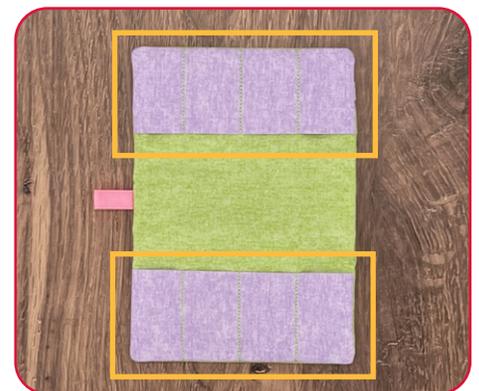

ASSEMBLY

□ Step 18

- Tuck the raw edges of the opening inside the pouch.
- Press the pouch with a medium warm iron to activate the glue of the PolyMesh Fusible to fuse the Fiber Form in place.



□ Step 19

- Close the opening with a small piece of Fuse and Seal.



□ Step 20

- The project is complete. Enjoy!




PRINTING INSTRUCTIONS




ATTENTION

When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.

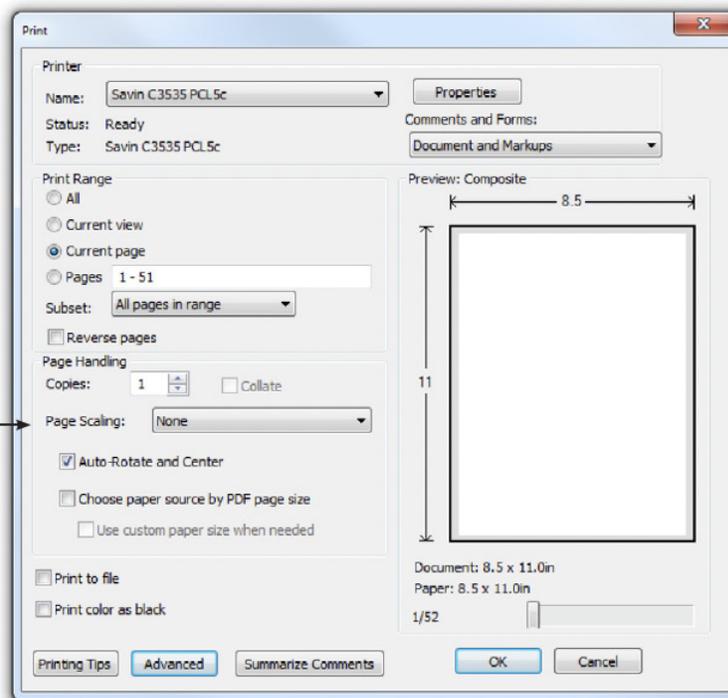

TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

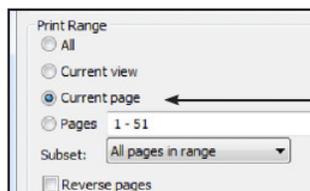

APPLIQUE PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10140
Fiber Form

PK10140
Fiber Form

MIRRORED PATTERNS



Print at 100%. No scaling. This box measures 1" x 1". Use the box as an accuracy guide when printing templates.

PK10140
Fiber Form
Mirrored

PK10140
Fiber Form
Mirrored