

# Burry Butt Utensil Holders

#PK50005 2 DESIGNS

# MATERIALS



#### **Isacord Thread Colors**

2220 Tropicana2830 Wild Iris5730 Apple Green

\* Project instructions included after design list.


Note: One spool of 1000 meter thread is adequate for the project unless otherwise noted.

# SUMMARY





Finished project size: Size 7" H x 4" W

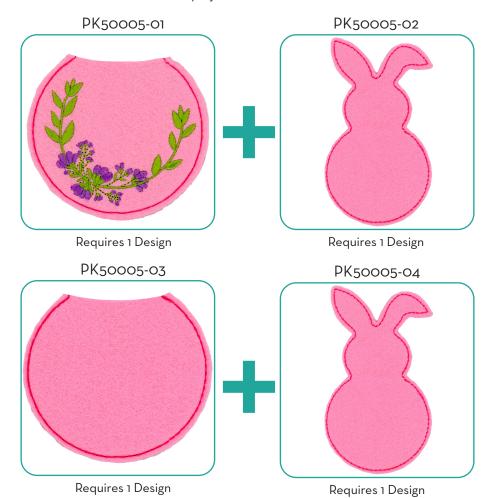

# MATERIALS



#### **Stabilizers**

OESD Medium Weight TearAway

#### Fabrics/Textiles

- Pink felt
- (1) 5" x 5" PK50005-01 or PK50005-03
- (2) 8" x 5" PK50005-02 or PK50005-04
- Note: Fabric sizes are estimates and may result in overage.
- Decorative Pom (Optional)

#### **Notion & Tools**

- OESD Expert Embroidery Tape TearAway
- OESD Grippy Grid
- OESD Perfect Embroidery Press Cloth

#### **Isacord Thread Colors**

Per thread chart



#### **General Instructions**

The project instructions, included in the collection, are general instructions. For demonstration purposes, a sample design that best demonstrates the technique is shown. Fabric and thread requirements will vary by design, but the general technique is the same.

Note: Some thread colors in instructions have been changed or digitally enhanced for better visibility.


### First Hooping - Step 1

 Hoop one layer of Medium Weight TearAway for all designs.



### Step 2


- Load selected design into the machine.
- Example design is PK50005-01.
- Thread the machine per the thread chart.
- · Place the hoop on the machine.
- Stitch Machine Step 1, Felt Placement Stitch.

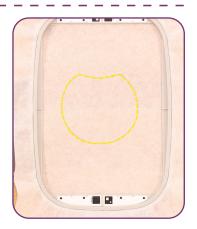



### Step 3

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with the 5" x 5" felt.
- Tape in place to secure.

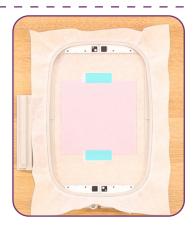

### Step 4

- Return the hoop to the machine.
- Stitch Machine Step 2, Pocket Top Cut Guide.



### Step 5

Stitch the remaining machine steps, per the thread chart.






### Step 6

- When the design is complete, remove the project from the hoop and trim just inside of the Pocket Top Cut Guide stitching.
- Gently remove the remaining tear away stabilizer and set aside.



### Second Hooping - Step 7

Hoop one layer of Medium Weight TearAway for all designs.

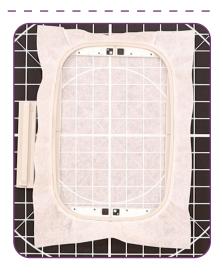



### Step 8

- Load selected design into the machine.
- Example design is PK50005-02.
- Thread the machine per the thread chart.
- · Place the hoop on the machine.
- Stitch Machine Step 1, Felt Placement Stitch.



### Step 9

- Remove the hoop from the machine, but NOT the project from the hoop.
- Place the hoop on a flat surface.
- Completely cover the placement stitch with an 8" x 5" piece of felt.
- Tape in place to secure.



### \_\_\_Step 10

- Turn the hoop over and place an 8" x 5" piece of felt completely covering the placement stitch.
- Carefully tape to secure.
   Tip: Avoid pushing too hard on the stabilizer to prevent it from dislodging from the hoop.





### Step 11

- Return the hoop to the machine.
- Stitch Machine Step 2, Felt Tackdown and Cut Guide.



### Step 12

- Remove the hoop from the machine, but NOT the project from the hoop.
- · Place the hoop on a flat surface.
- · Place the stitched pocket, right side up.
- Align the top cut portion with the Felt Tackdown and Cut Guide.
- · Tape in place to secure.



### Step 13

- Return the hoop to the machine.
- · Stitch Machine Step 3, Seam Stitch.





### Step 14

 When the design is complete, remove the project from the hoop and trim just inside of the Felt Tackdown and Cut Guide stitching.



### Step 15

- Press right side down on a Perfect Embroidery Press Cloth.
- Attach decorative pom pom ball if desired.



### \_\_\_ Step 16

• The project is complete. Enjoy!

